




RSG METAL WORKS

720.523.3999

INFO@RSGMETALWORKS.COM

2010+ TOYOTA 4RUNNER ROCK SLIDER INSTALLATION INSTRUCTIONS

- 1. REMOVE ALL COMPONENTS FROM PACKAGING AND INSPECT FOR ACCURACY. PLEASE NOTIFY US IMMEDIATELY IF YOU HAVE MISSING OR INCORRECT PARTS.**
- 2. REMOVE FACTORY OR AFTERMARKET STEPS.**
- 3. UNBOLT THE KDSS SKID PLATE, KDSS LINES AND EMERGENCY BRAKE BRACKET FROM THE FRAME ON THE DRIVERS SIDE OF THE VEHICLE, AS SEEN IN DIAGRAM "A & B".**
- 4. UNBOLT EMERGENCY BRAKE CABLE BRACKET FROM PASSENGER SIDE OF VEHICLE, AS SEEN IN DIAGRAM "C".**
- 5. POSITION THE SLIDERS TO THE FRAME AND START INSTALLING THE MOUNTING HARDWARE, ONCE ALL HARWARE IS IN PLACE (DON'T FORGET KDSS LINES AND EMERGENCY BRAKE BRACKETS) TIGHTEN TO 24 FT LBS.**

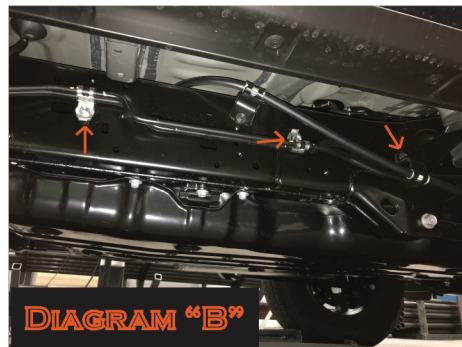

- 5. YOU WILL NOW NEED TO TRIM 1/2" INCH FROM THE CORNER OF THE FACTORY KDSS SKID PLATE. CUTOFF WHEEL WORKS BEST FOR TRIMMING. SEE DIAGRAM "D".**
- 6. REINSTALL KDSS SKID PLATE AND ENJOY YOUR NEW RSG SLIDERS!!**

