
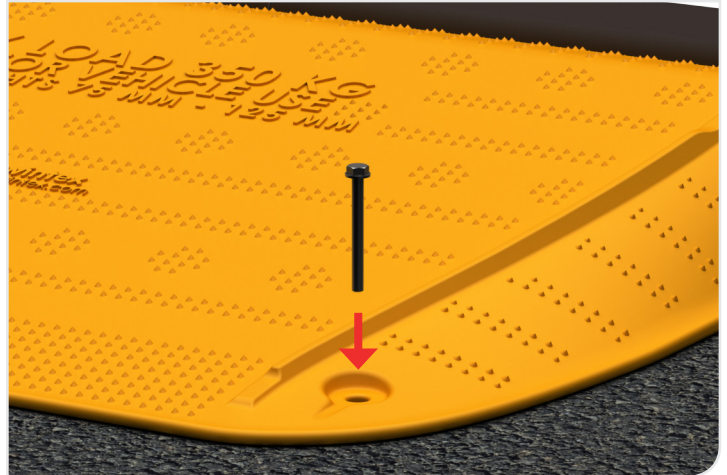


RightRamp Installation

The RightRamp can be secured into place in a variety of ways, the most common methods are to use fixing bolts, or non-intrusive bitumen tape. Current guidance advises that ramps should be fixed in position.

Anchor Bolts

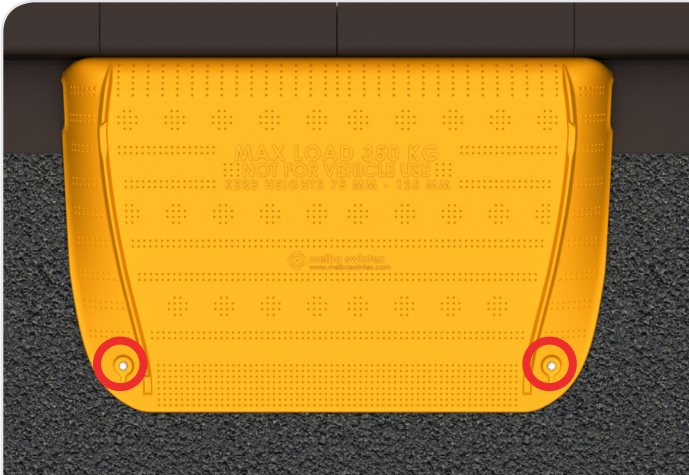


1] Lay the ramp in place ensuring the back face is touching the kerb side. Once in position, drill two holes highlighted in the picture above.

2] Insert and drive in a hex anchor bolt into each hole. The ramp is now fixed into place.



Bitumen Tape or Similar

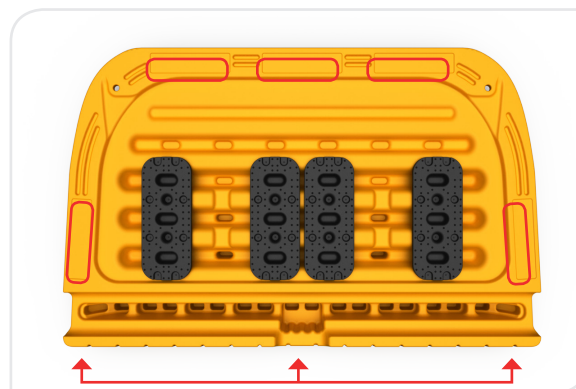

1] There are 5 recessed rectangles highlighted for the use of tape like materials.

You can also apply a thin strip along the back face that touches the kerb side.

The information given on these sheets is typical of the product depicted it must not be interpreted as a guarantee of individual product performance and/or characteristics. We reserve the right to alter specifications and designs without prior notice. All measurements are in millimetres (mm)