


If you need service please call us (360) 930-8059

Tools Needed For Installation:

- Power Drill
- 1- $\frac{3}{4}$ " (1.75 Inch or 44mm) Hole Saw
- #2 Phillips Screwdriver

Instructions:

- Drill (1- $\frac{3}{4}$ ") hole for mounting.
- Remove Rear Rubber Cover from back, sliding it down the cord.
- Push cord through the mounting hole, then you will need to squeeze the **Rear Rubber Cover** through the hole.
- Using the screwdriver, install the GCP/GCR with provided mounting screws. (Pre-Drilling may be necessary)
- Slide Rear Rubber Cover back on, and firmly seat over back of plug.

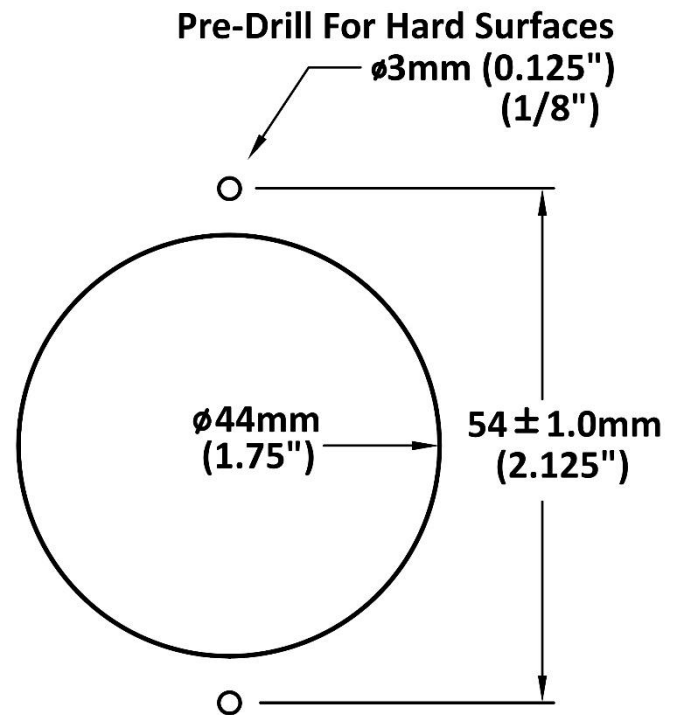

CALL US FIRST, DO NOT RETURN TO STORE

For immediate help please call us: (360) 930-8059

or email: sales@journeymanpro.com

Our staff is ready to provide assistance to you

M-F 8:00 AM to 4:00 PM PST