



EVOTECH®
P E R F O R M A N C E


**Z900 Kawasaki
Tail Tidy**


Installation Instructions





Kit Contents PRN013818


- Ⓐ 1 x Upper Bracket
- Ⓑ 1 x Lower Bracket
- Ⓒ 1 x Base Plate
- Ⓓ 1 x Number Plate Bracket
- Ⓔ 1 x Retro Light
- Ⓕ 1 x Loom Connector 5
- Ⓖ 2 x M6 Flange Nut
- Ⓗ 2 x M4 Flange Nut
- Ⓘ 2 x M4 x 6 Black Button Head Bolts
- Ⓙ 2 x M4 Black Washers
- Ⓚ 3 x M5 x 12 Countersunk Screws
- Ⓛ 4 x M6 Black Washers
- Ⓜ 6 x M6 x 16 Black Button Head Bolts

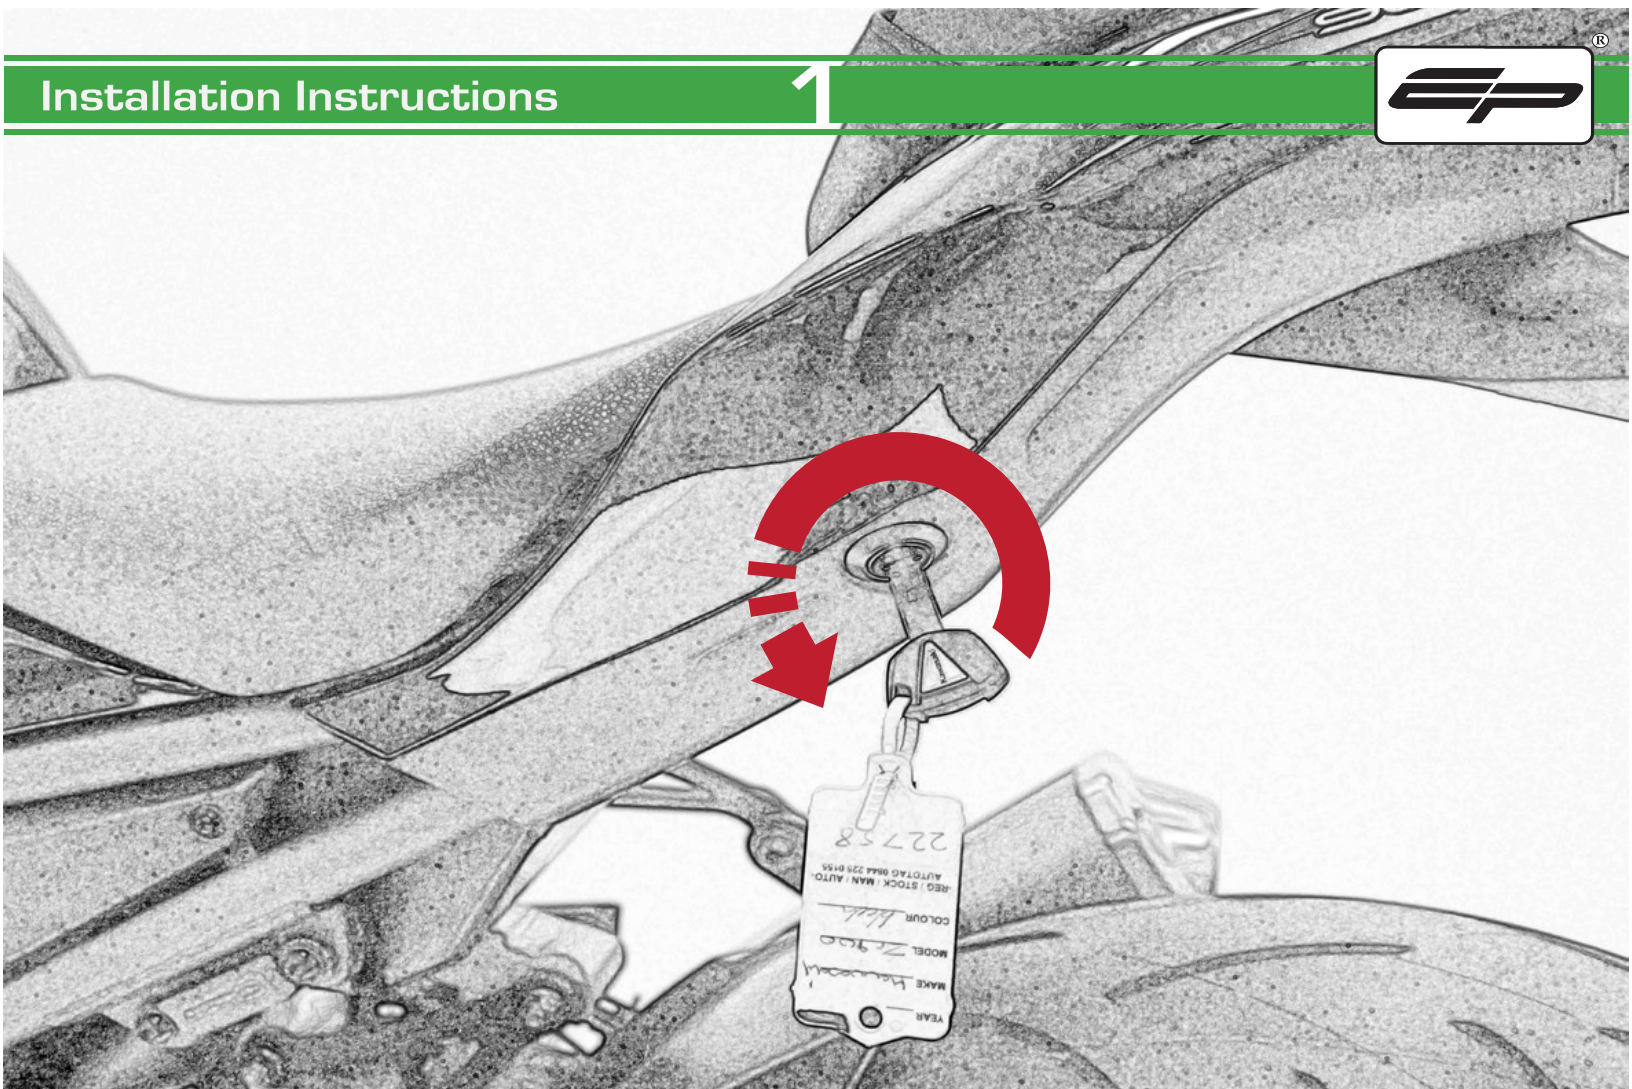


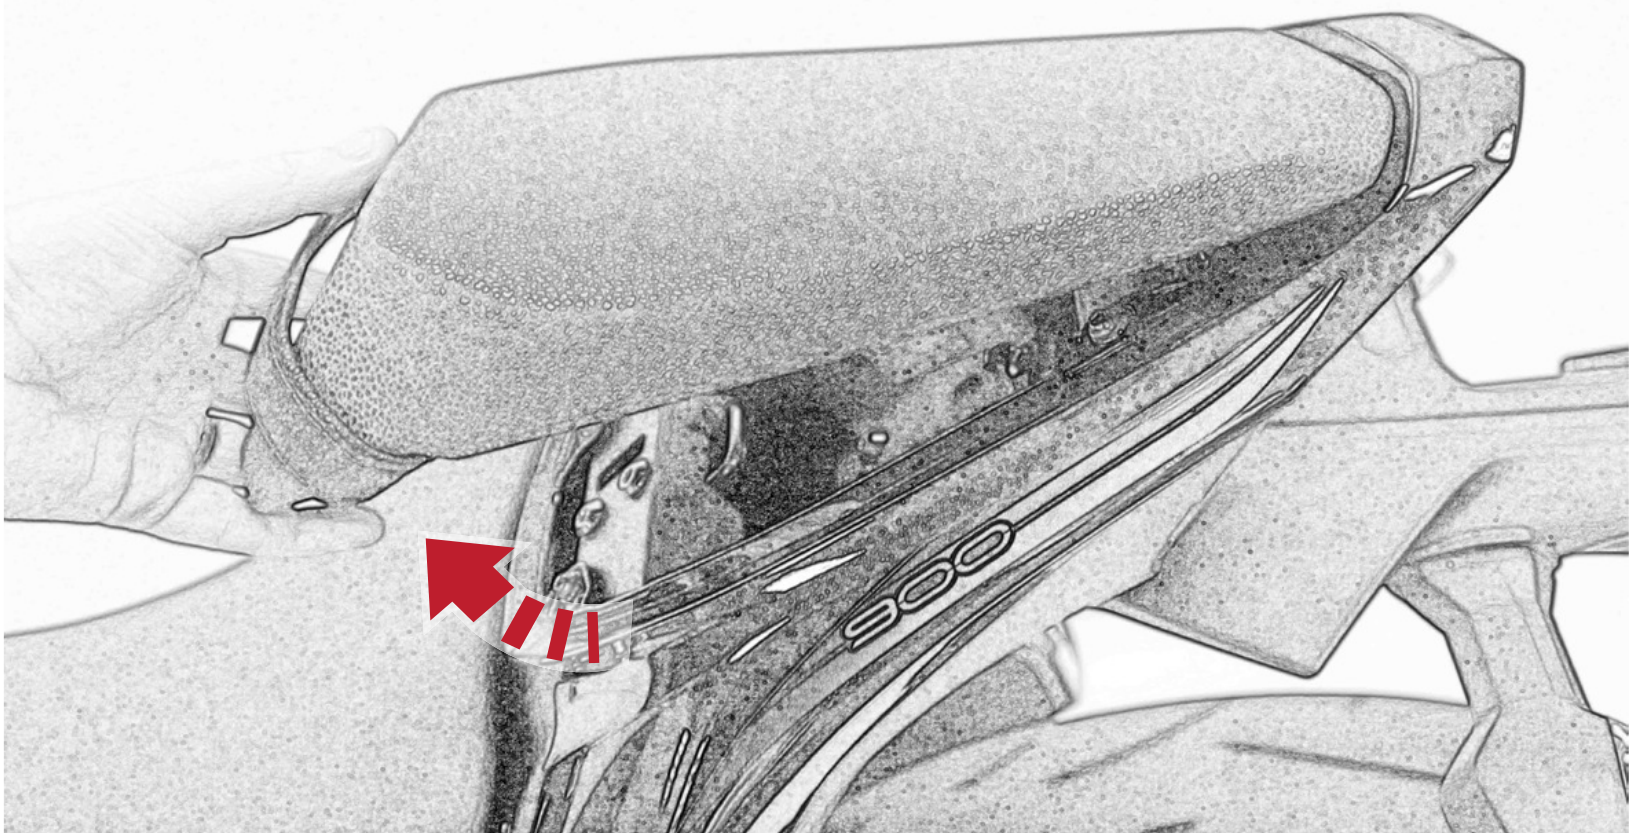


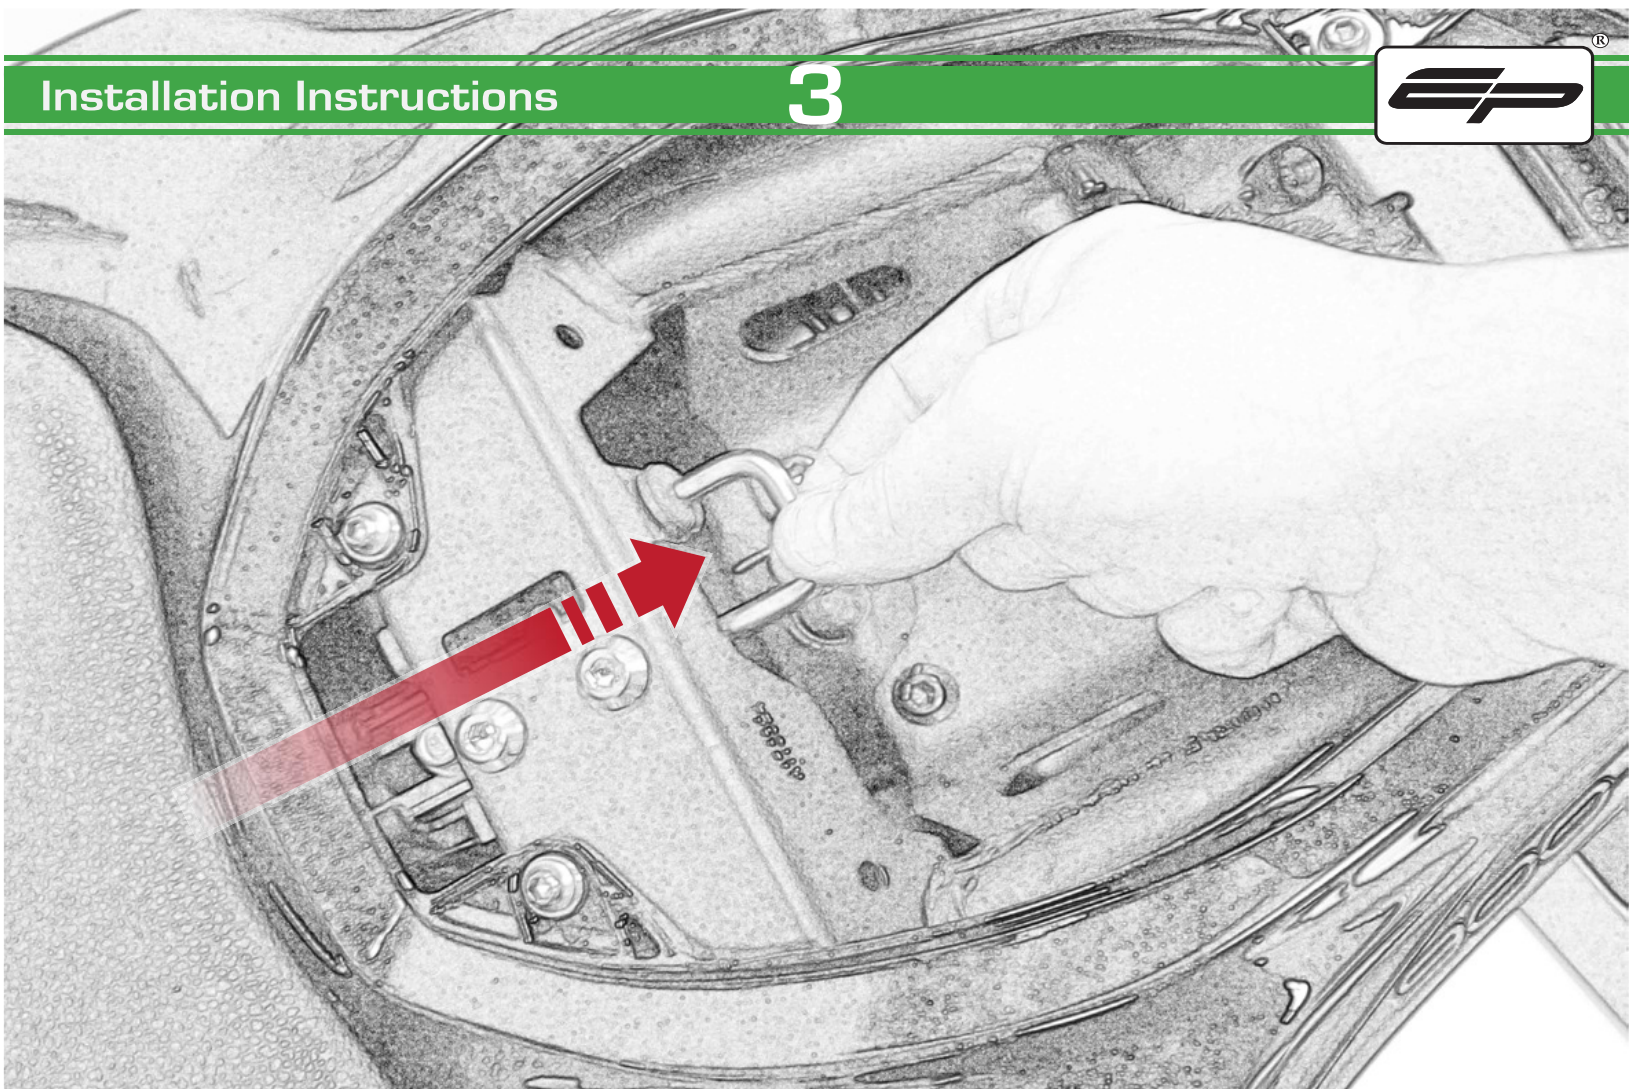



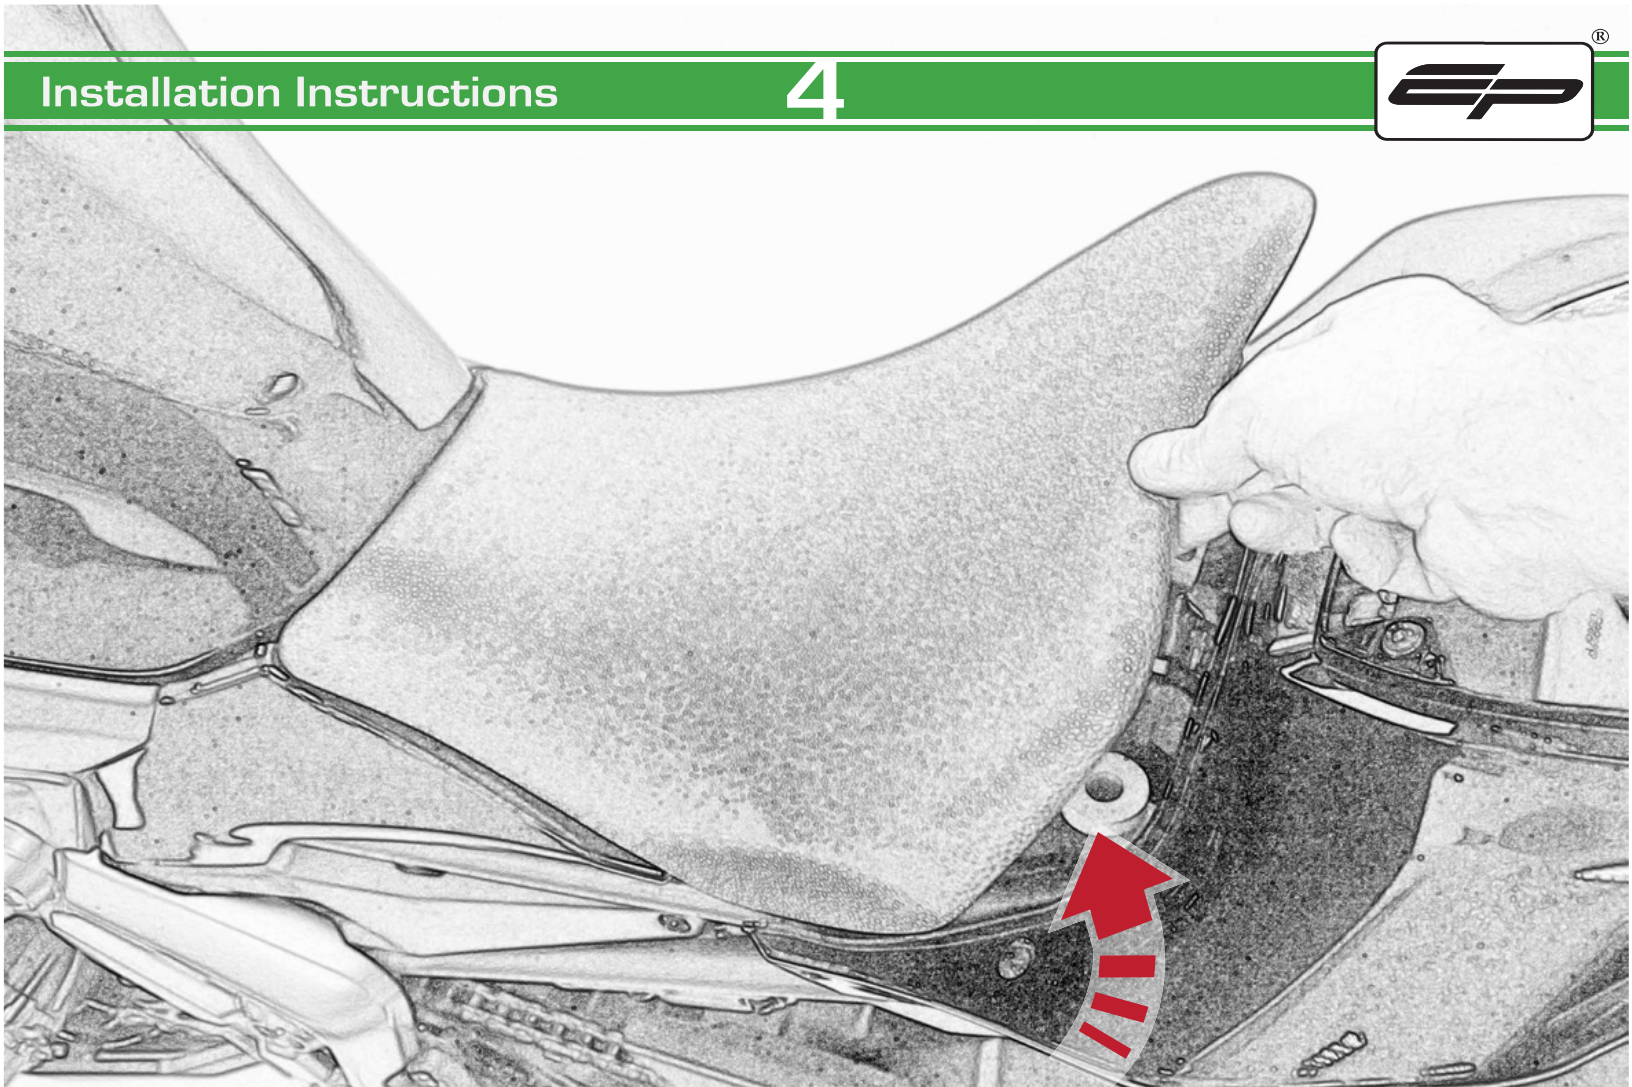


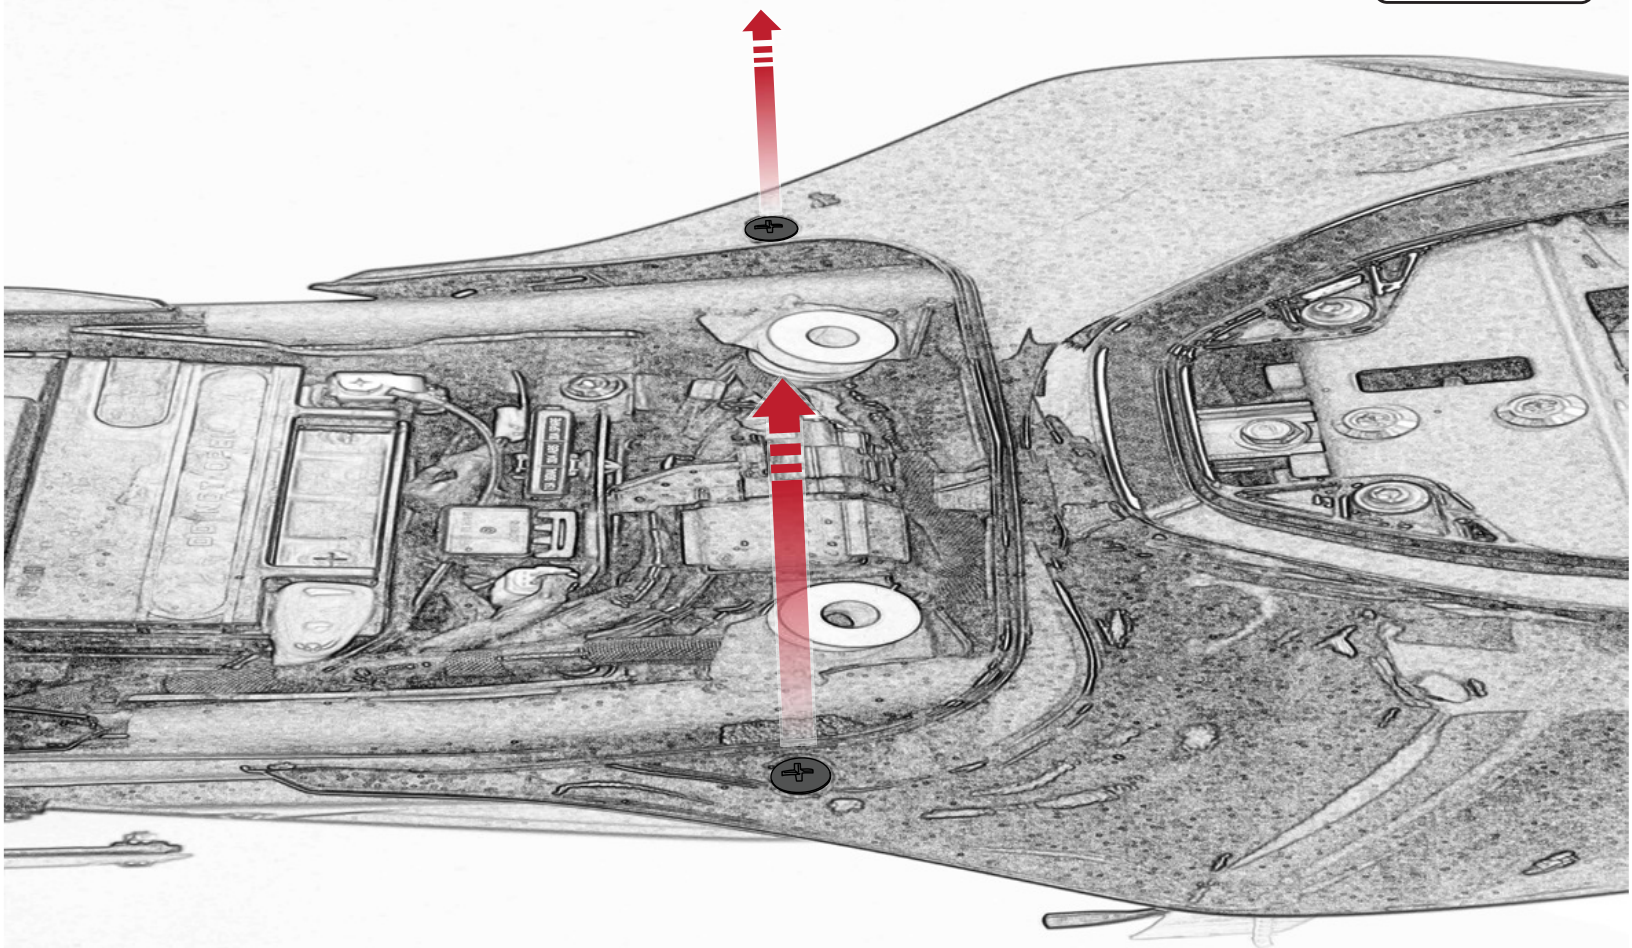


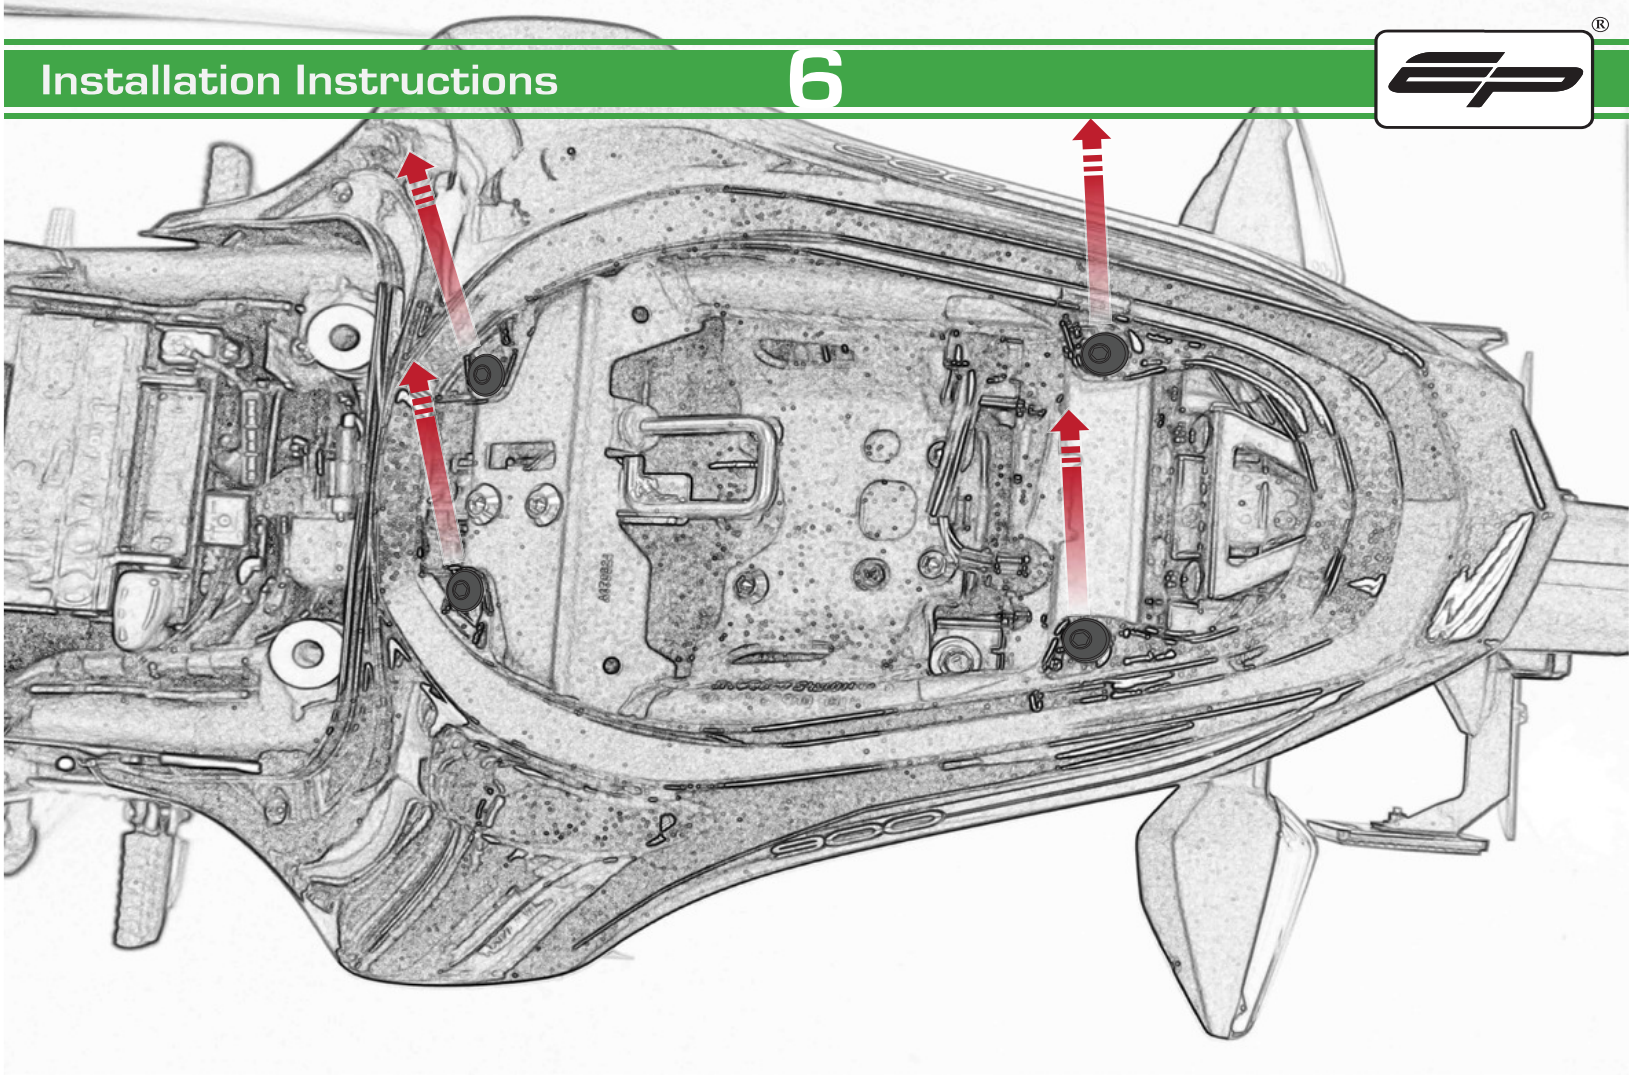


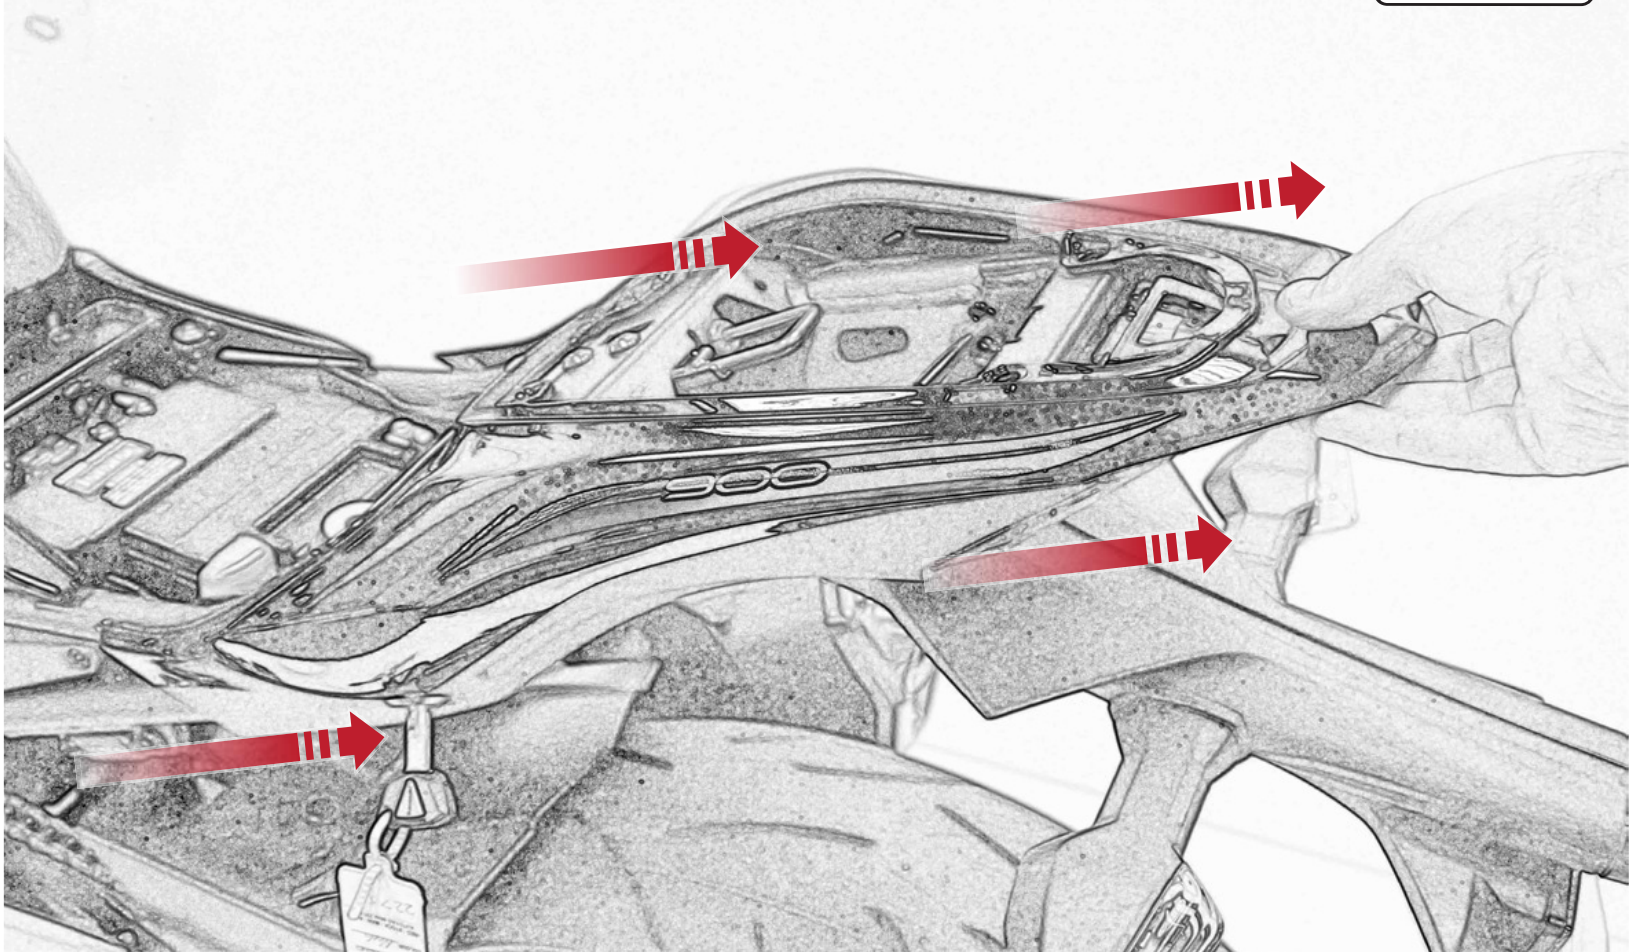


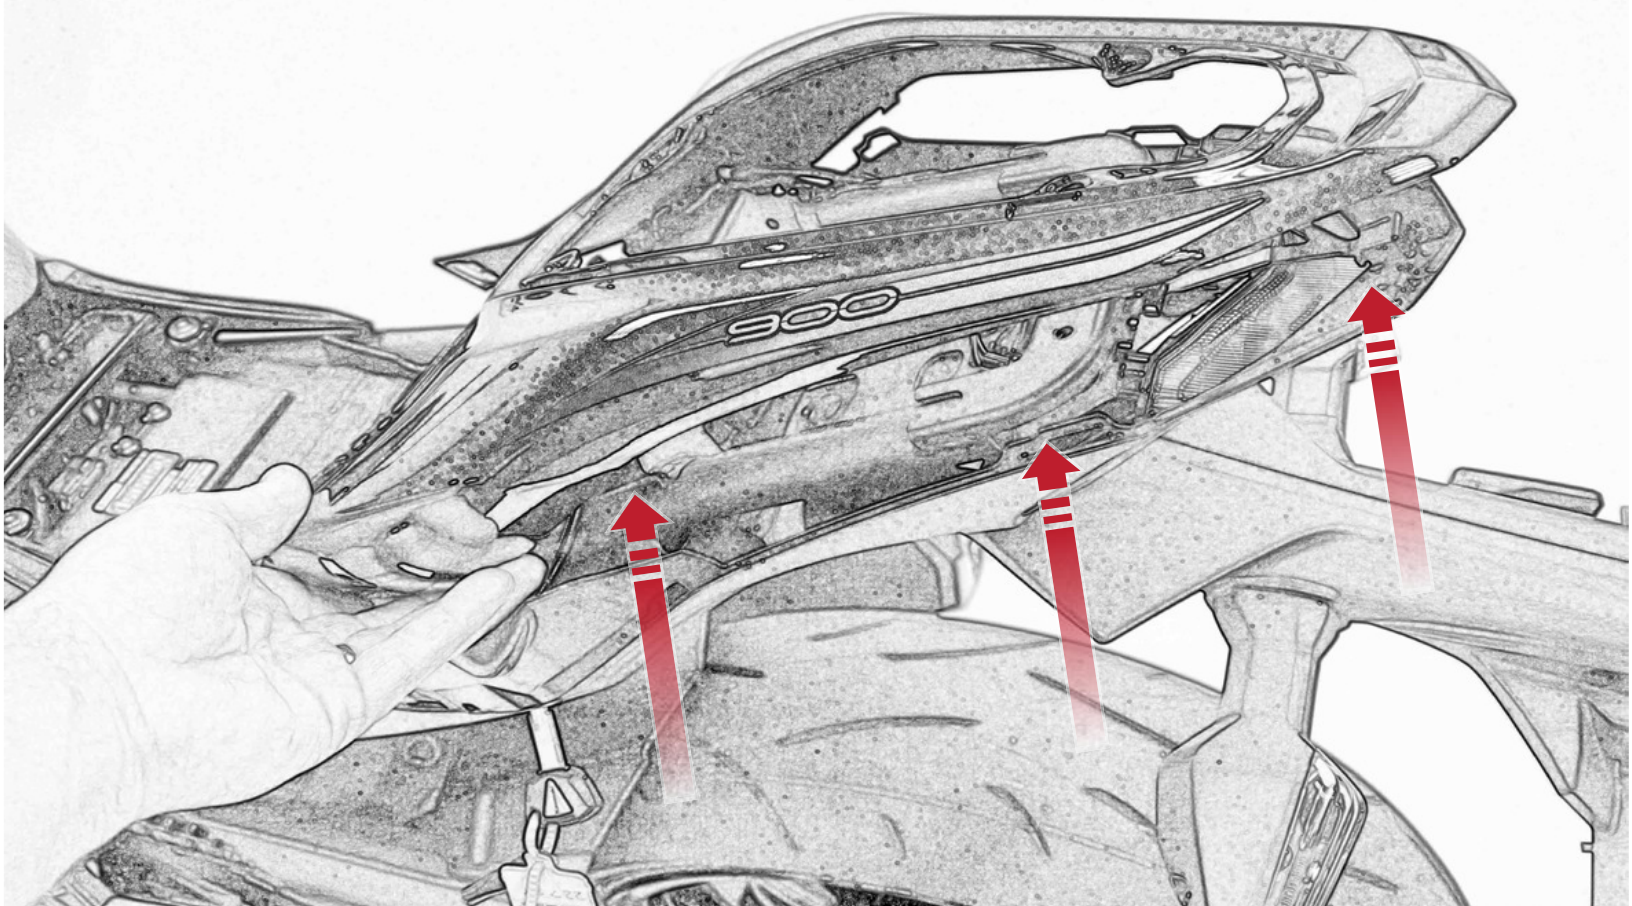


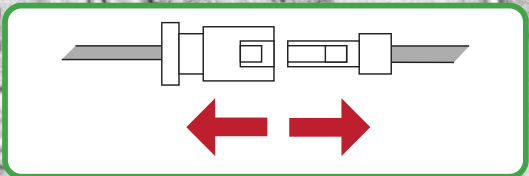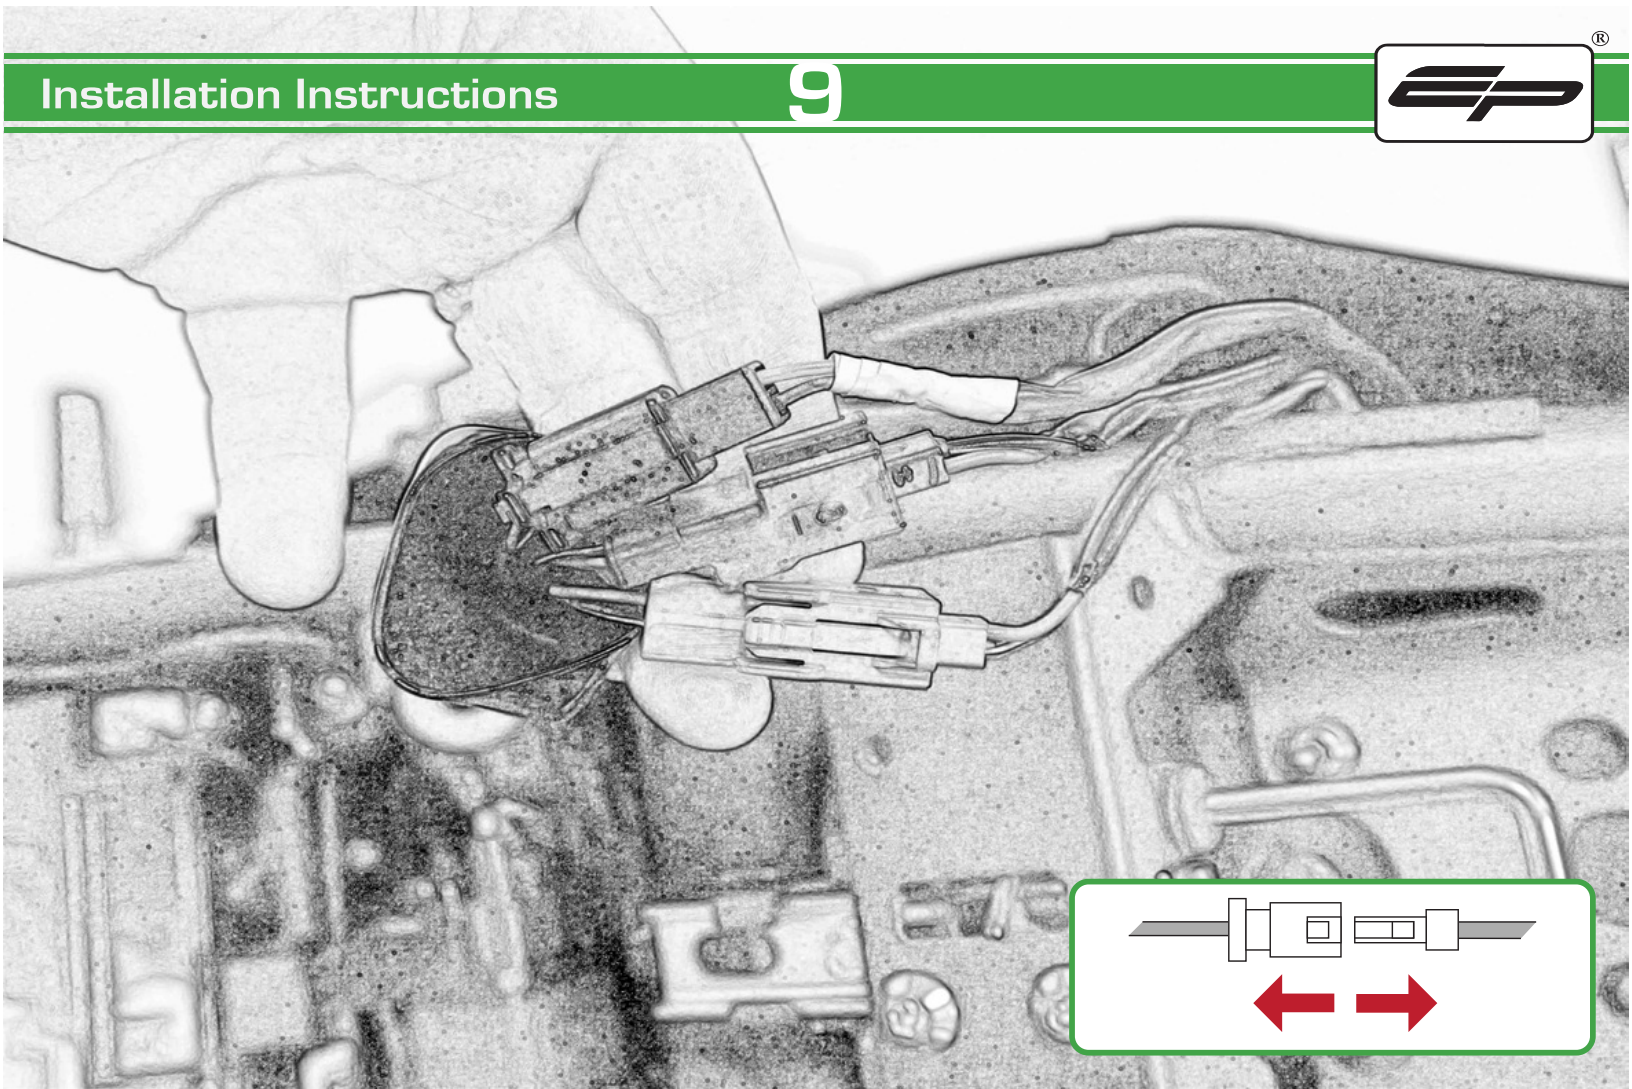


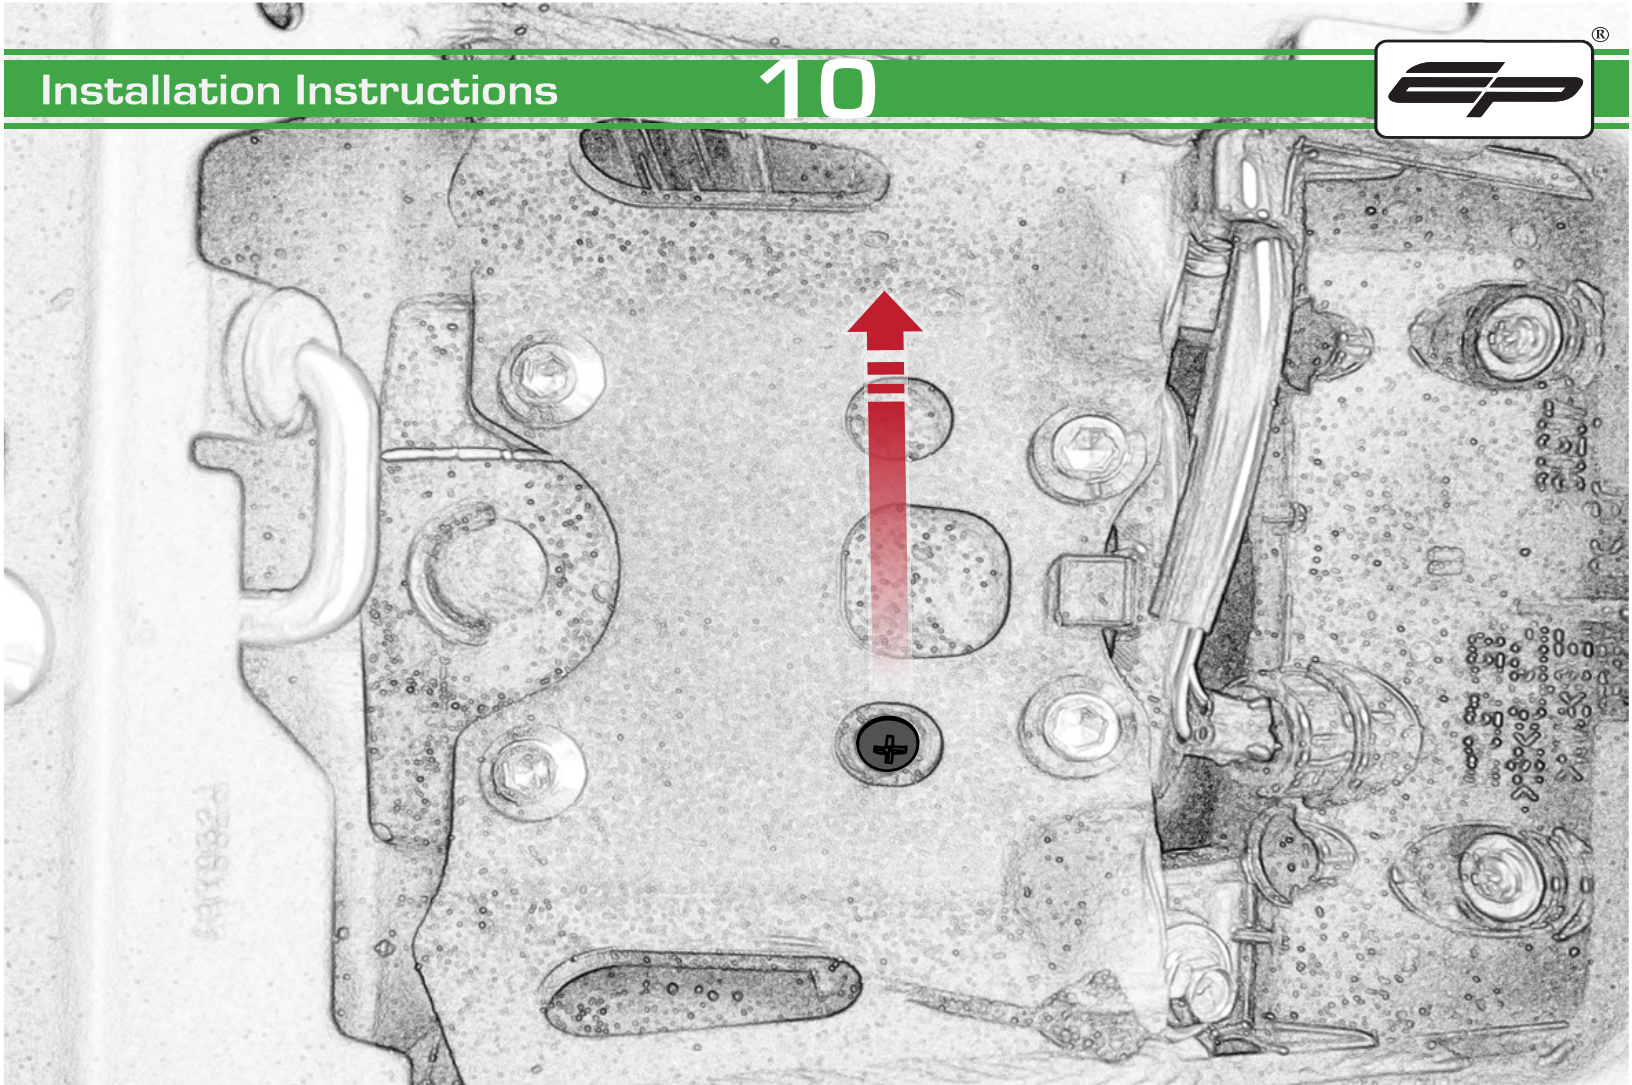


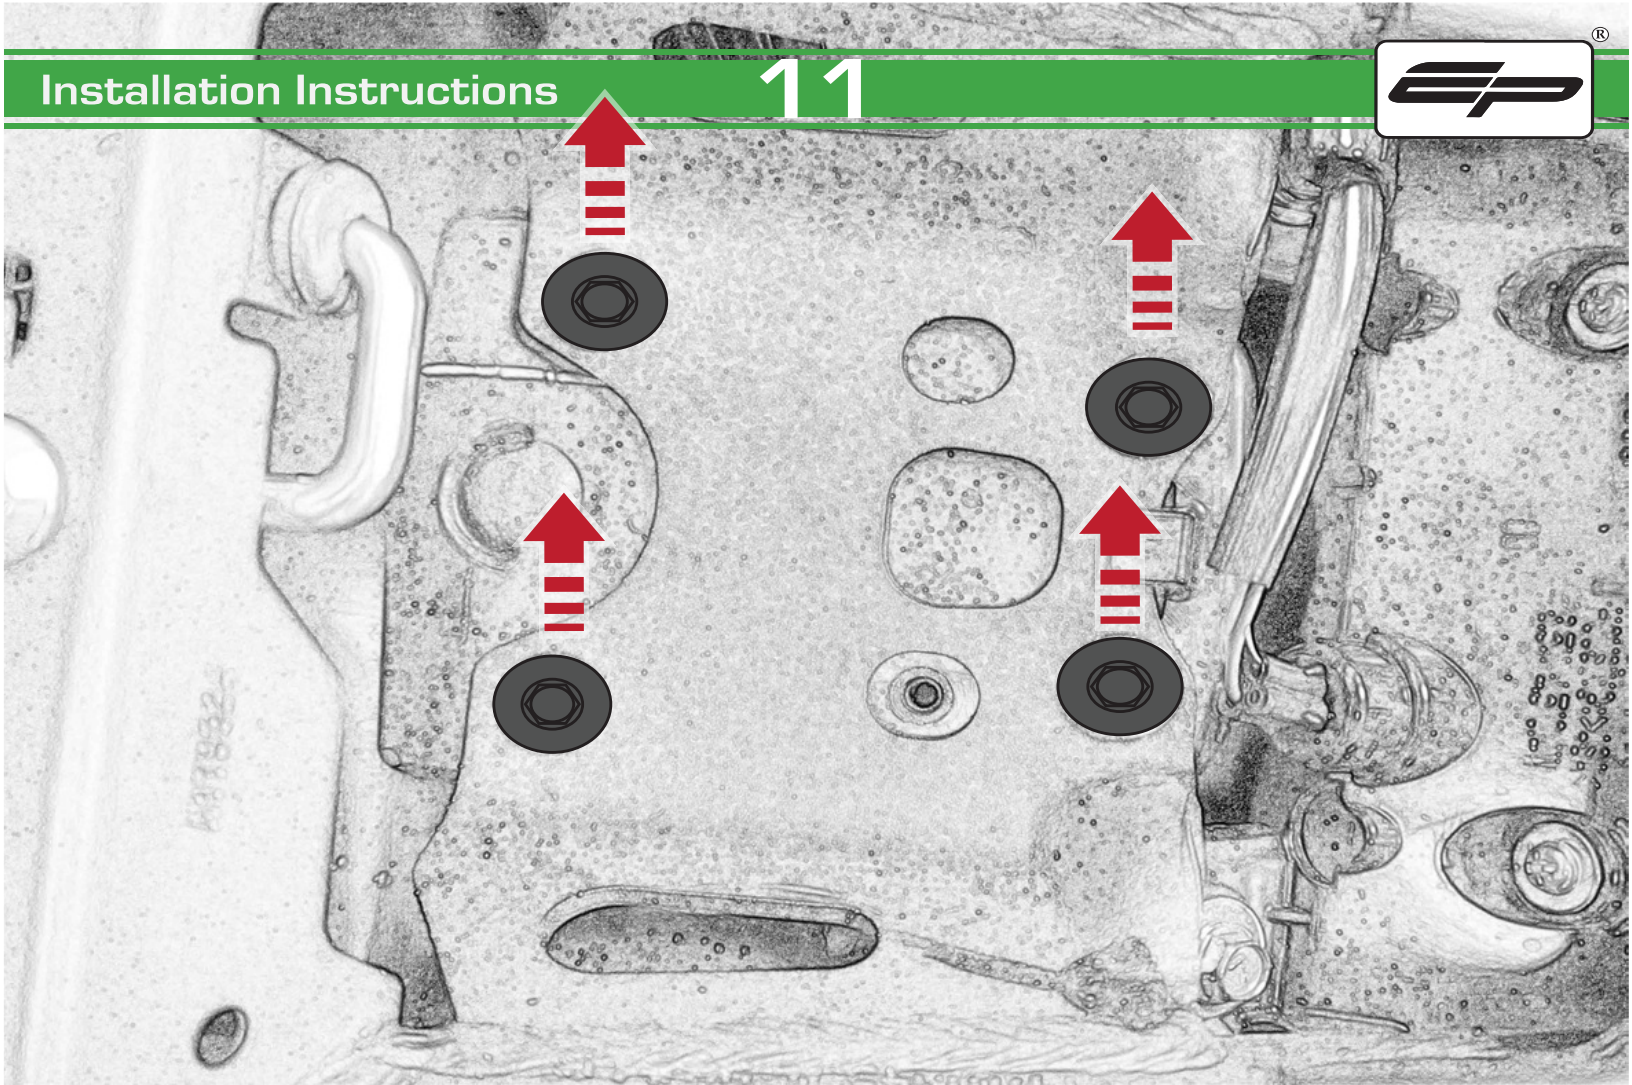


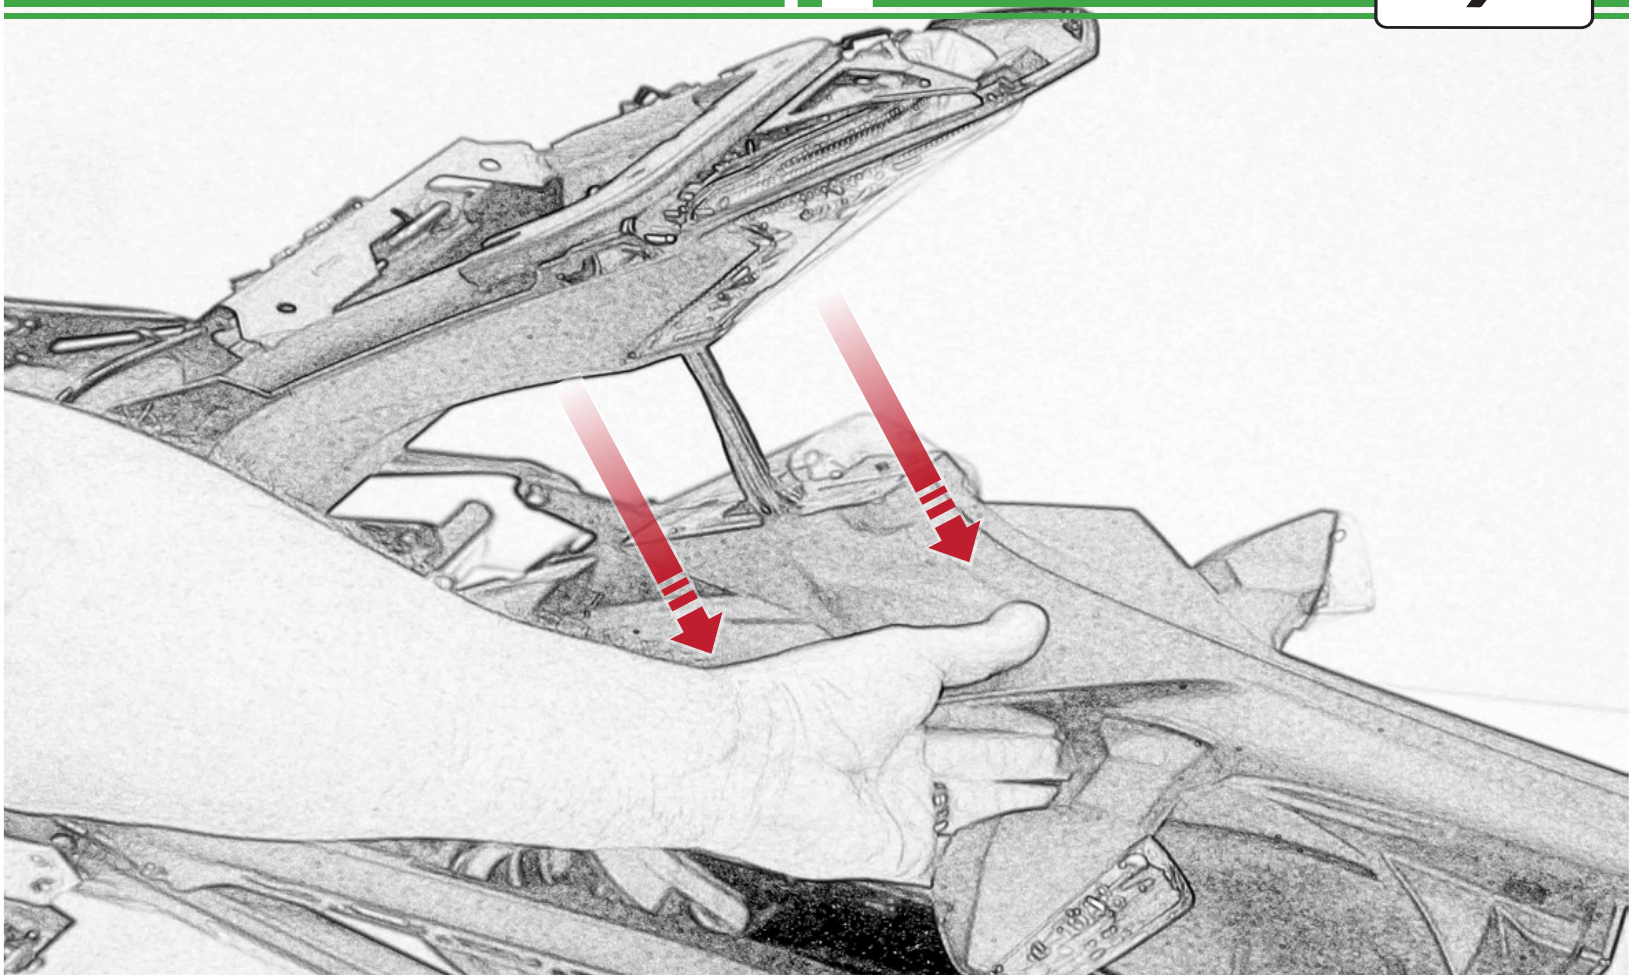

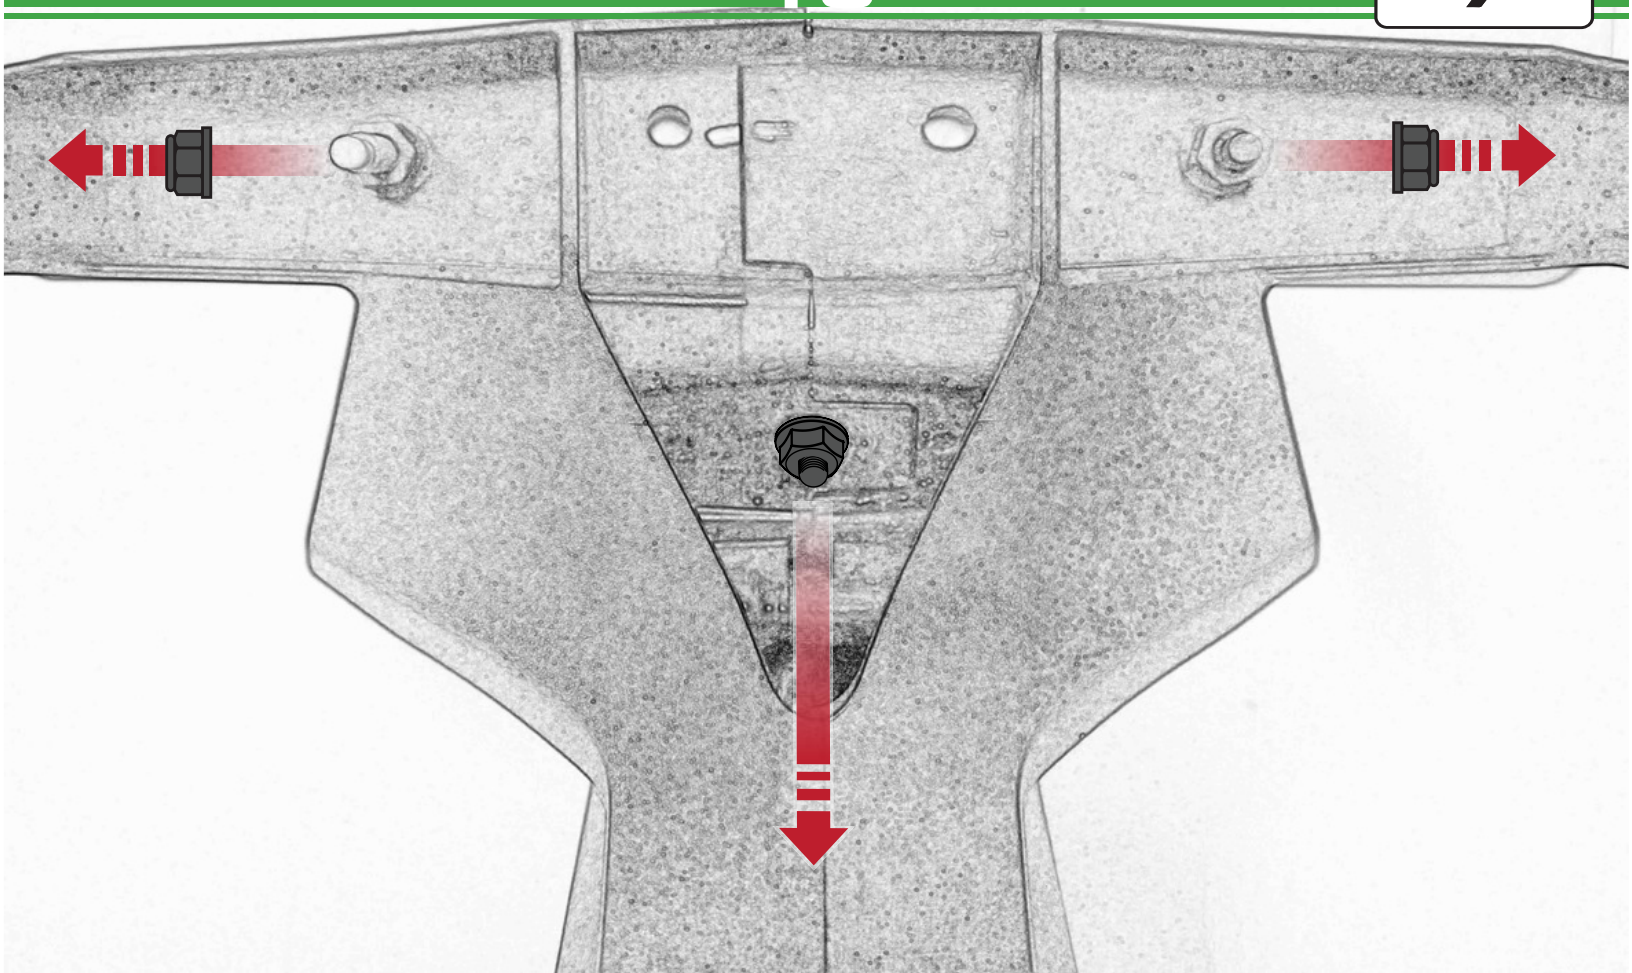


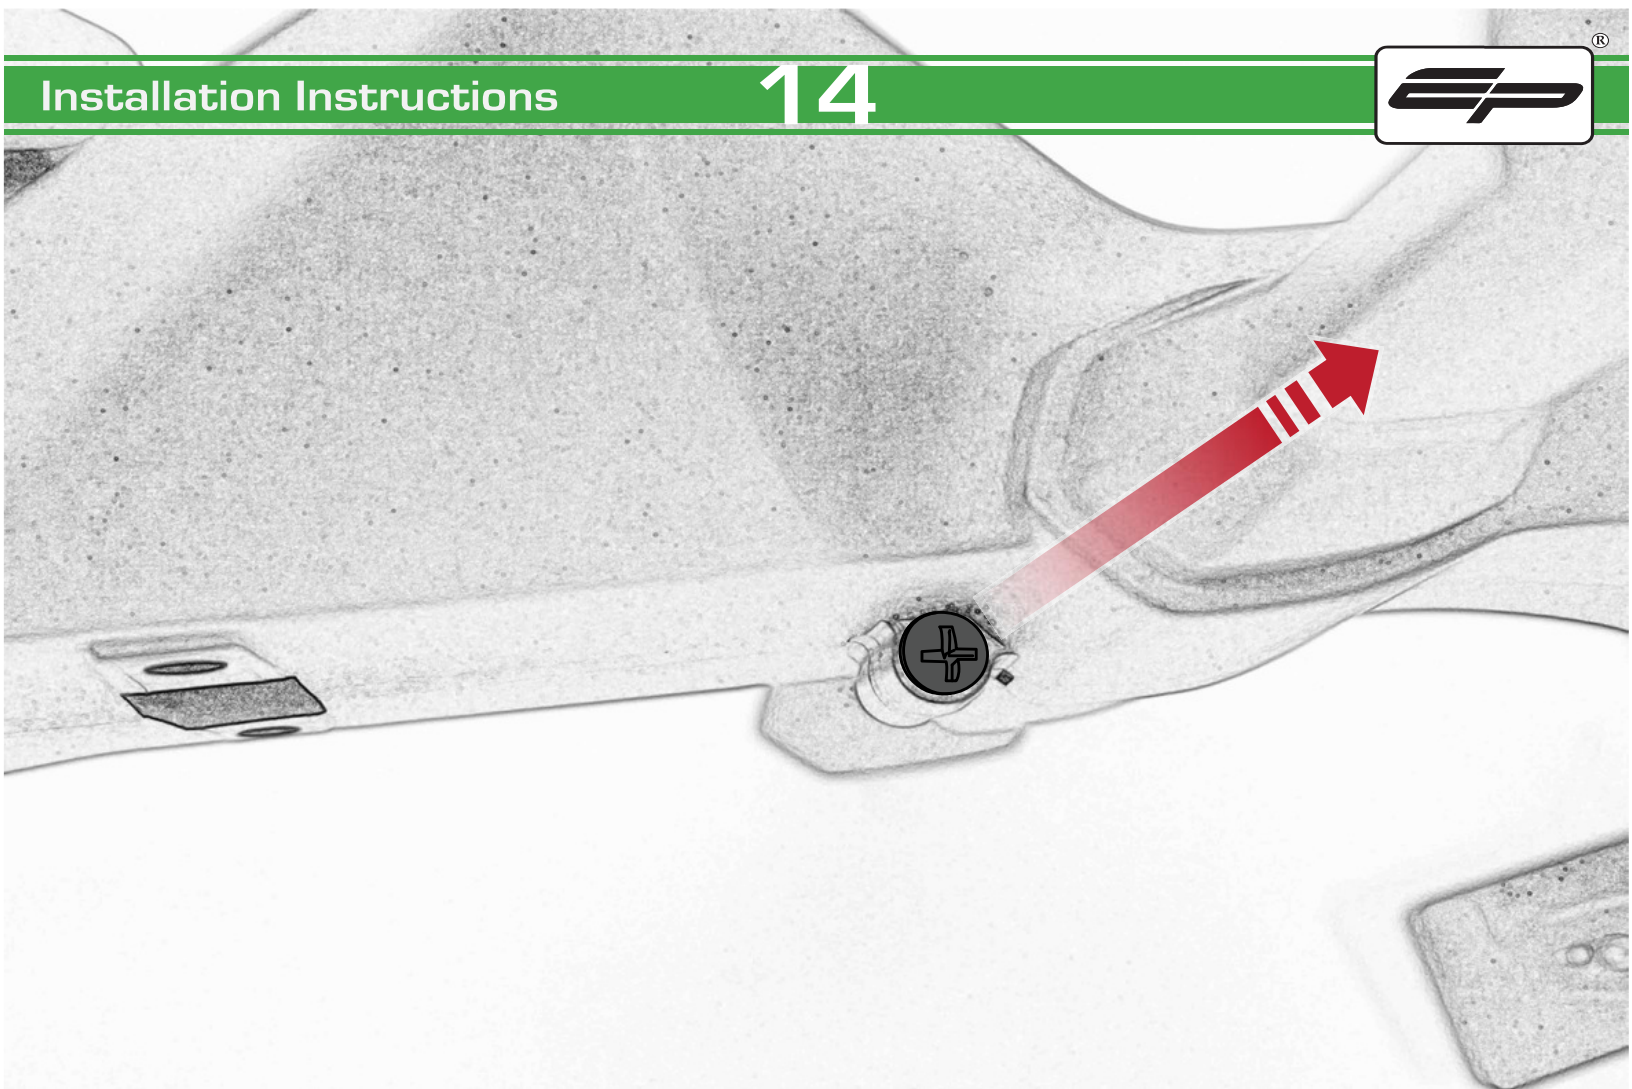

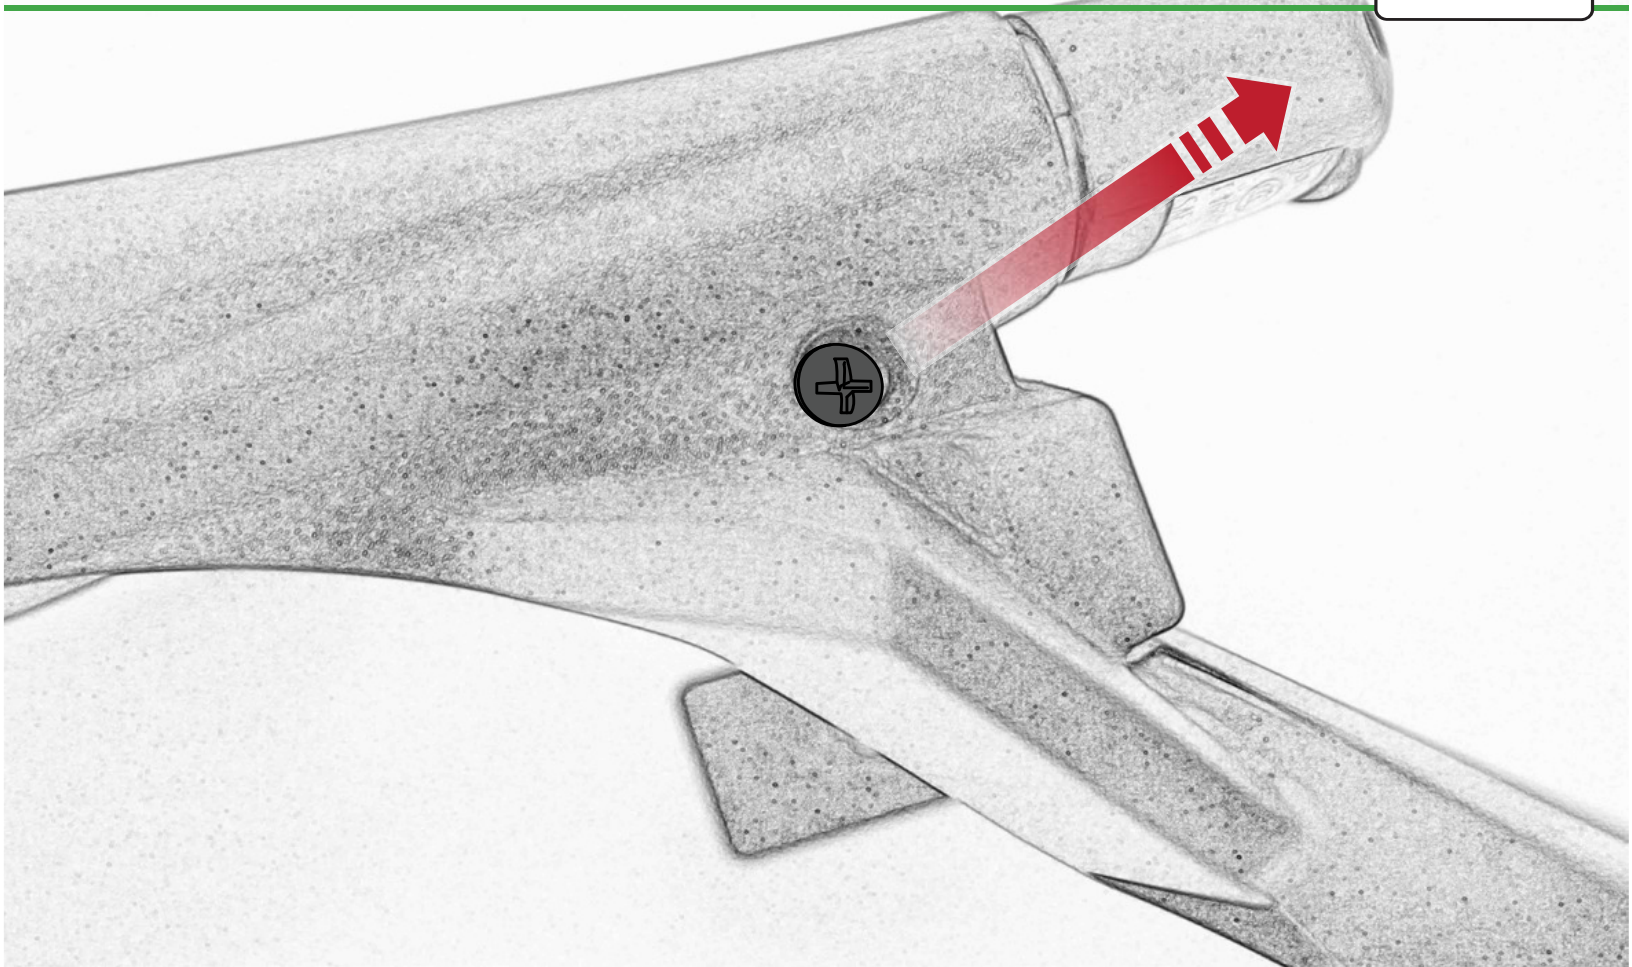


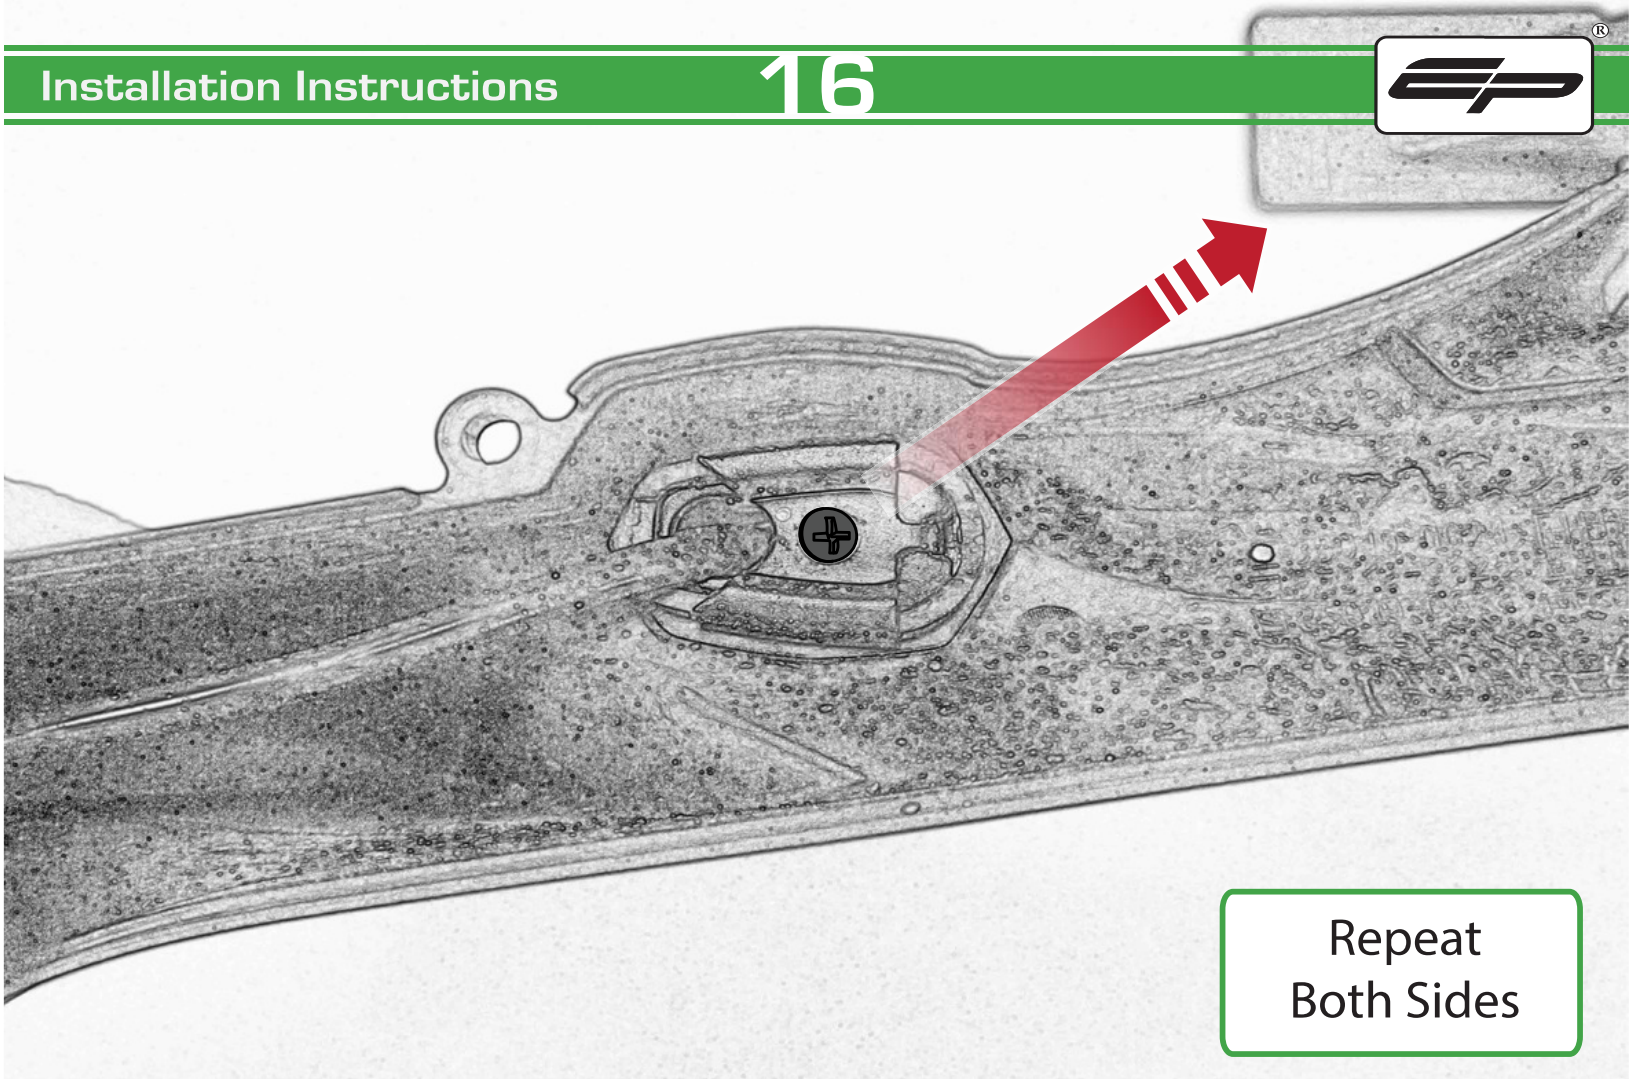


Repeat
Both Sides

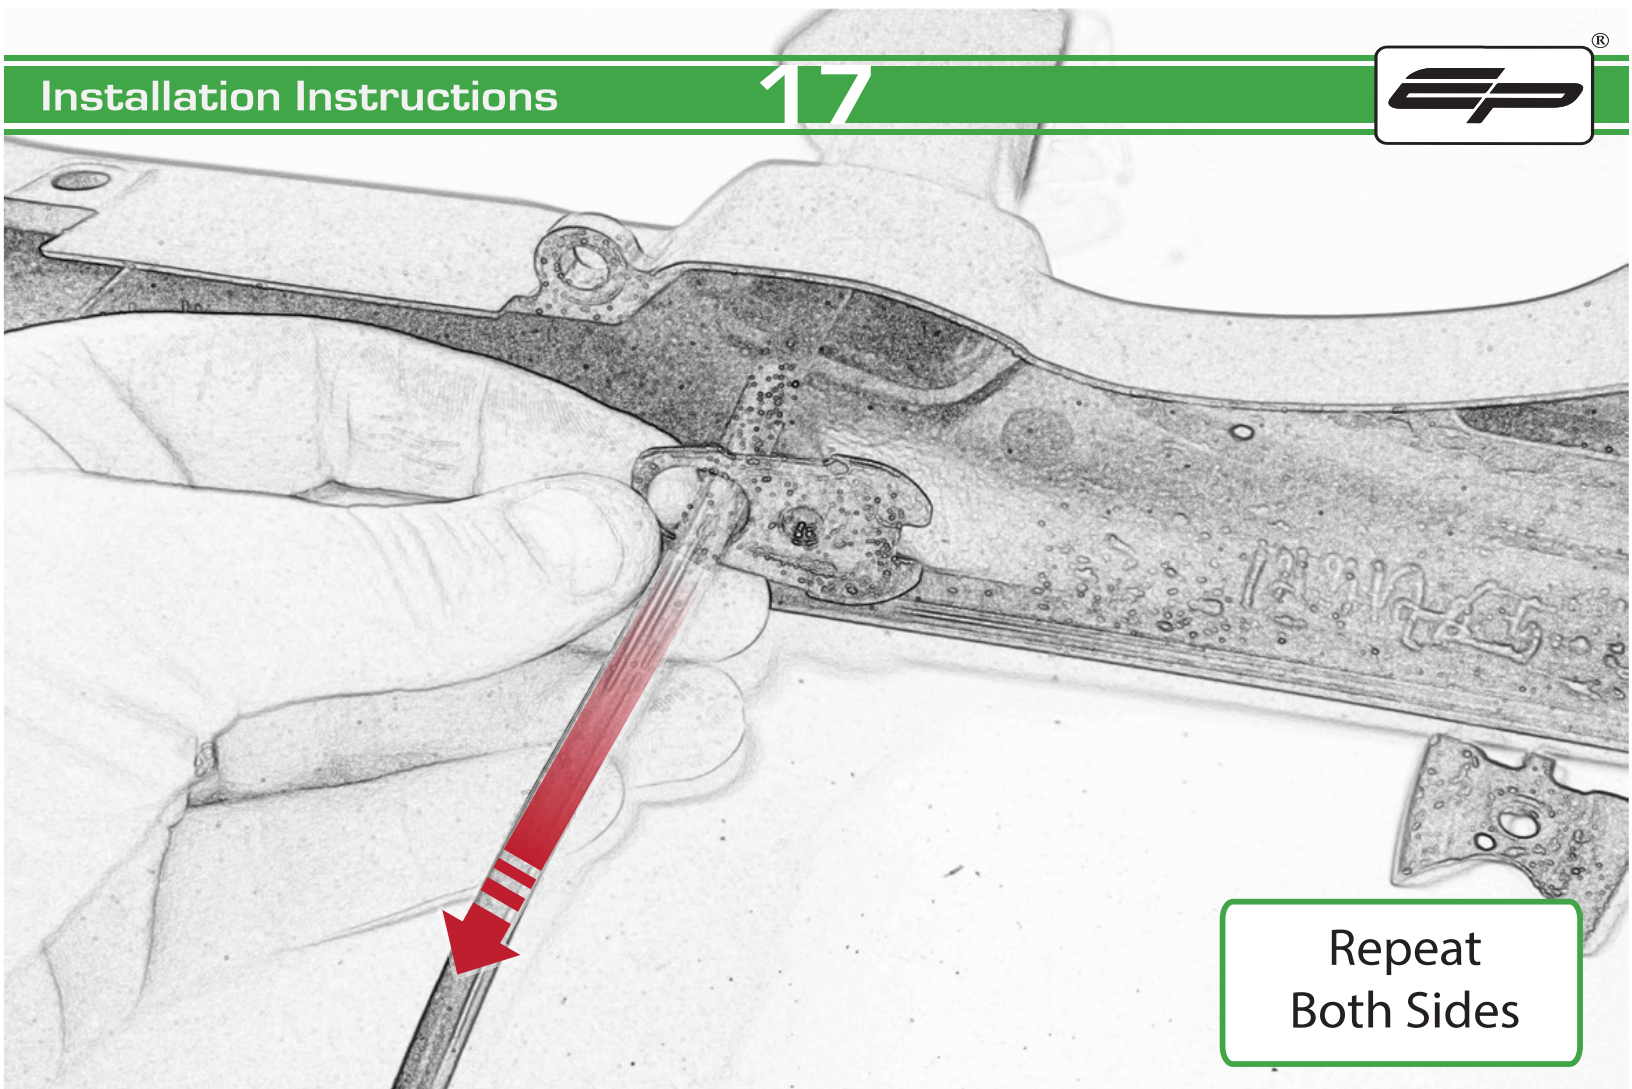



Repeat
Both Sides

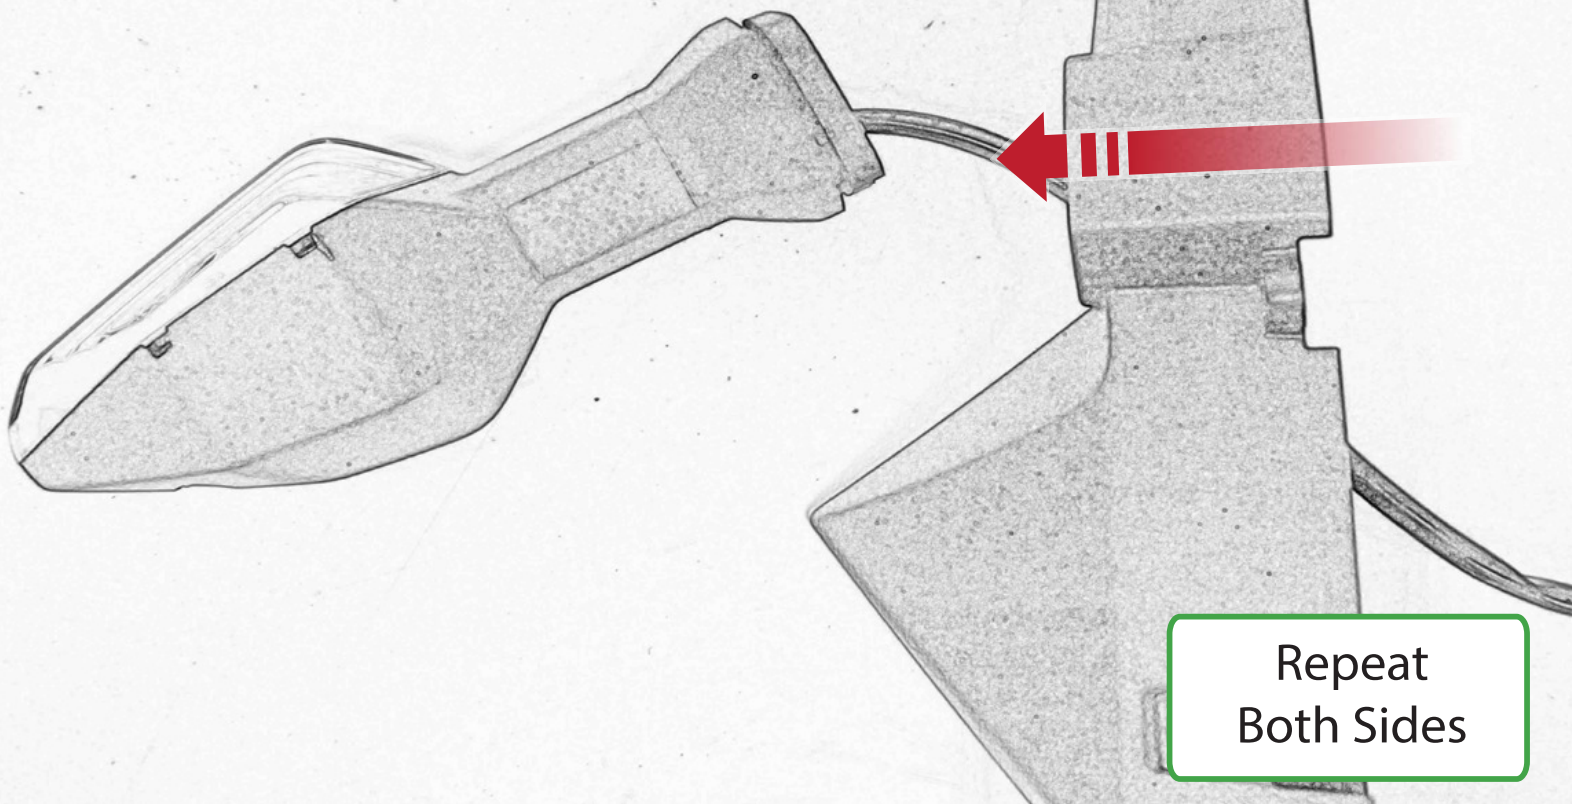


Repeat
Both Sides

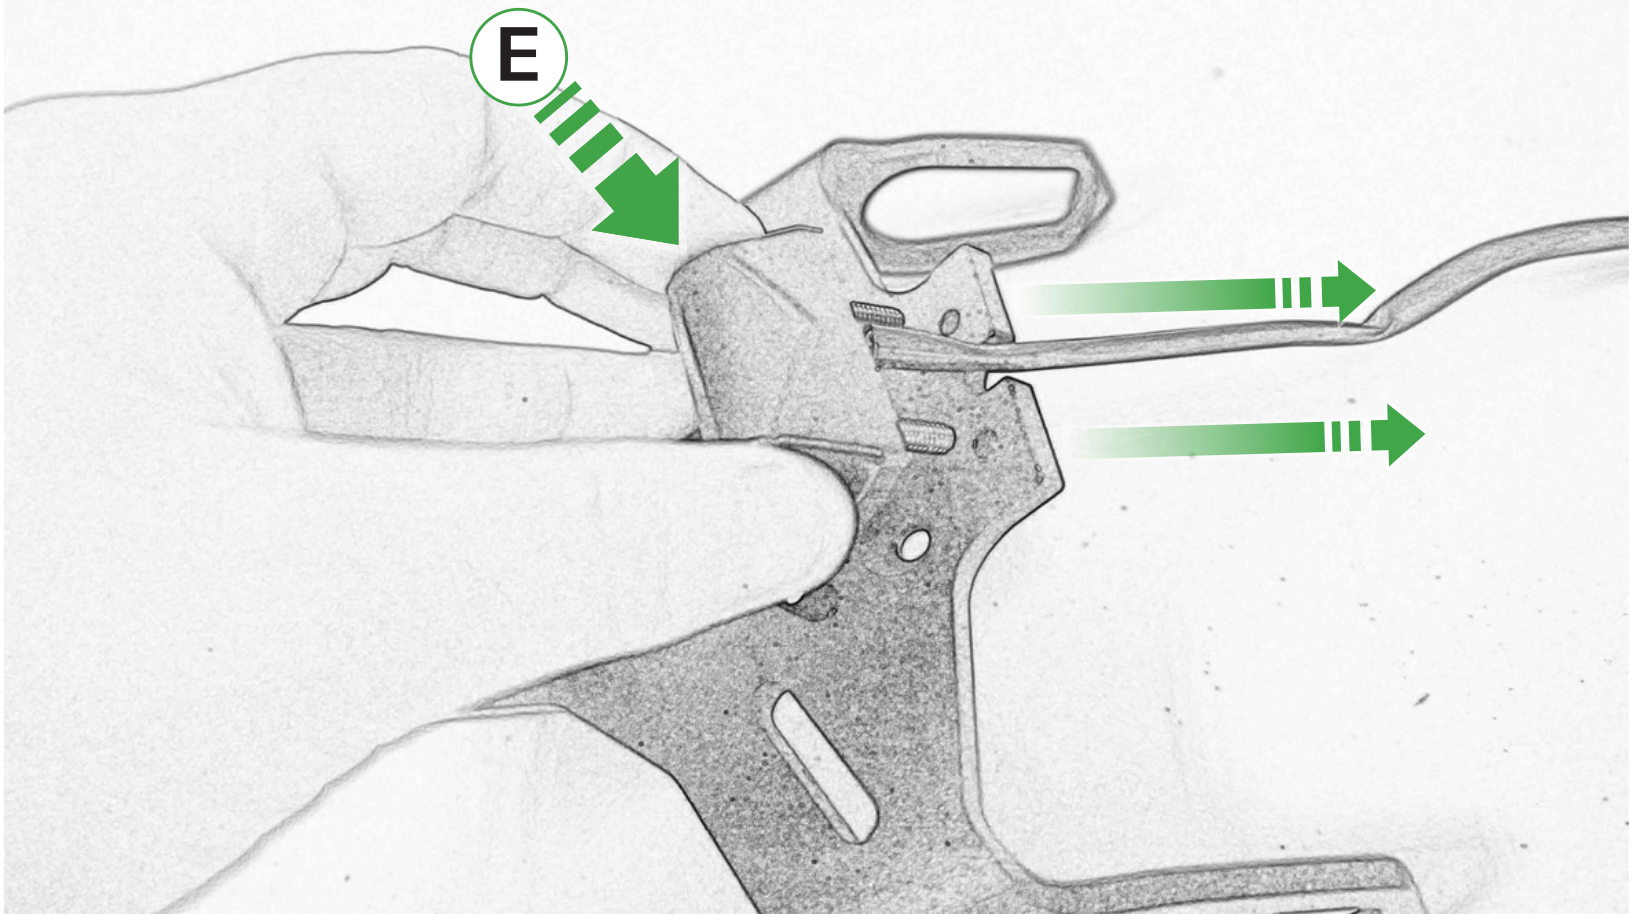

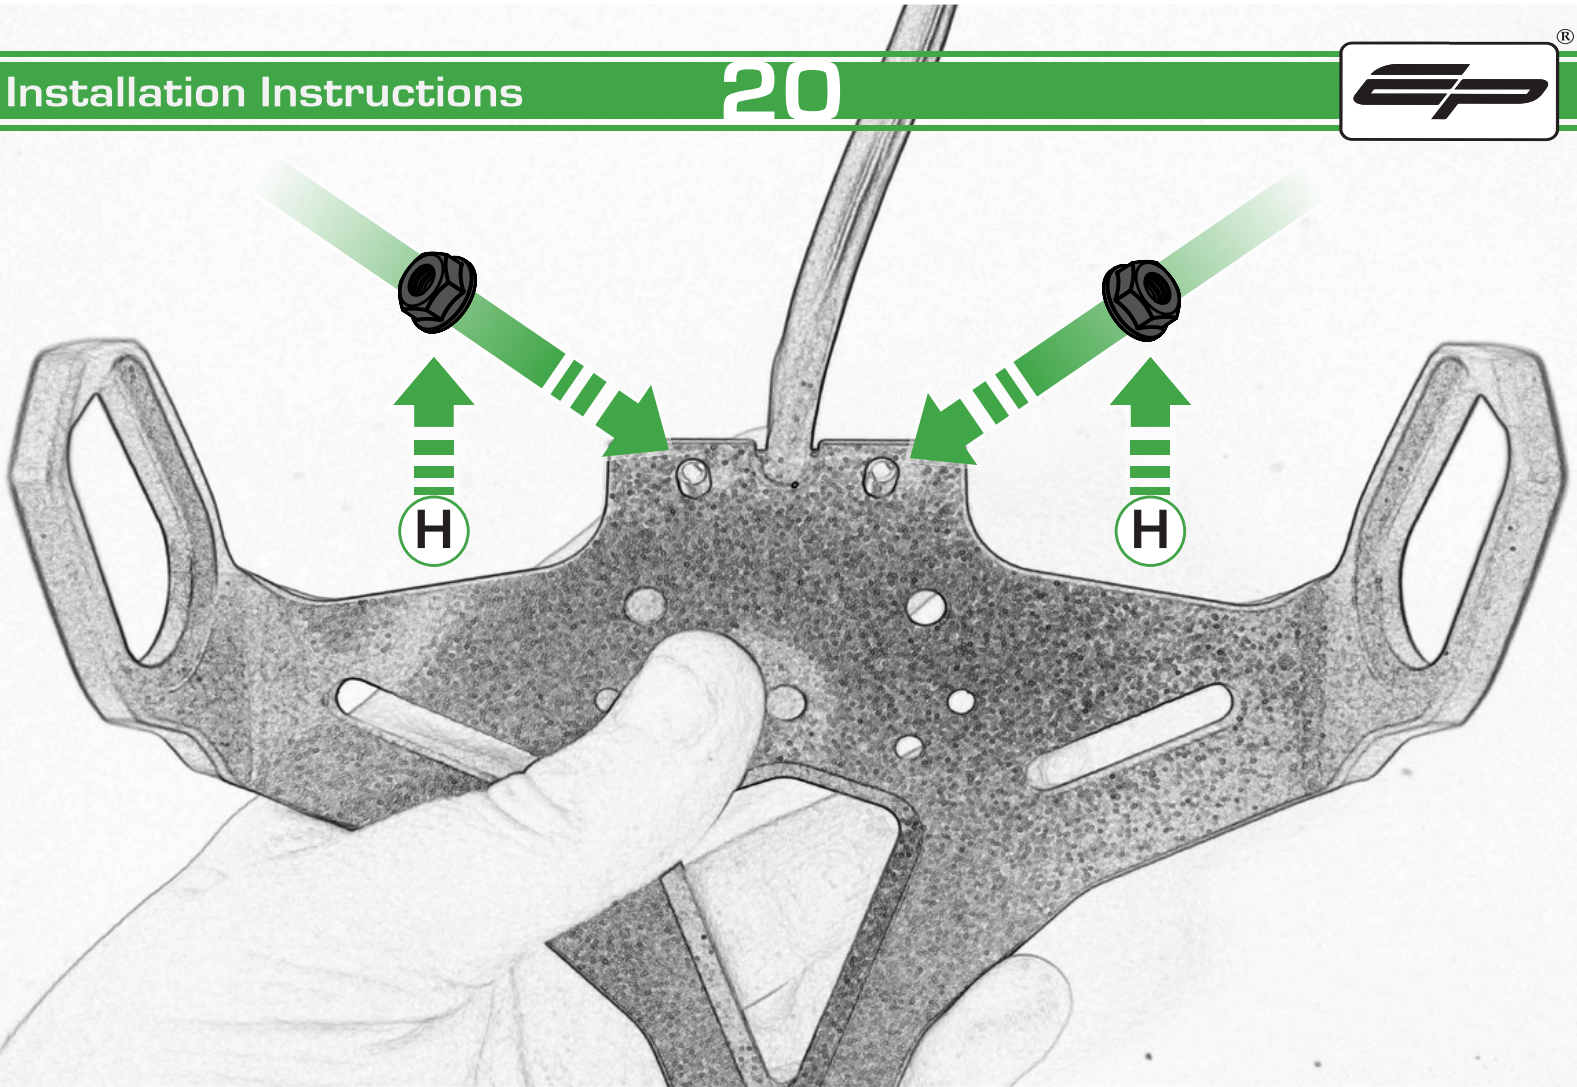


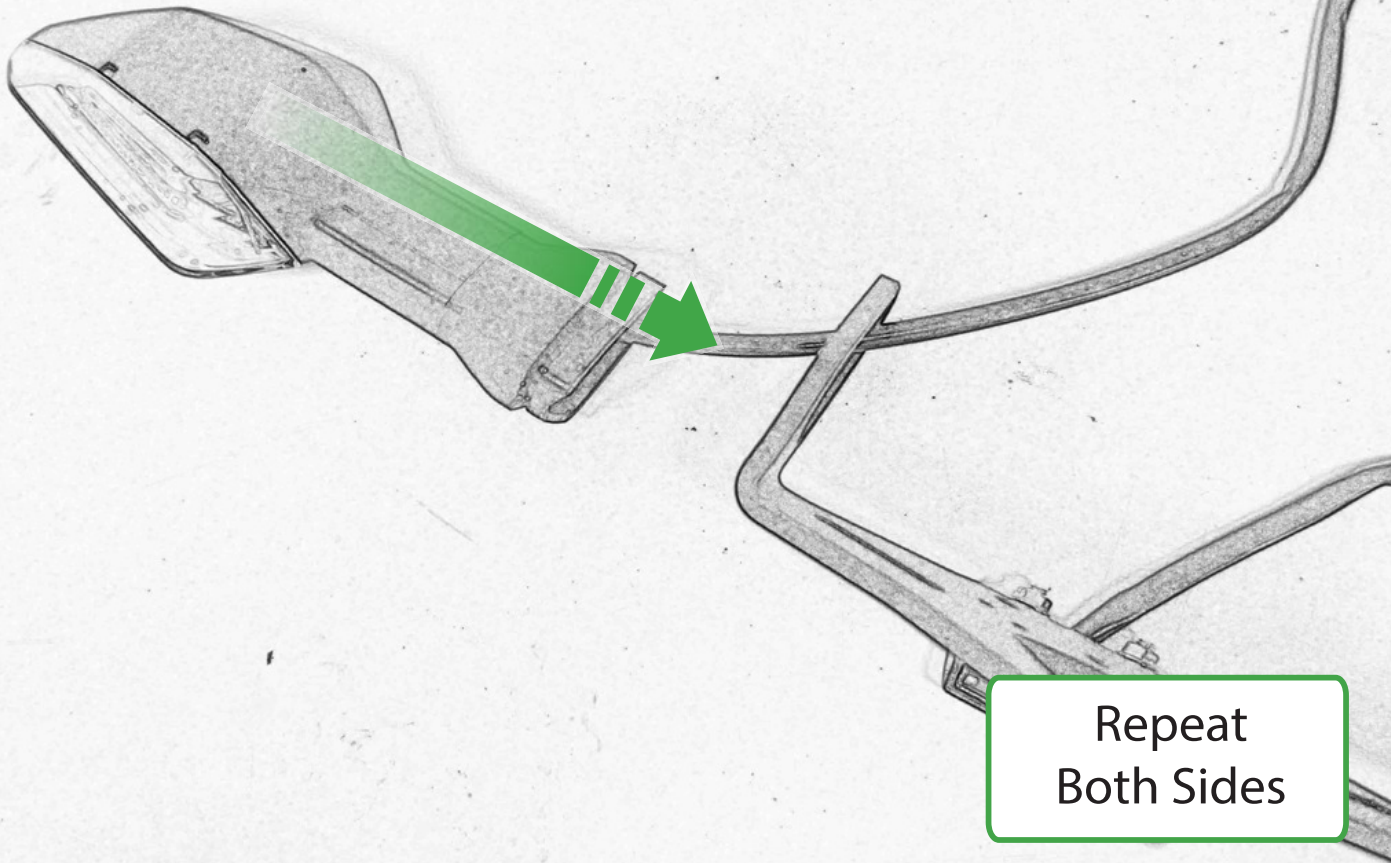

Repeat
Both Sides

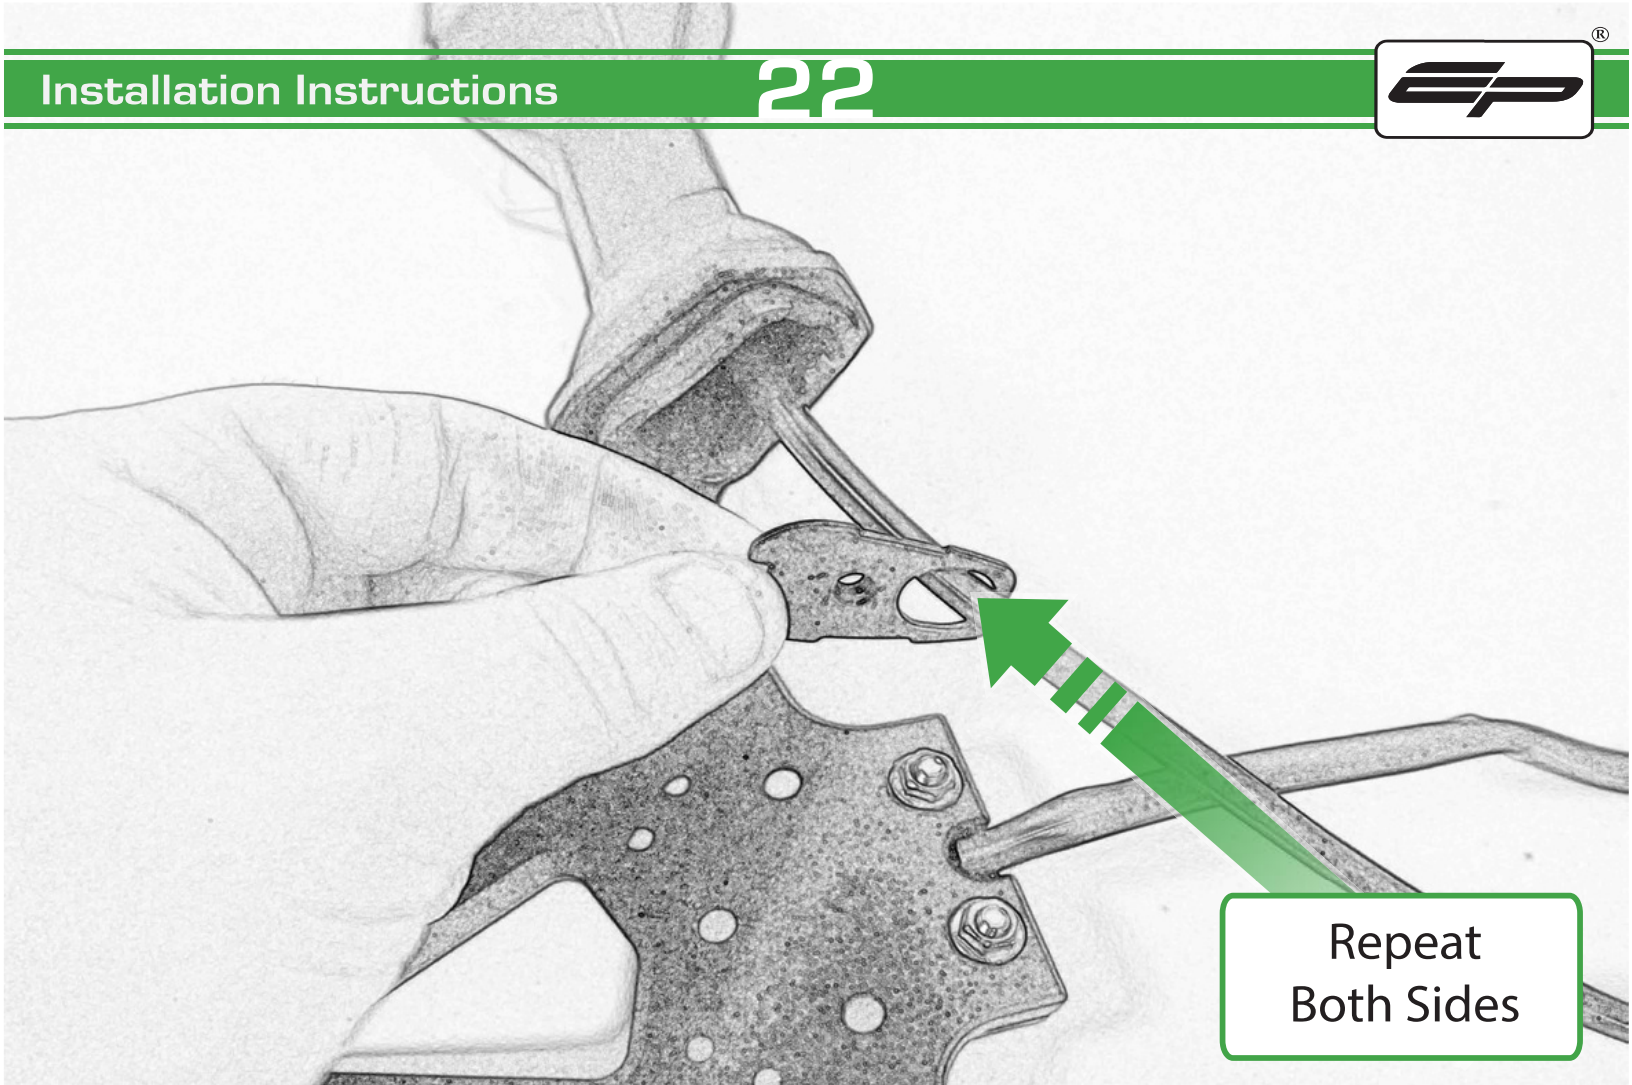


Repeat
Both Sides

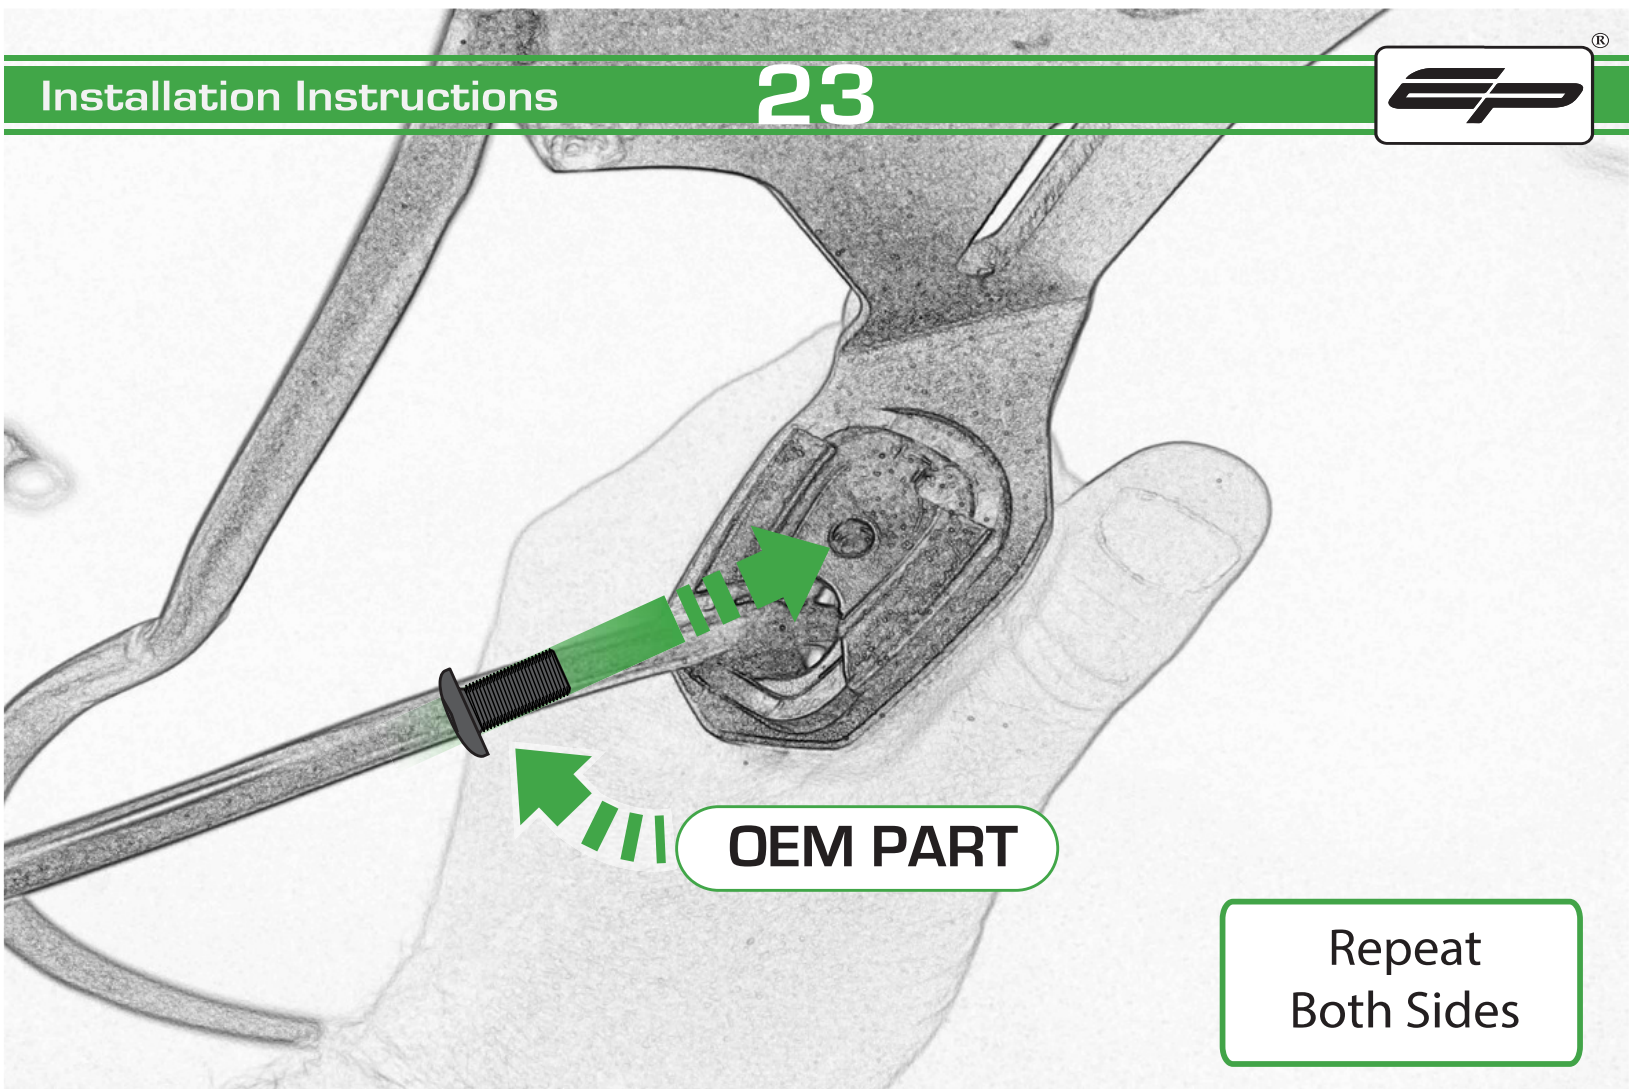
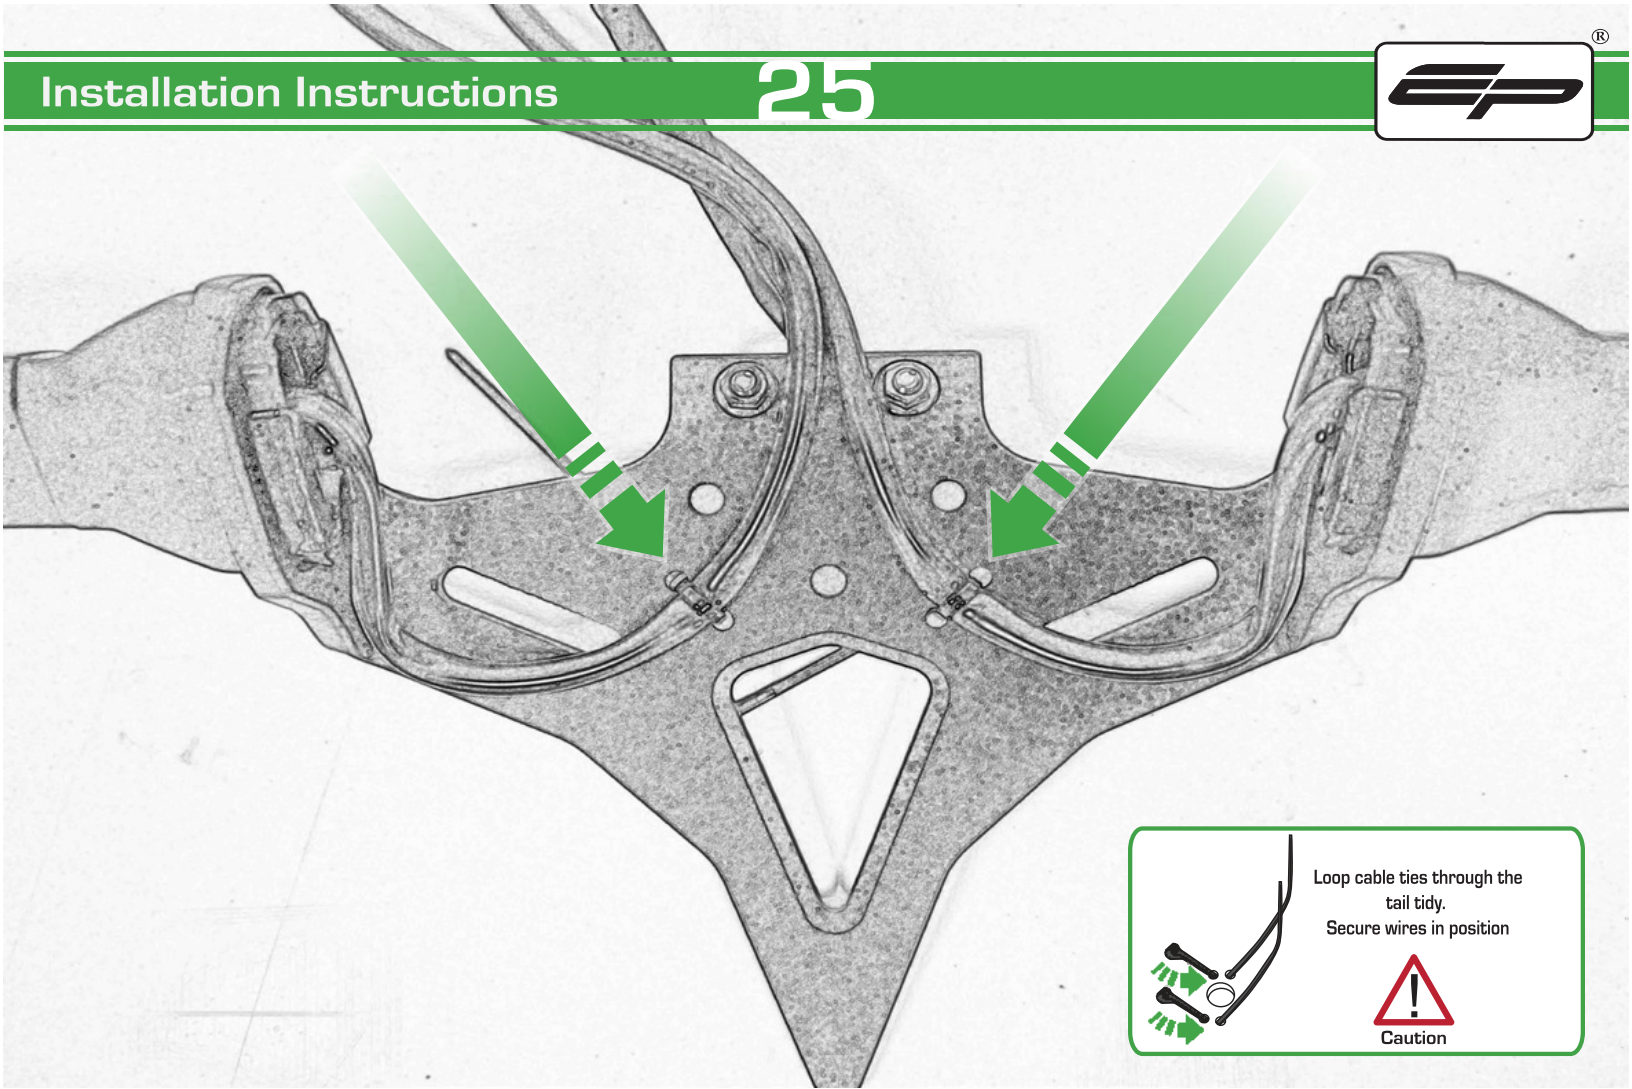


OEM PART


Repeat
Both Sides

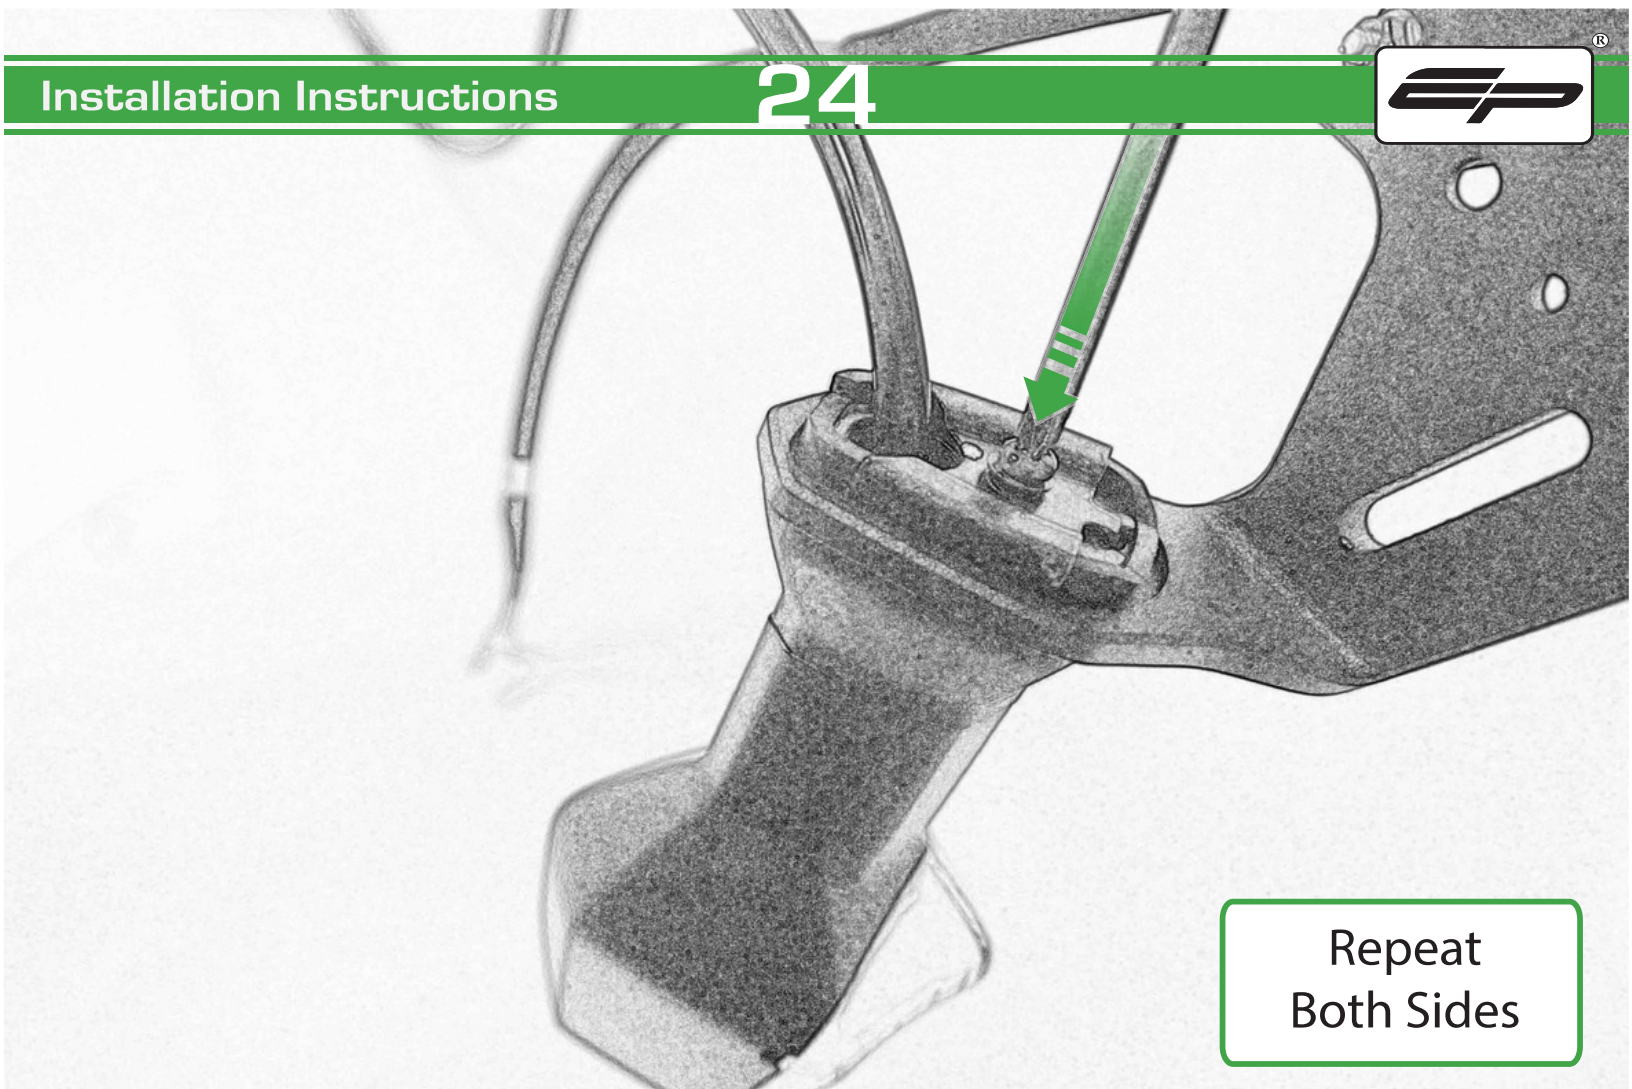



Repeat
Both Sides




Loop cable ties through the tail tidy.
Secure wires in position




Caution

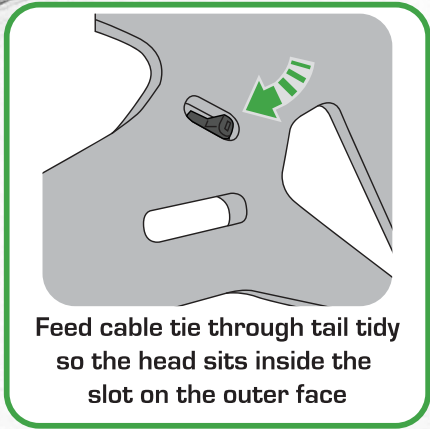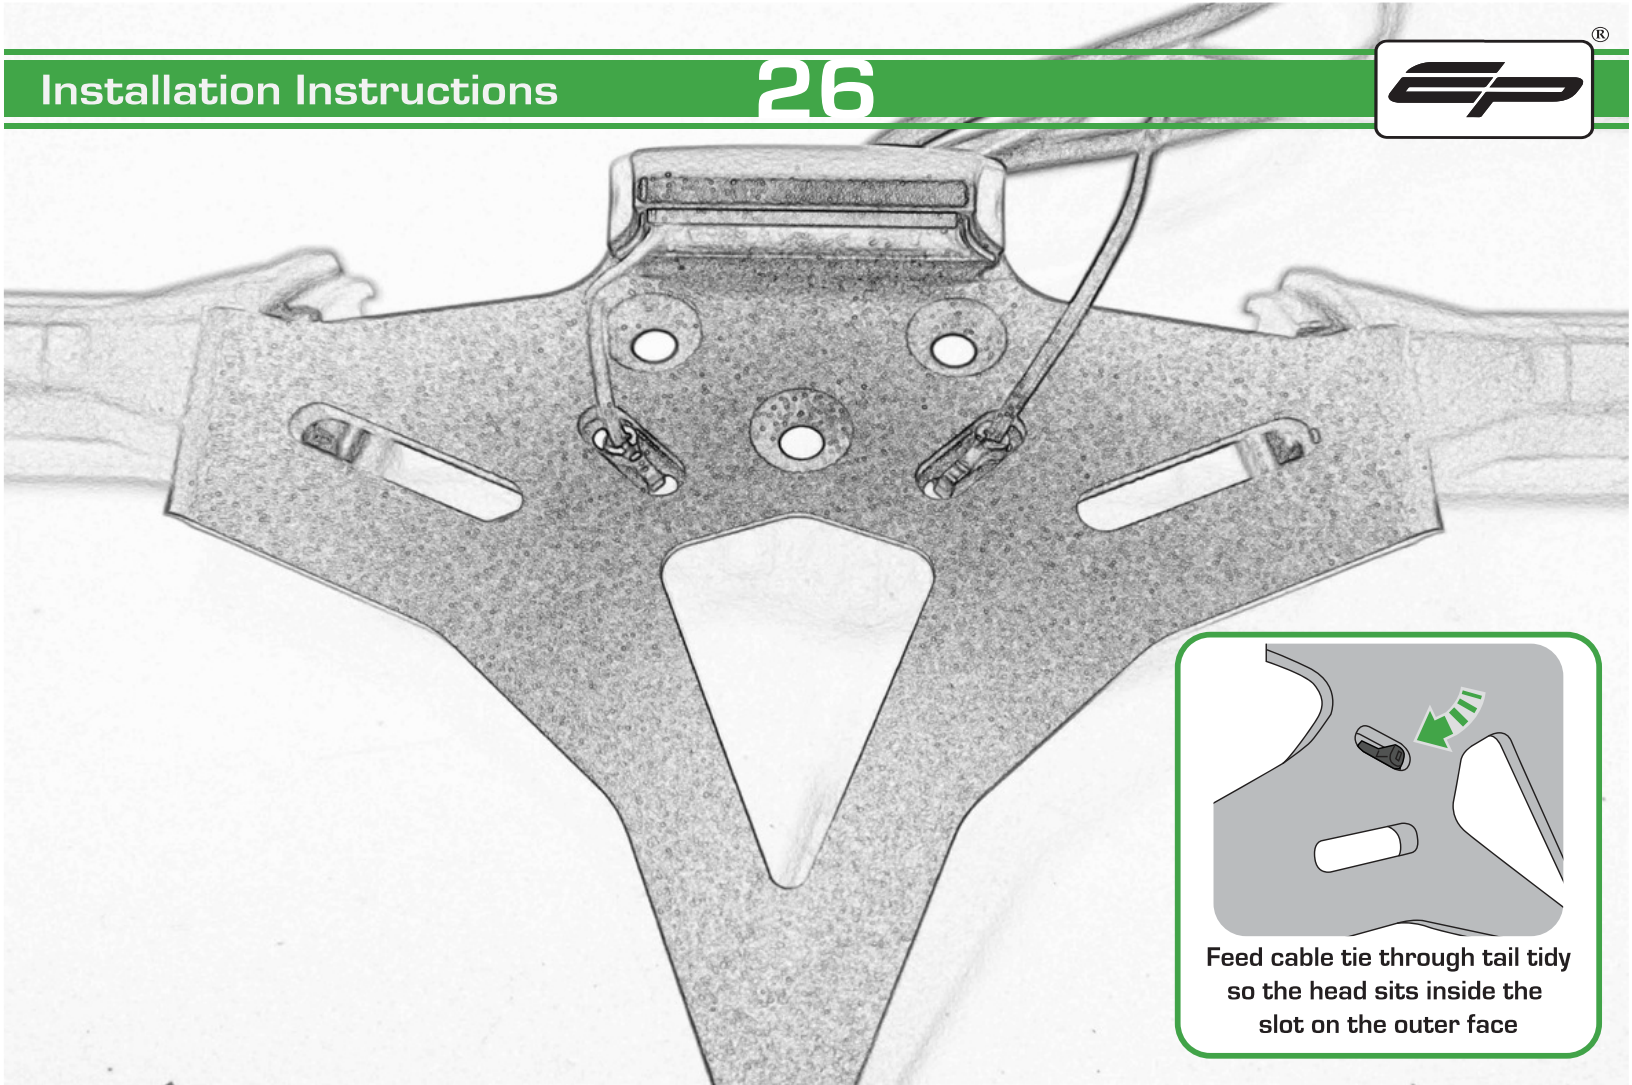


Feed cable tie through tail tidy so the head sits inside the slot on the outer face

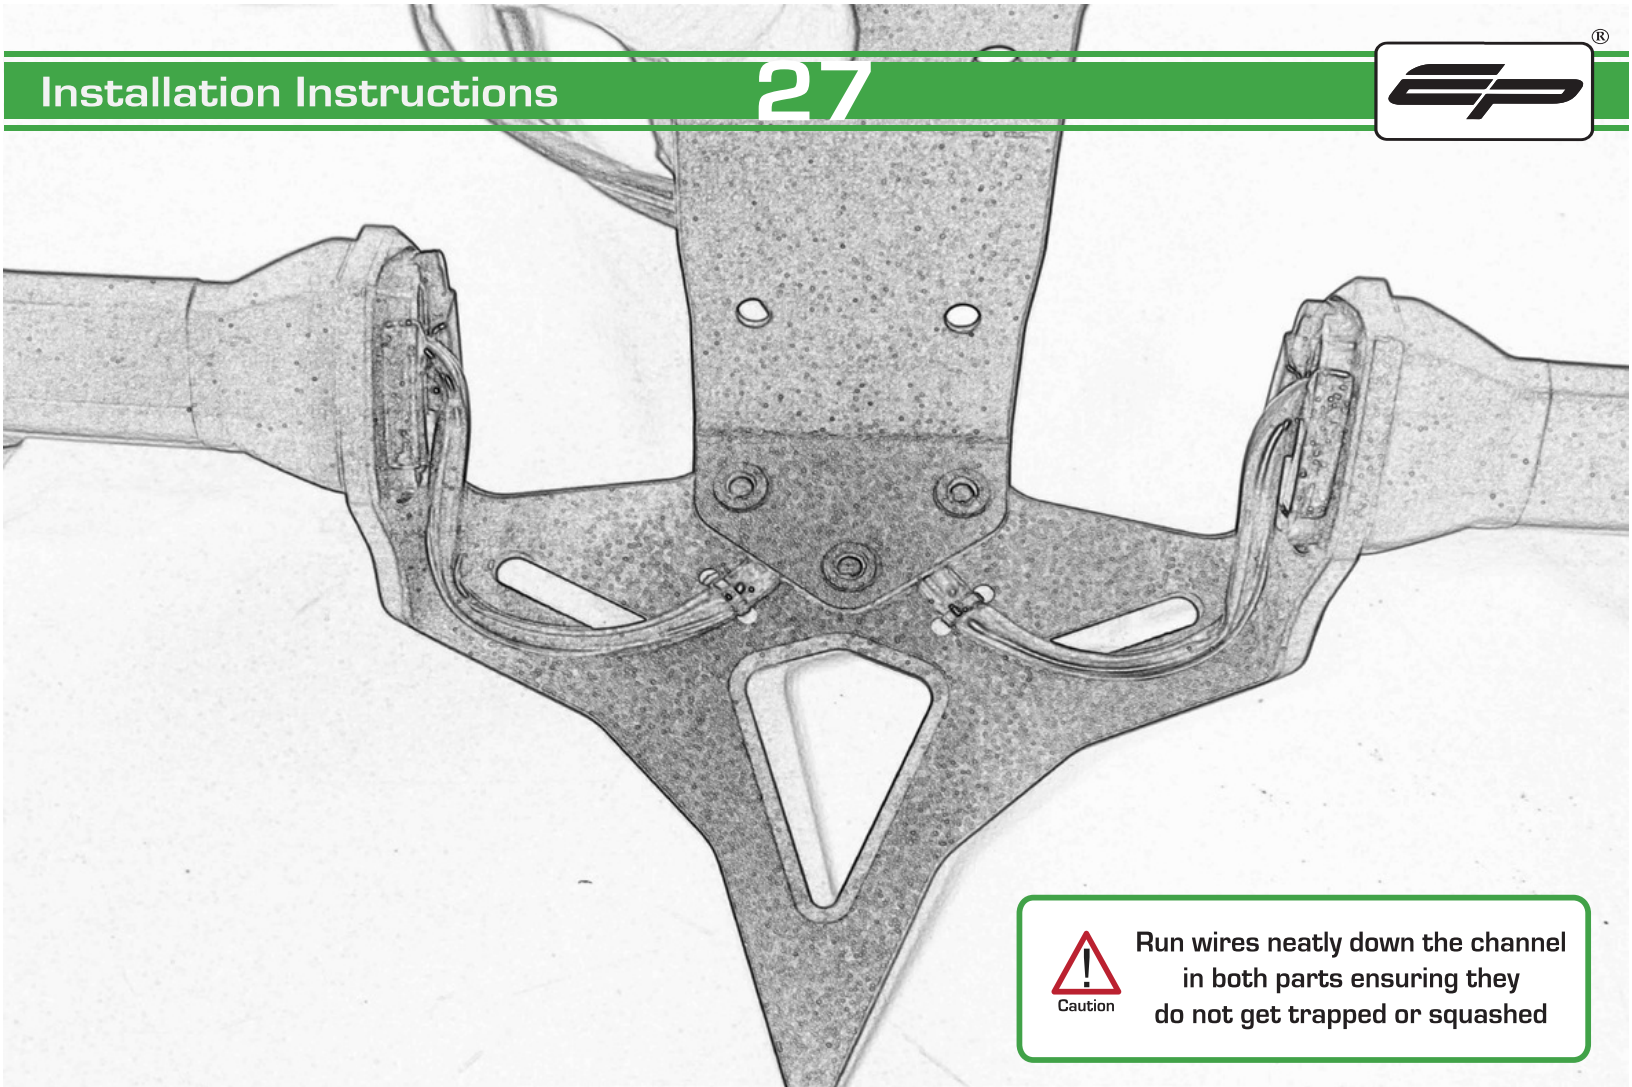


Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

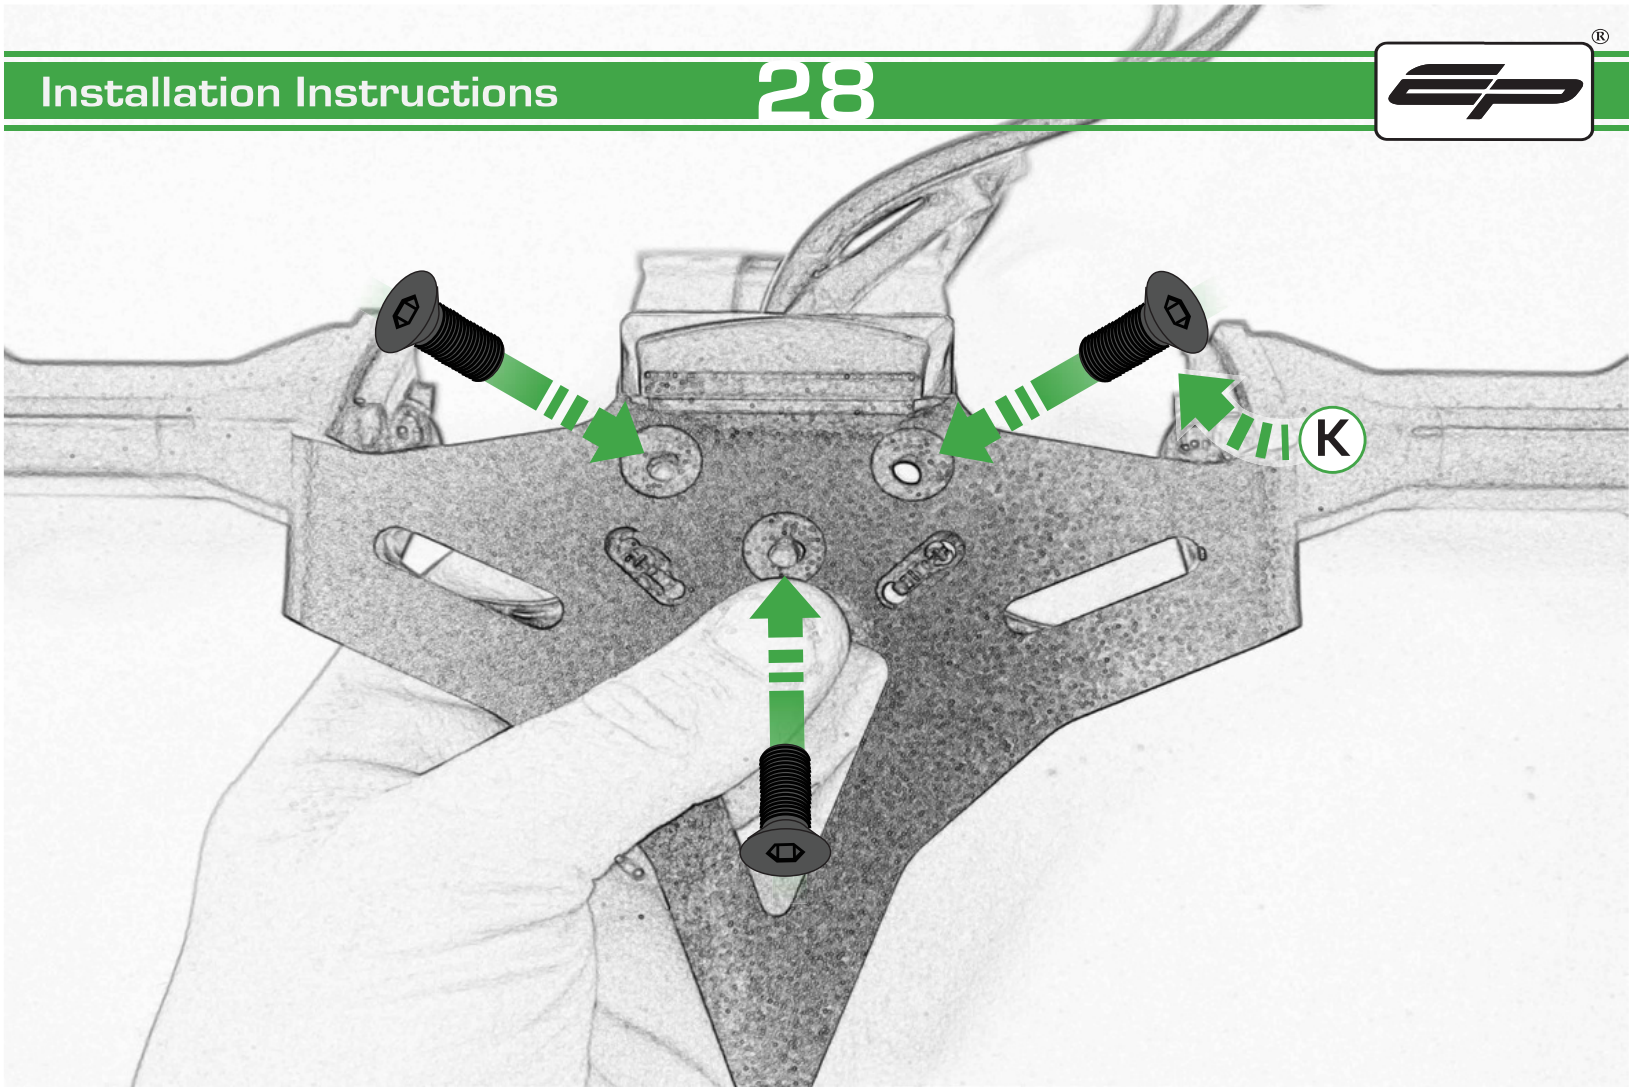

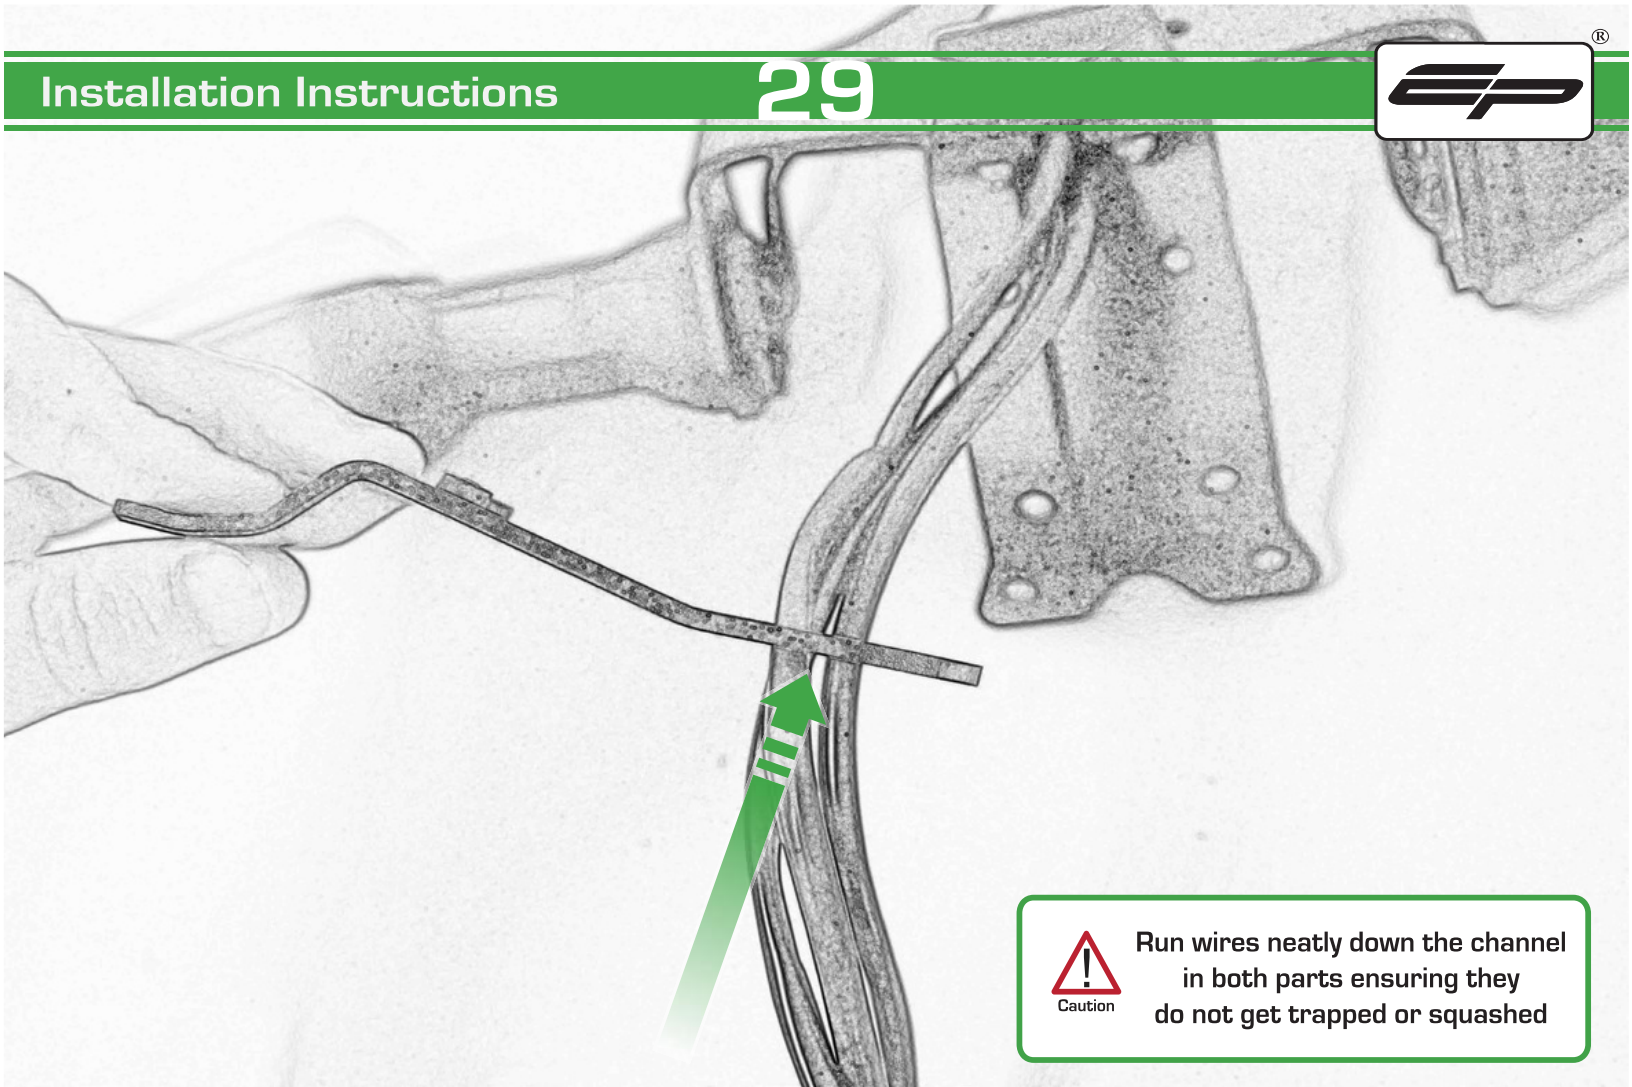



Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

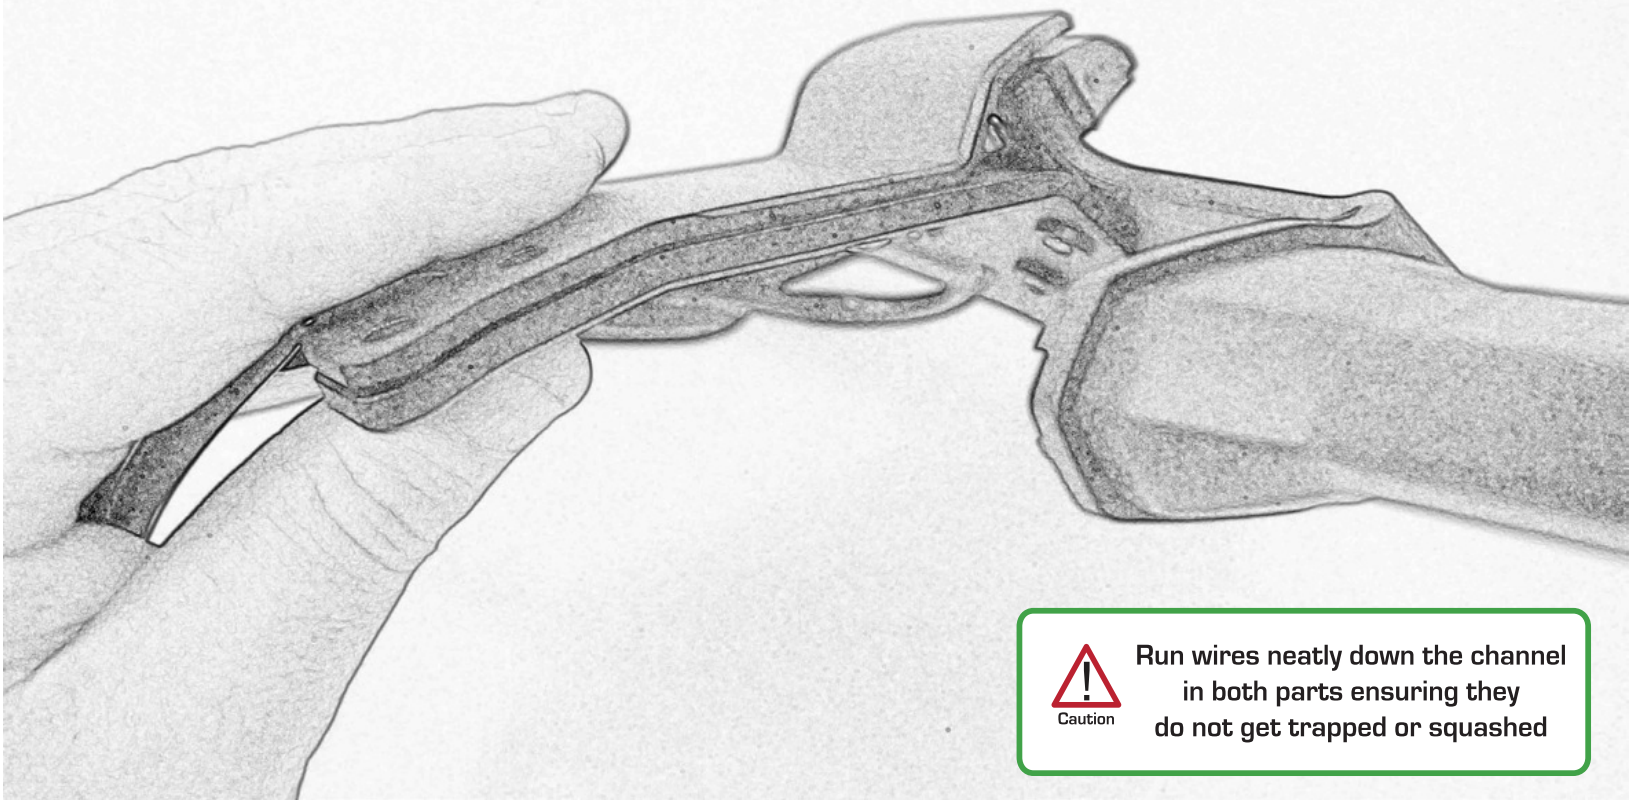



Caution


Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

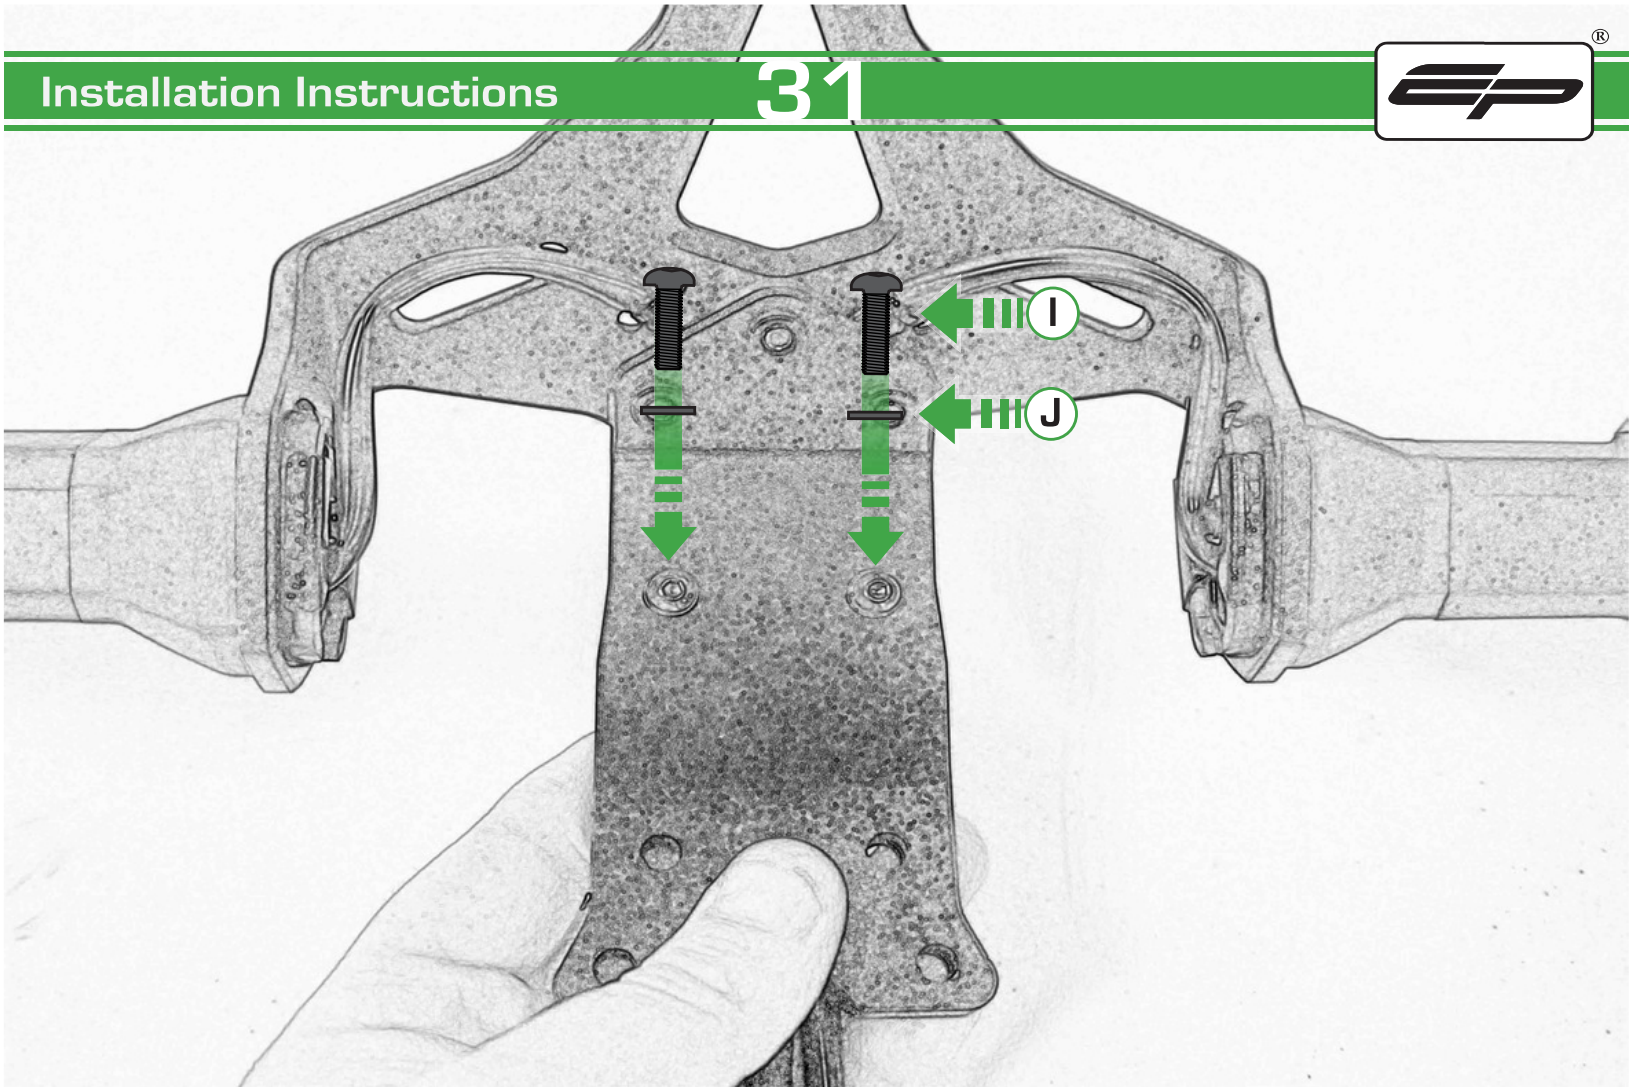

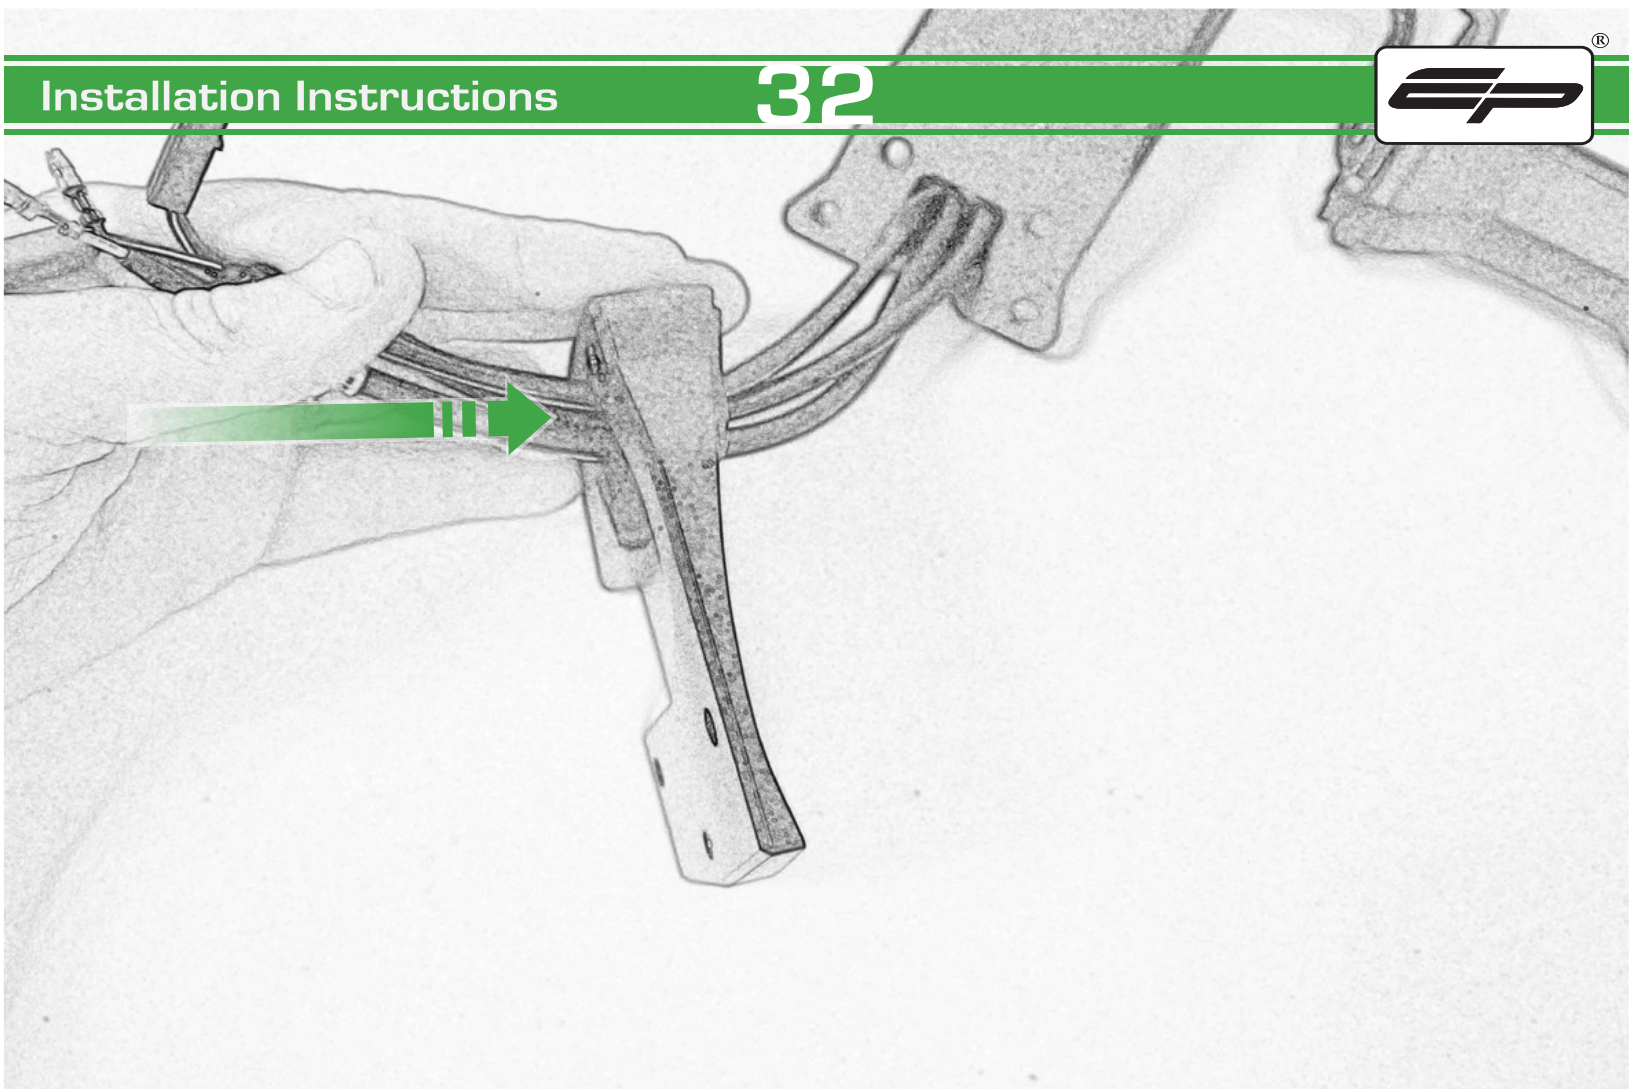

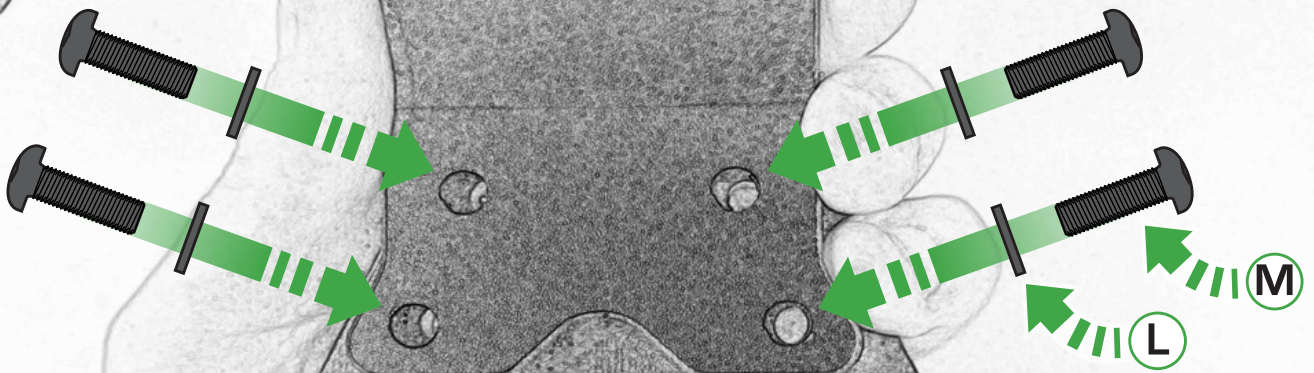


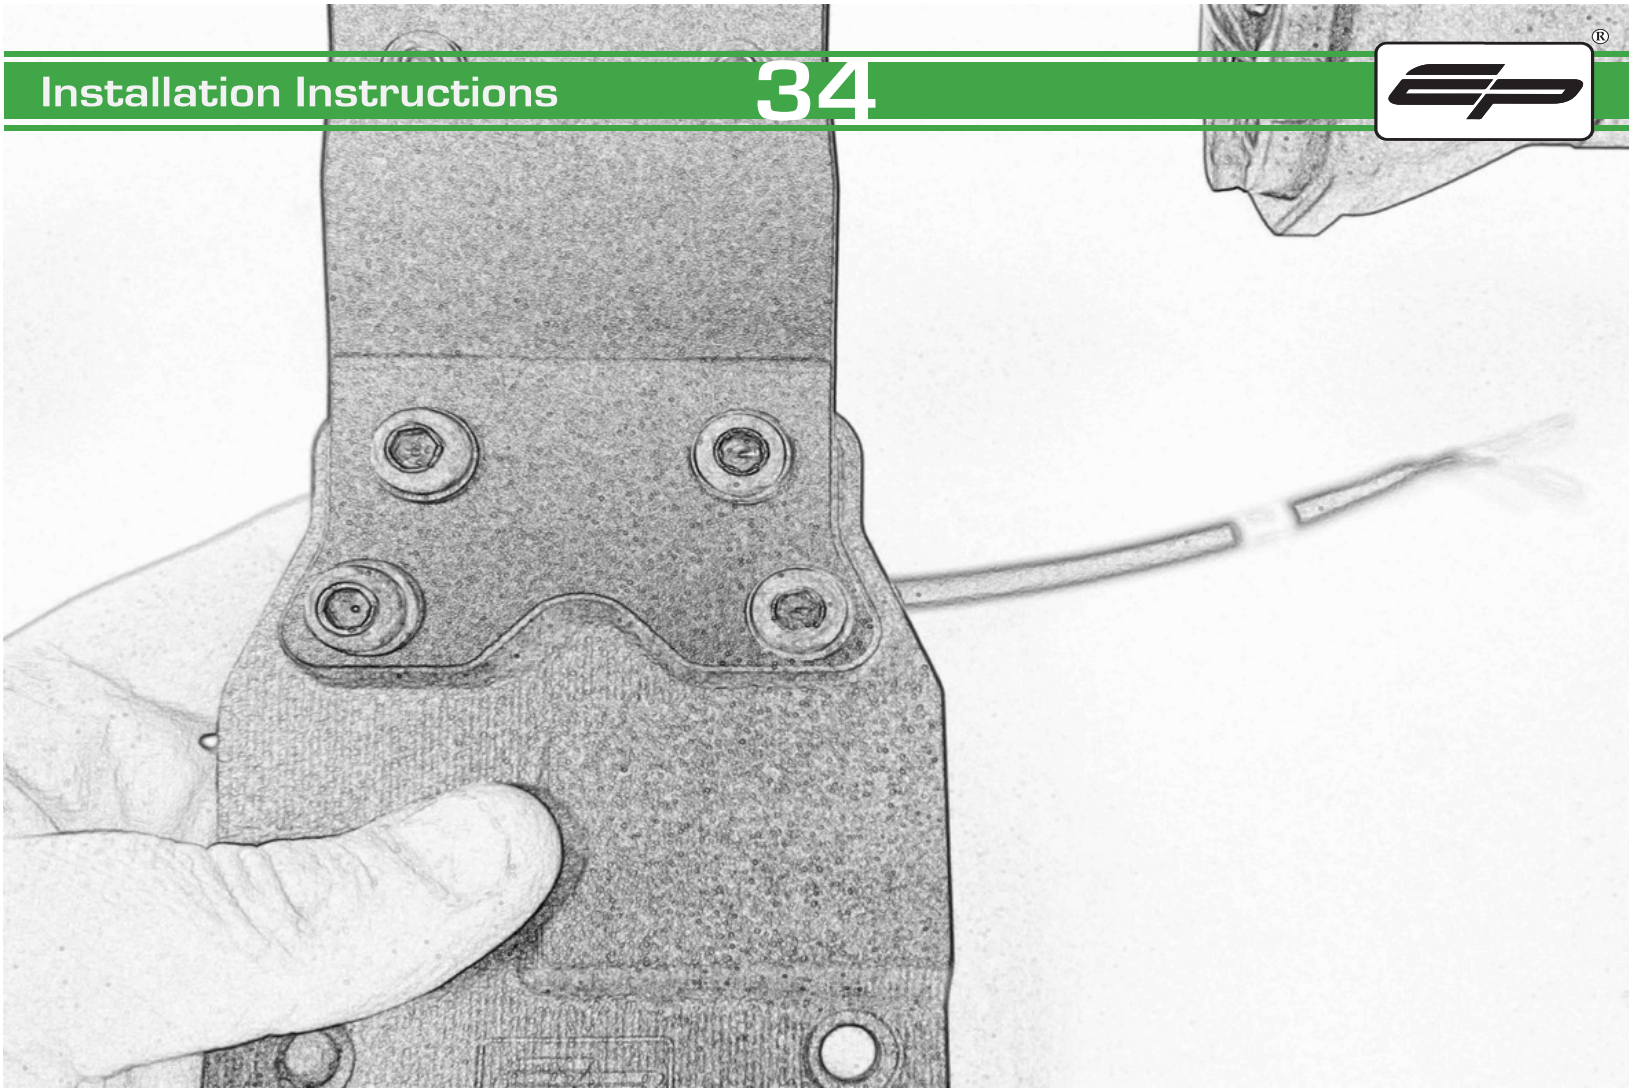


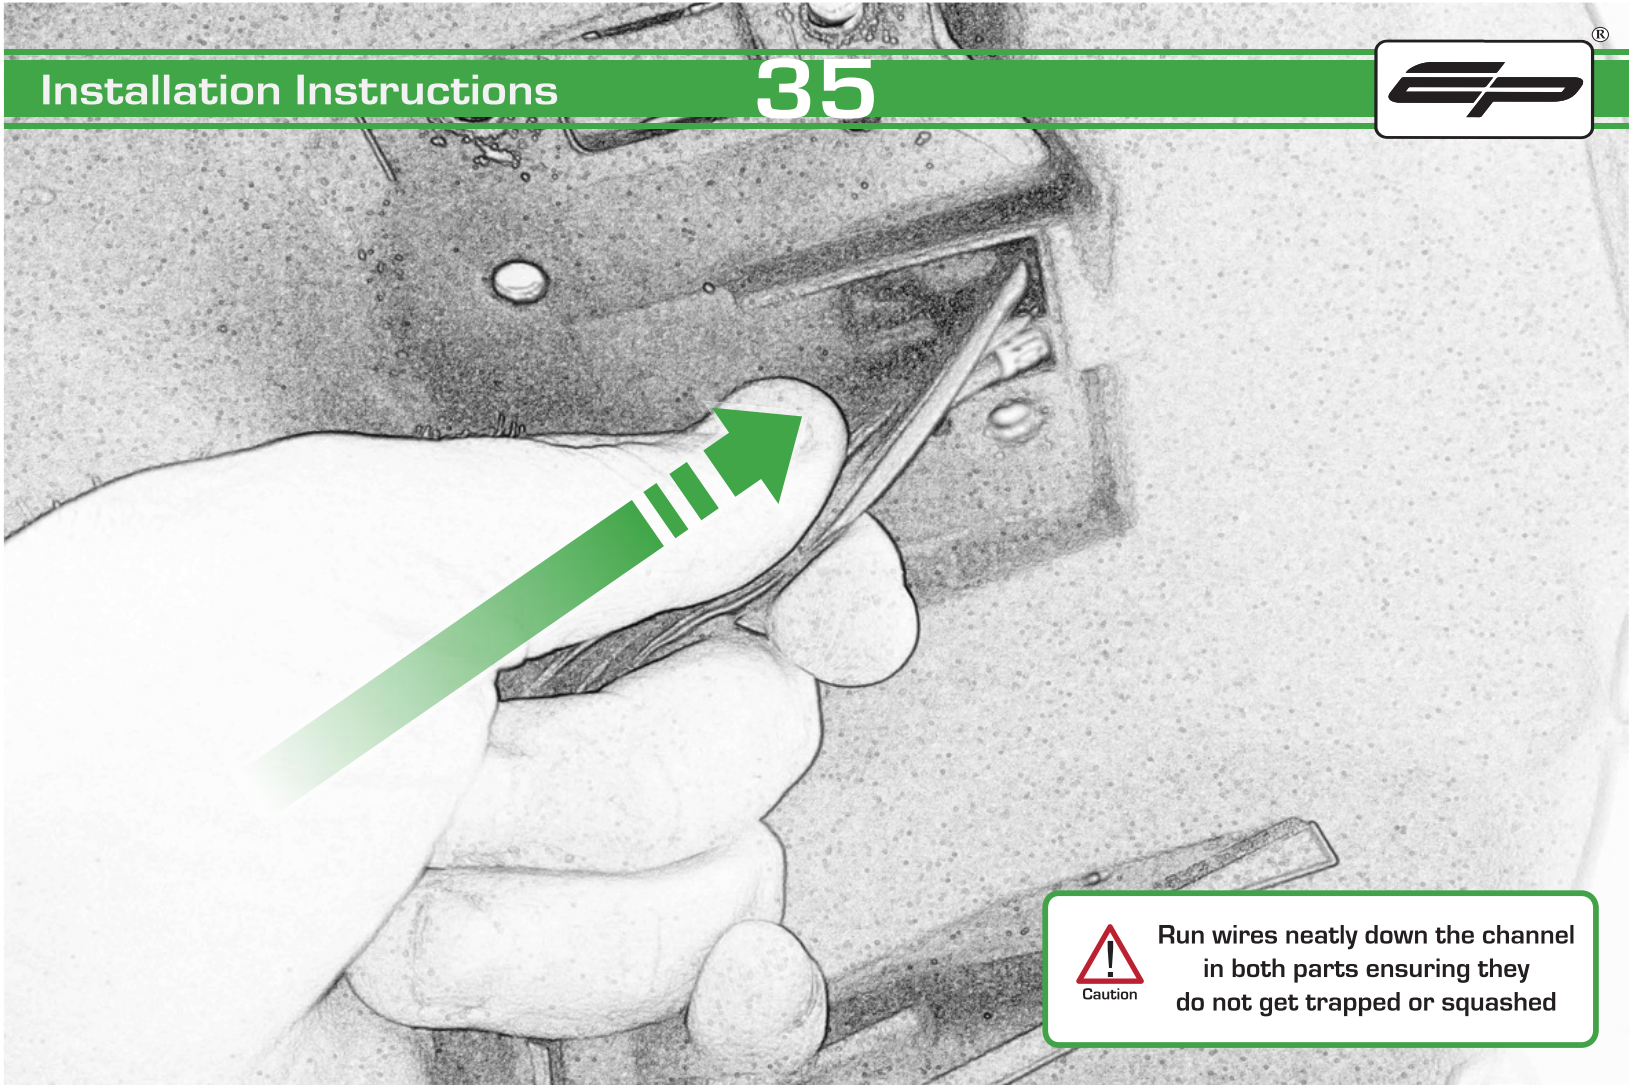

Caution


Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

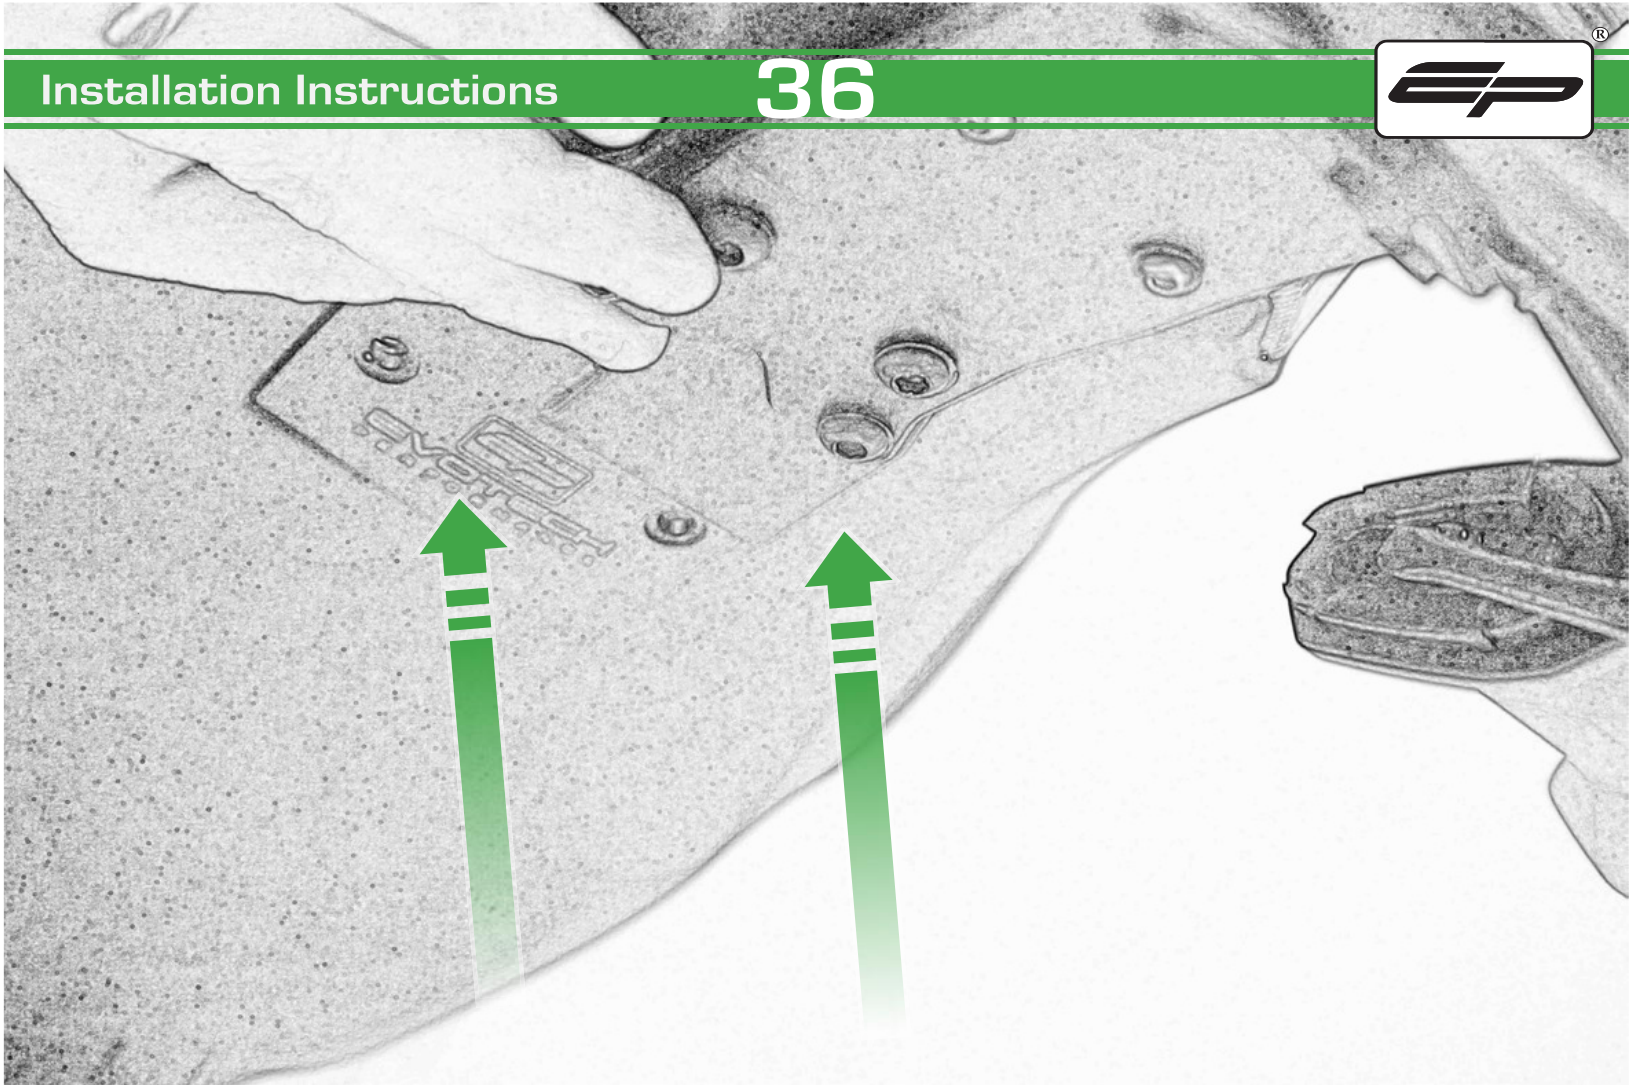



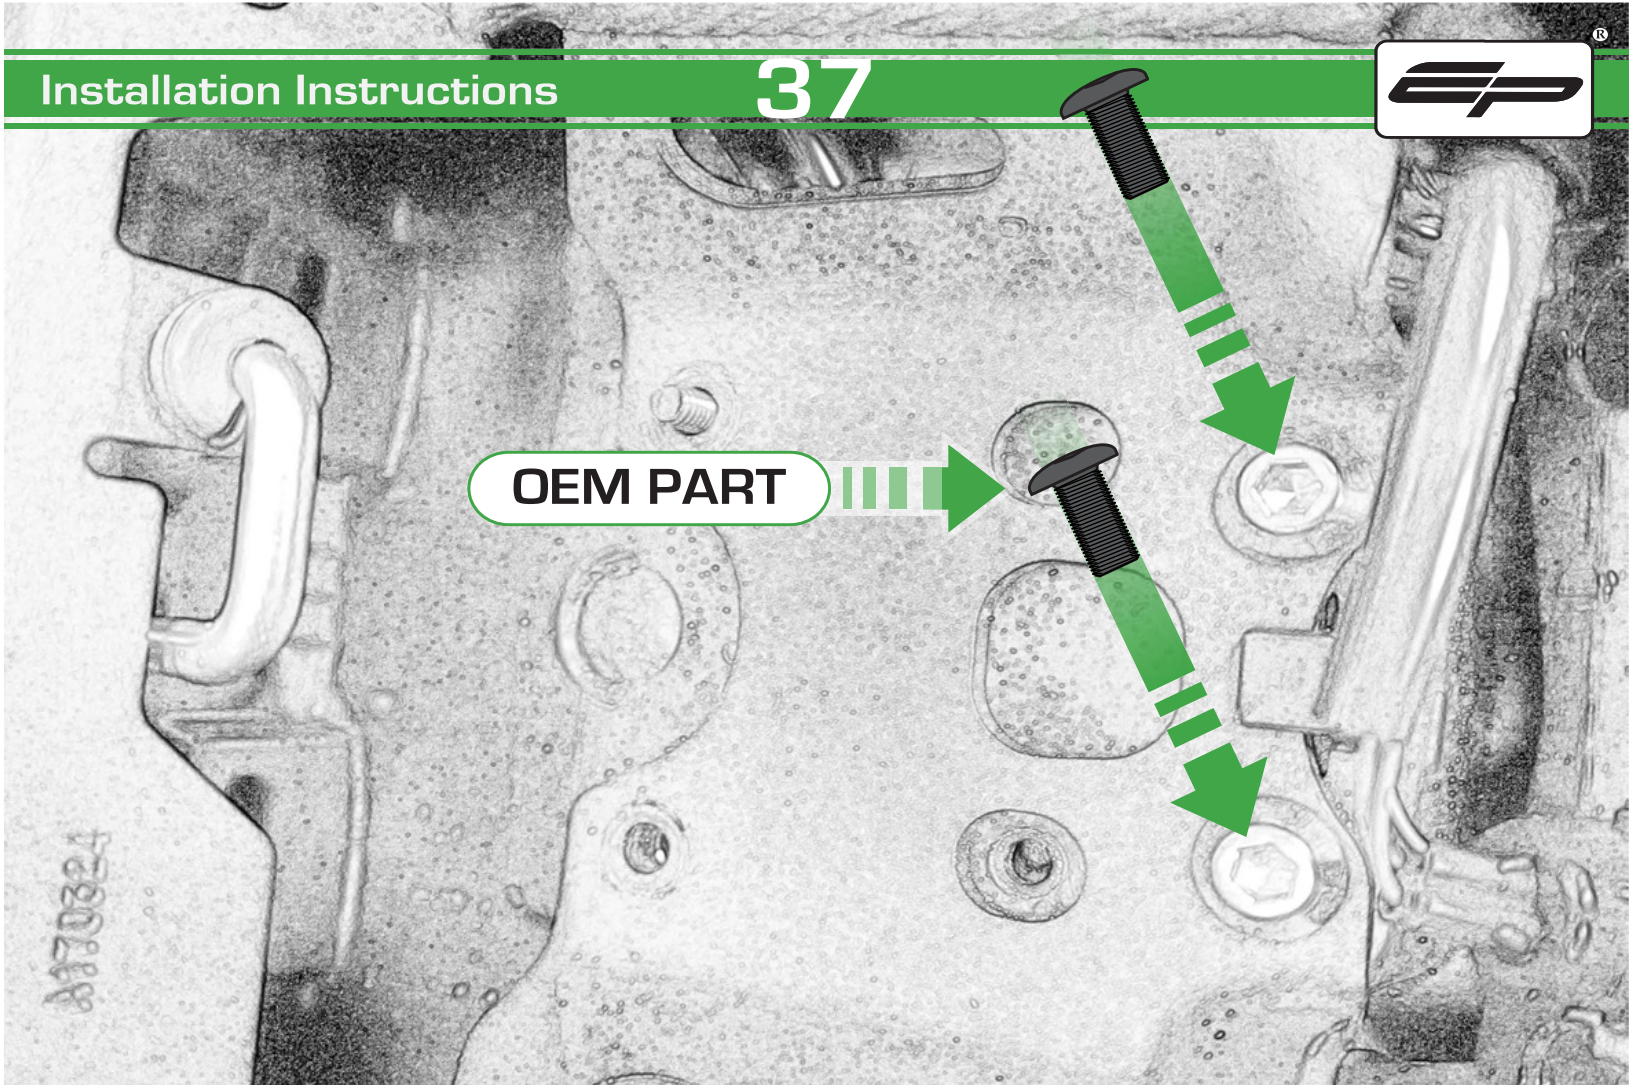




OEM PART



A170324

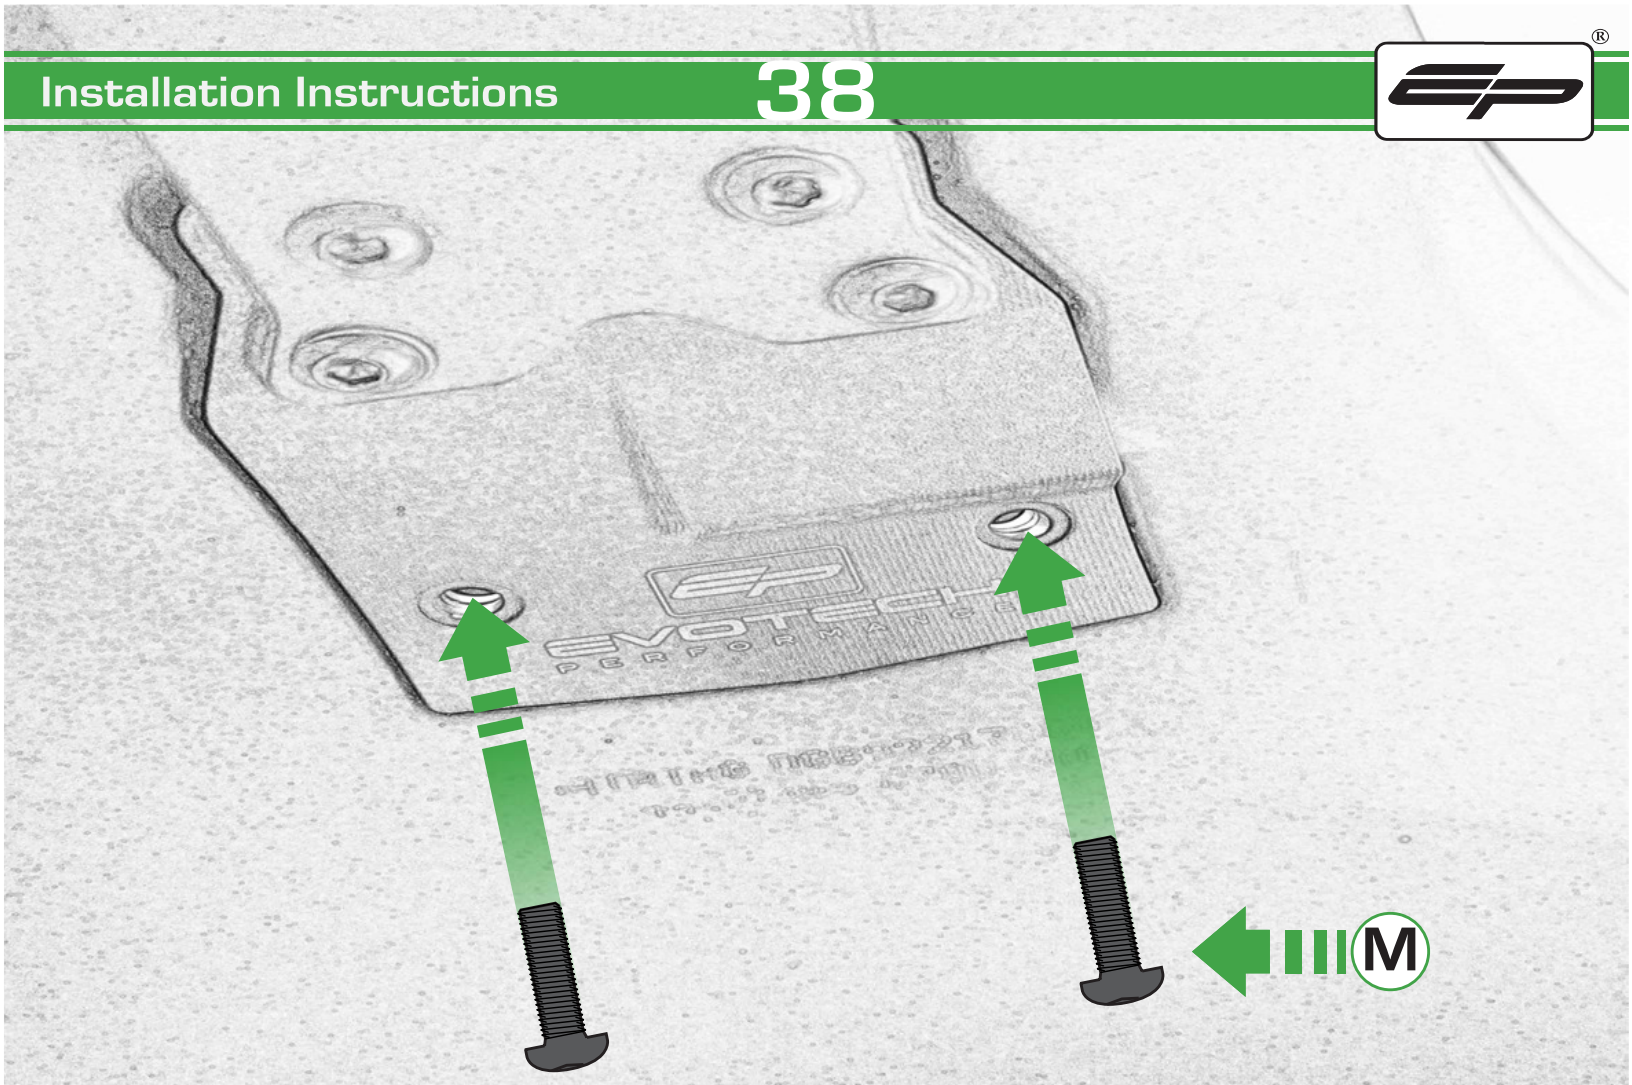

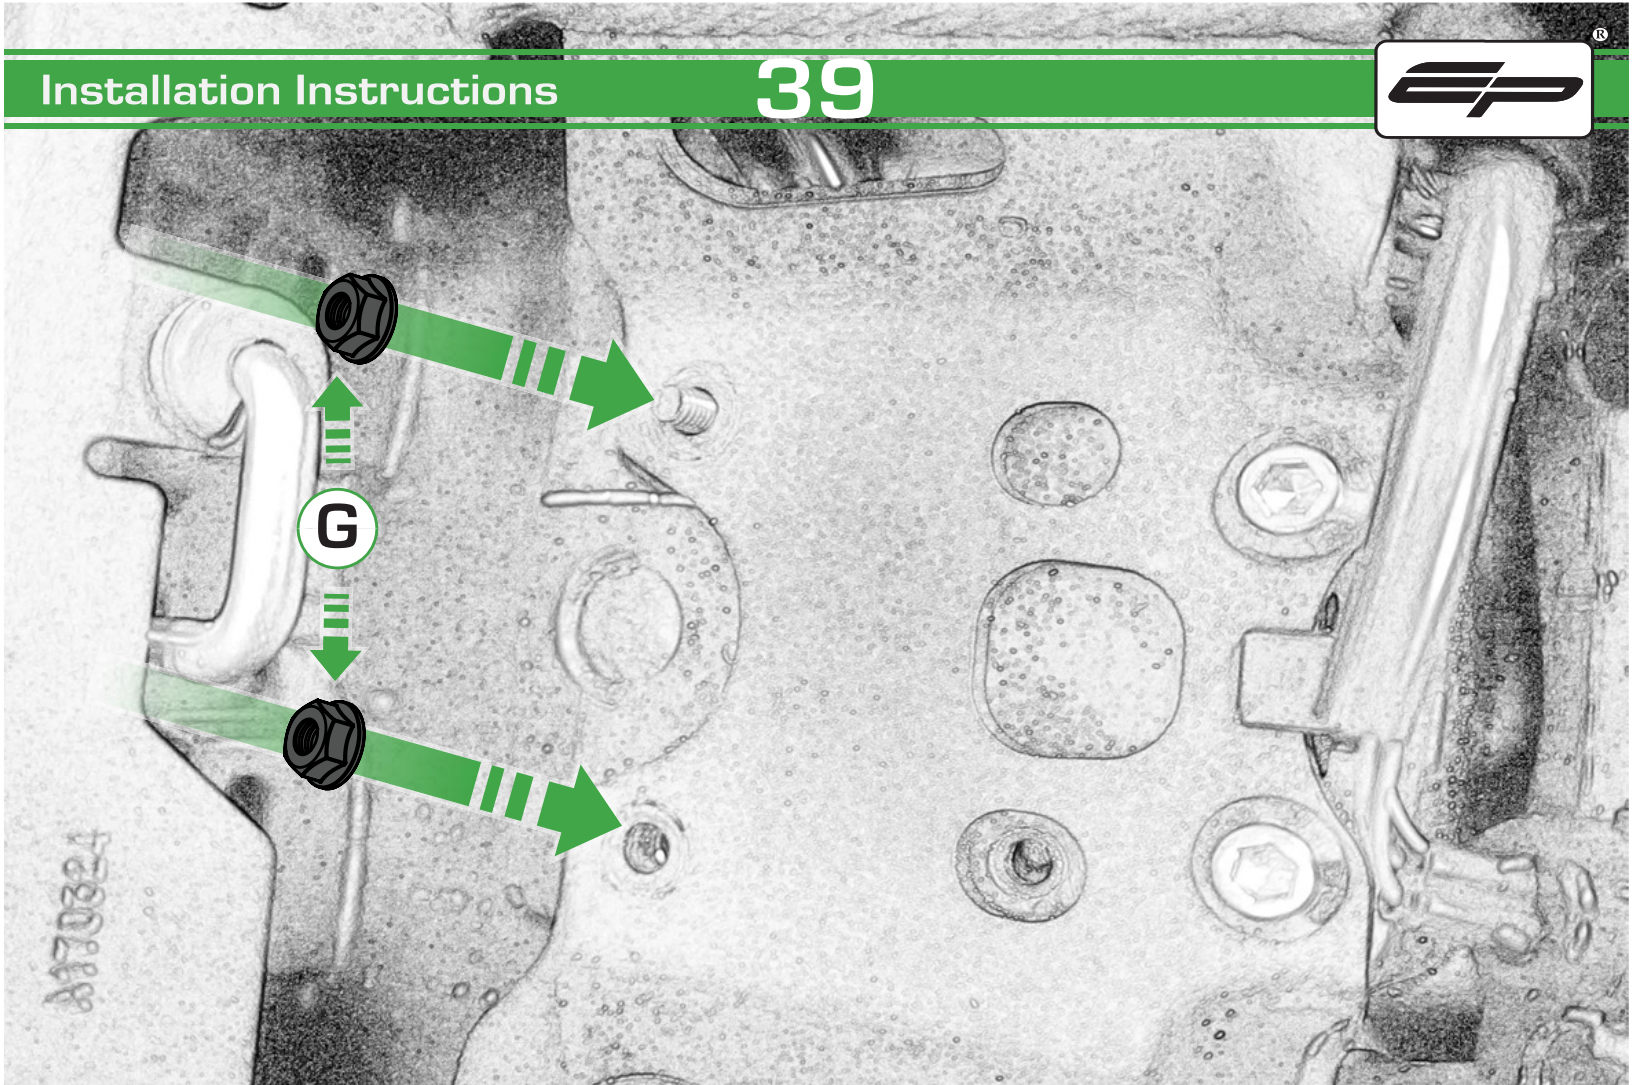

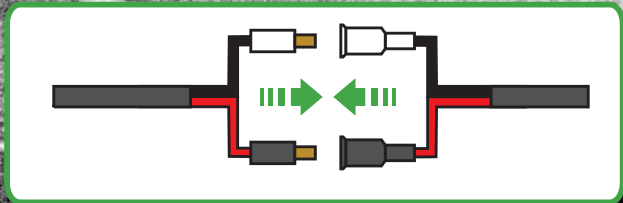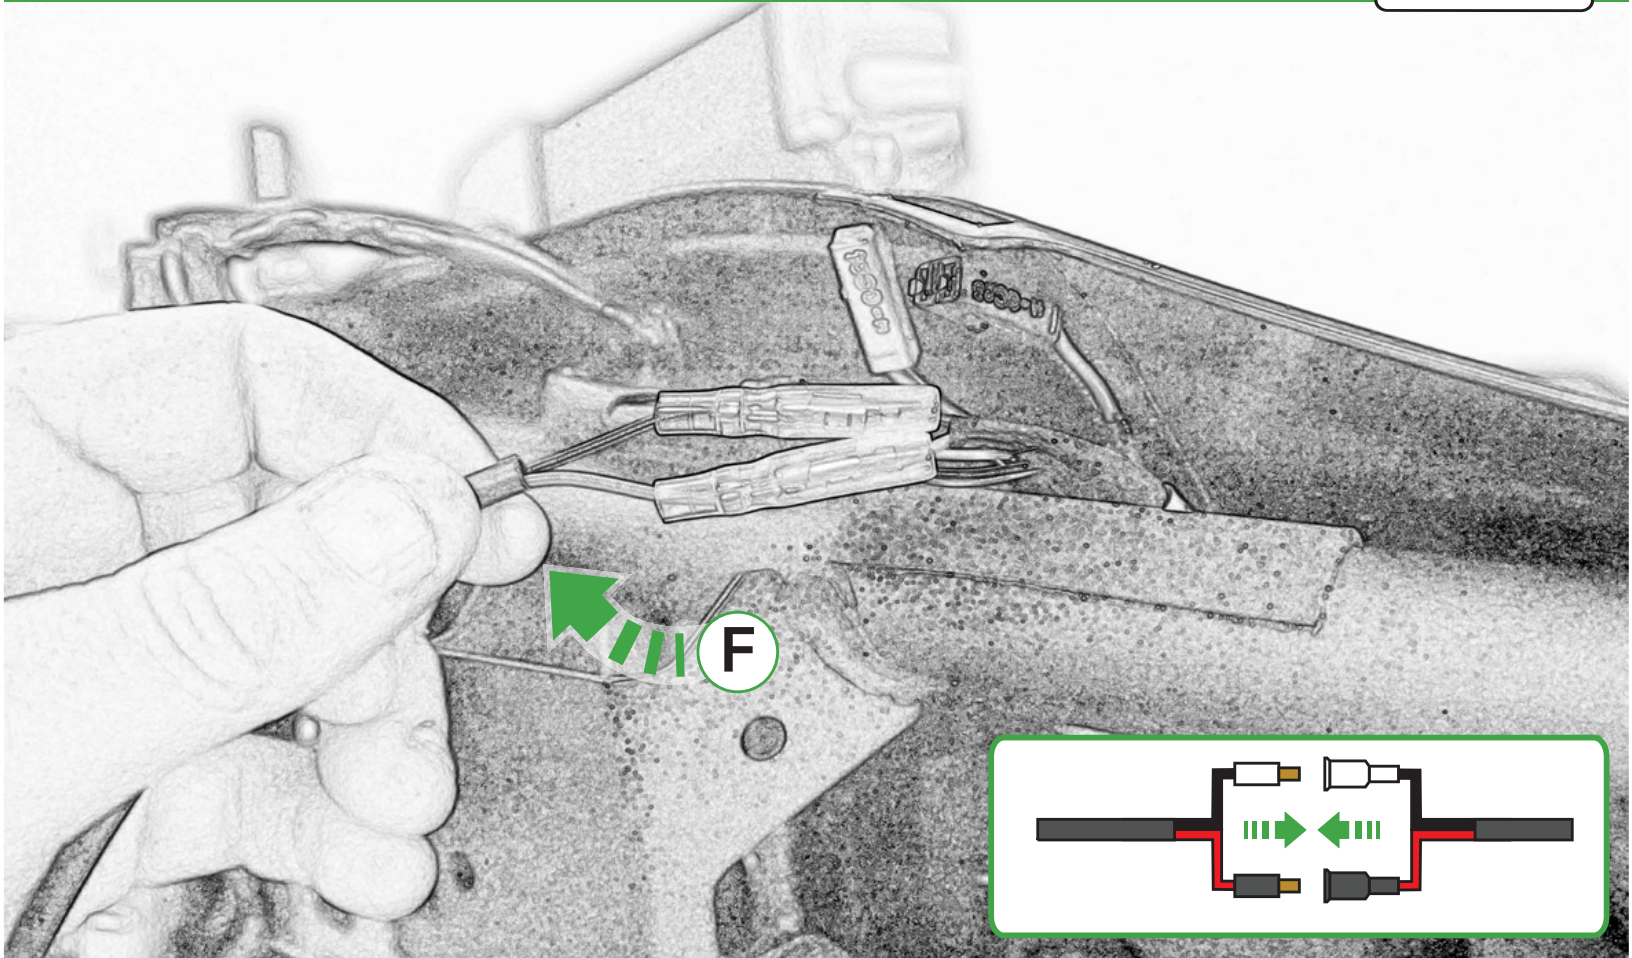

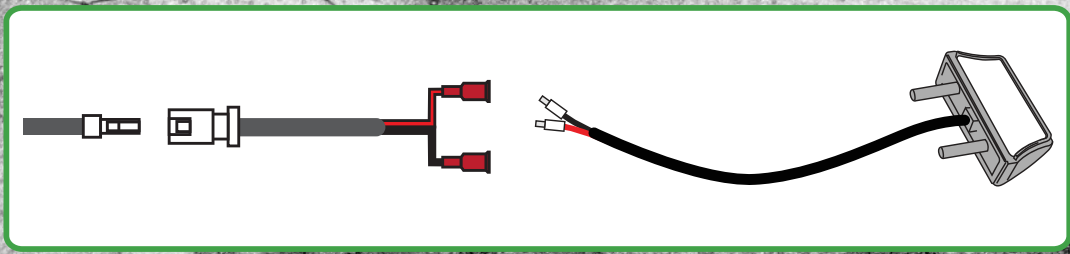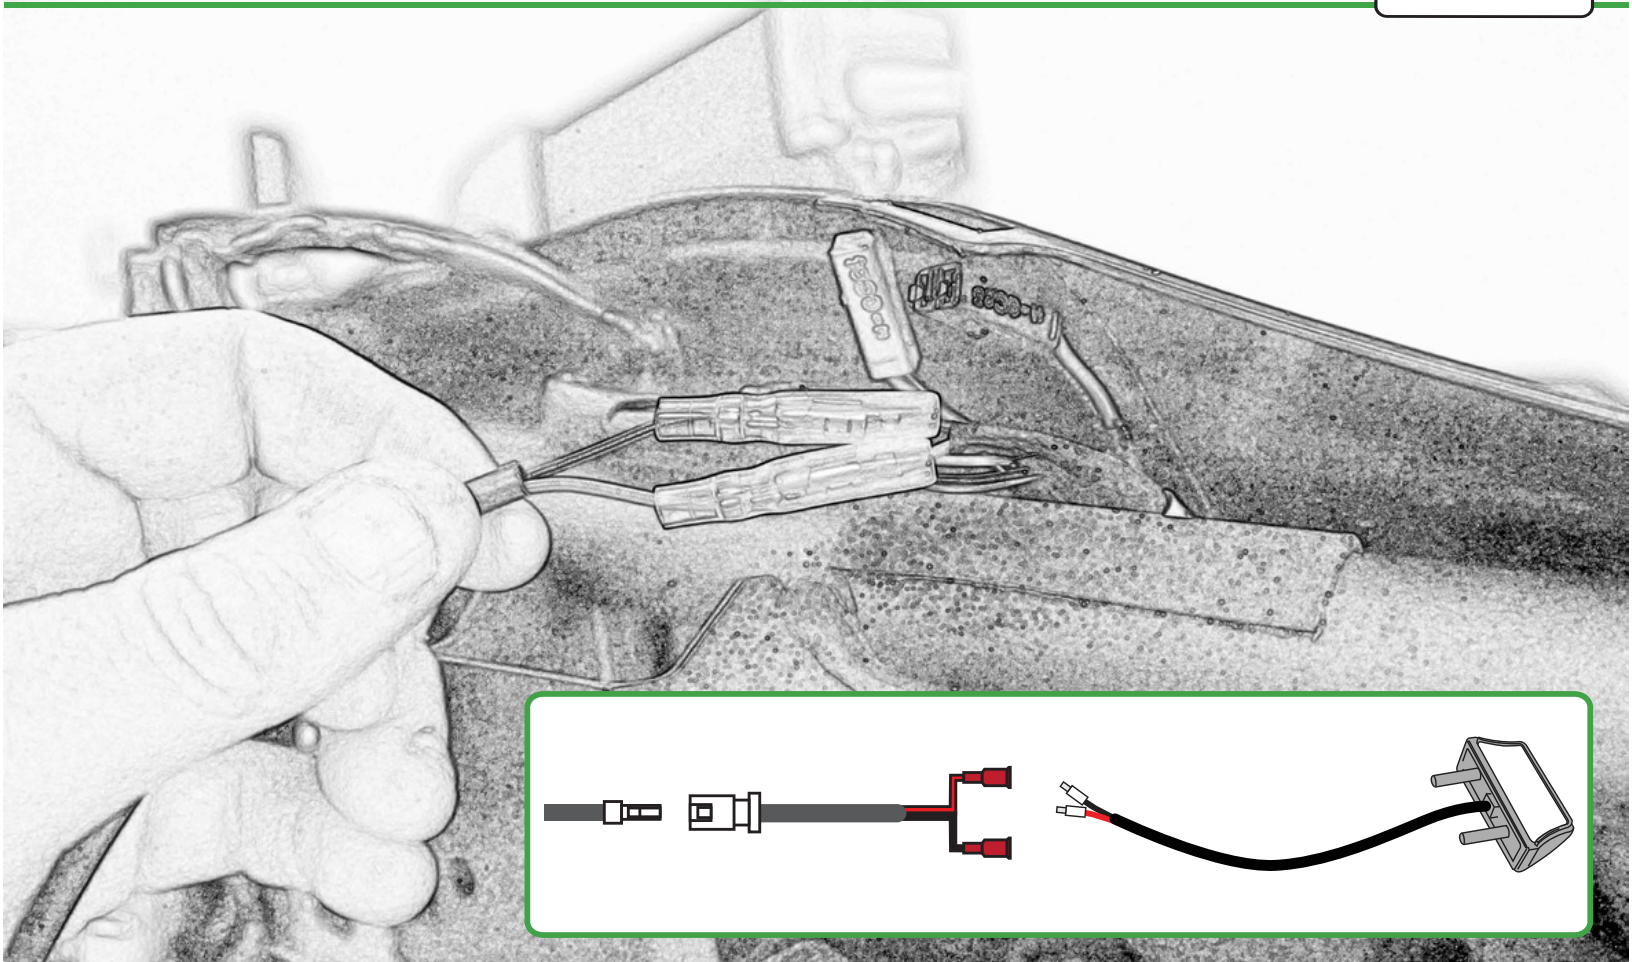

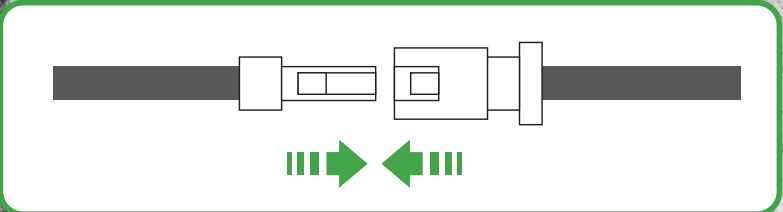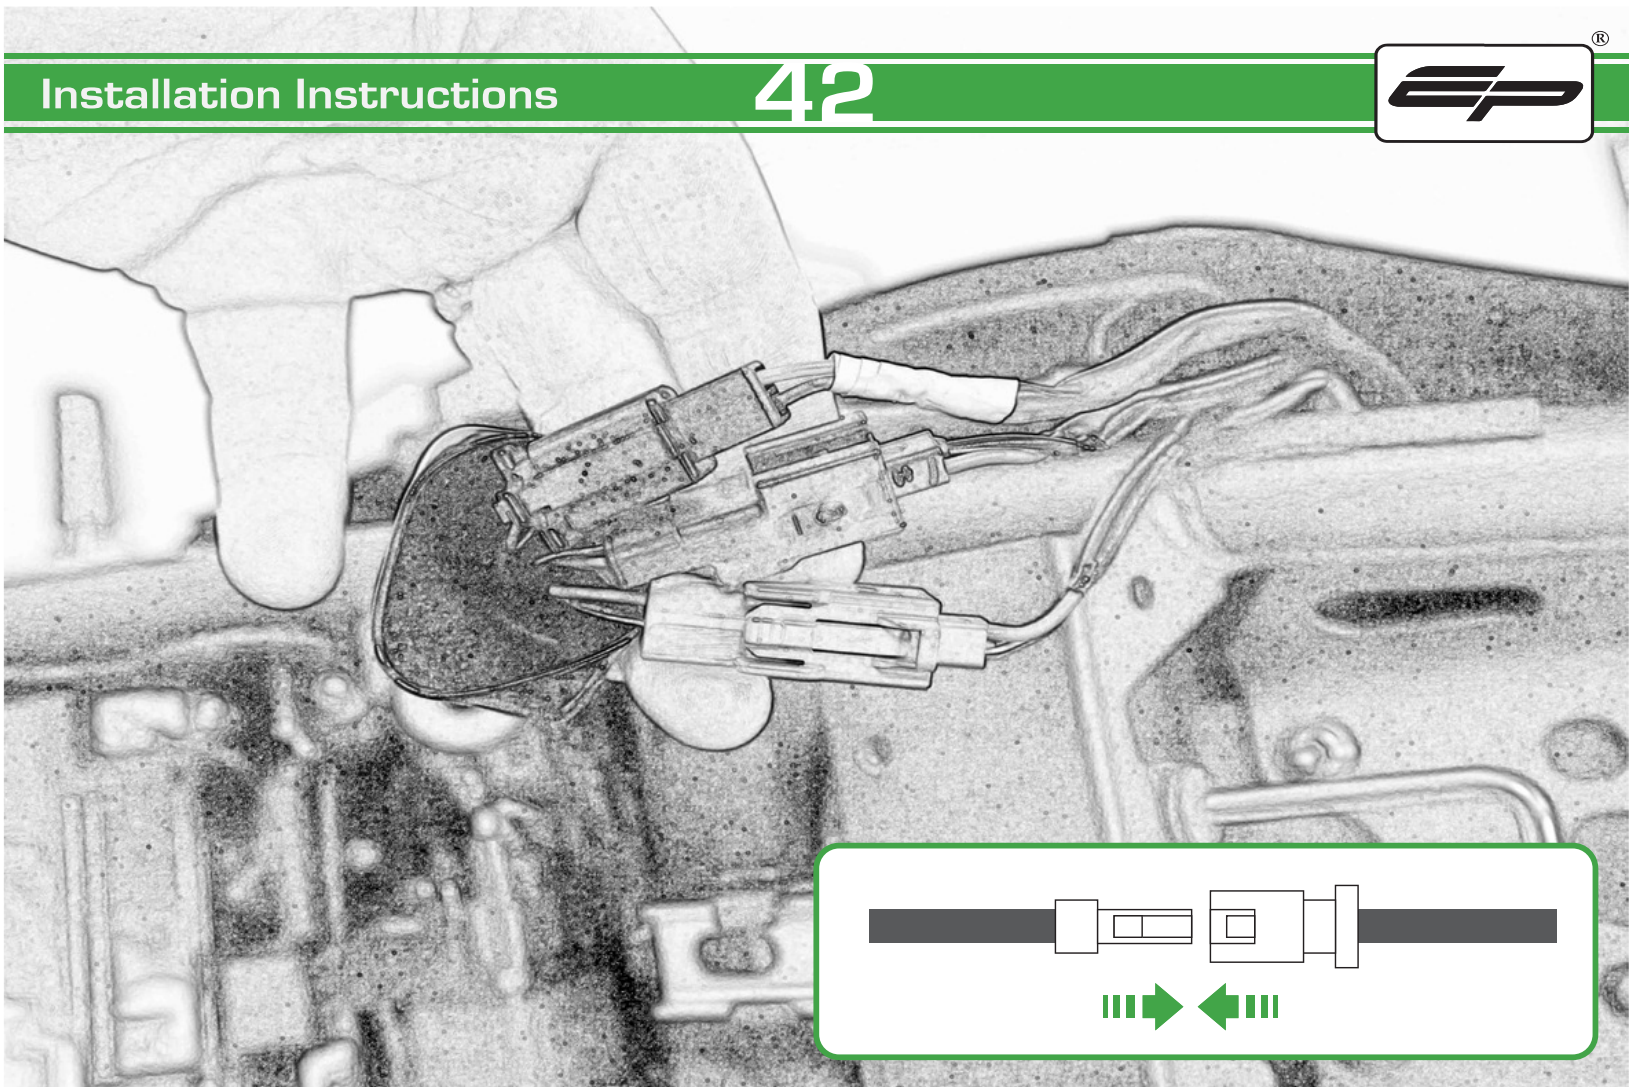




Reverse Stages


8 - 1

Installation Instructions

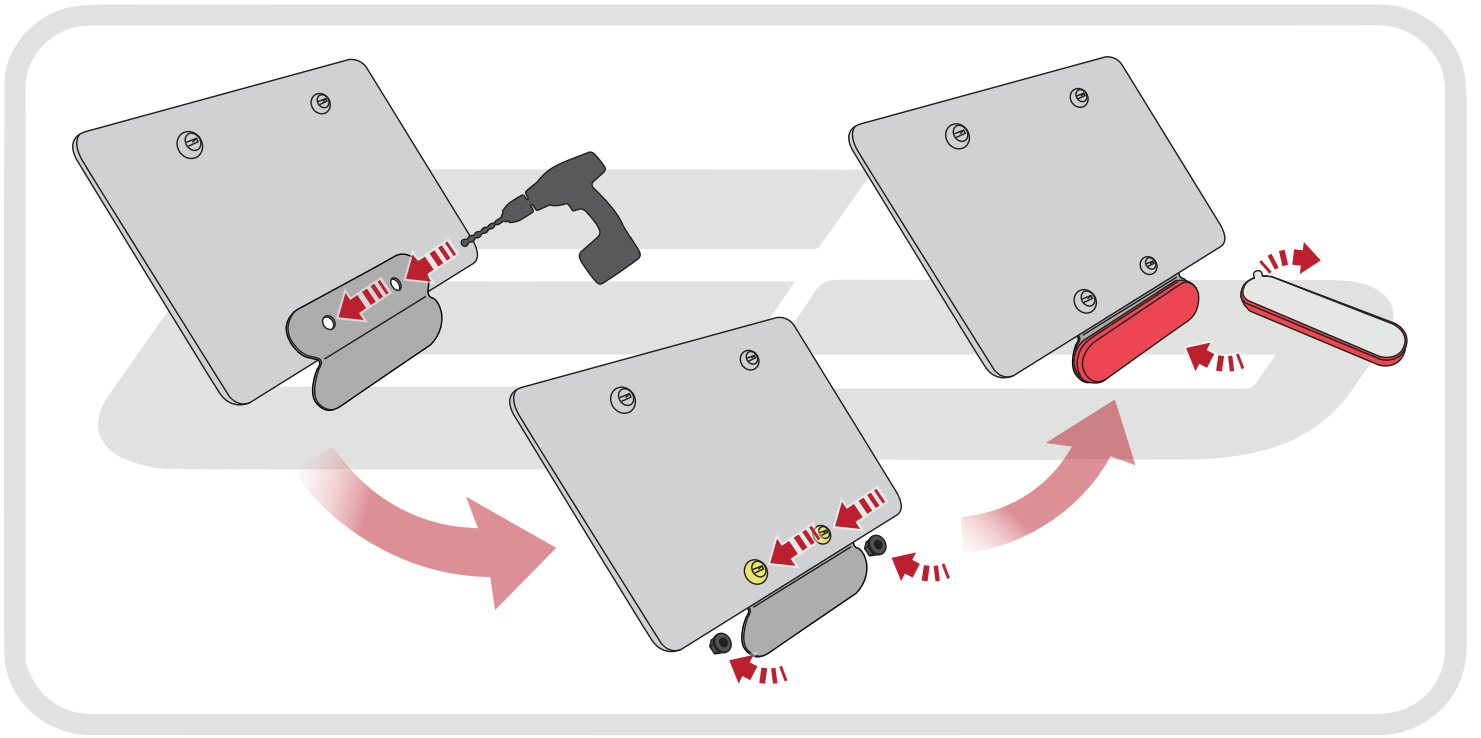


EVOTECH[®]
P E R F O R M A N C E

Installation Instructions

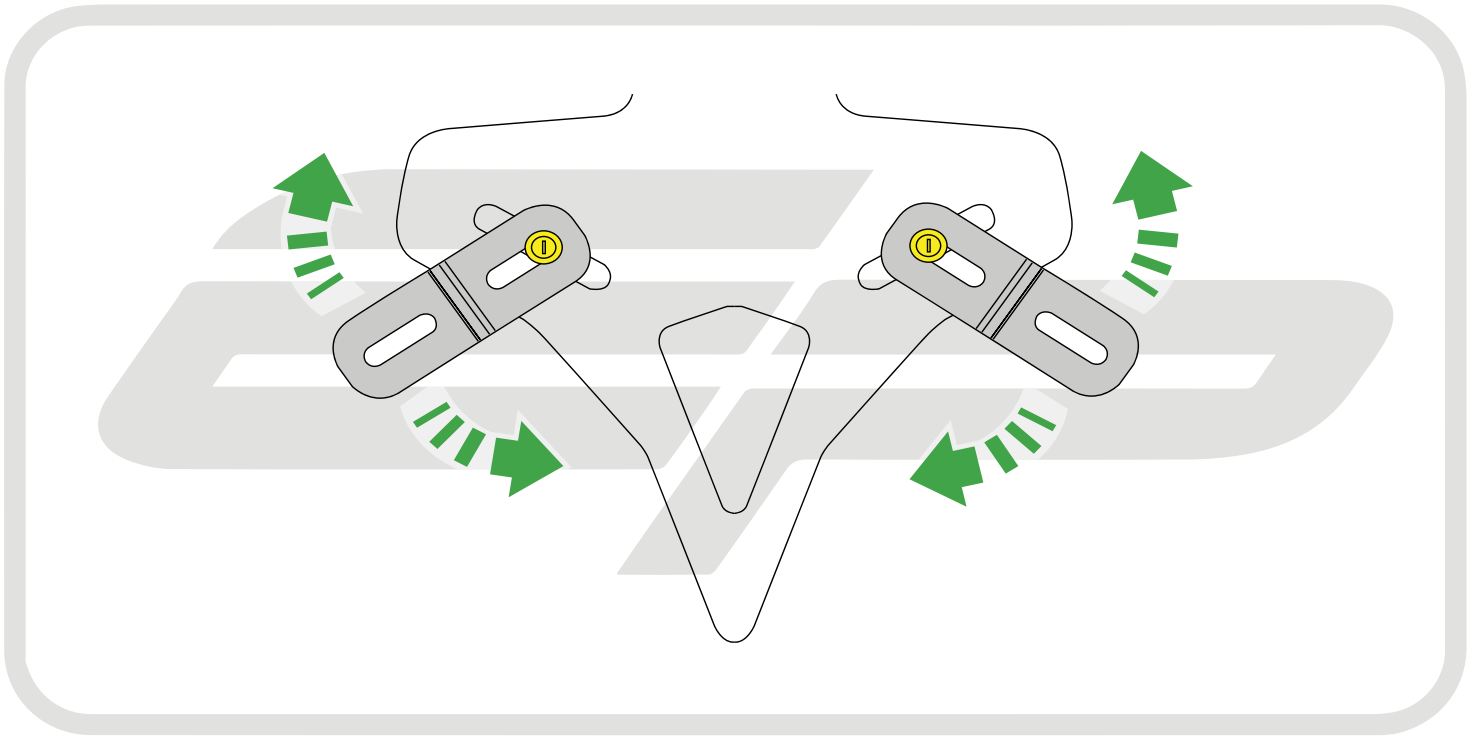

EVOTECH[®]
P E R F O R M A N C E

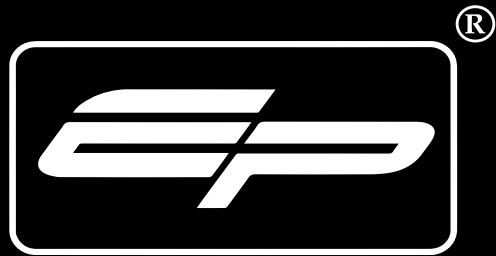

EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com