






KTm 790 Duke
Tail Tidy

Installation Instructions


Kit Contents PRN014017


- (A) 1 x Reflector Kit
- (B) 1 x Loom Connector
- (C) 2 x Rubber Grommets
- (D) 2 x 4mm Dowel Pins
- (E) 2 x Indicator Stem
- (F) 2 x Indicator Insert
- (G) 3 x Male Bullet Connectors
- (H) 4 x M5 x 16mm Capheads
- (I) 4 x M5 x 16mm Capheads

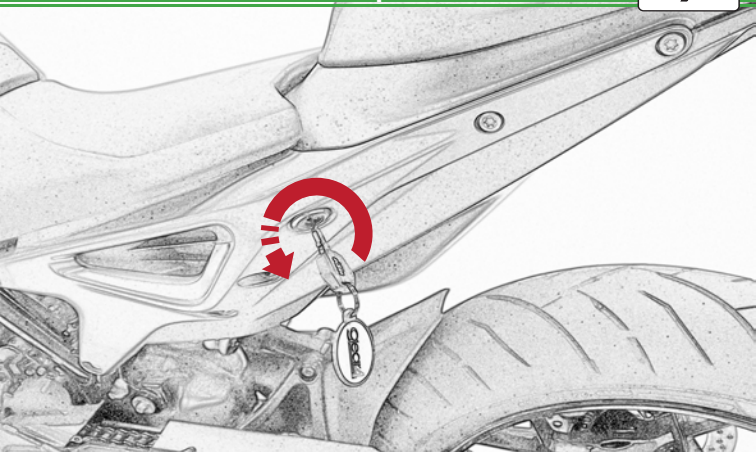


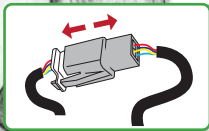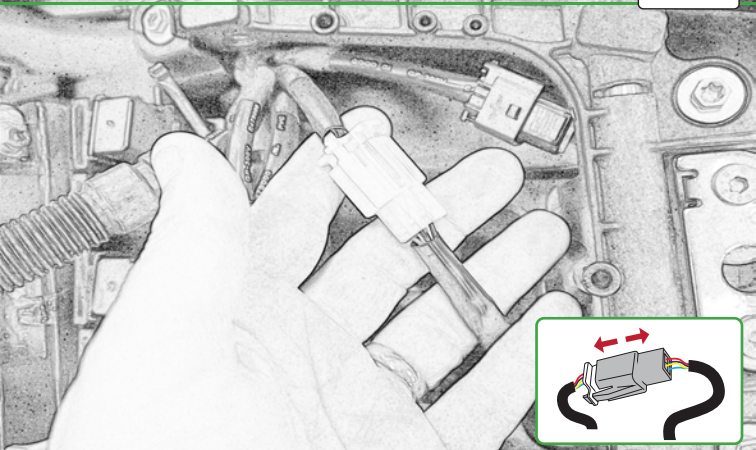




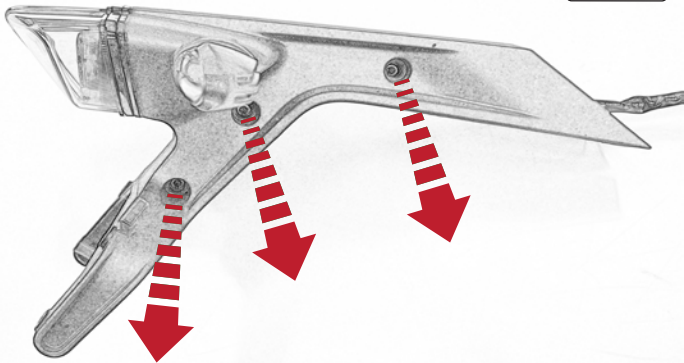


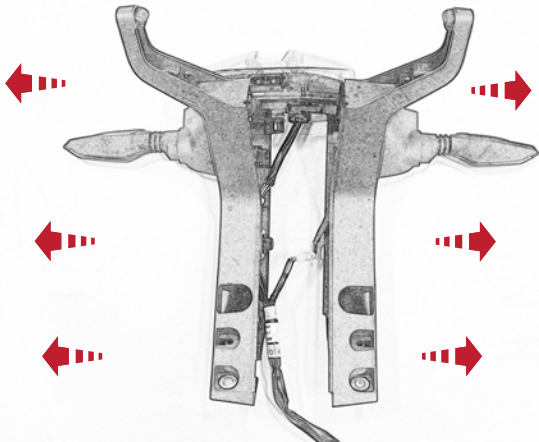

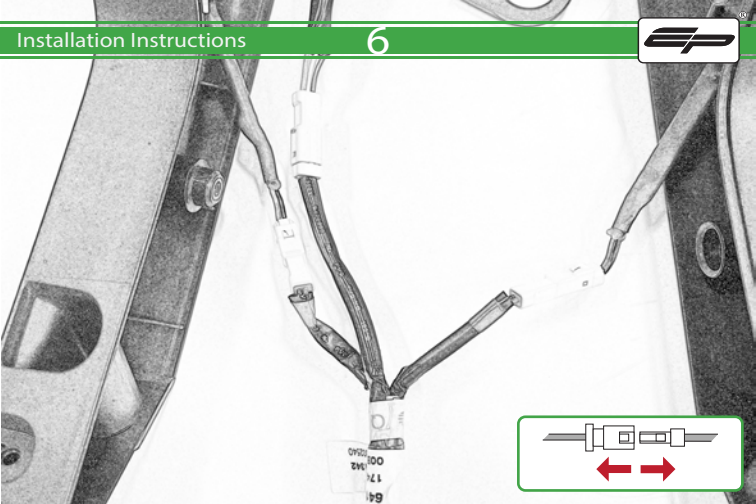


64
174
001342
001340




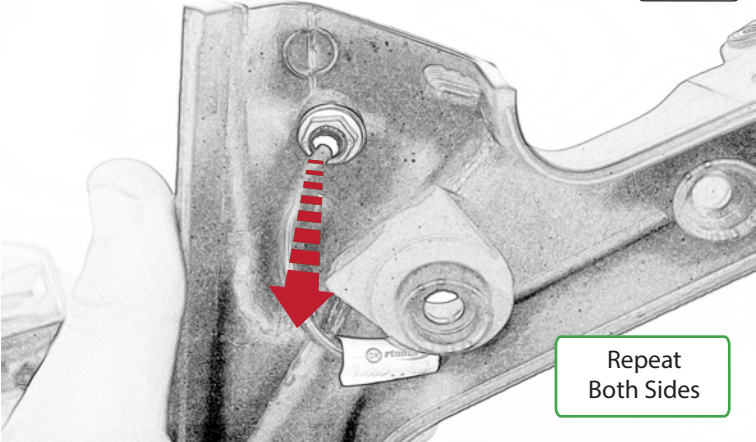


Repeat
Both Sides

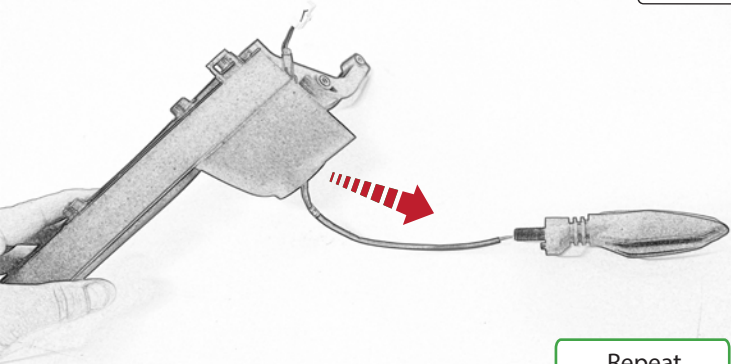


Repeat
Both Sides

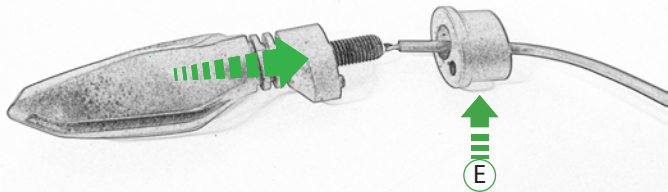

Repeat
Both Sides

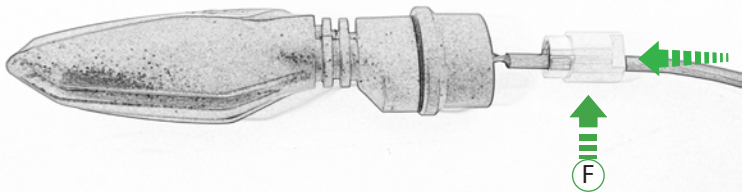


Repeat
Both Sides

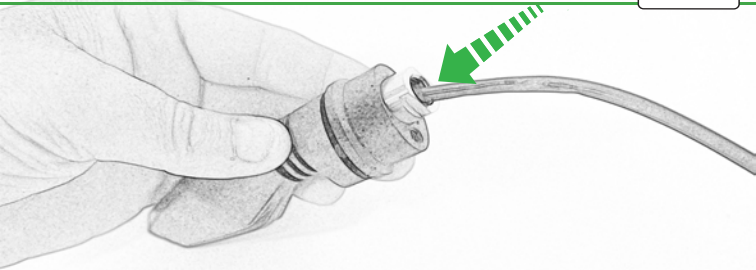


Caution

Fully
Tighten


Repeat
Both Sides

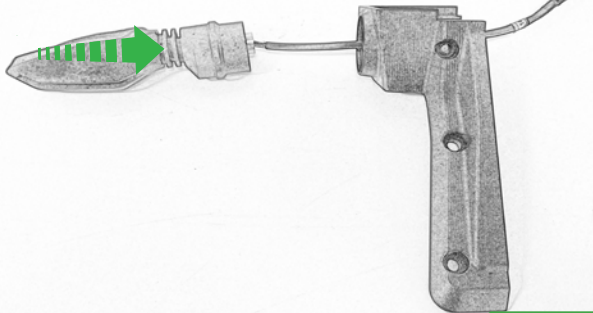



Repeat
Both Sides

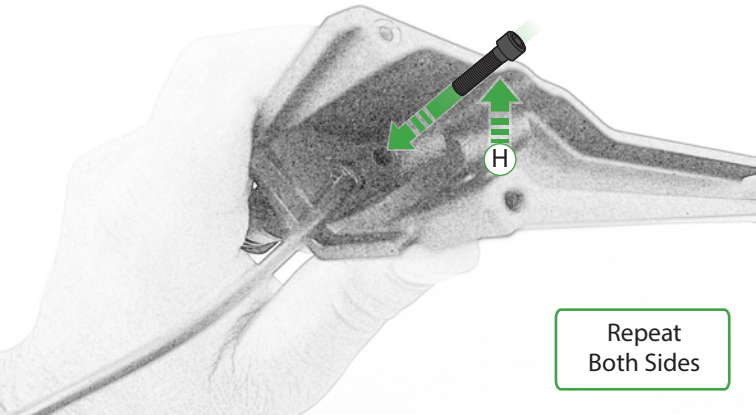


Repeat
Both Sides

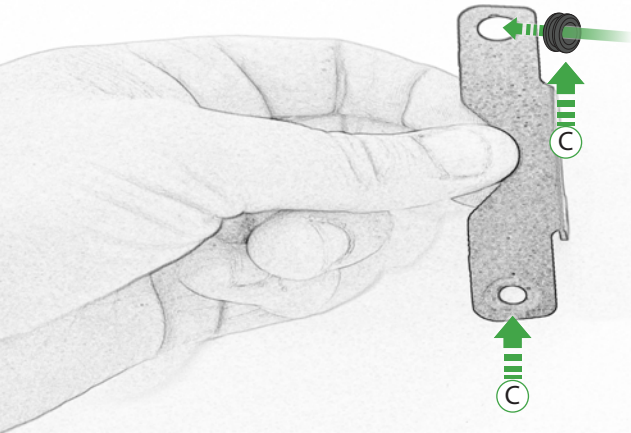


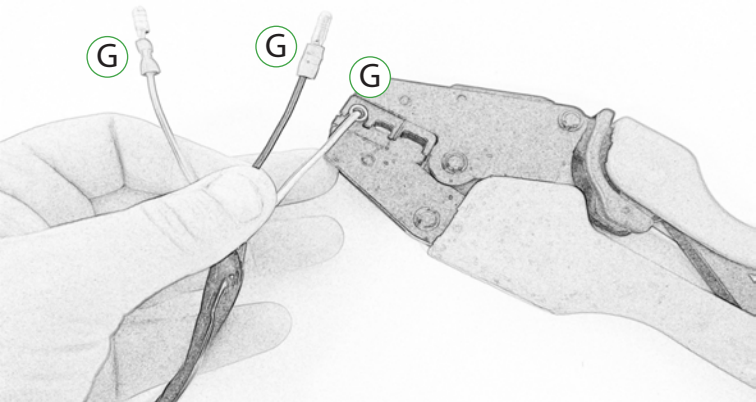


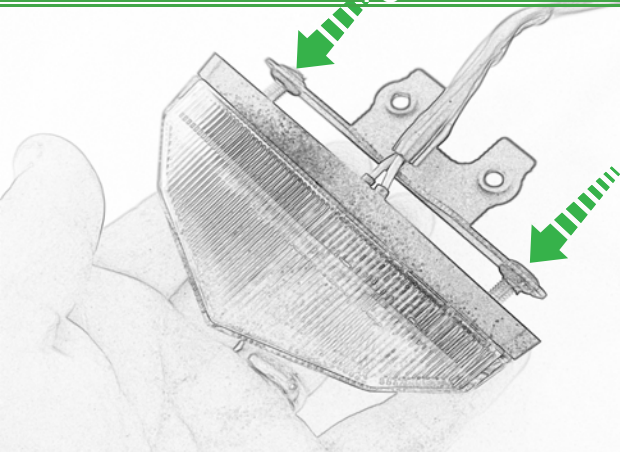


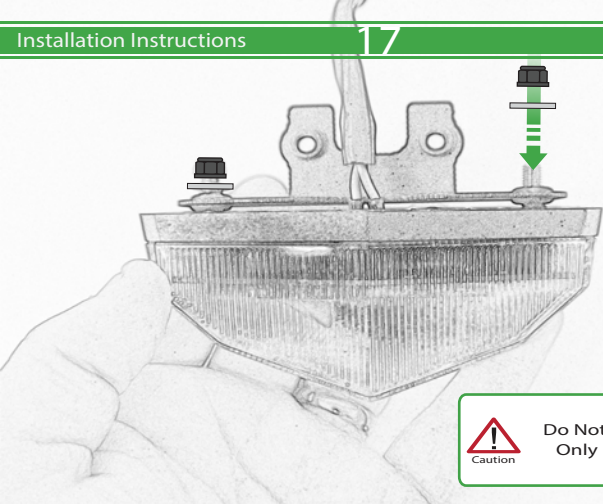


Do Not Fully Tighten
Only Rotate 6 Full
Turns

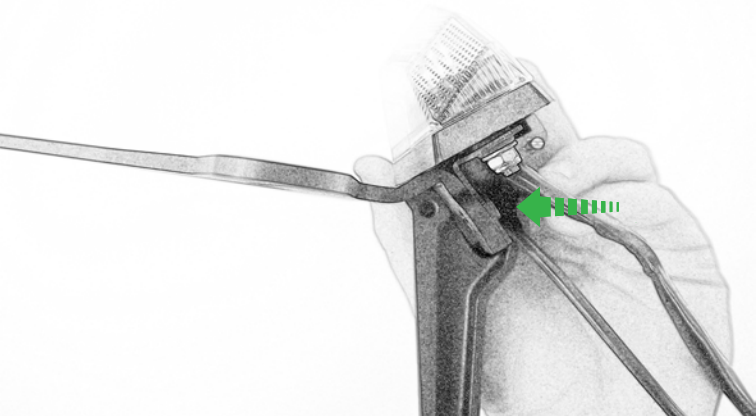


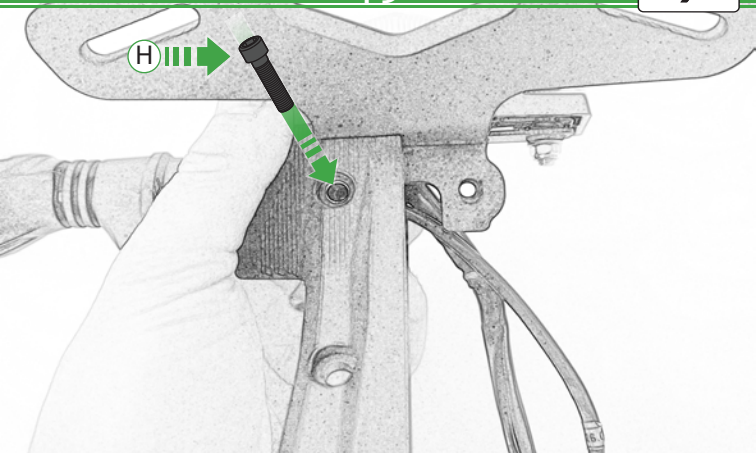


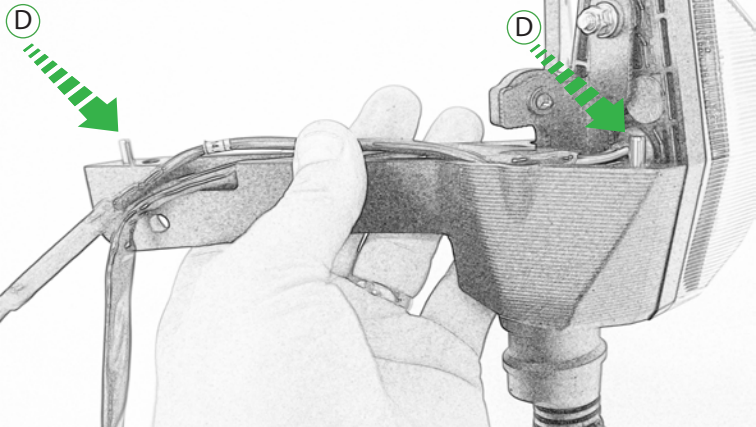


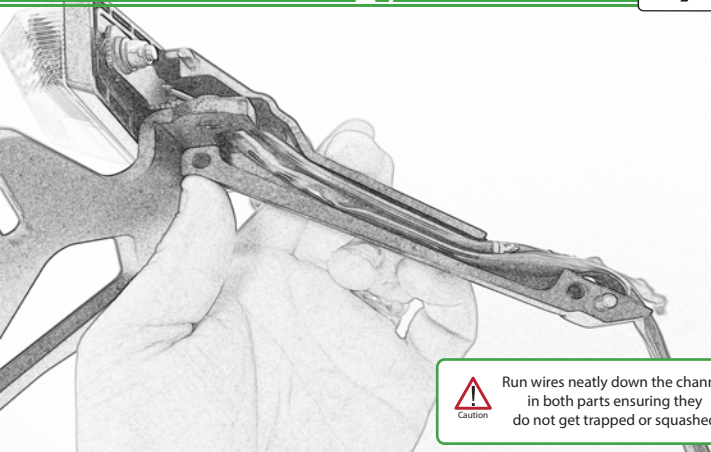



Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

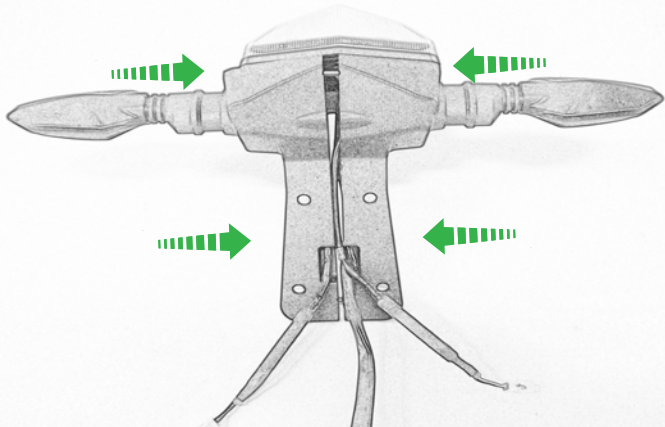


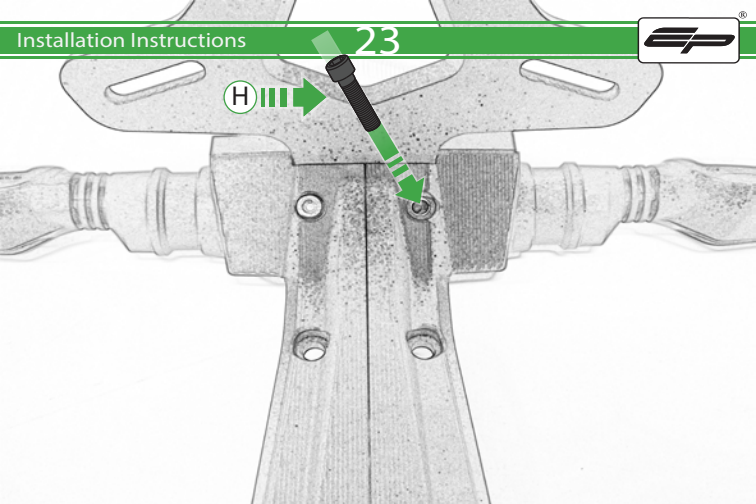


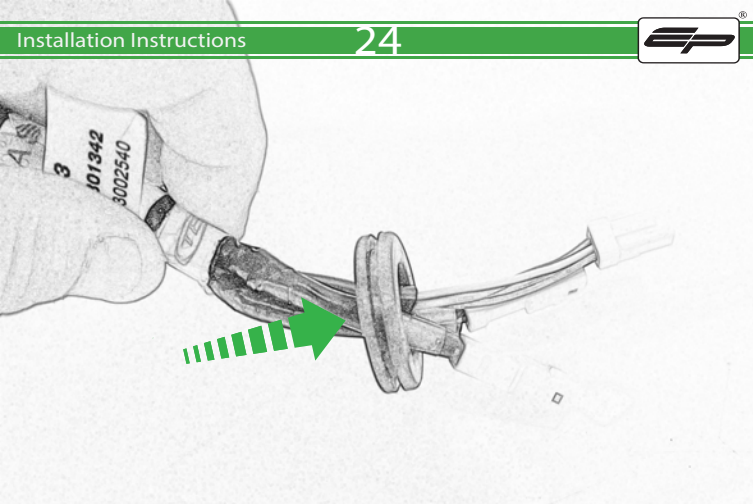


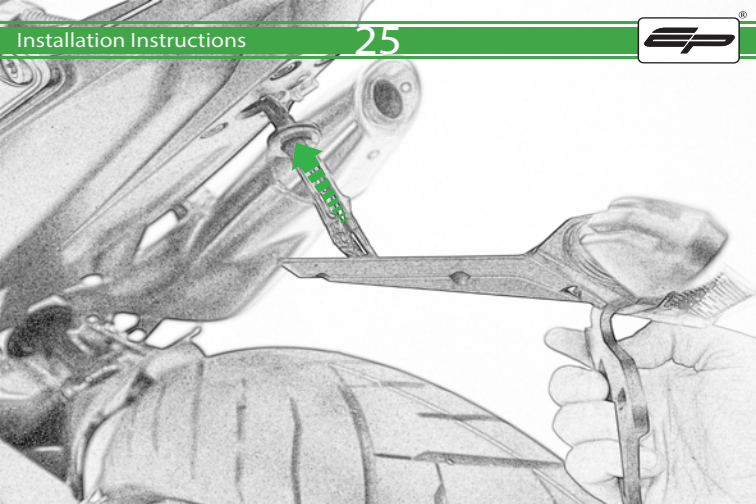

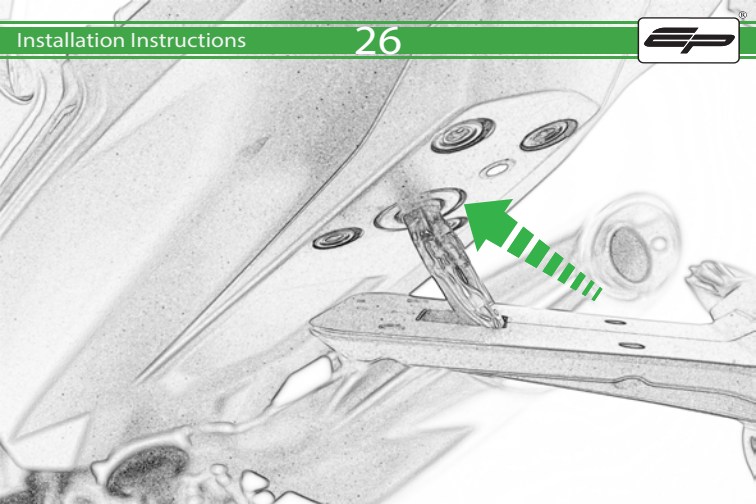


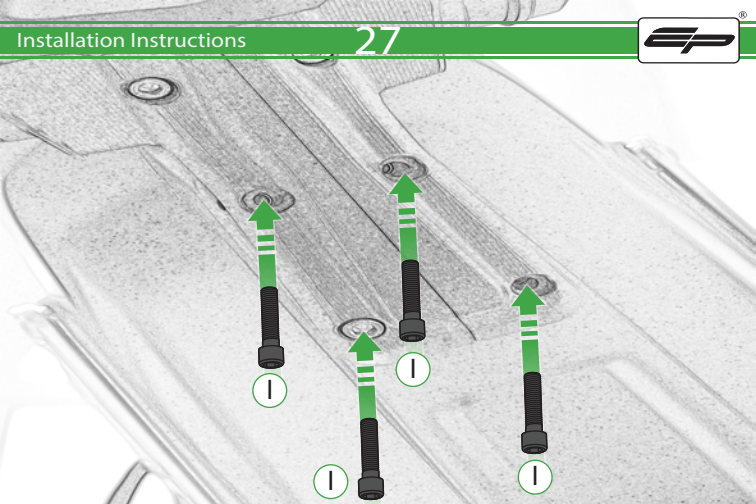

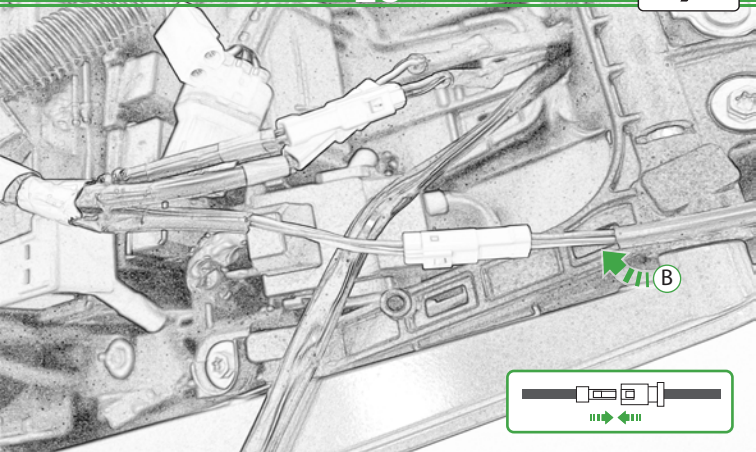


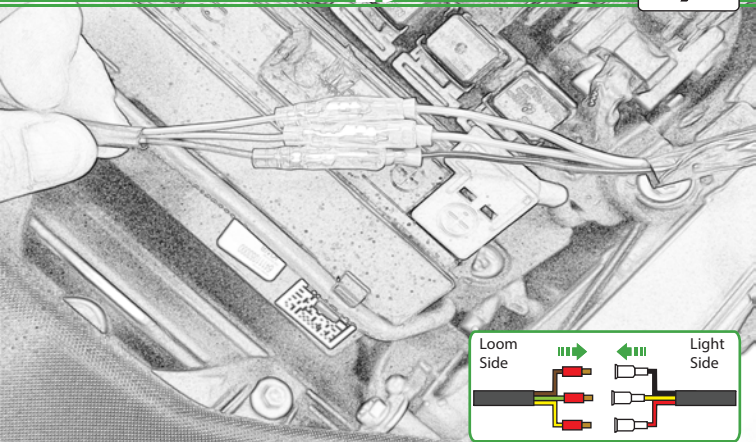


Loom
Side



Light
Side





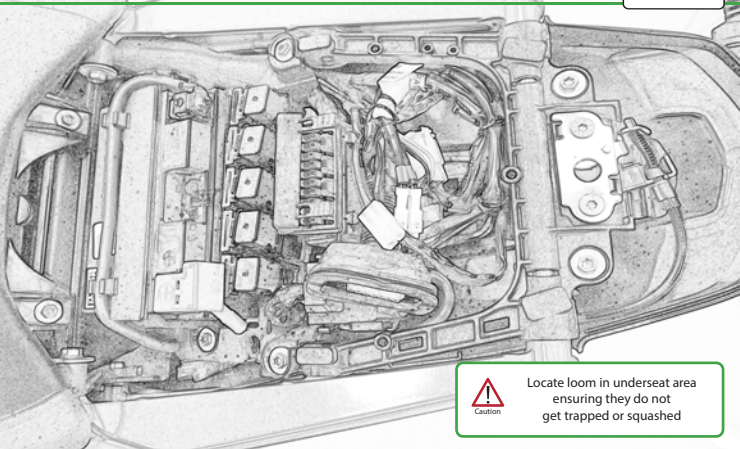

Locate loom in underseat area
ensuring they do not
get trapped or squashed





 **ESSENTIAL CHECKS** 

After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.

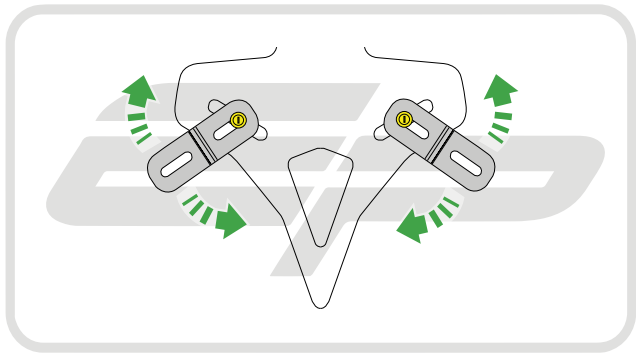

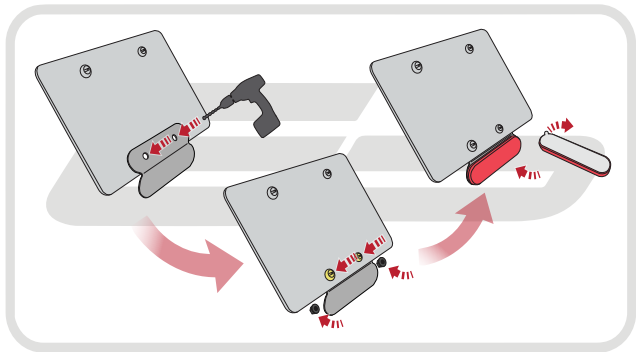



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com