




EVOTECH®
P E R F O R M A N C E

Honda CBR650R
Crash Protection

Installation Instructions

Kit Contents PRN014422


- Ⓐ 1 x R/H main Bracket
- Ⓑ 1 x R/H Bobbin Spacer
- Ⓒ 1 x R/H Rear Spacer
- Ⓓ 1 x M10 x 90 x 1.25 Caphead
- Ⓔ 1 x M12 x 60 x 1.25 Caphead
- Ⓕ 1 x M12 x 50 x 1.25 Caphead
- Ⓖ 1 x L/H main Bracket
- Ⓗ 1 x L/H Bobbin Spacer
- Ⓘ 1 x L/H Front Spacer
- Ⓙ 1 x L/H Rear Spacer
- Ⓚ 1 x Horn Bracket
- Ⓛ 1 x M12 x 85 x 1.25 Caphead
- Ⓜ 1 x M10 x 55 x 1.25 Caphead
- Ⓝ 2 x Bobbin head
- Ⓞ 2 x M12 Washer
- Ⓟ 2 x Polyurathane Washer

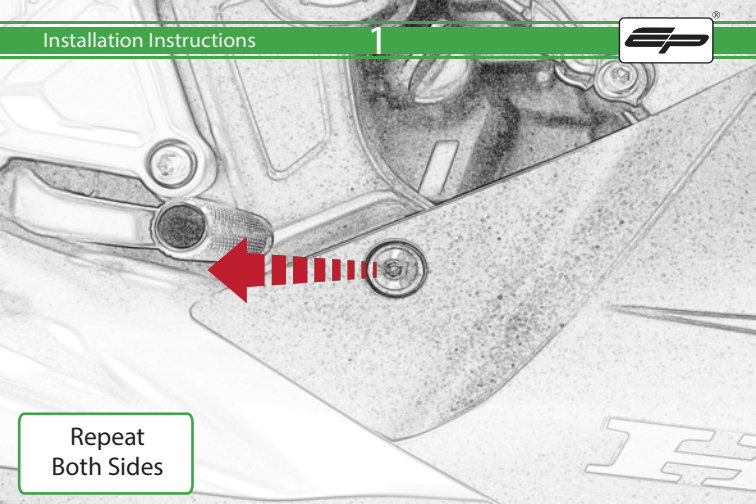


Repeat
Both Sides



Repeat
Both Sides

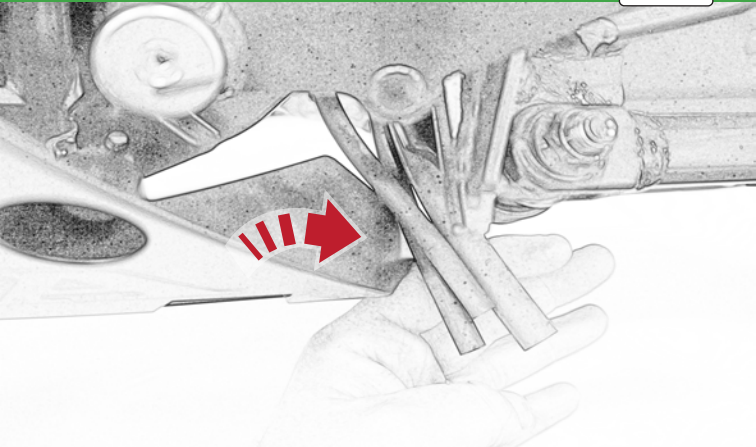

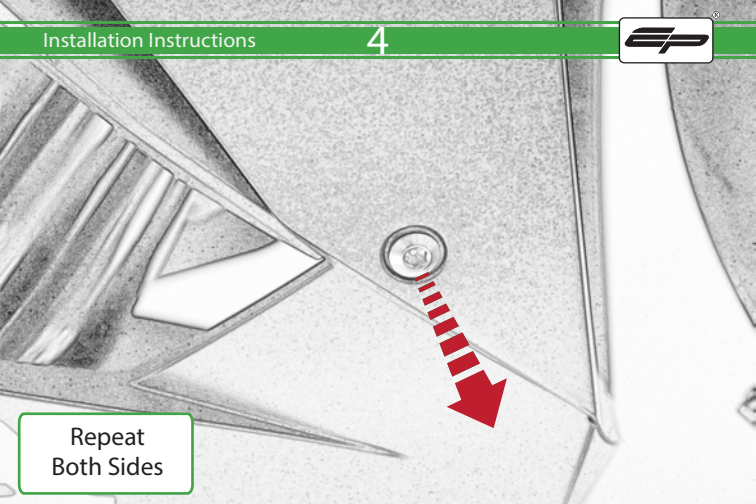


Repeat
Both Sides




Repeat
Both Sides




Repeat
Both Sides

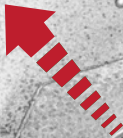

Repeat
Both Sides

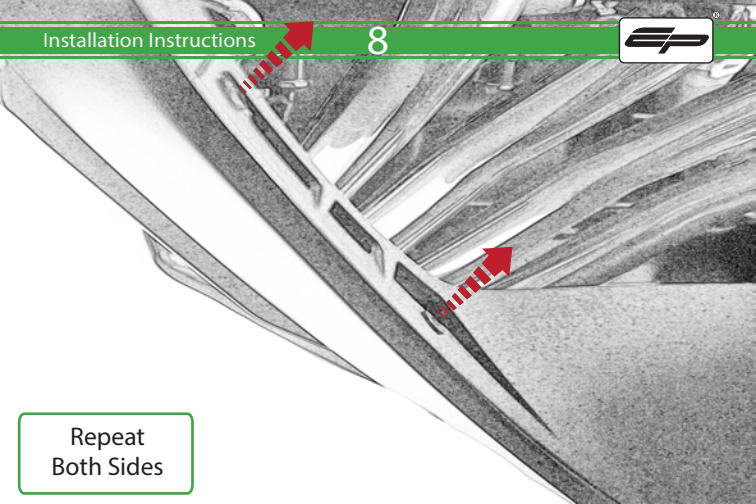


Repeat
Both Sides

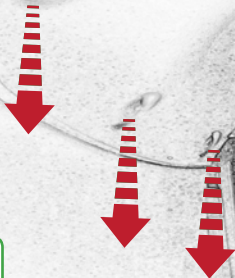


Repeat
Both Sides




Repeat
Both Sides

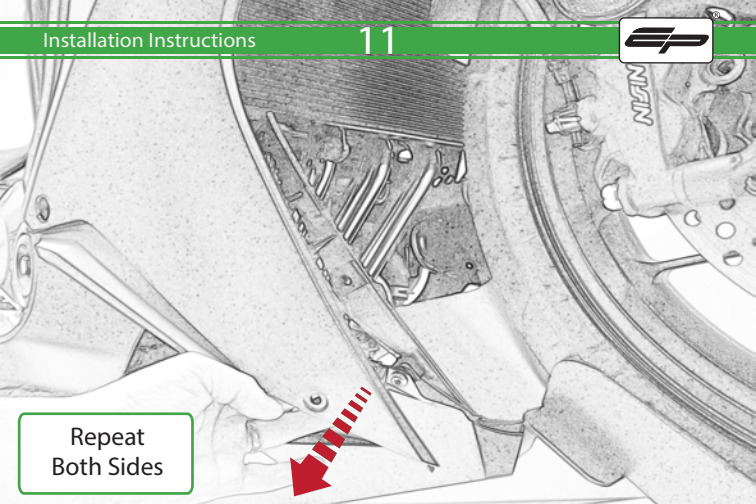

Repeat
Both Sides

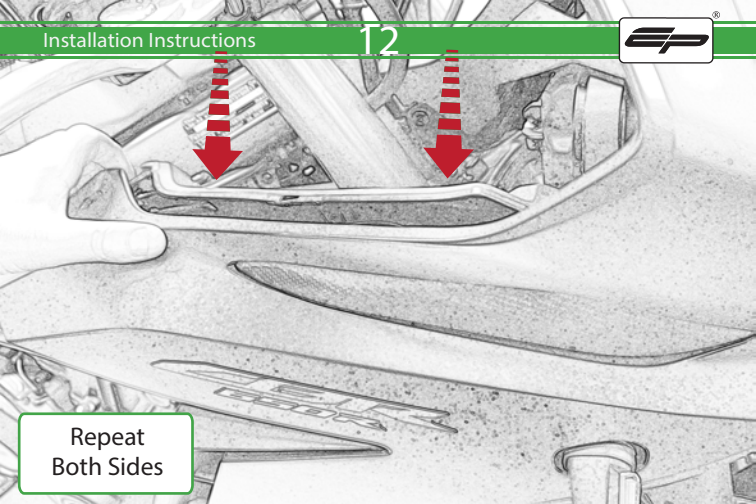


Repeat
Both Sides

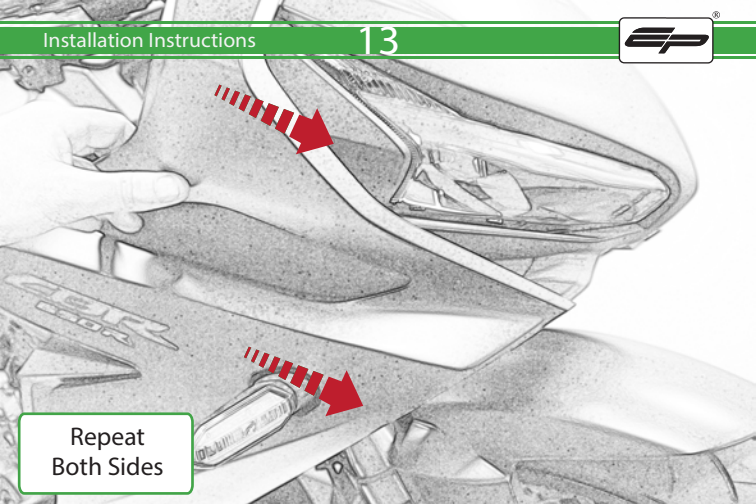

Repeat
Both Sides




Repeat
Both Sides








Repeat
Both Sides


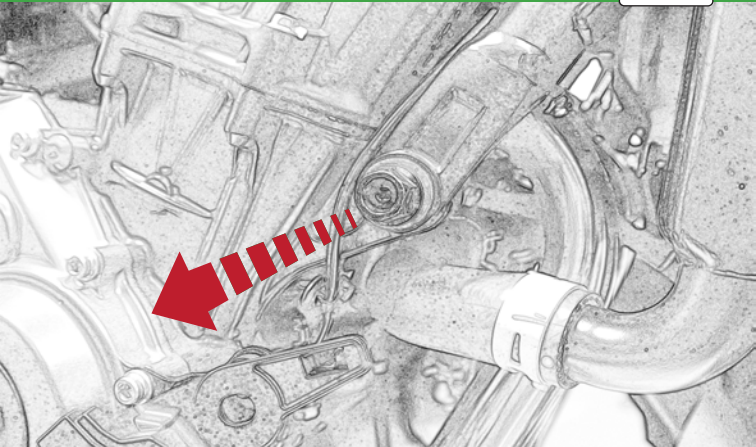





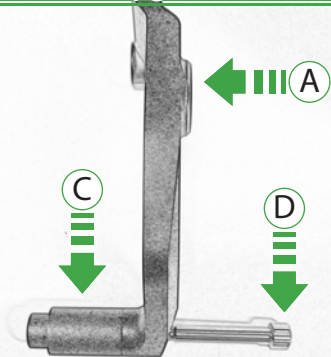


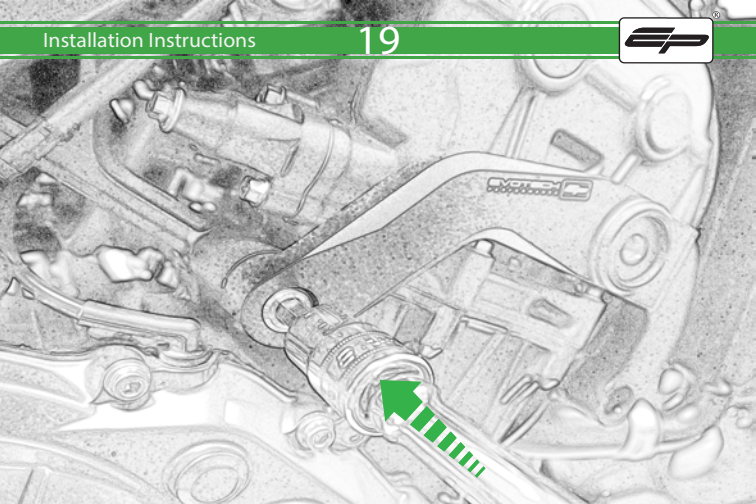


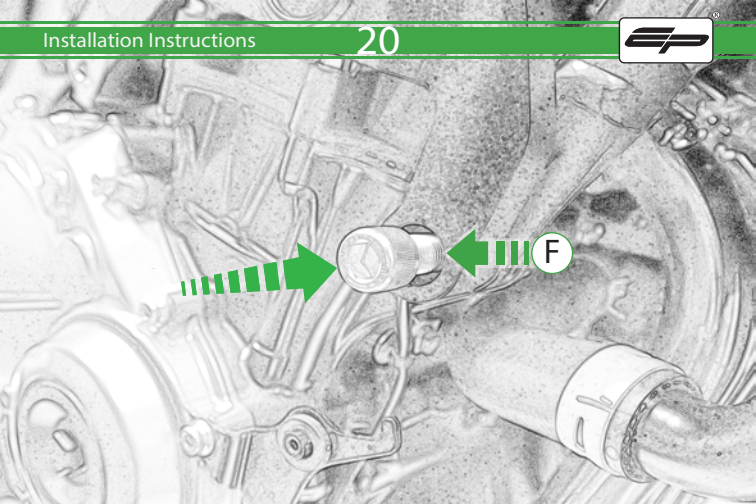

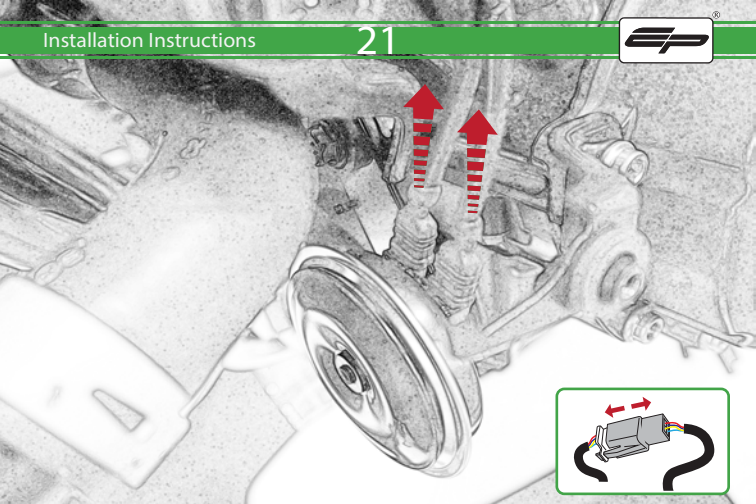

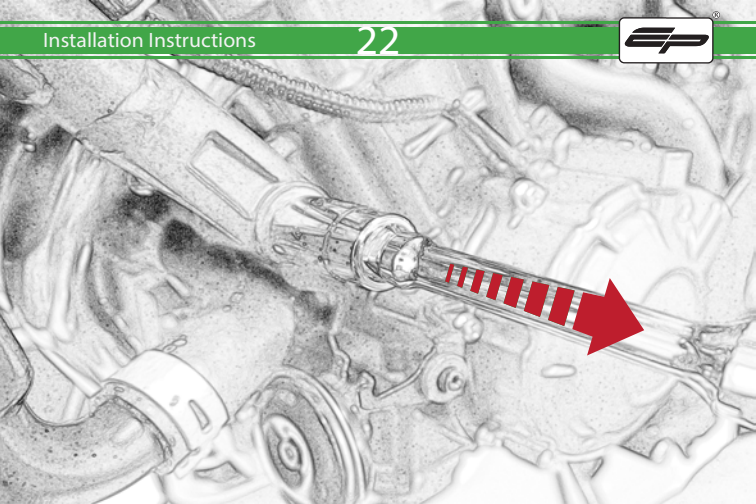


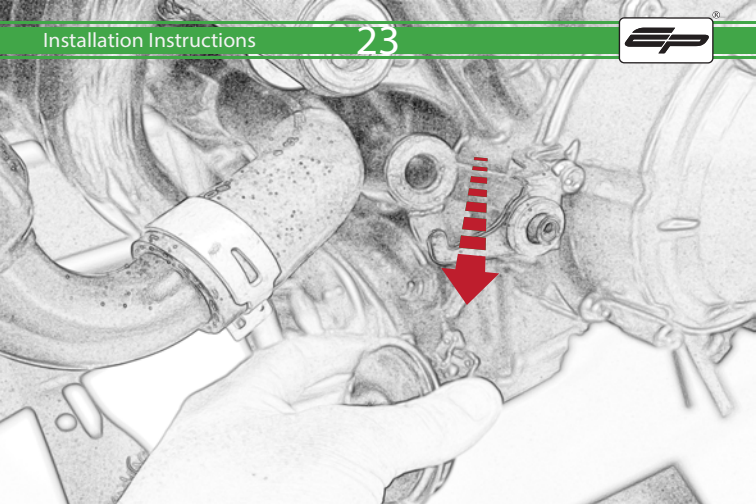


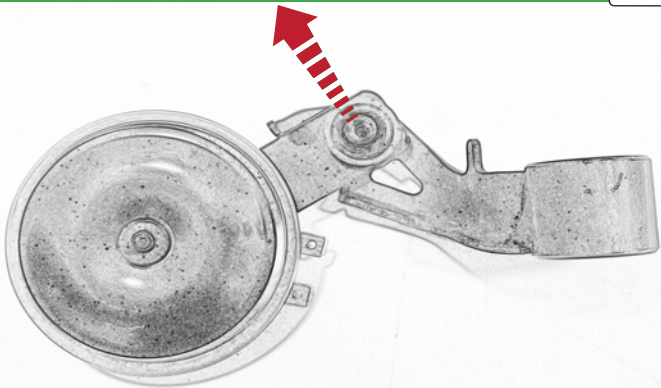






K

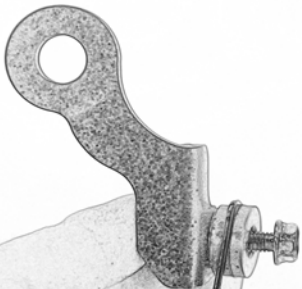


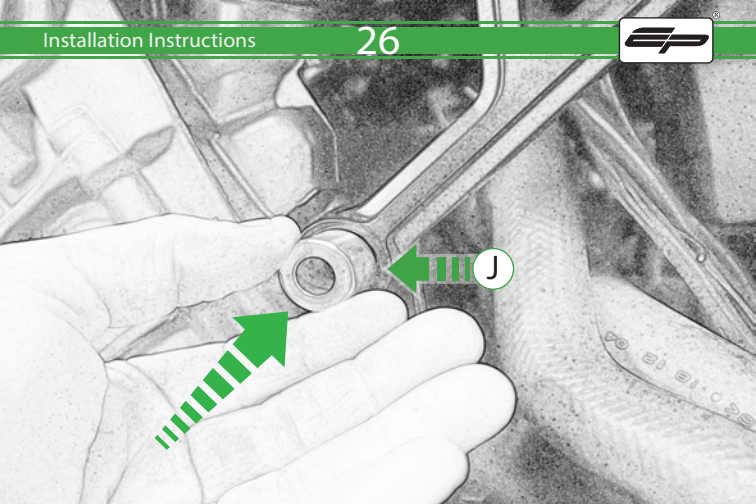

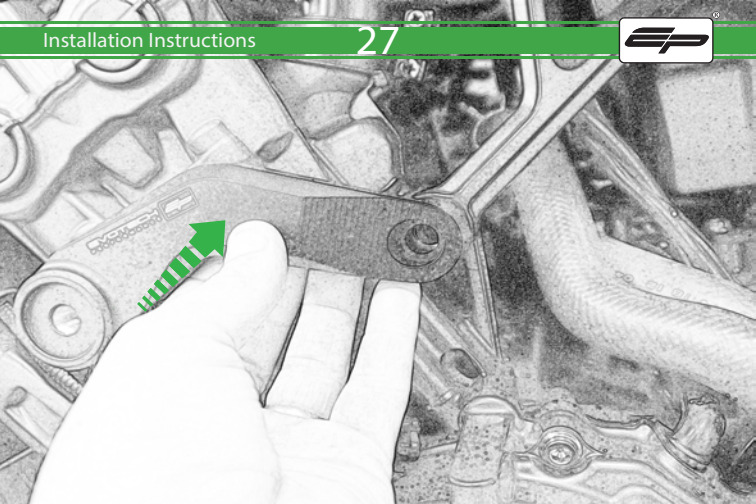


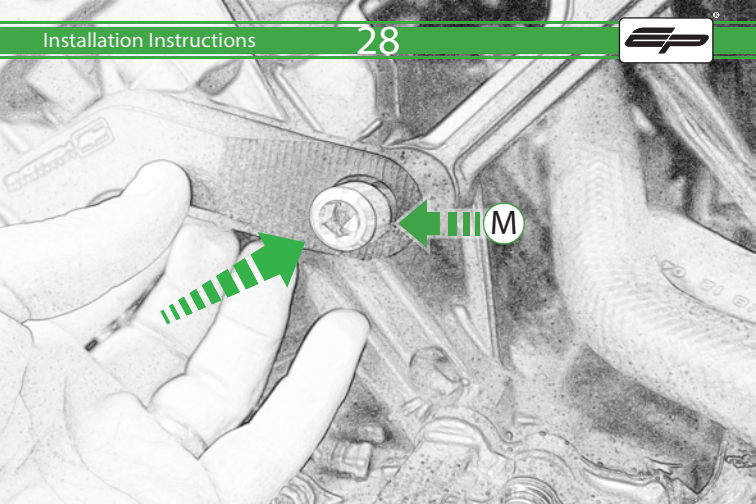


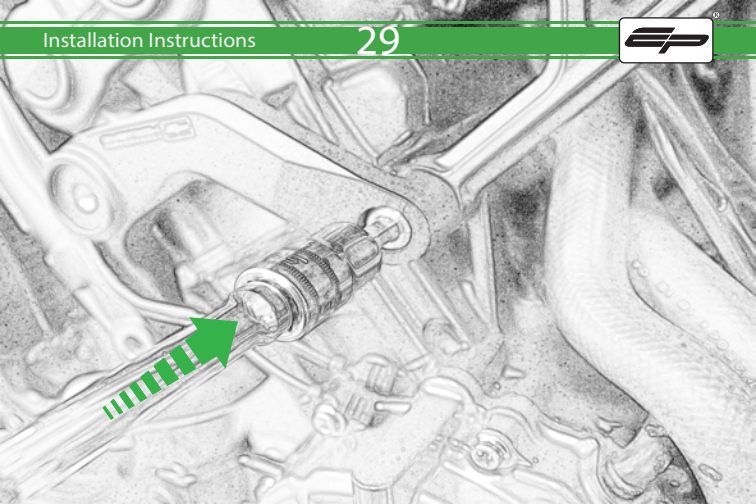


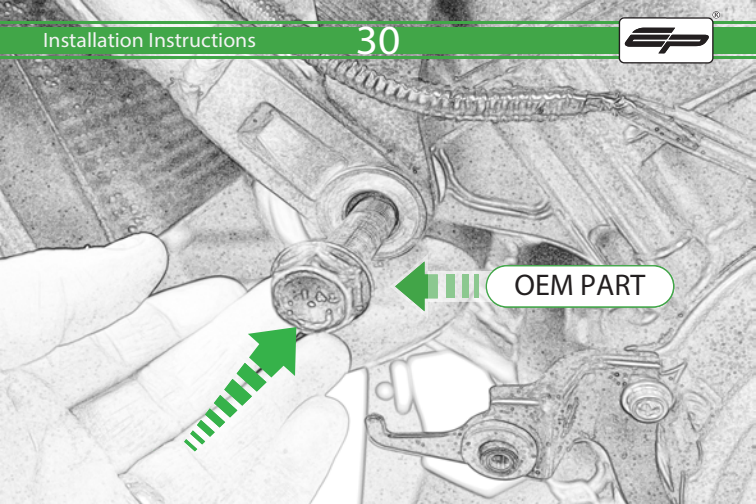




OEM PART

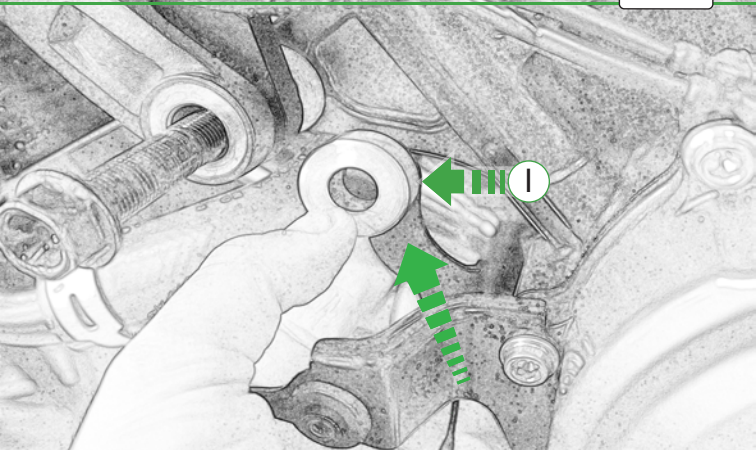


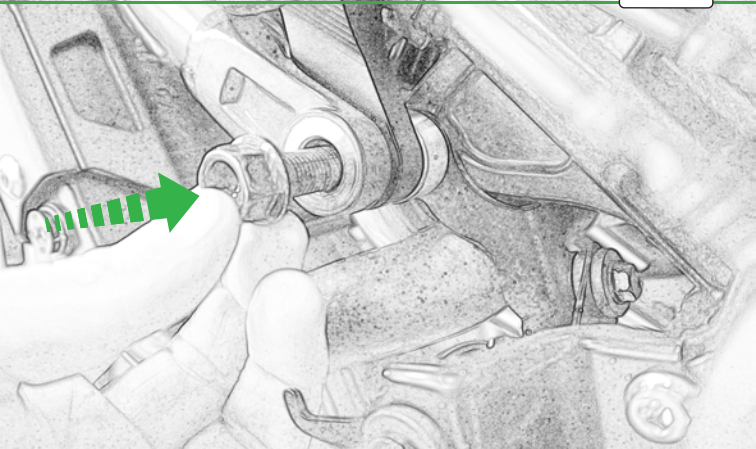


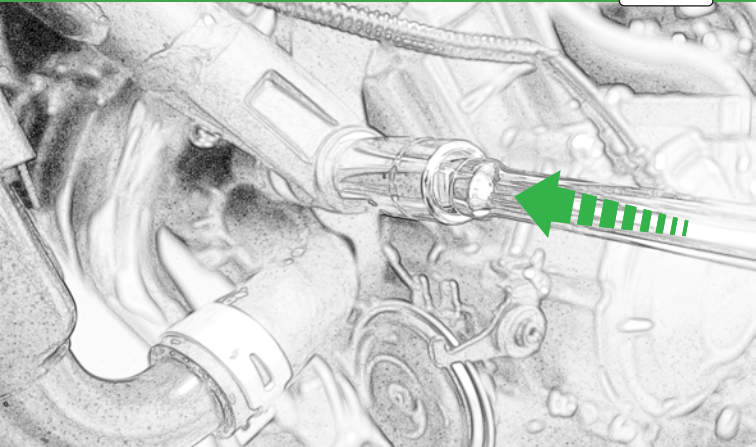


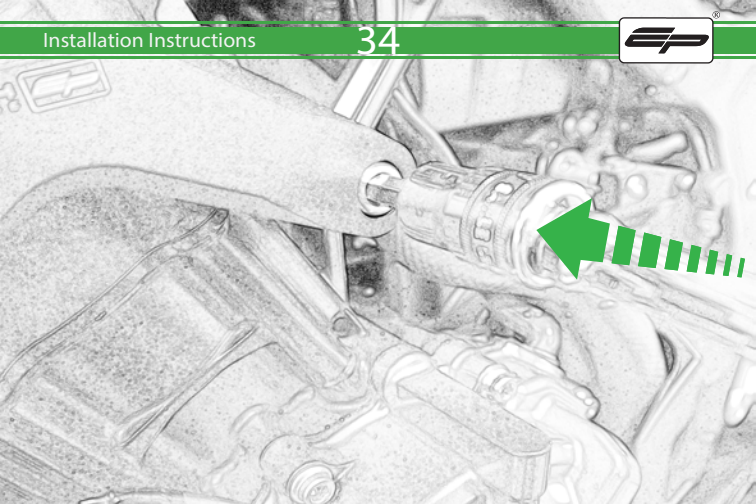


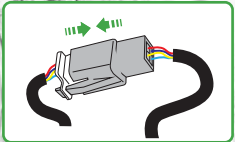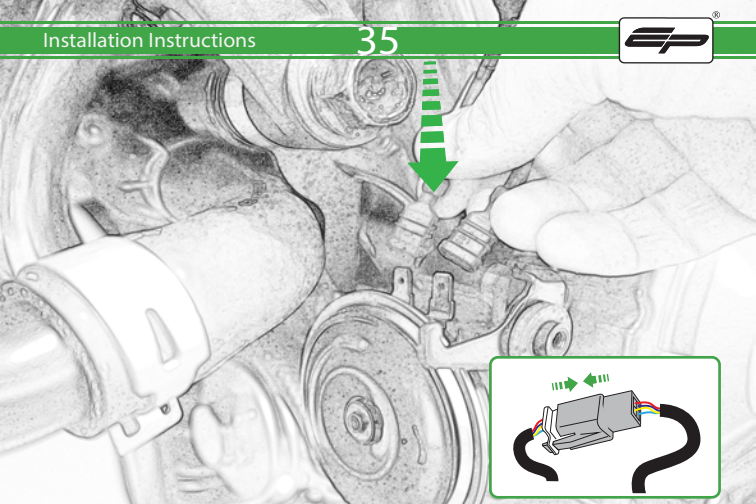


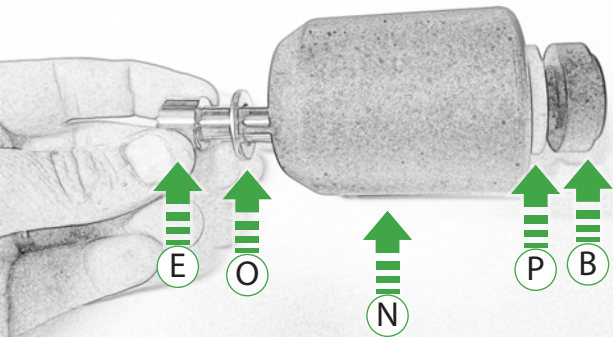


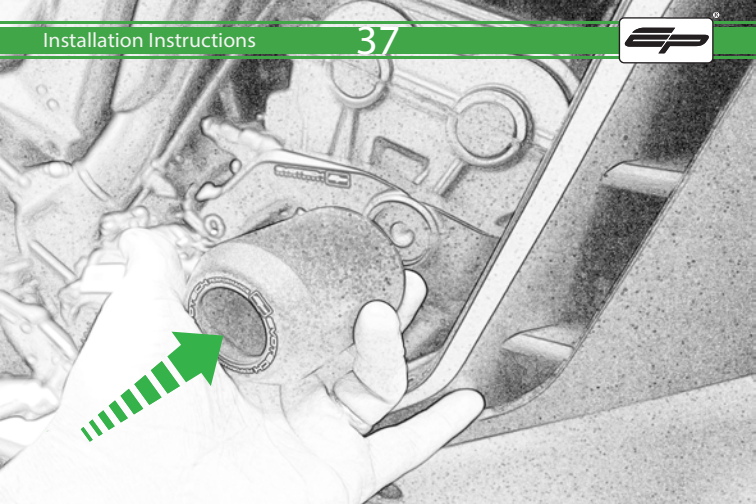

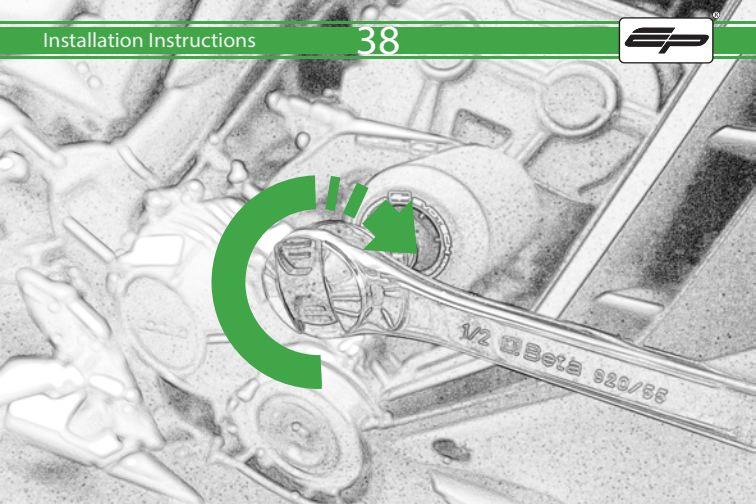

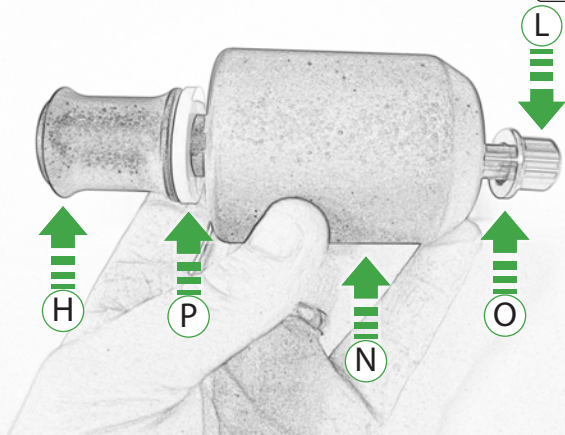

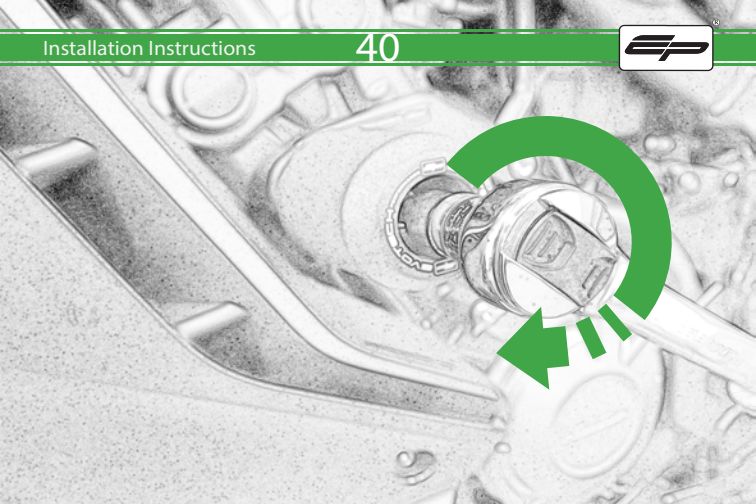

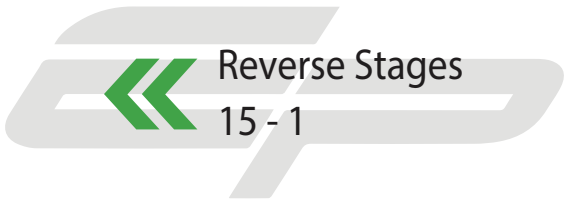



 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com