



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com

Triumph Street Triple RS


Radiator Guard

Installation Instructions




Kit Contents PRN014754



- A 1 x Radiator Guard
- B 2 x Spacer
- C 6 x Rubber Bungs

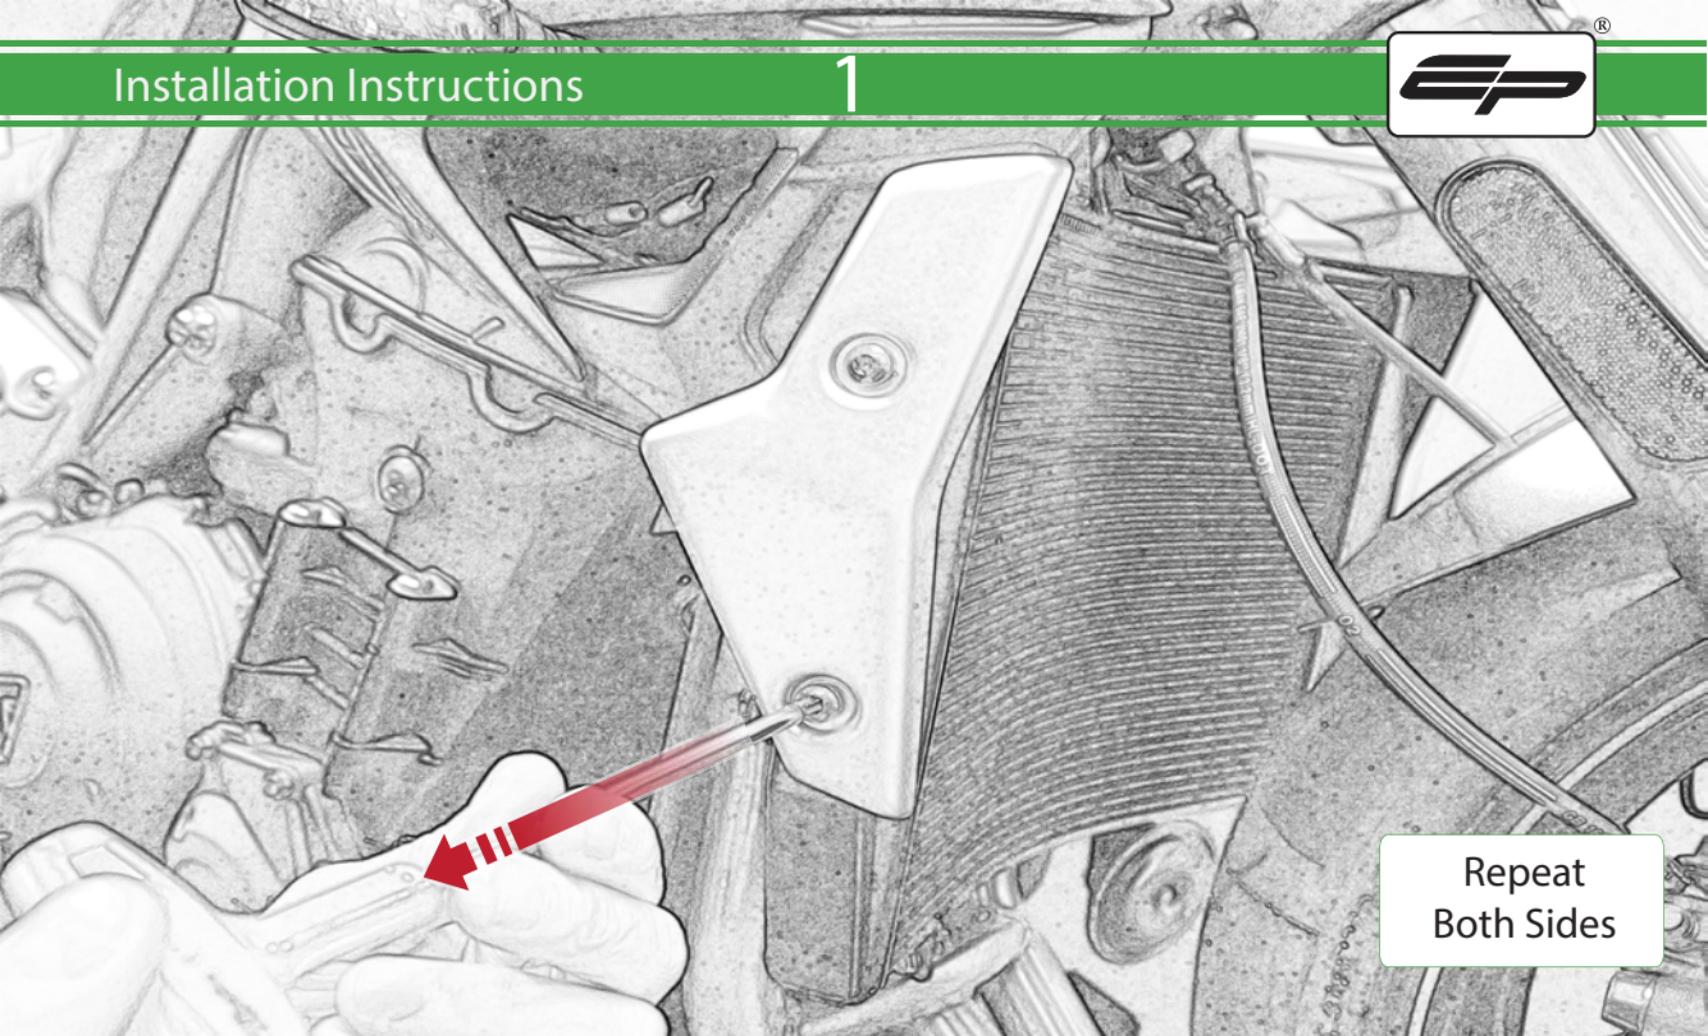

Repeat
Both Sides

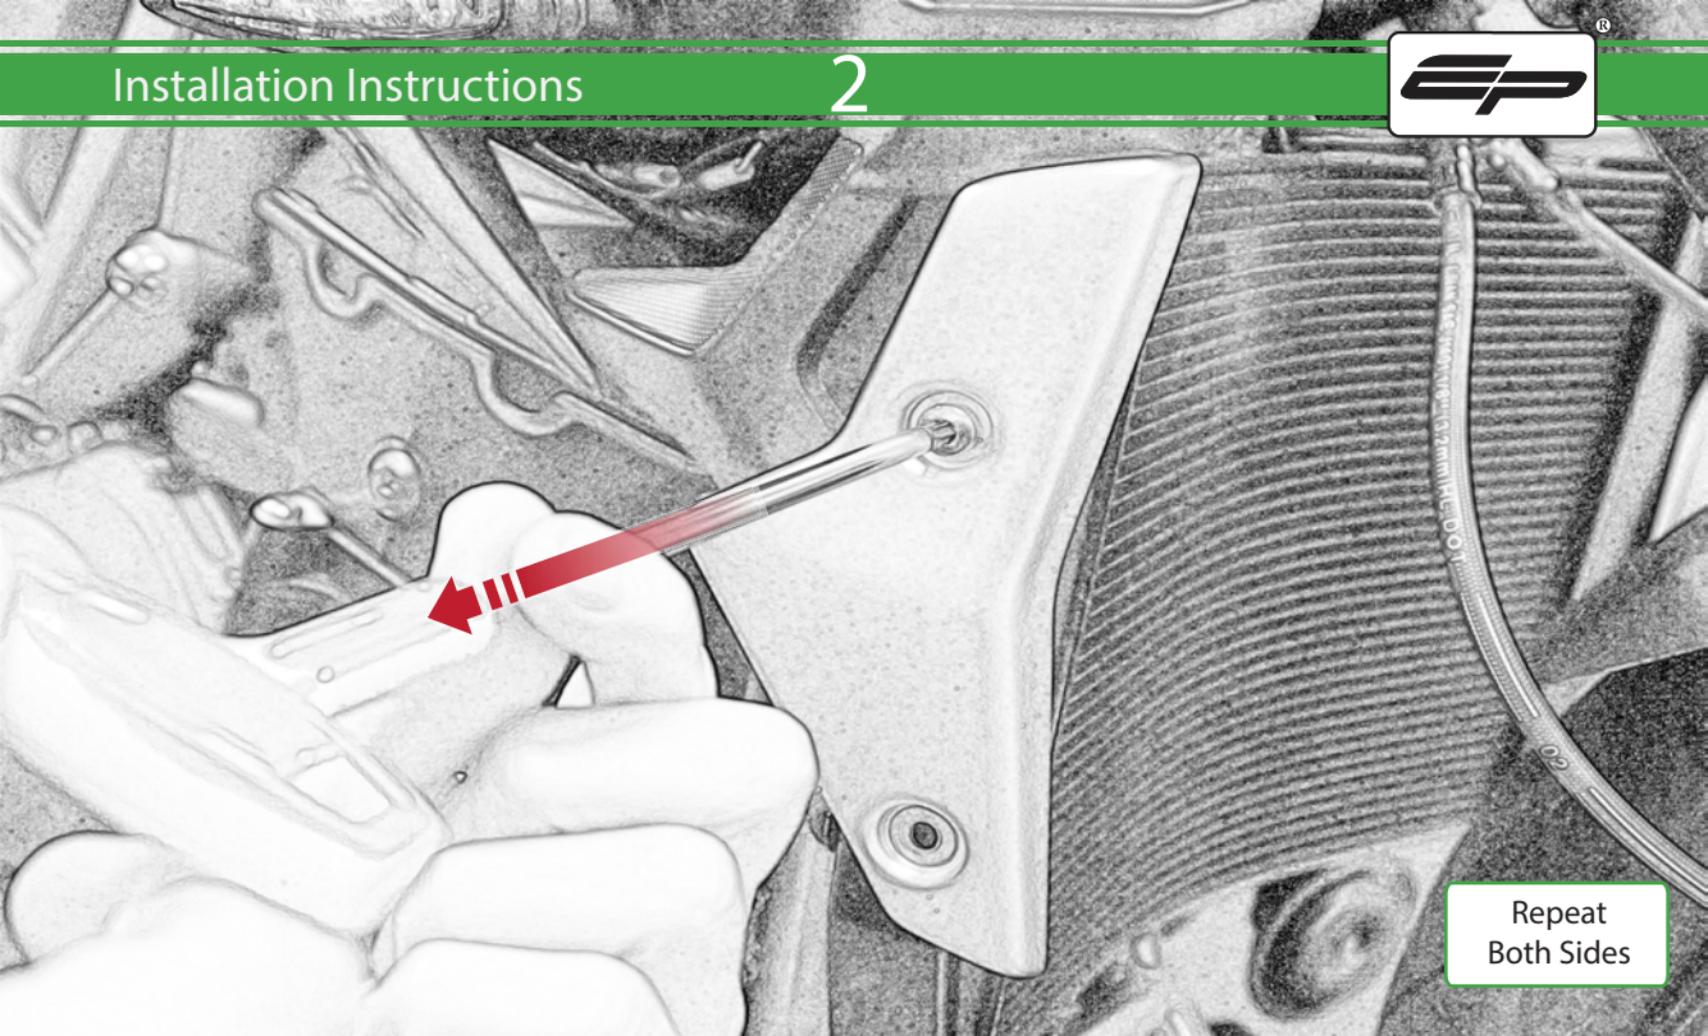


Repeat
Both Sides

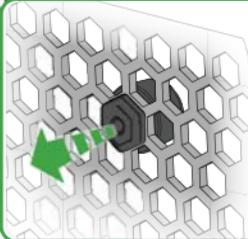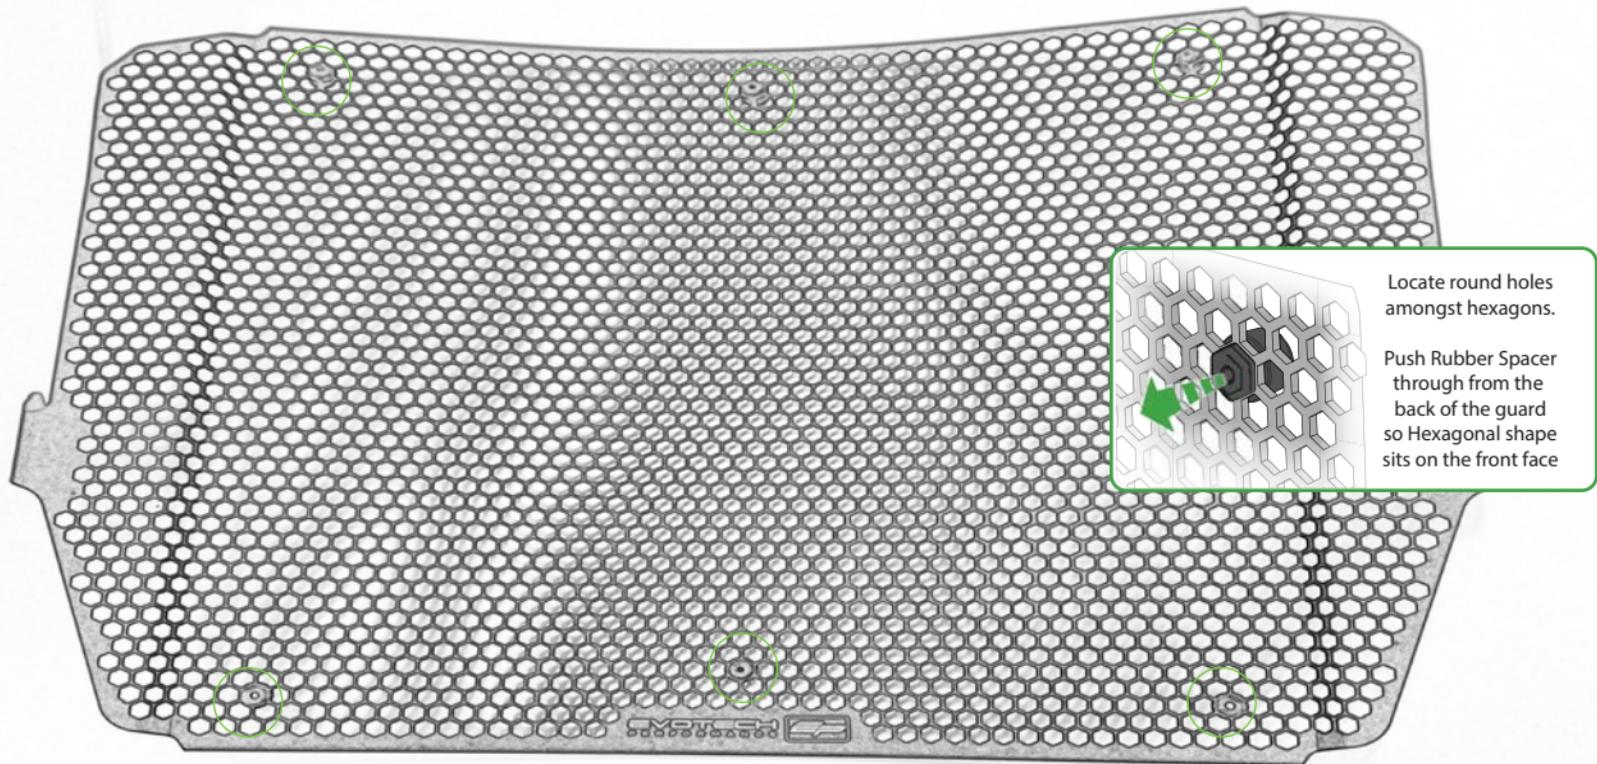


Locate round holes amongst hexagons.

Push Rubber Spacer through from the back of the guard so Hexagonal shape sits on the front face

The inset diagram shows a close-up of a hexagonal hole in the mesh. A black rubber spacer is being pushed through the hole from the back side. A green arrow points to the left, indicating the direction of the push. The spacer is wider than the hole, so it will create a tight seal on the front face of the mesh.

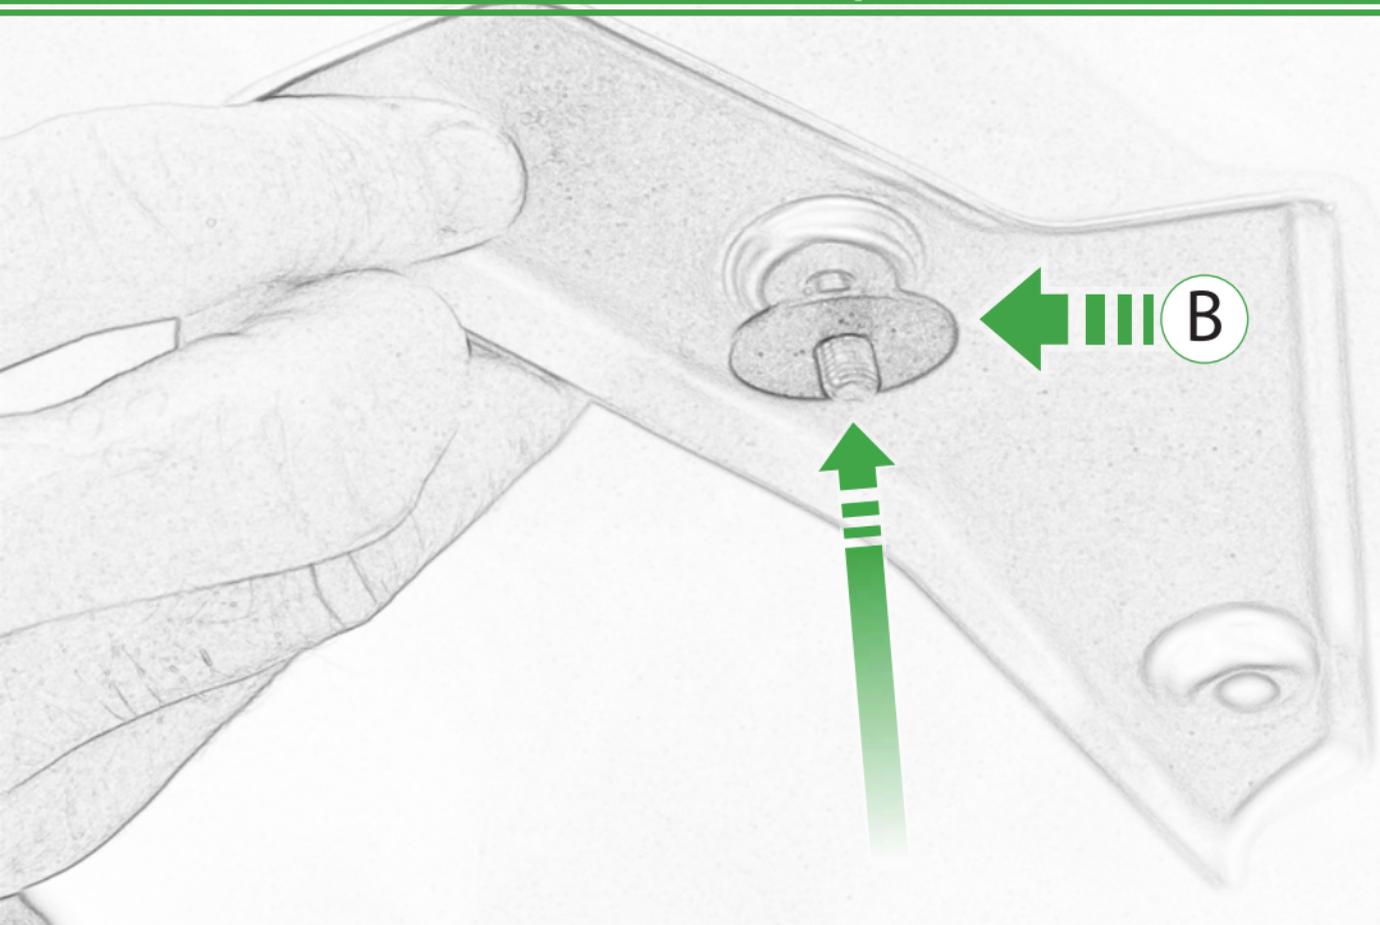


Repeat
Both Sides

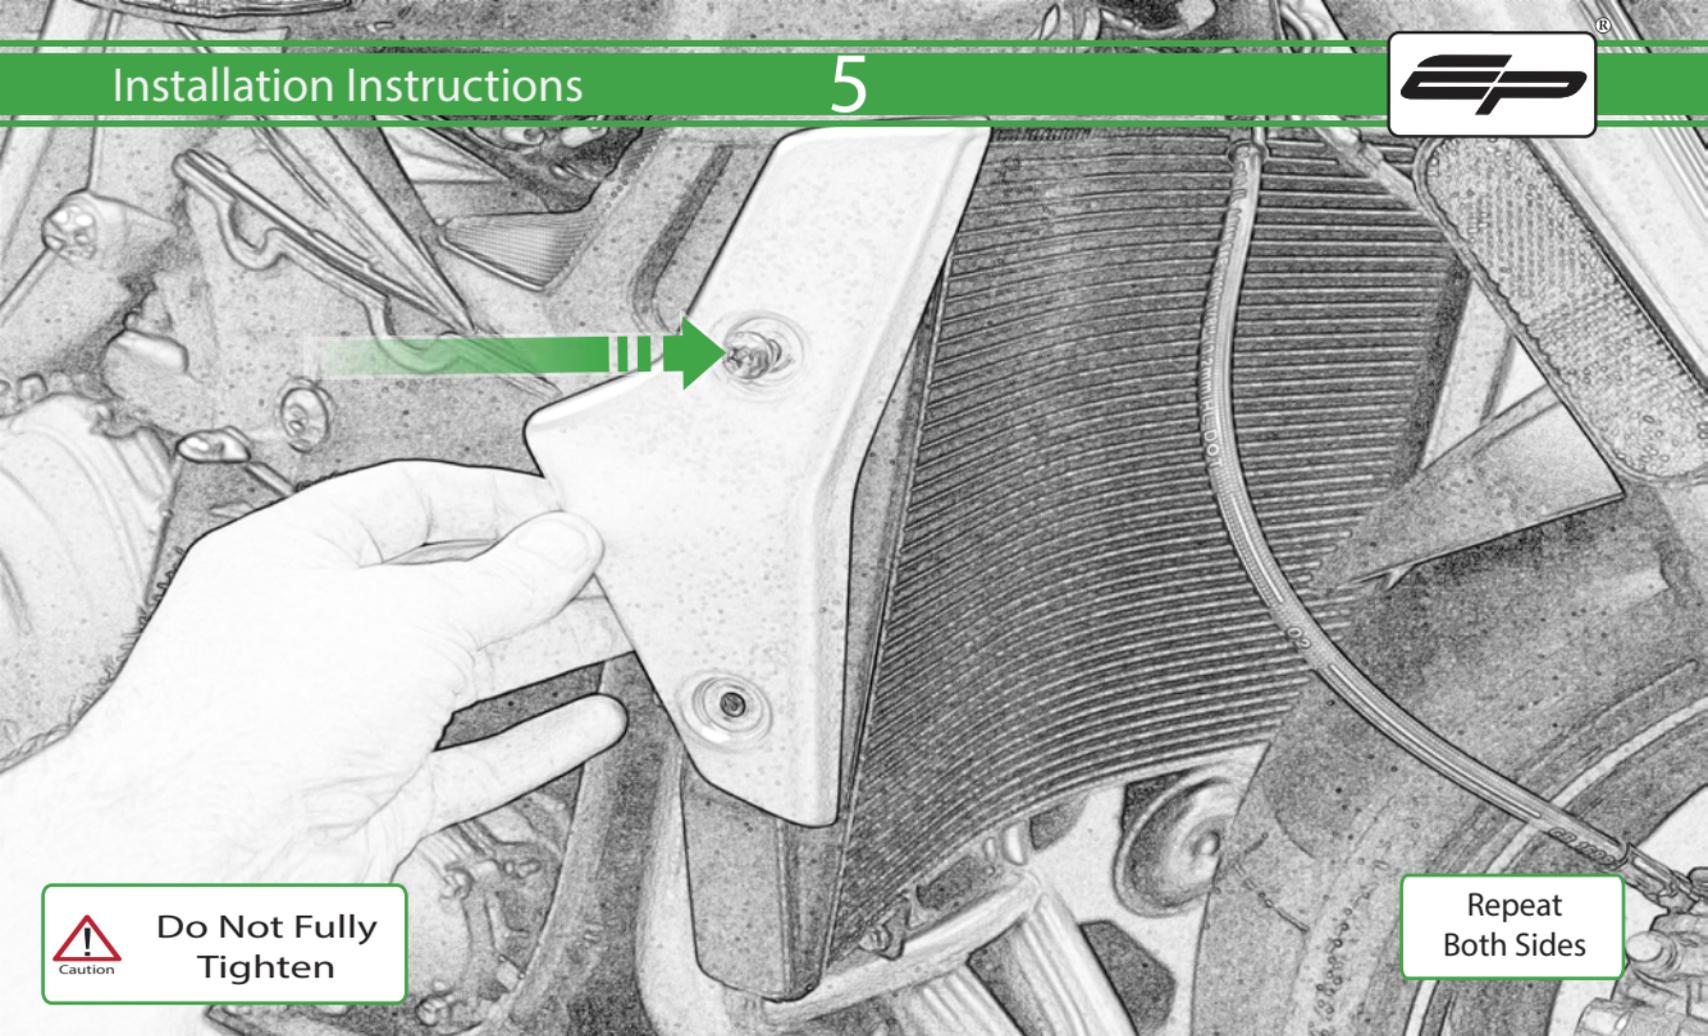



Caution

Do Not Fully
Tighten

Repeat
Both Sides

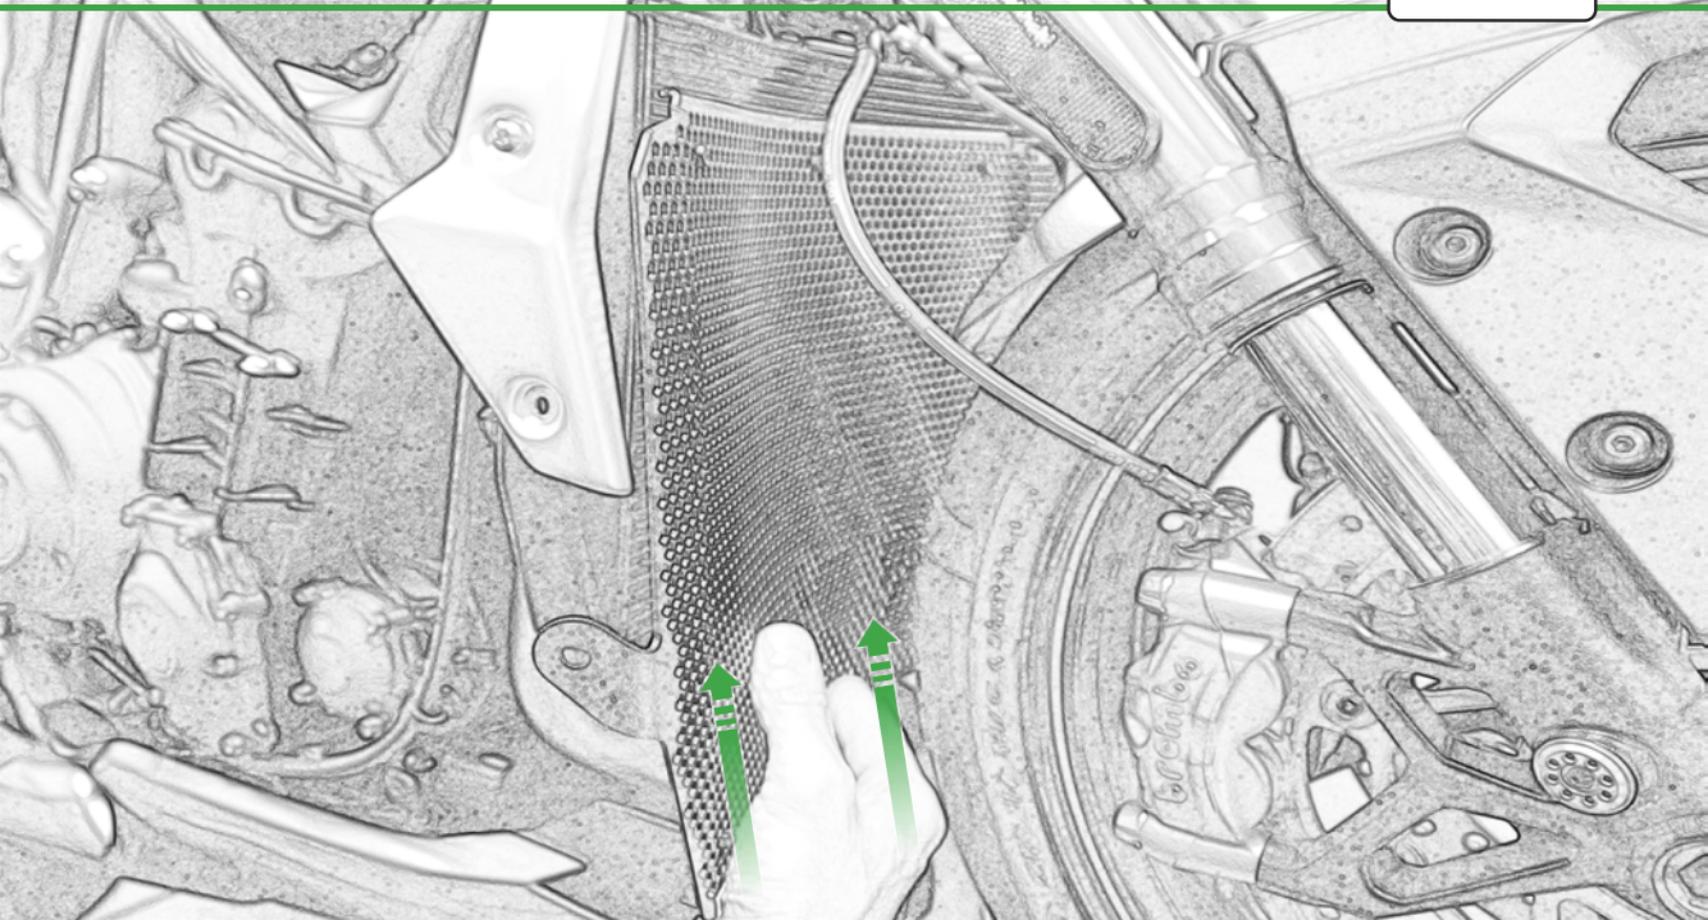


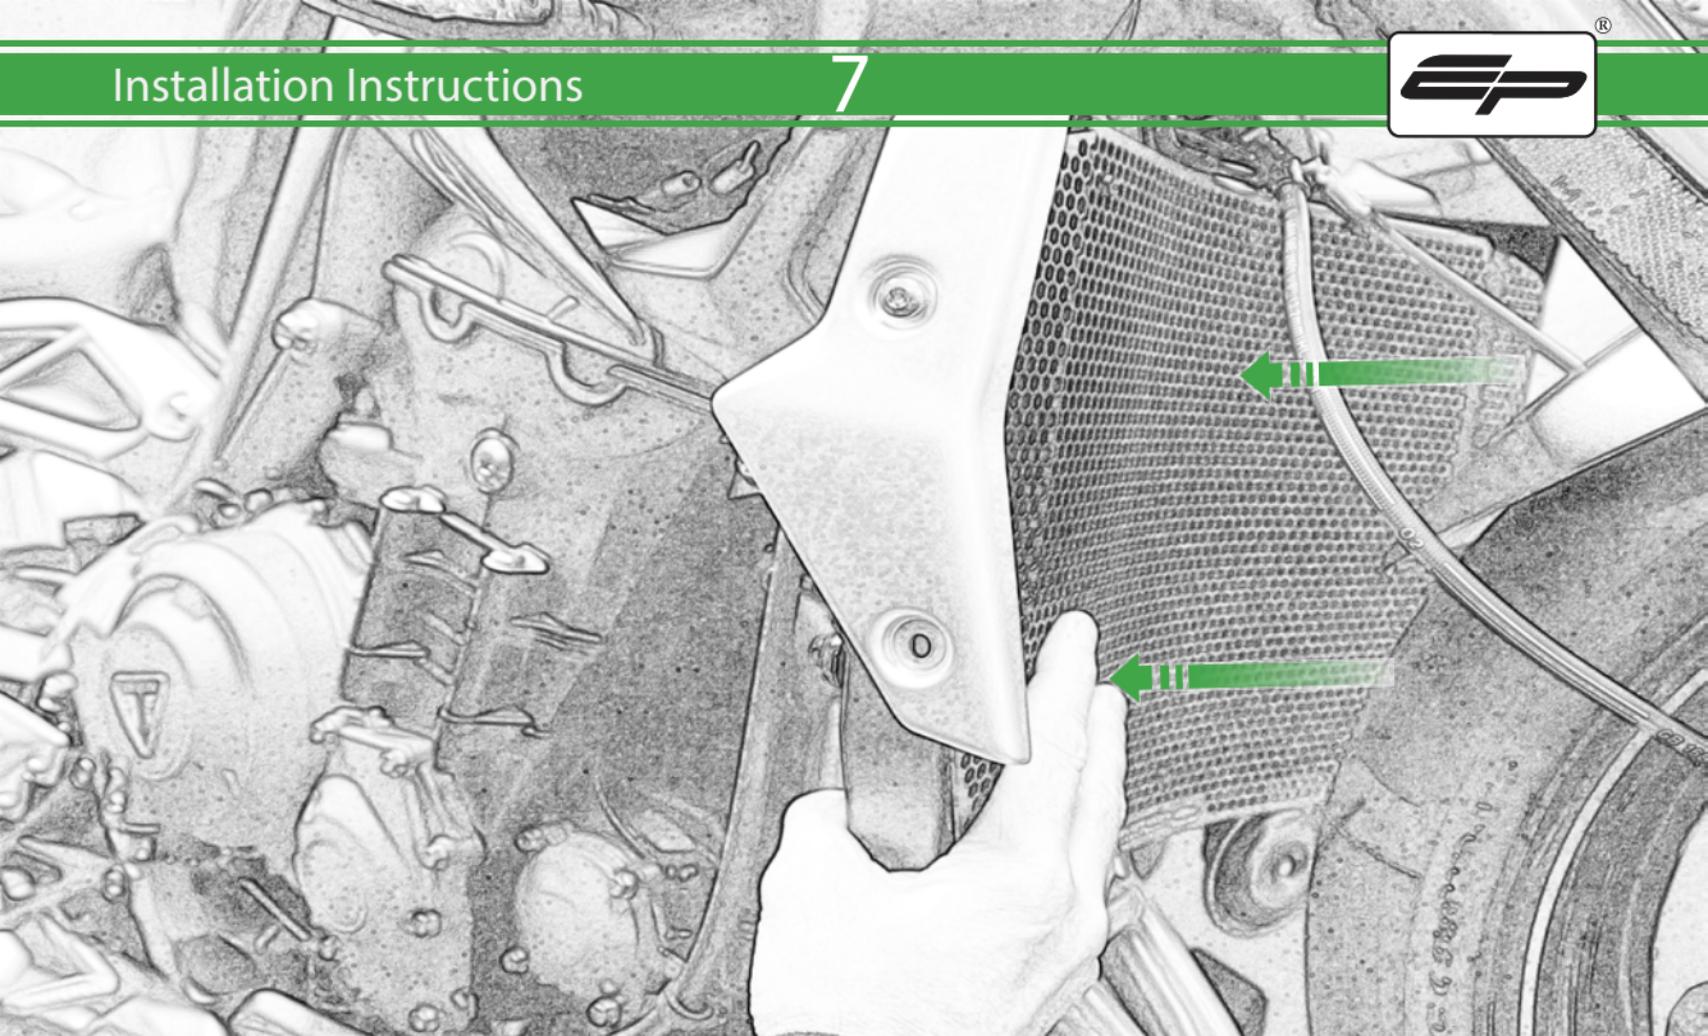

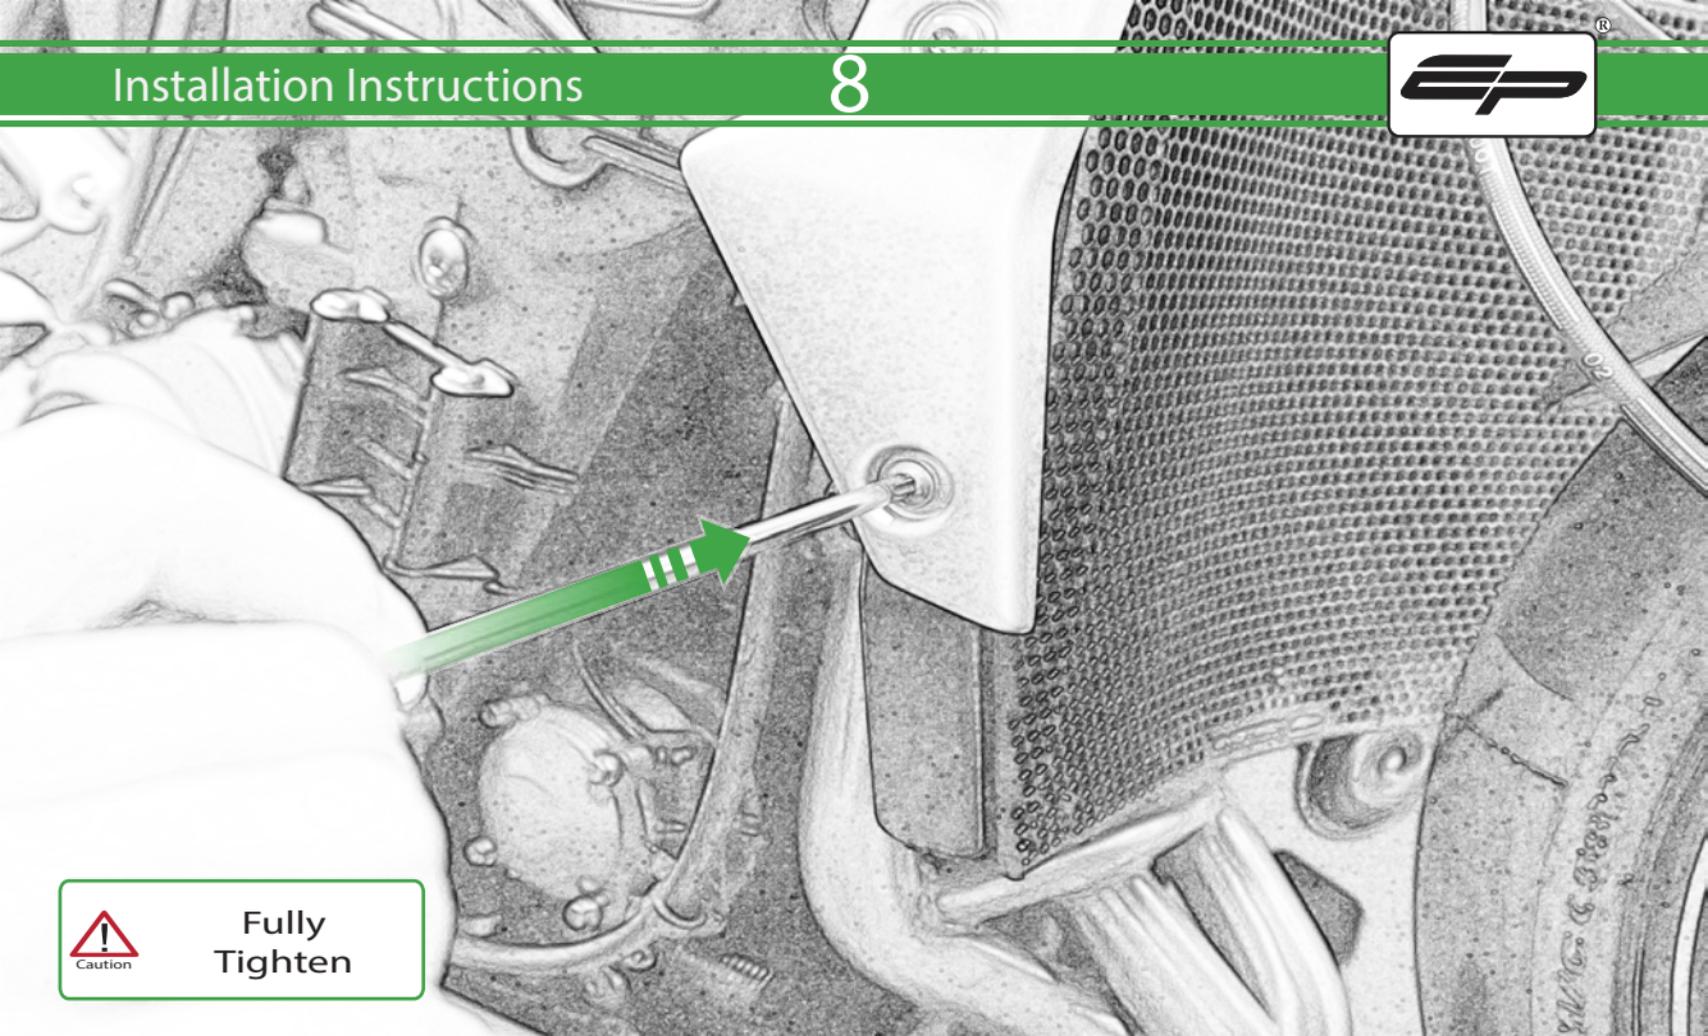


Caution

Fully
Tighten

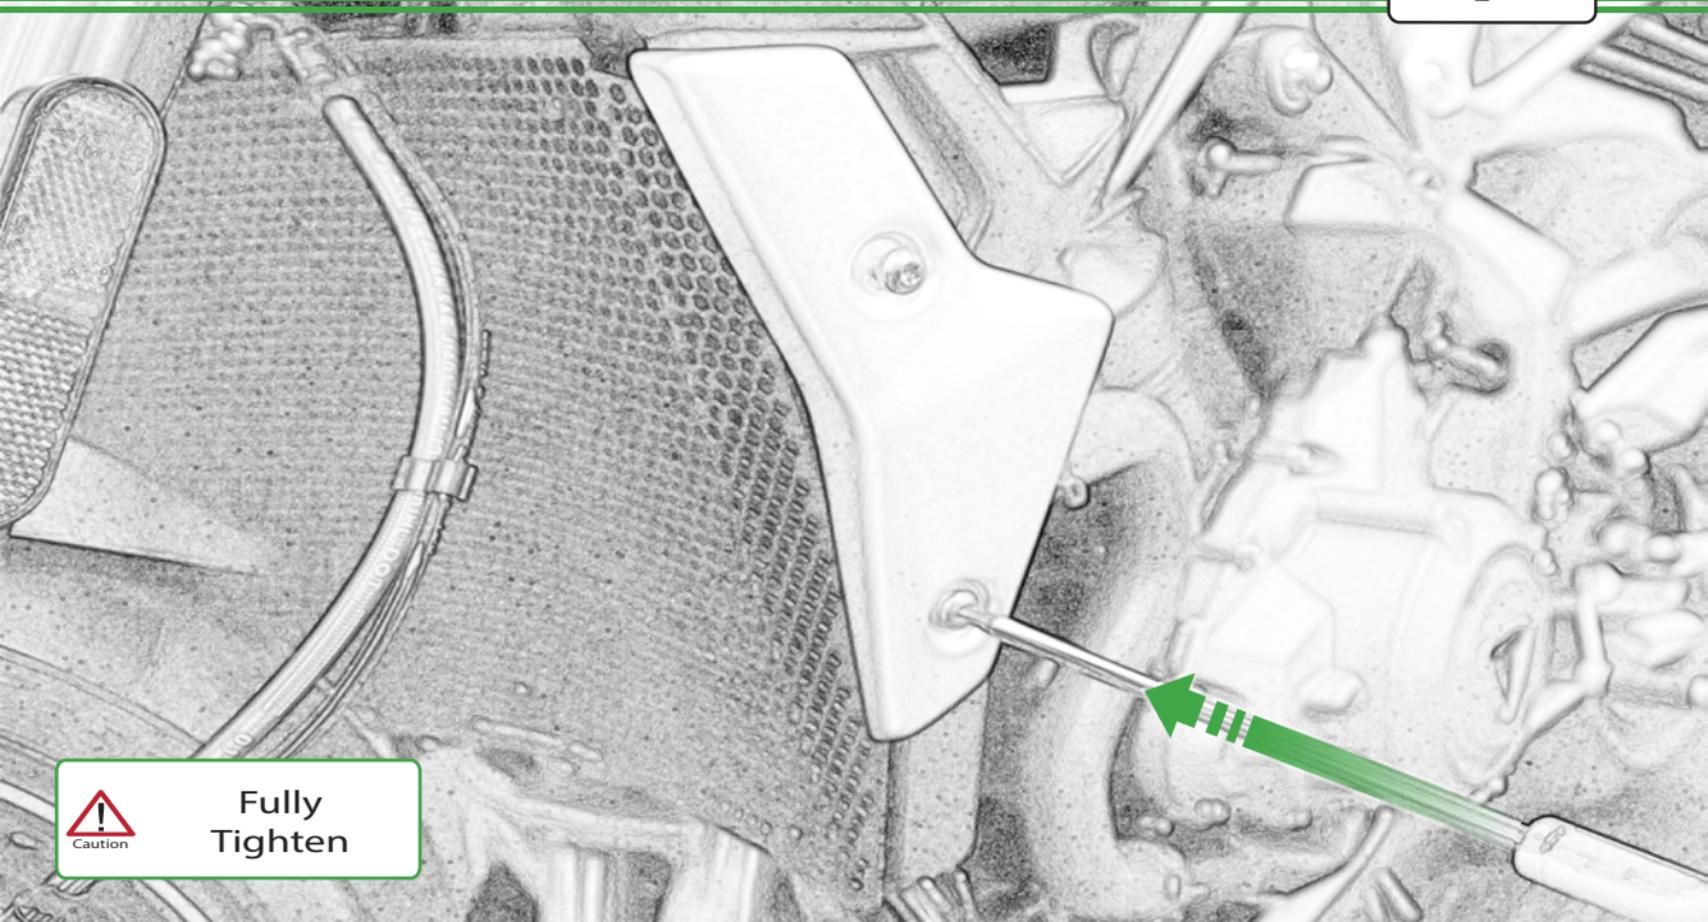

 Fully Tighten

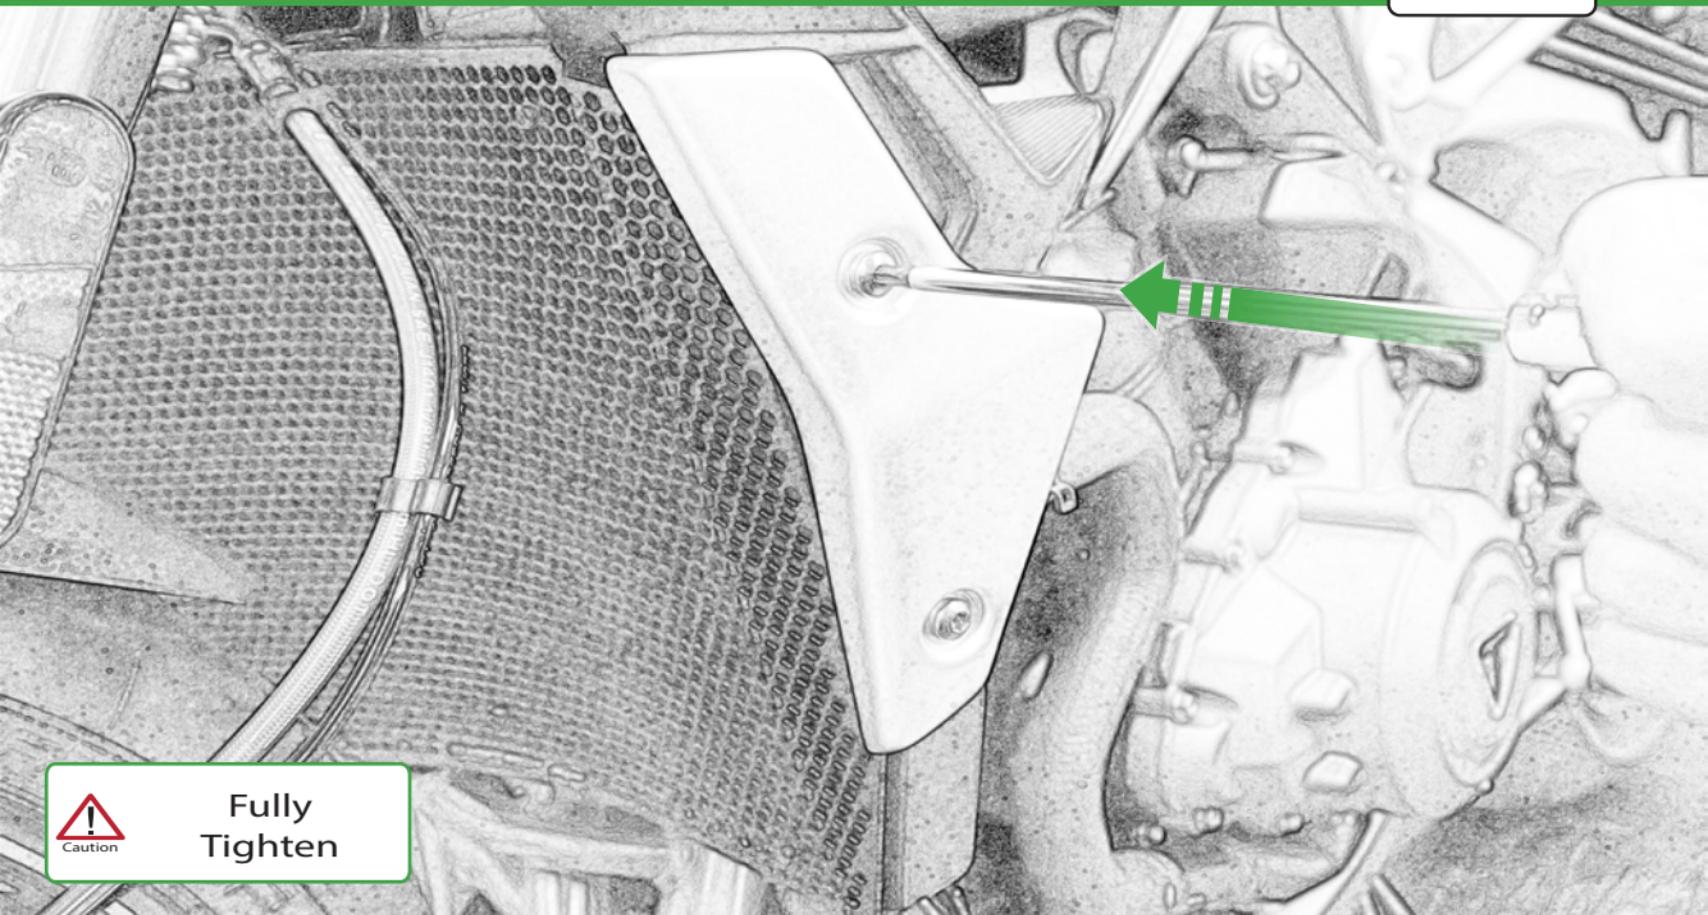

 Fully Tighten



Caution

Fully
Tighten



ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that dirt and debris have not become trapped between the guard and the radiator/oil cooler. Such dirt and debris would reduce the cooling efficiency of the radiator/oil cooler.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightened.



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com