



EVOTECH[®]
P E R F O R M A N C E

BMW S1000R

Crash protection

Installation Instructions

Installation Instructions




Kit Contents PRN013782

- A** 1 x L/H Bracket
- B** 1 x R/H Inner Bracket
- C** 1 x R/H Outer Bracket
- D** 1 x L/H Bobbin Spacer
- E** 1 x R/H Bobbin Spacer
- F** 1 x Concial Spacer
- G** 1 x M12 x 60 x 1.25 Caphead Bolt
- H** 1 x M12 x 85 x 1.25 Caphead Bolt
- I** 1 x Main Shaft
- J** 2 x M10 x 60 Caphead Bolt
- K** 2 x M12 Washers
- L** 2 x Polyurathane Washer
- M** 2 x Bobbin Heads
- N** 2 x M8 x 25 Caphead Bolt



Installation Instructions

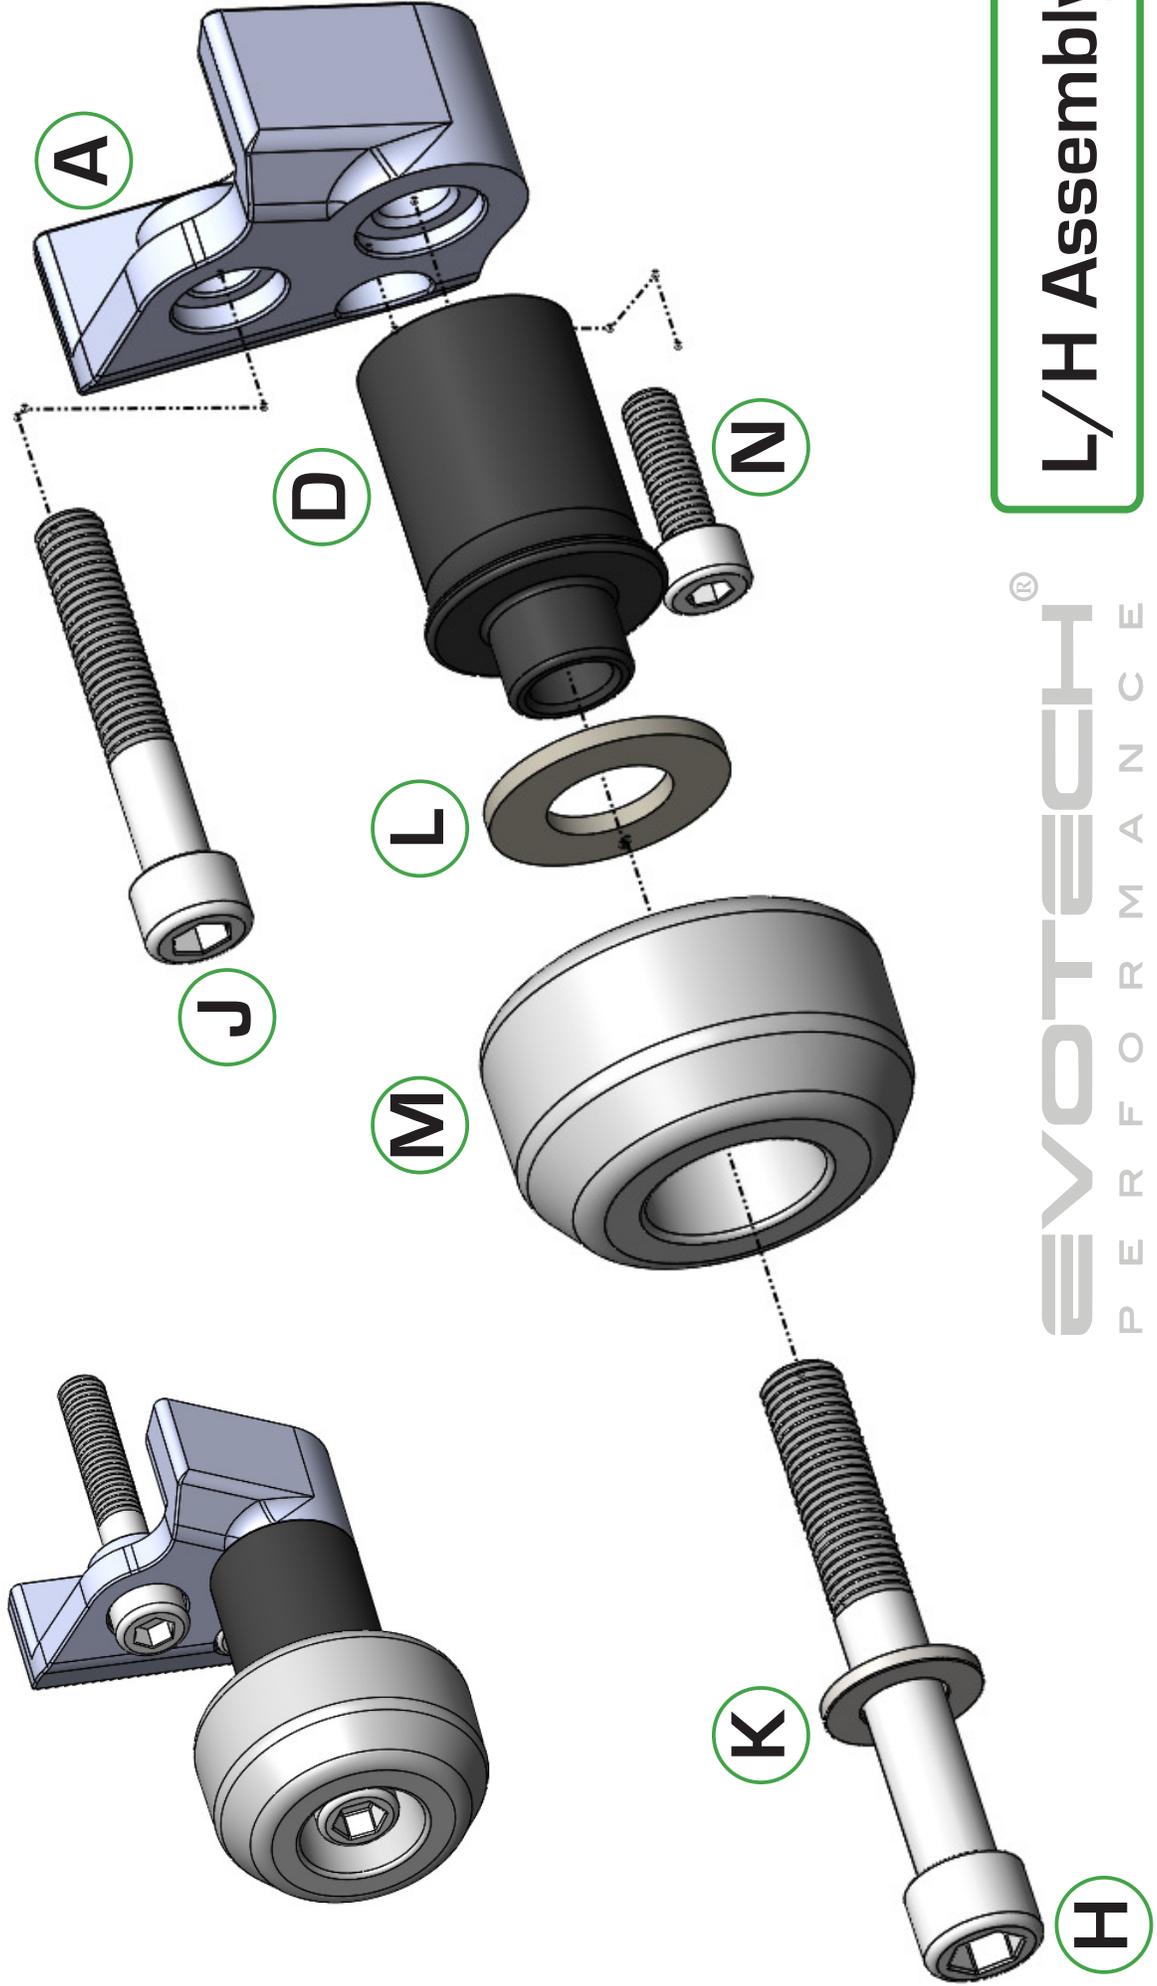


L/H Assembly

EVOTECH[®]
P E R F O R M A N C E



Installation Instructions

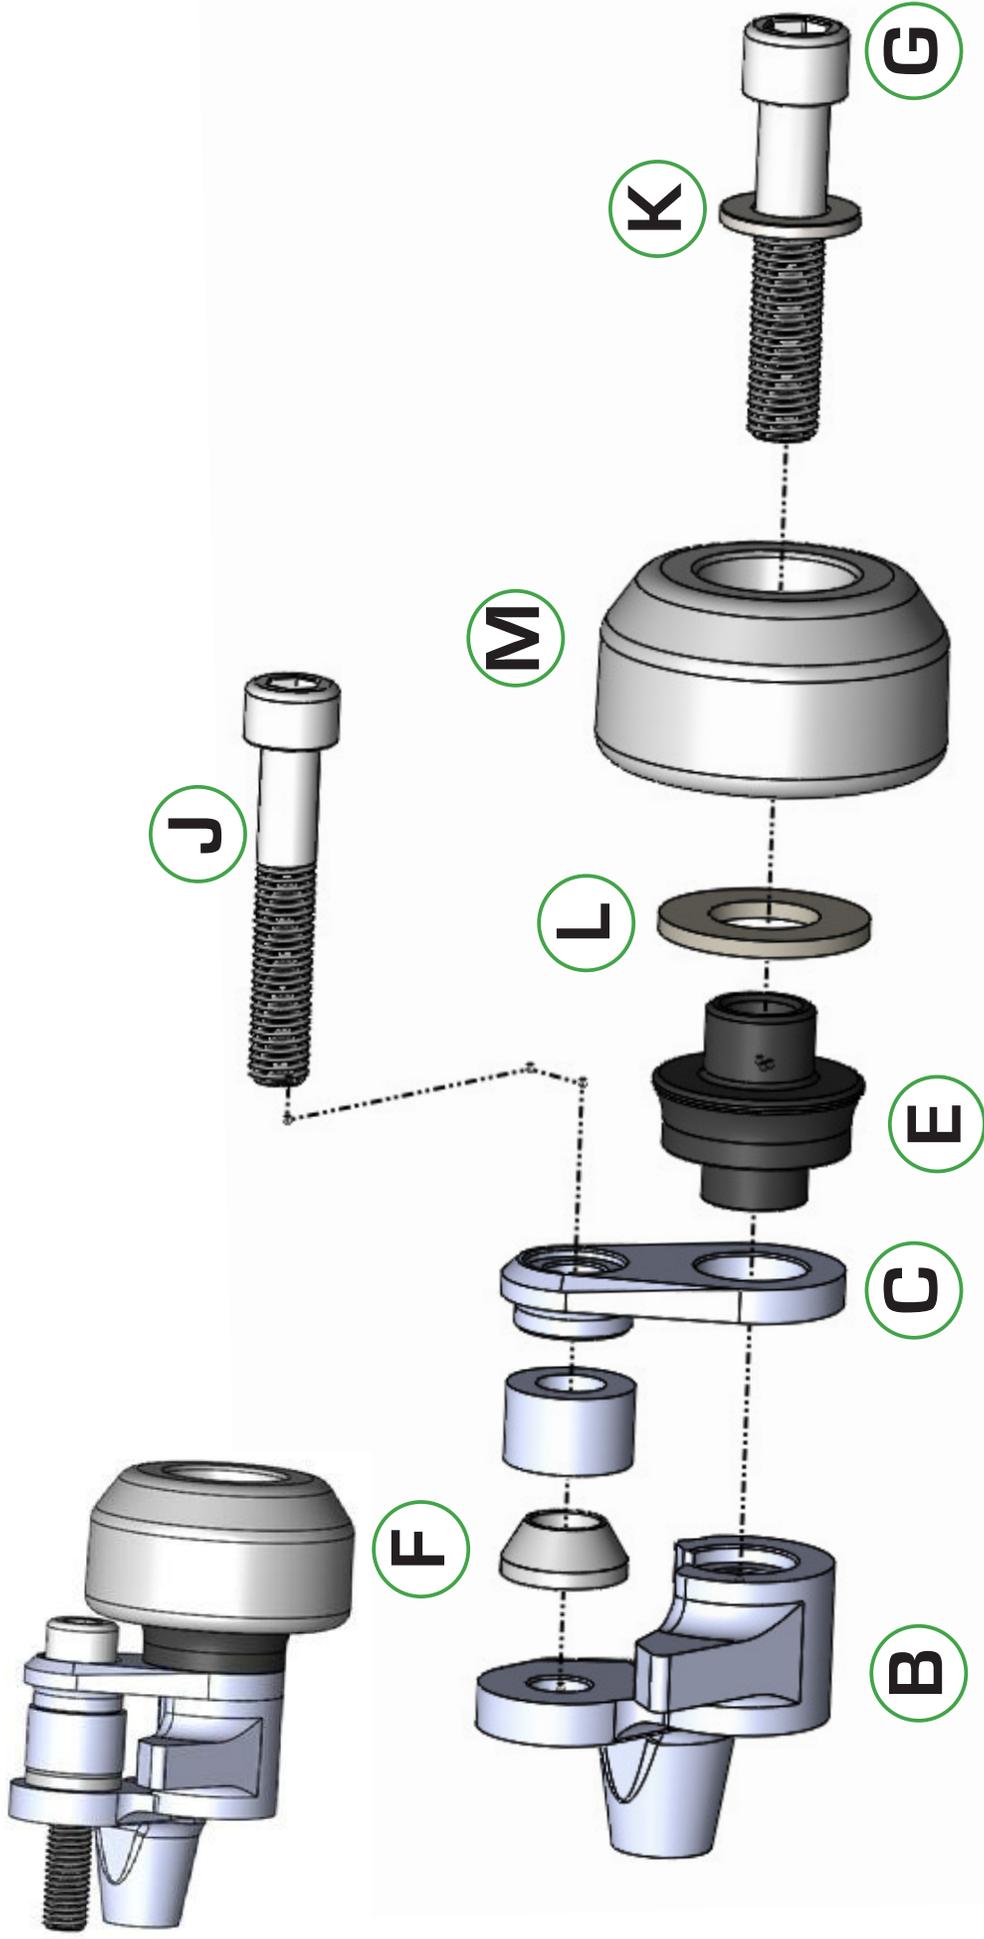

EVOTECH[®]
P E R F O R M A N C E


R/H Assembly


®





1


Installation Instructions

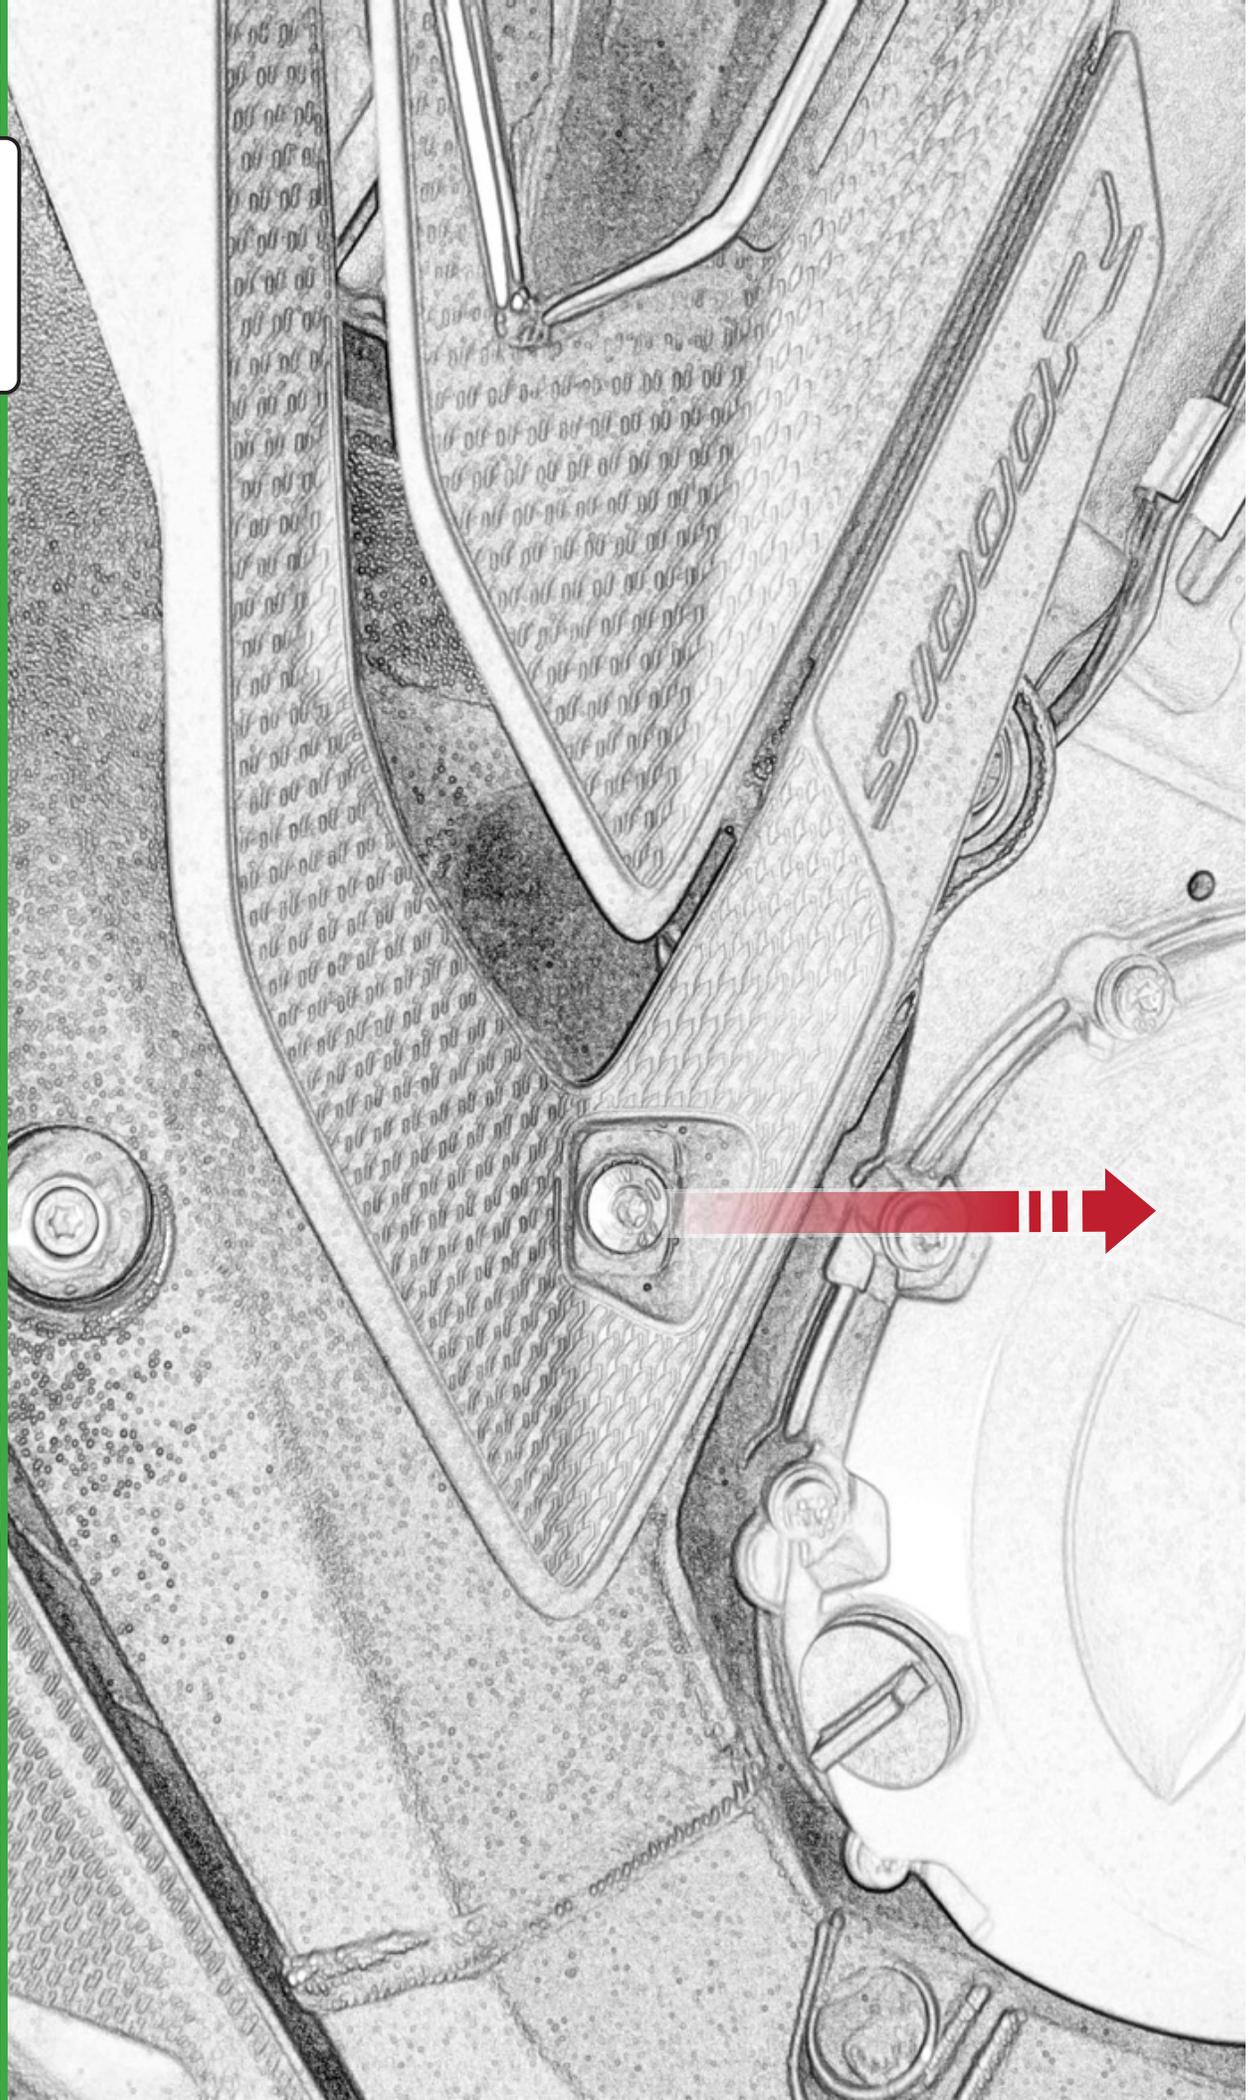


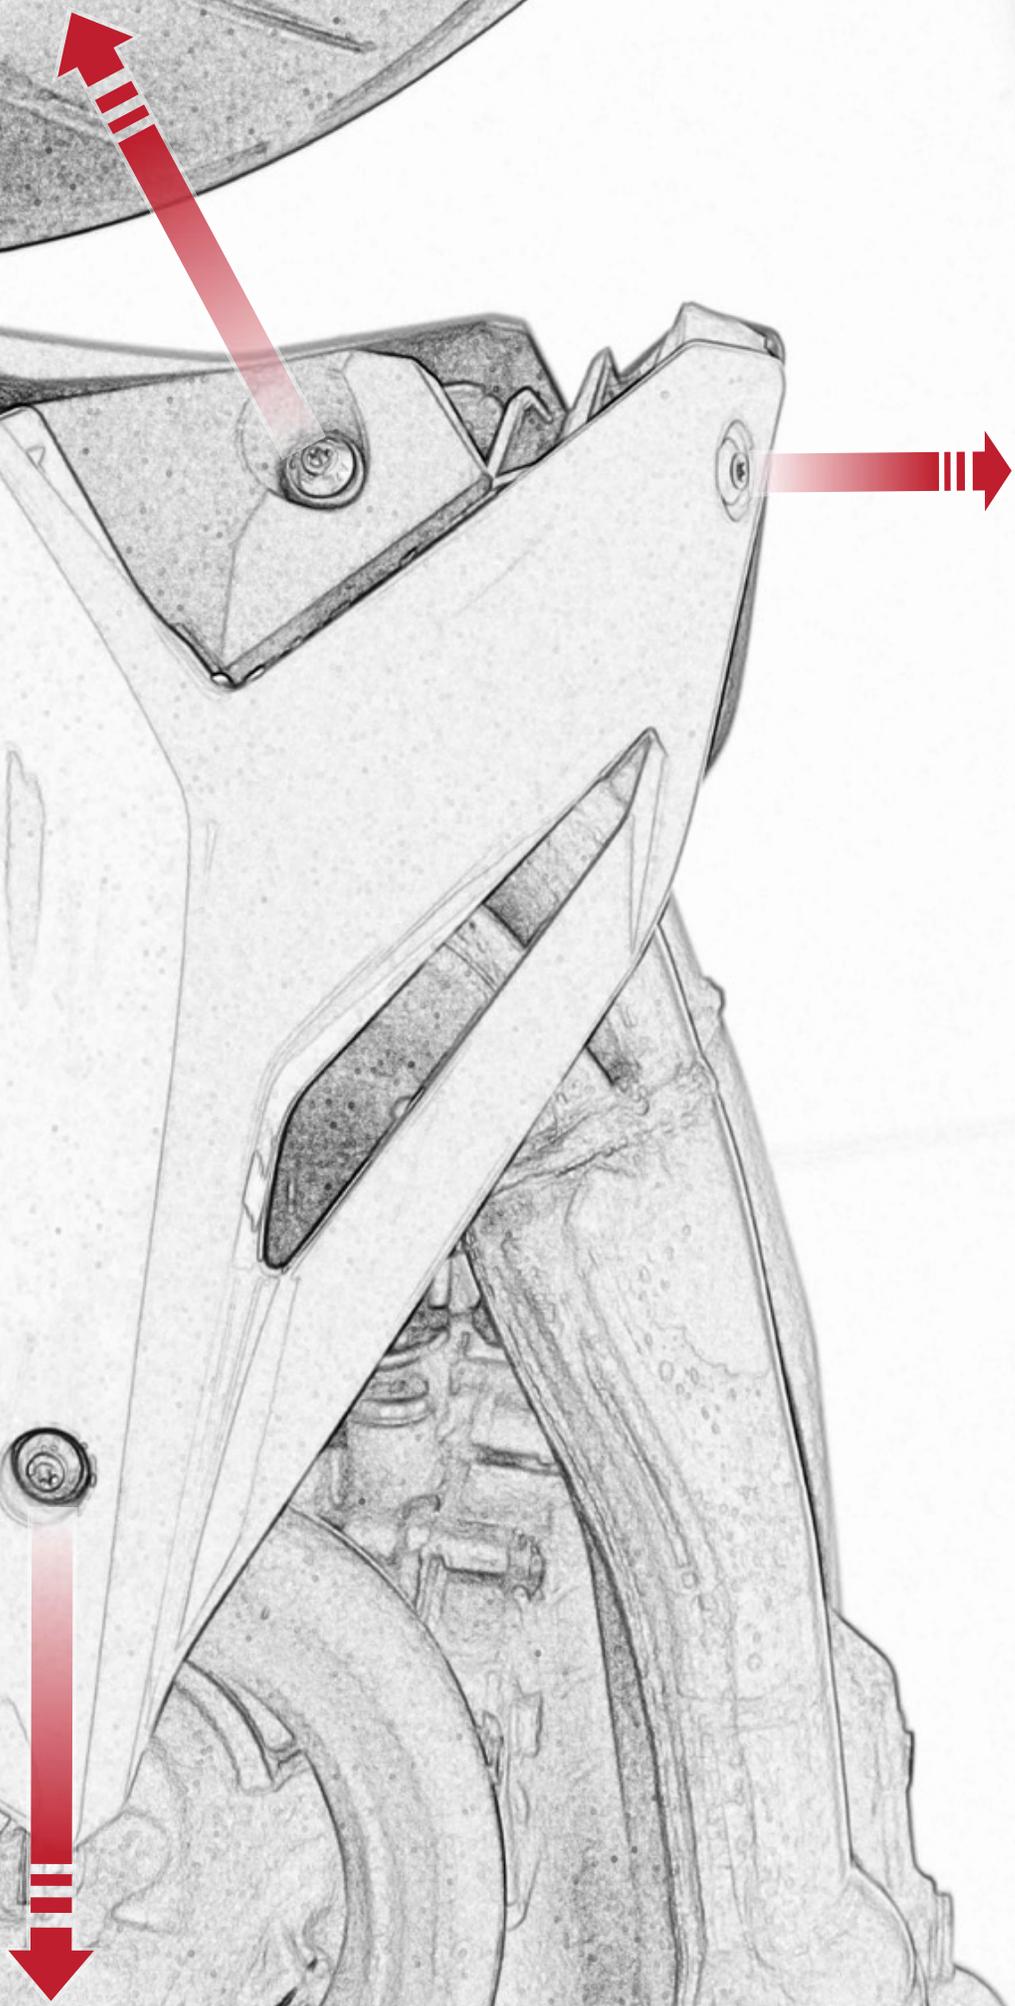

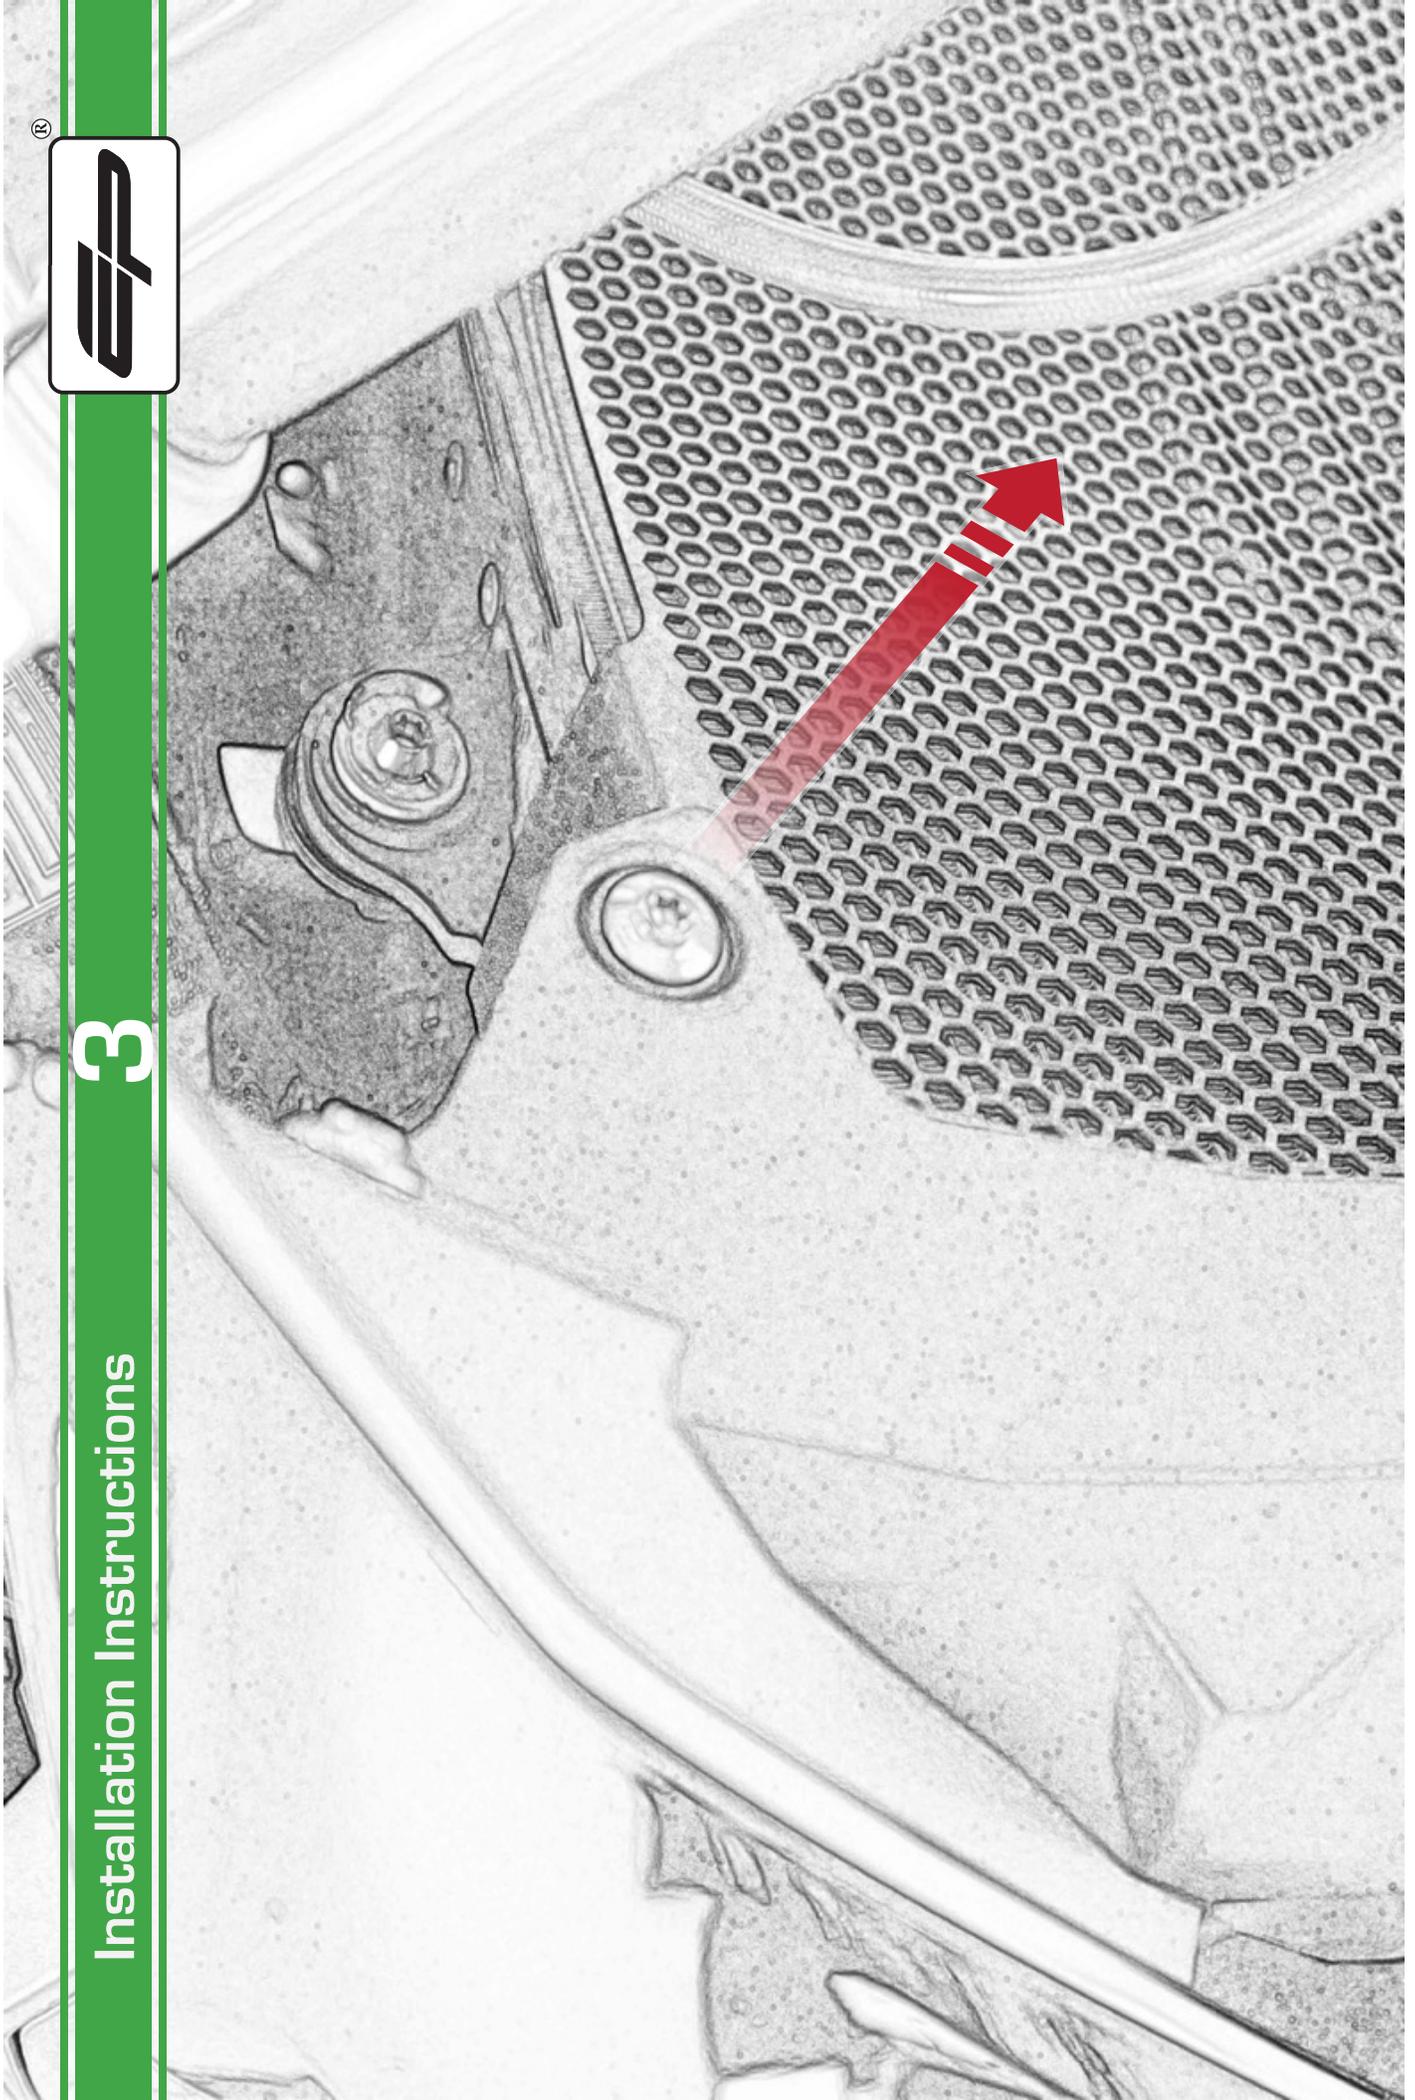

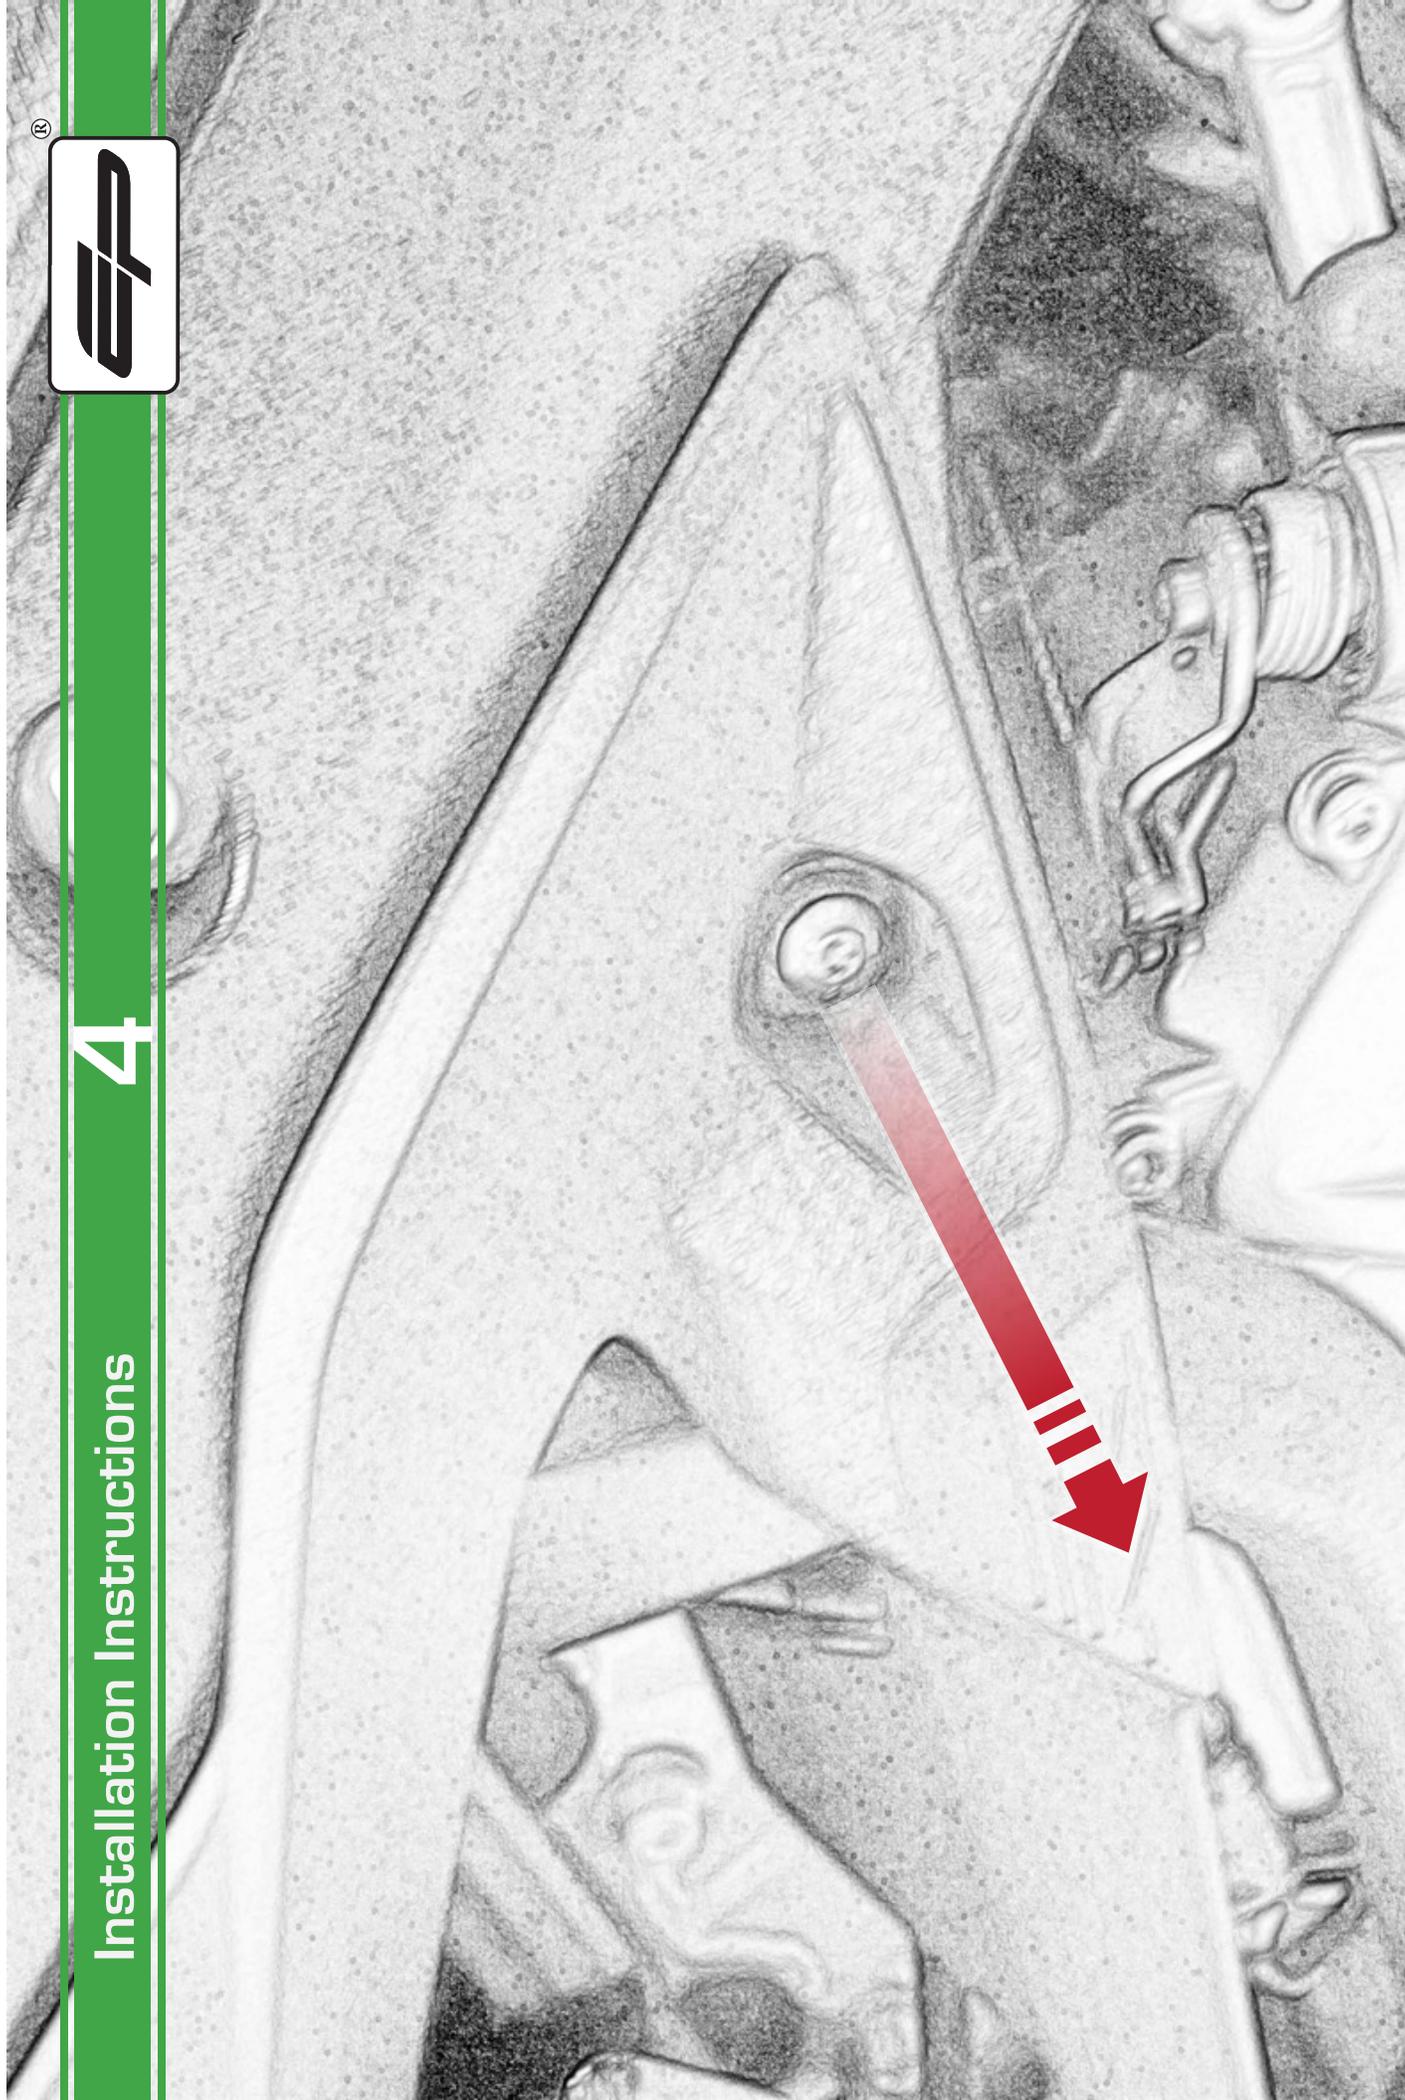

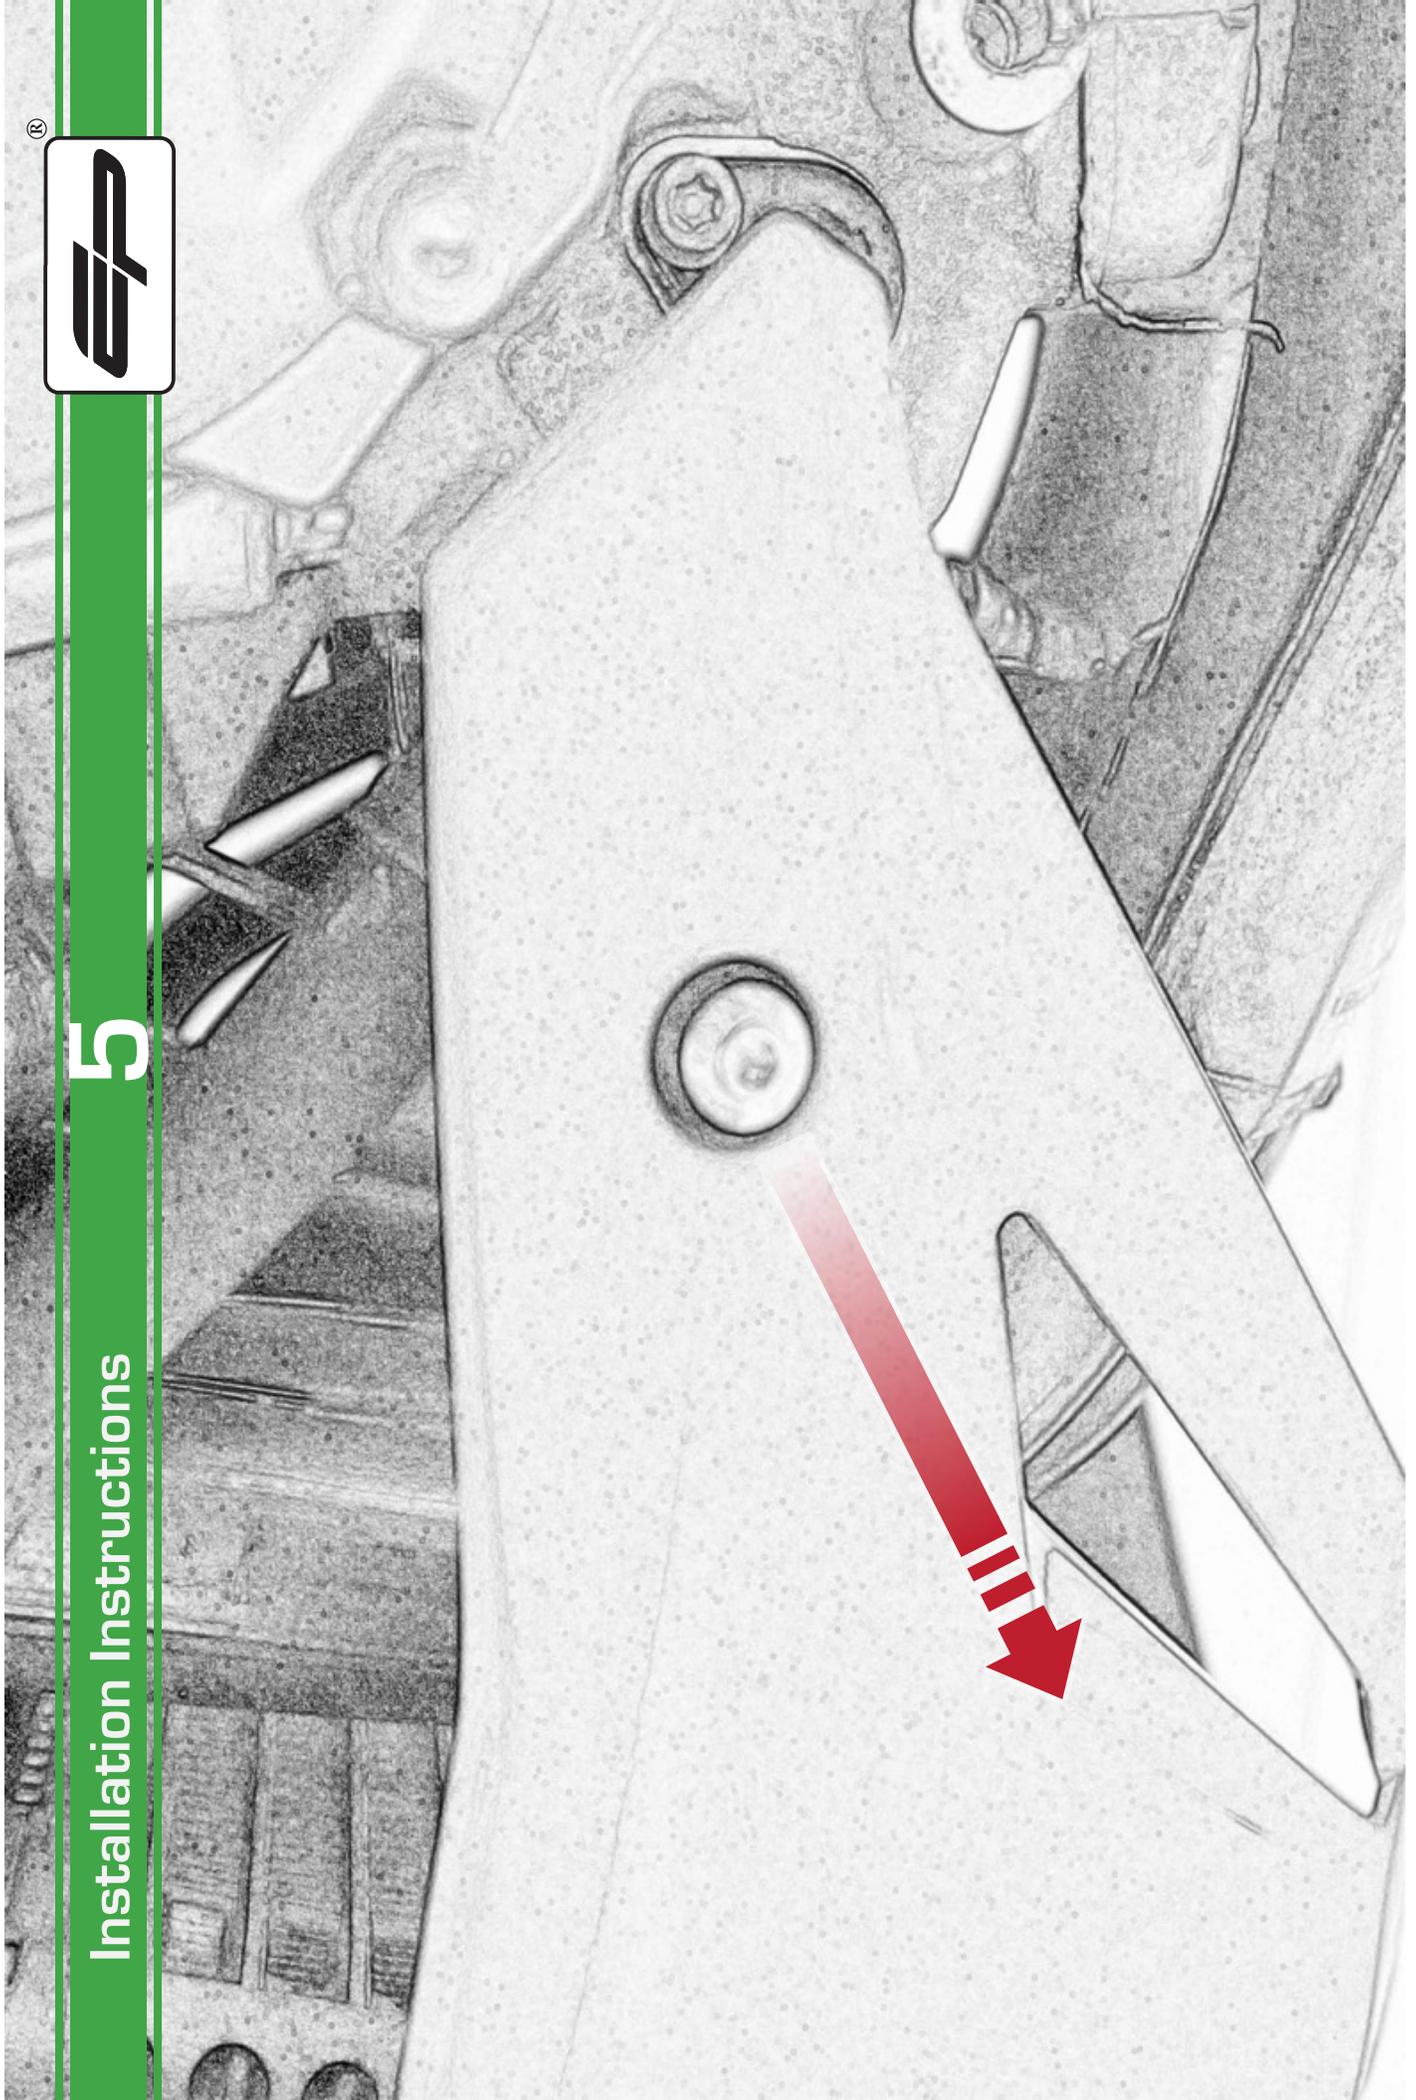

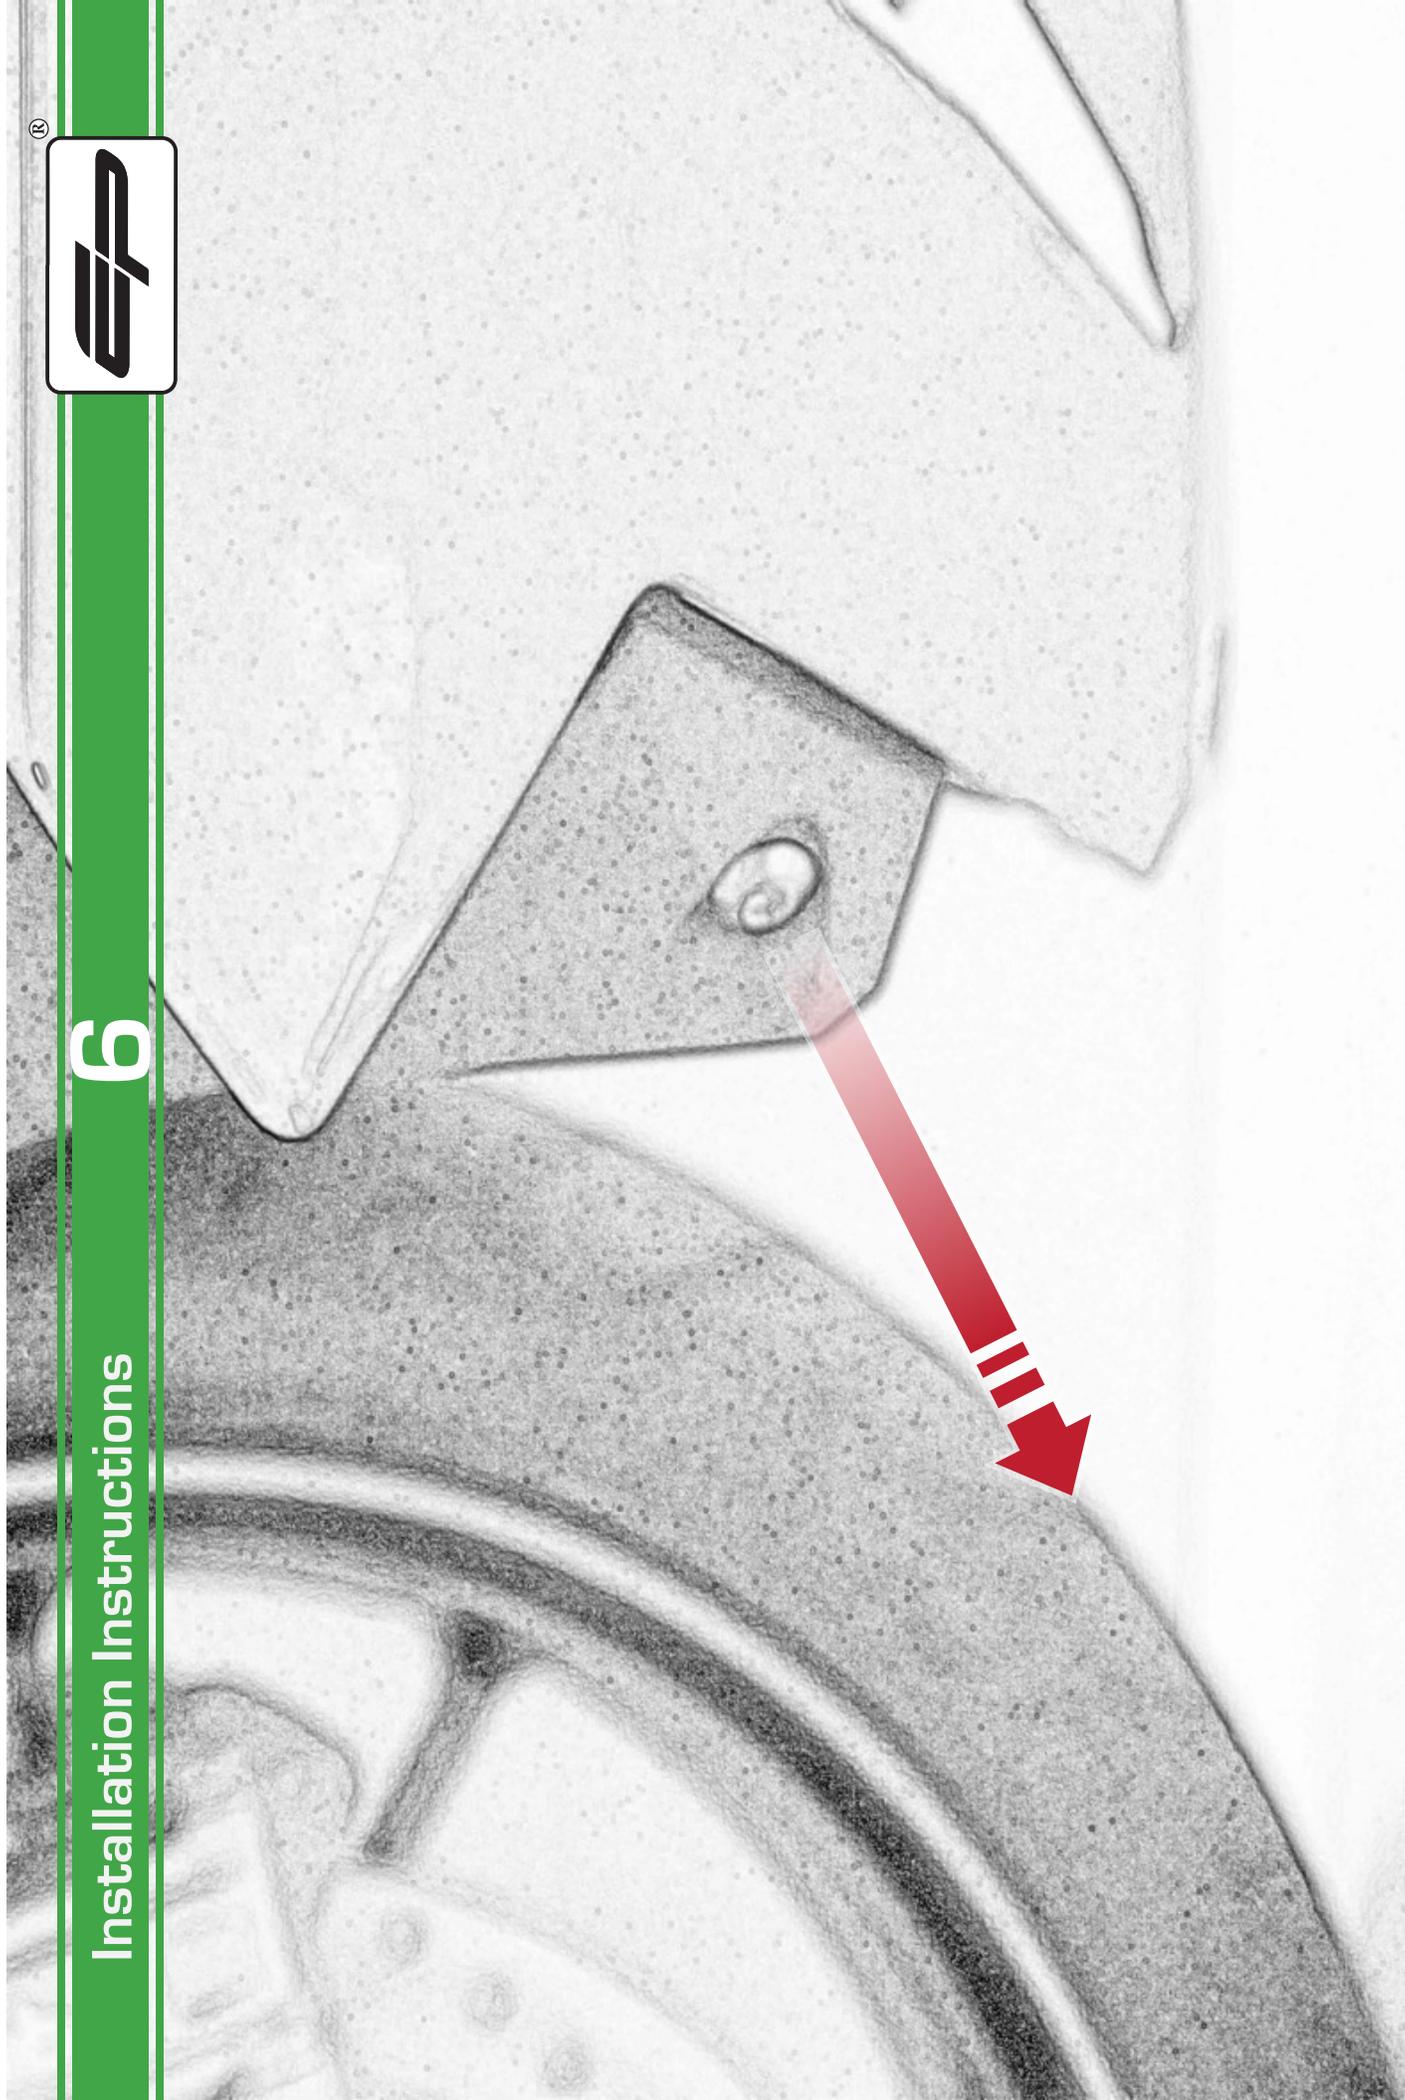


®




7

Installation Instructions

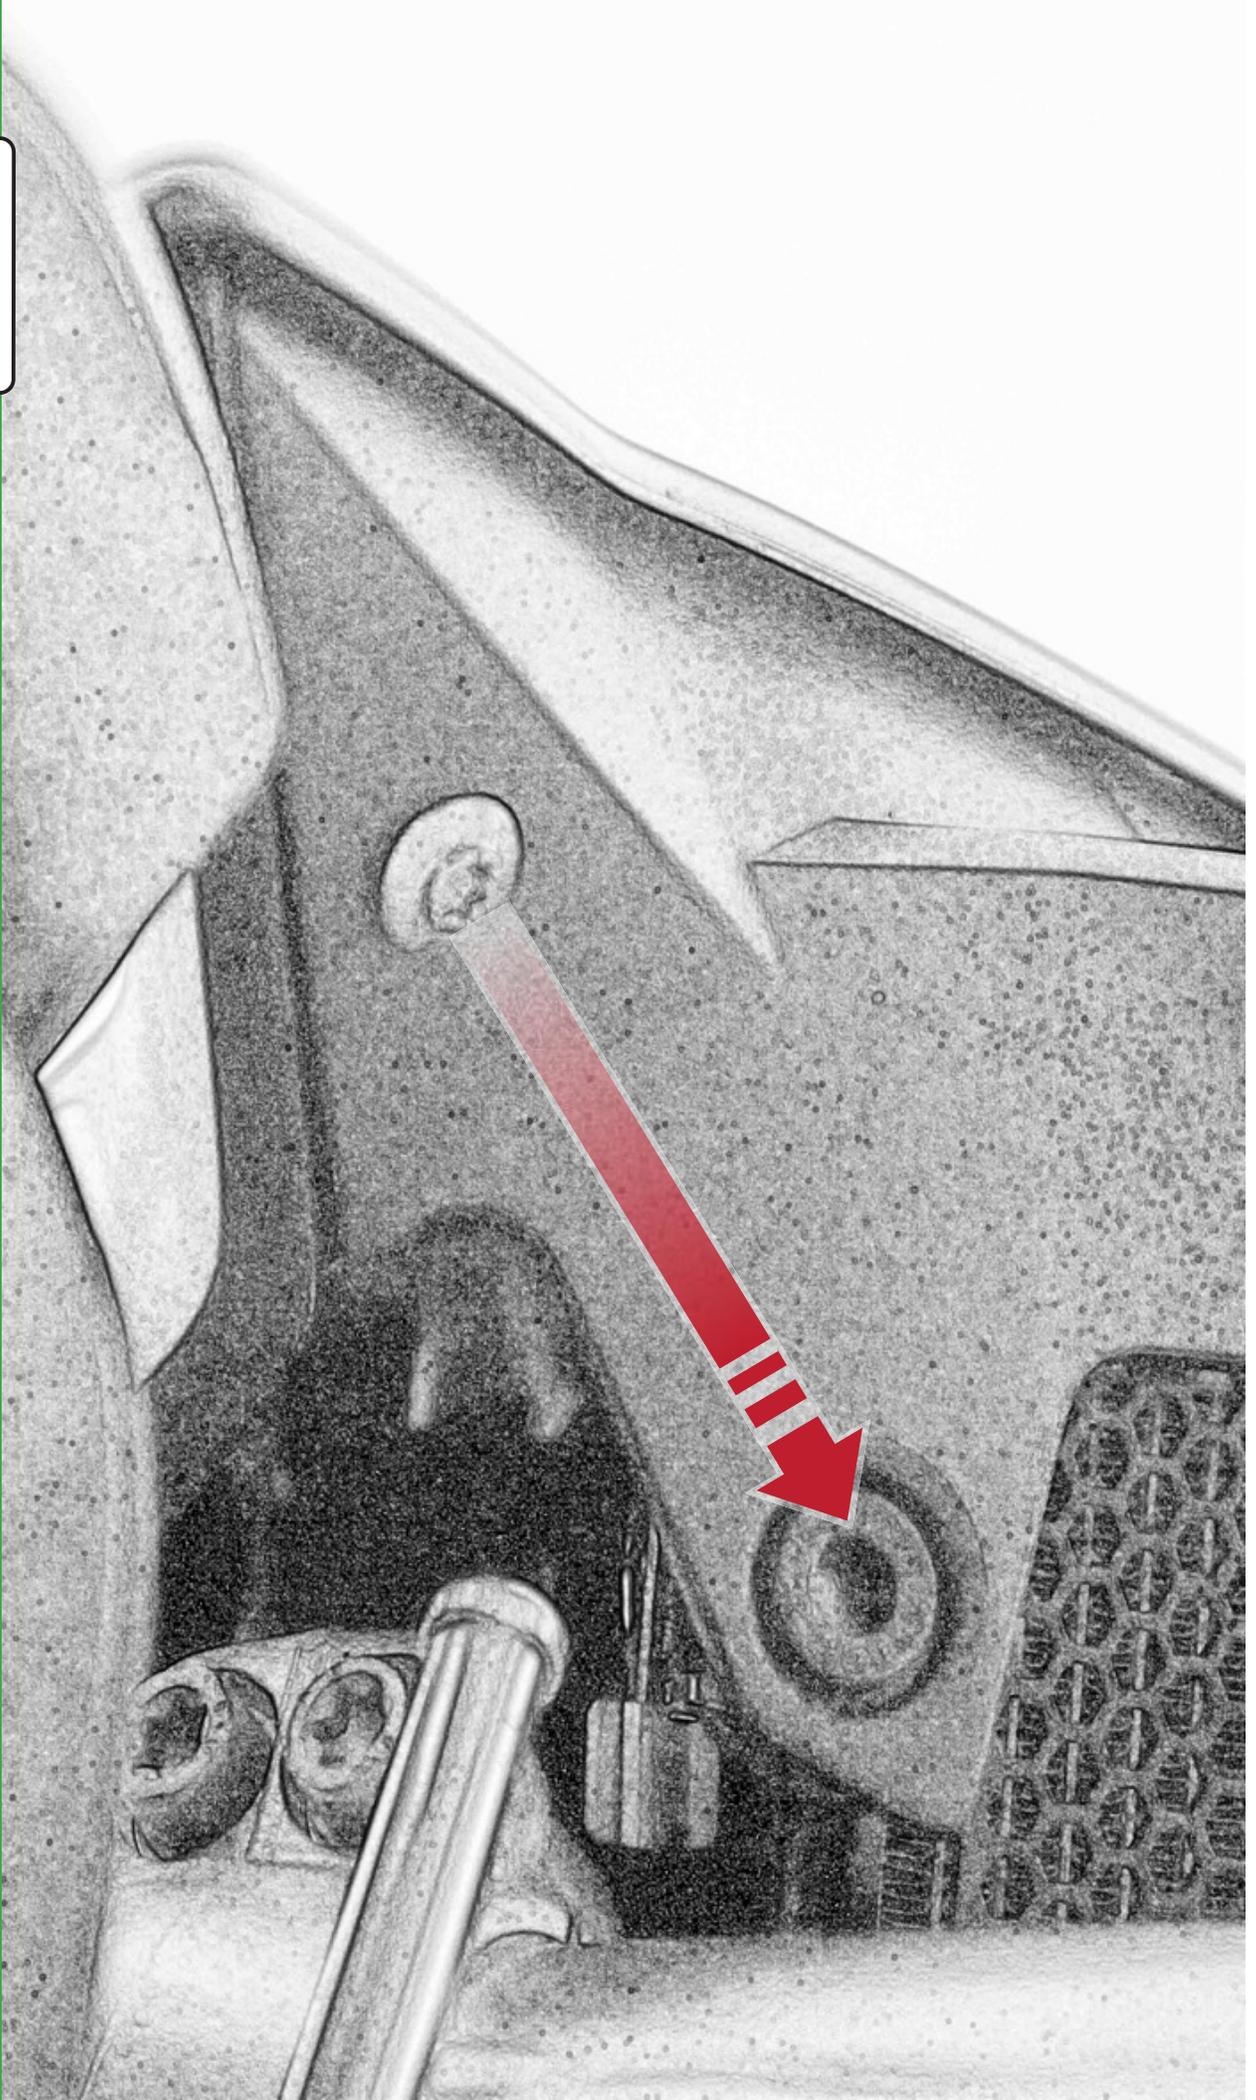



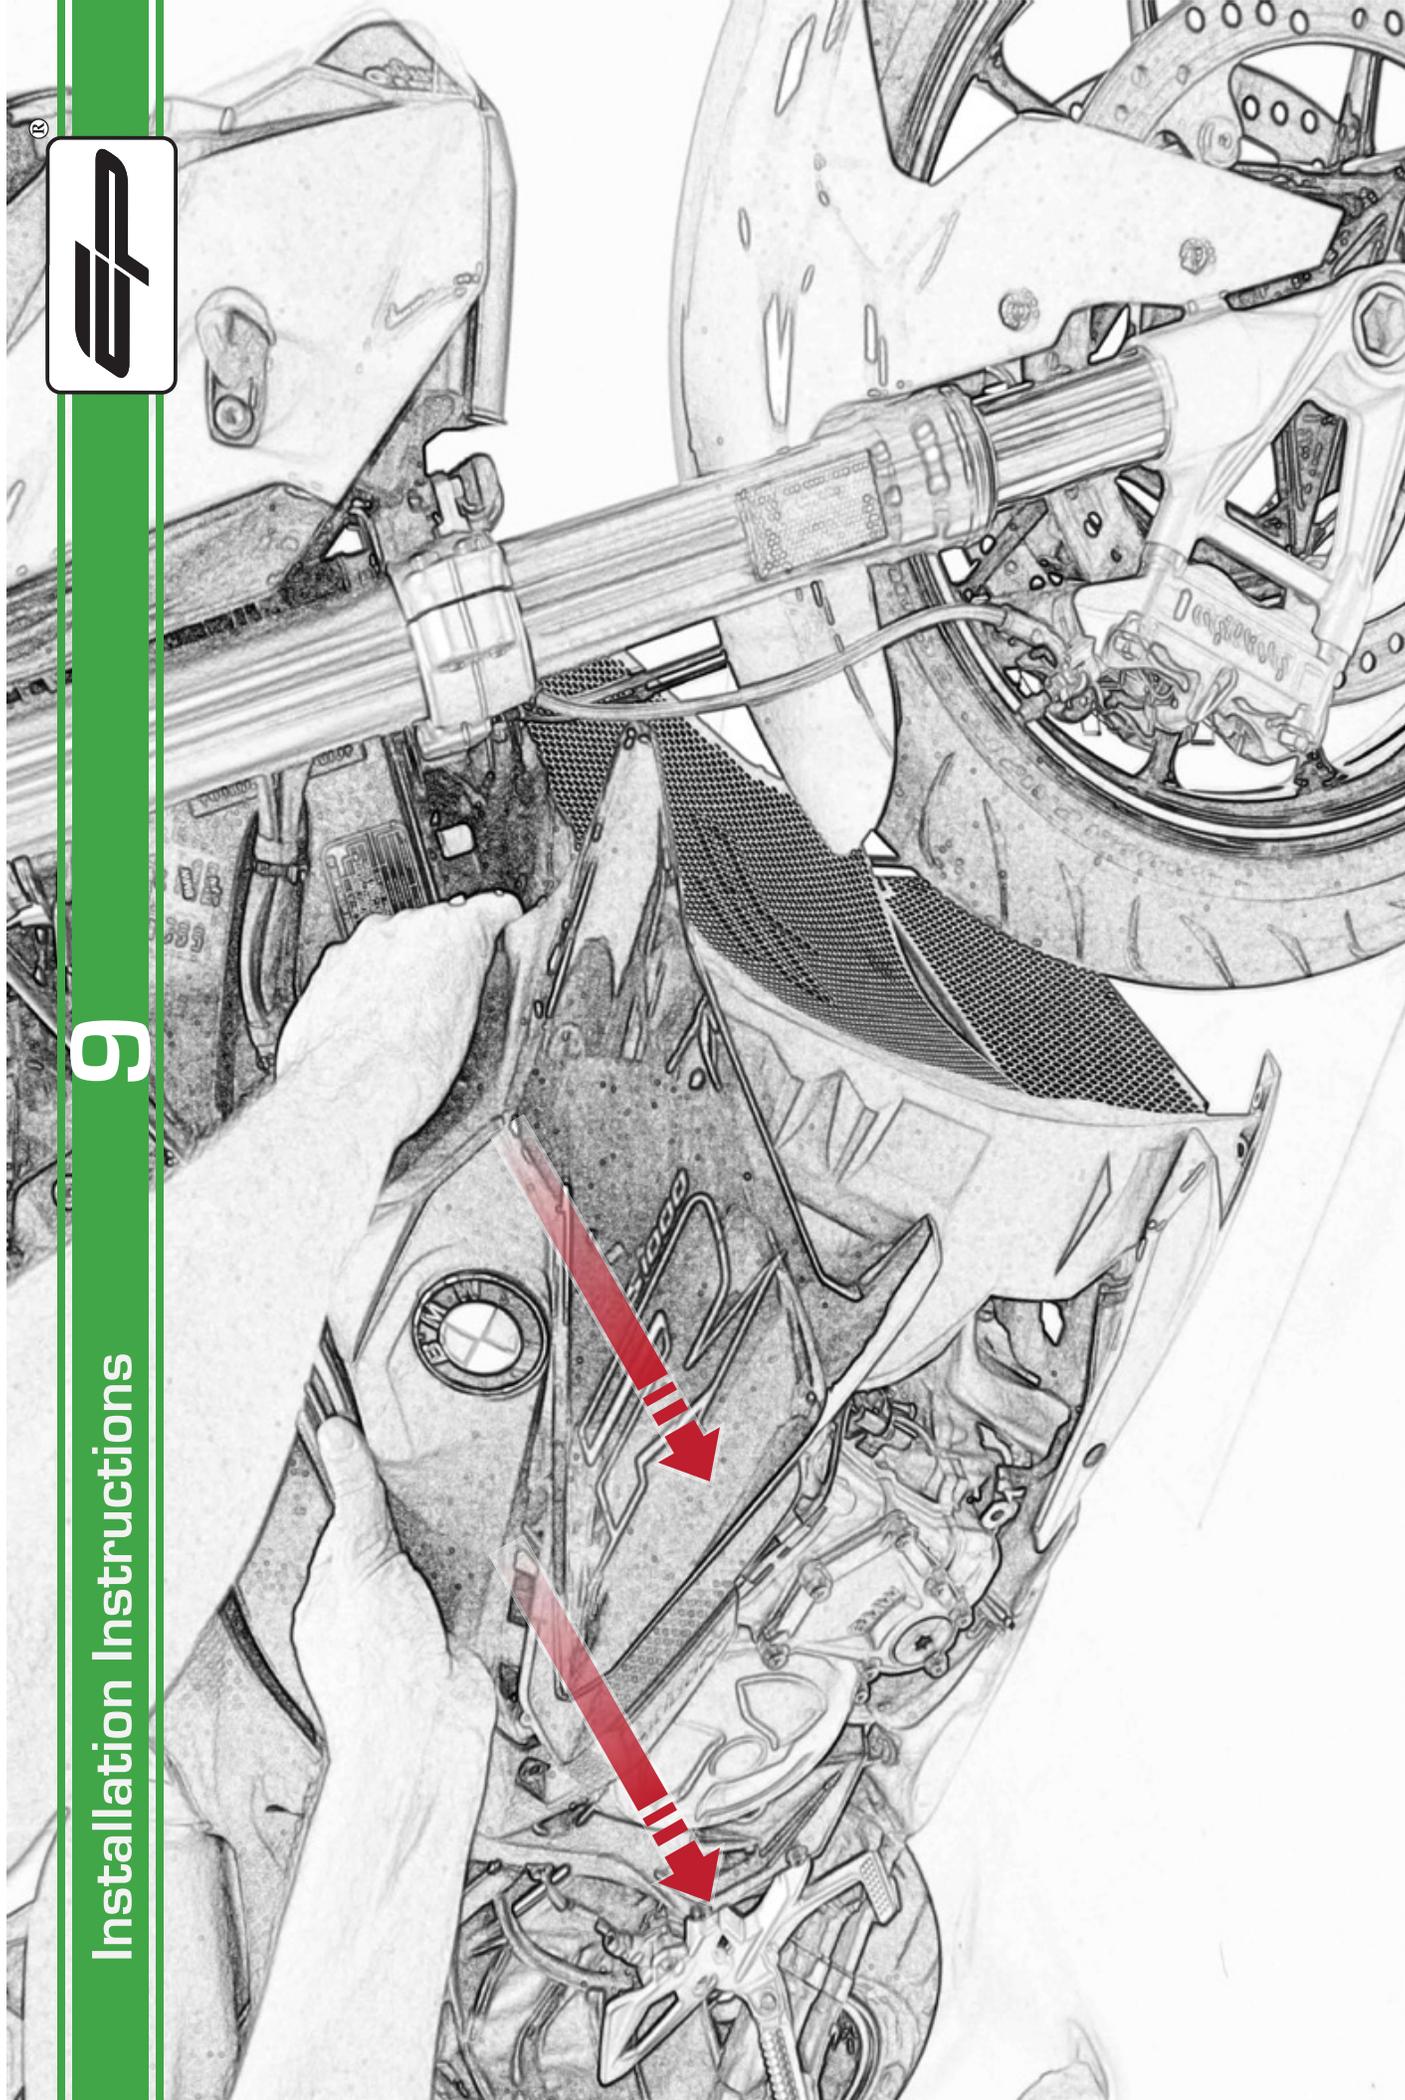





Installation Instructions


11



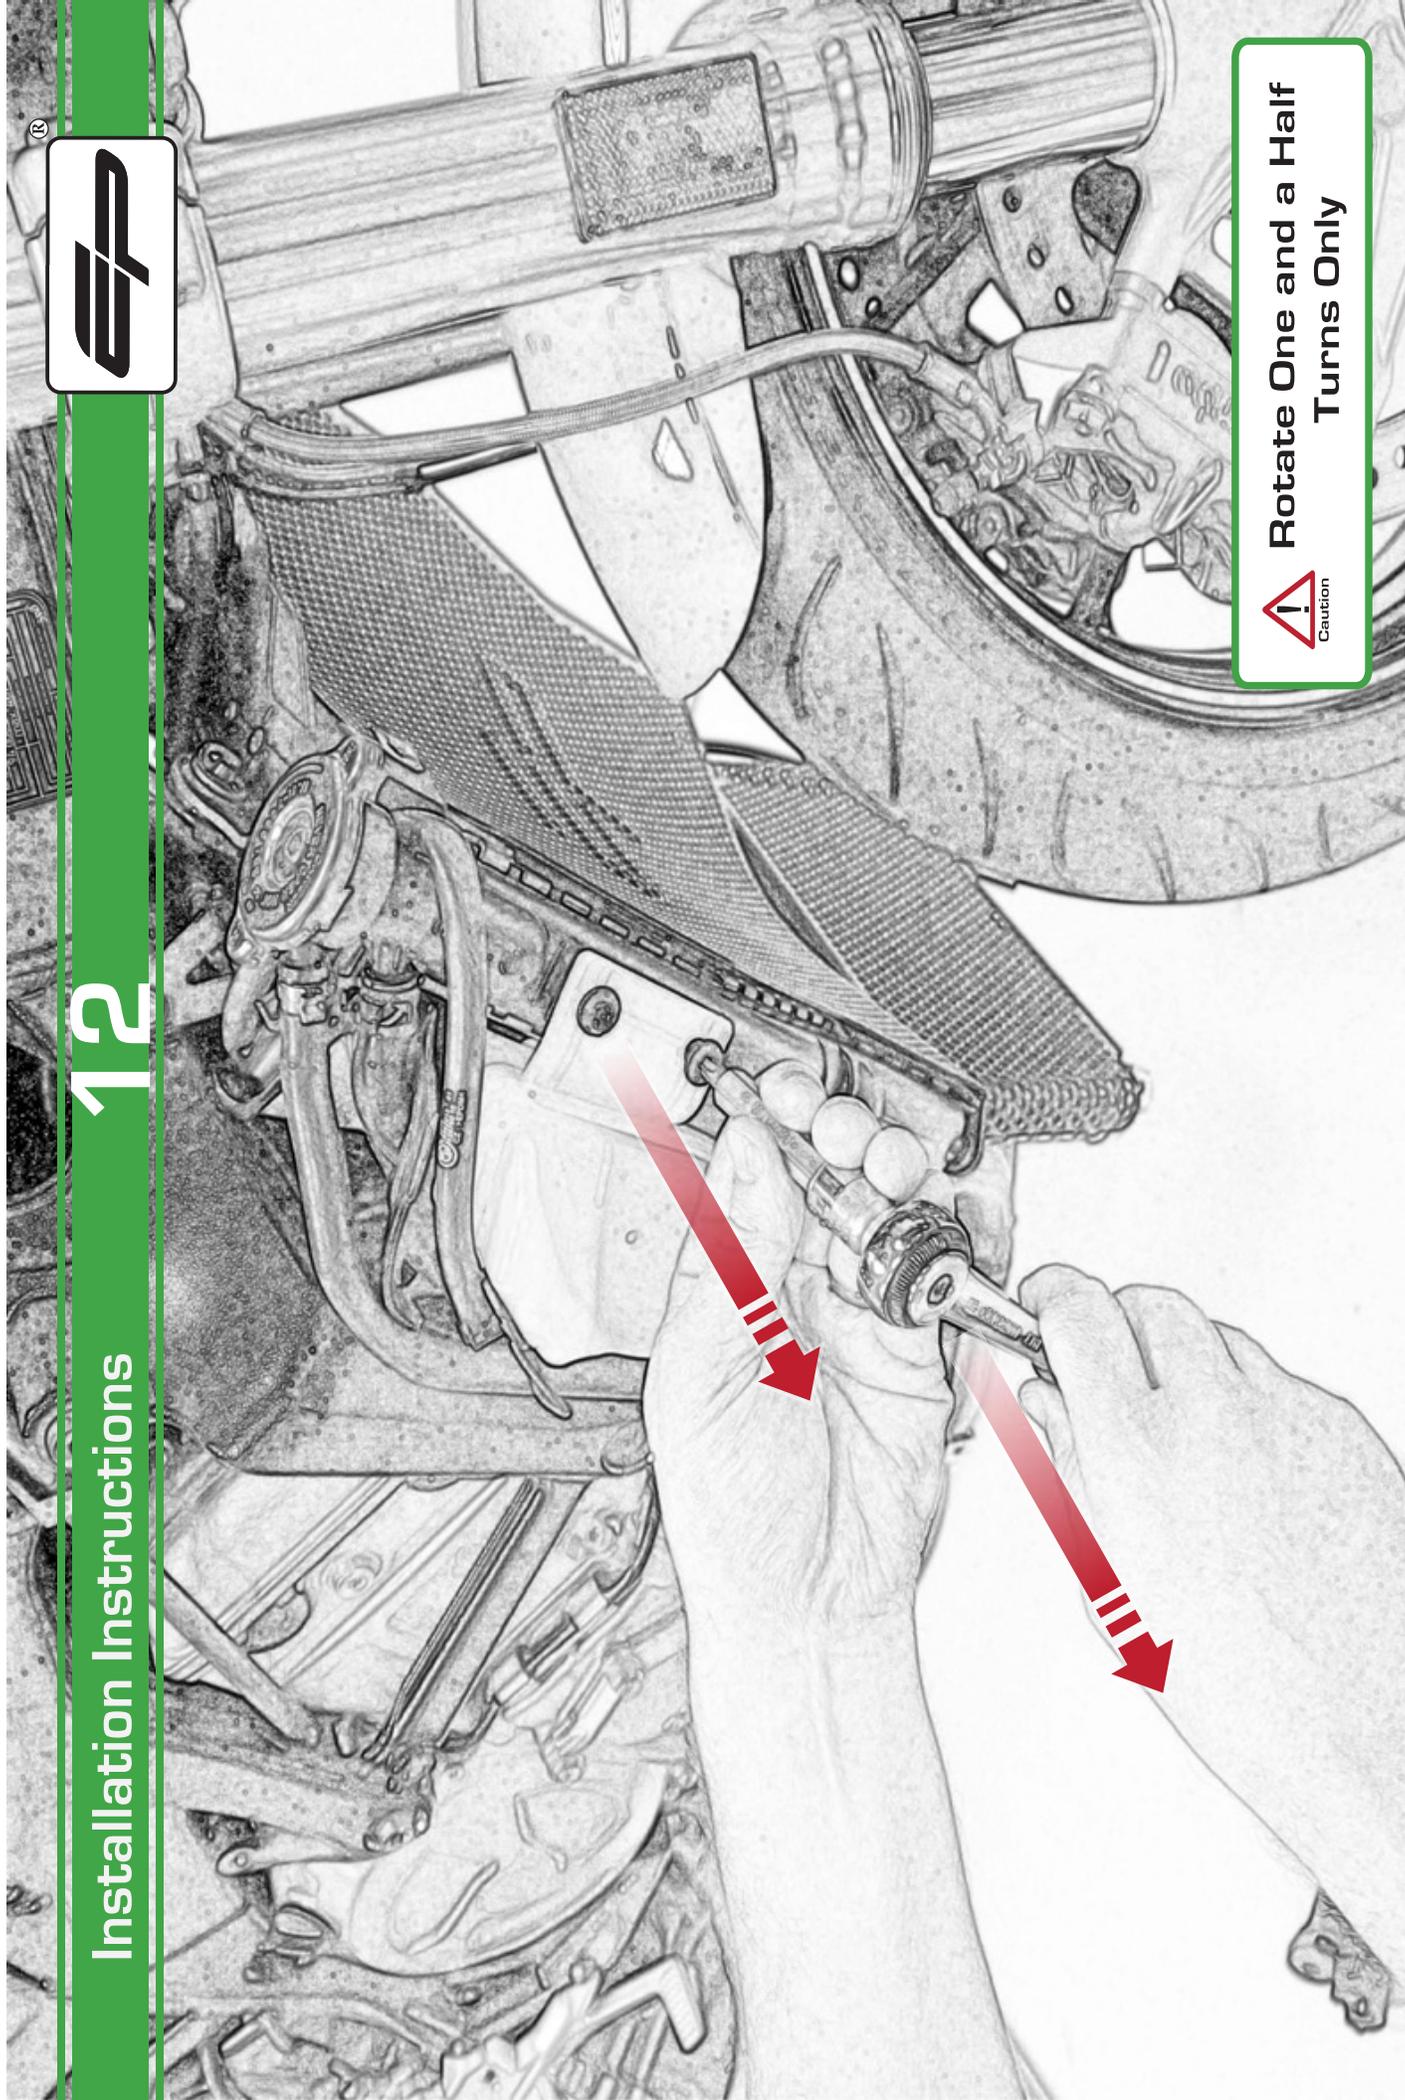

Rotate One and a Half
Turns Only

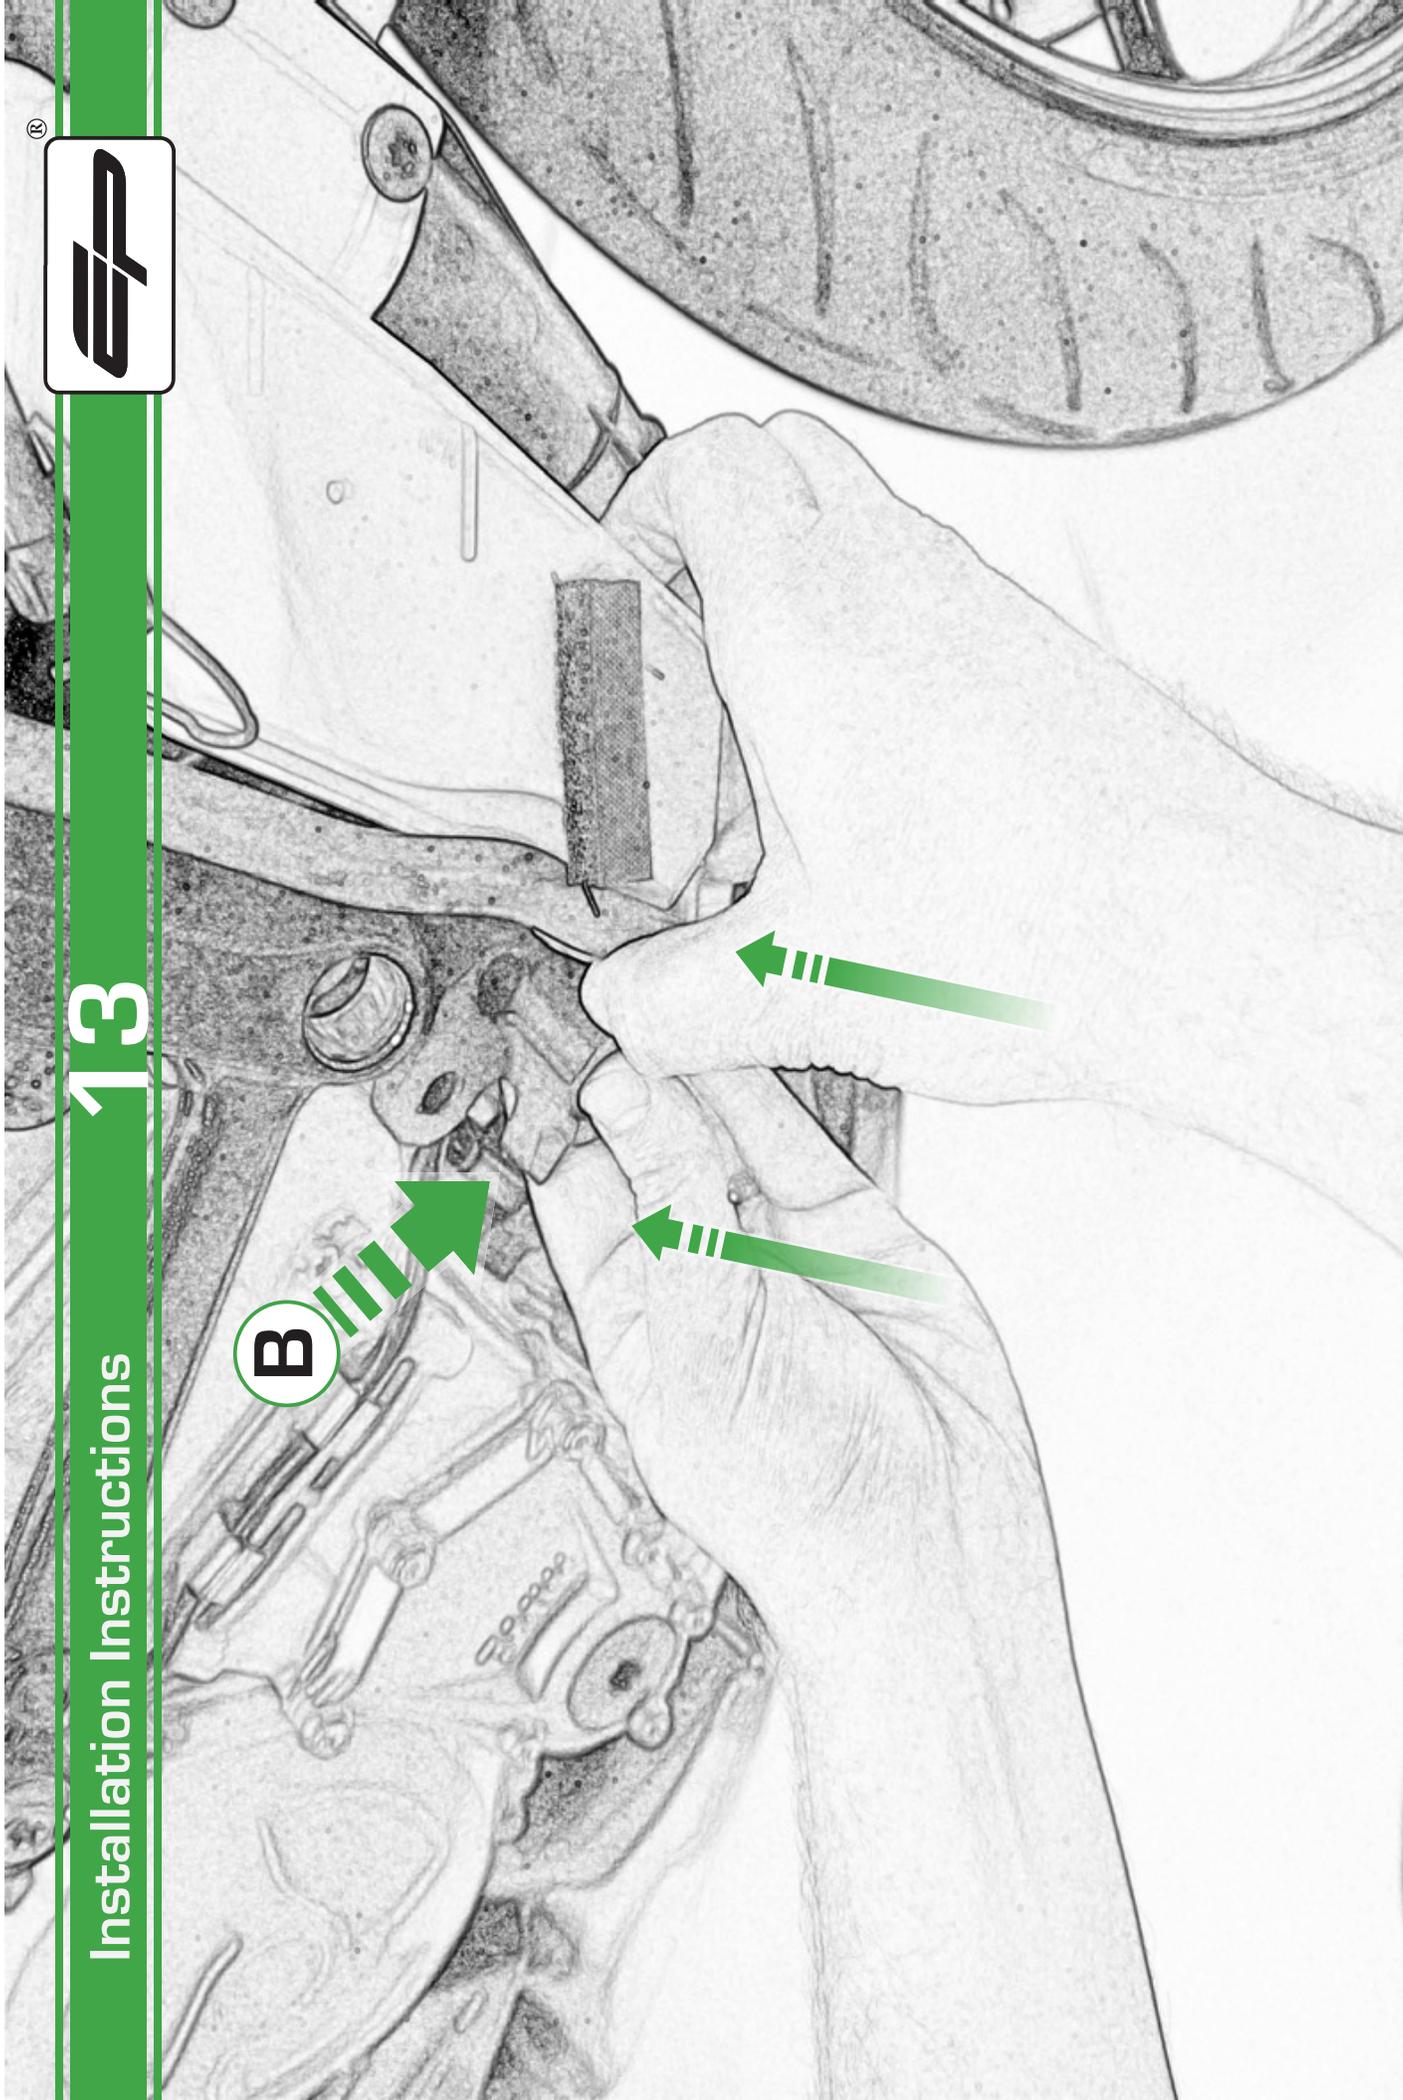


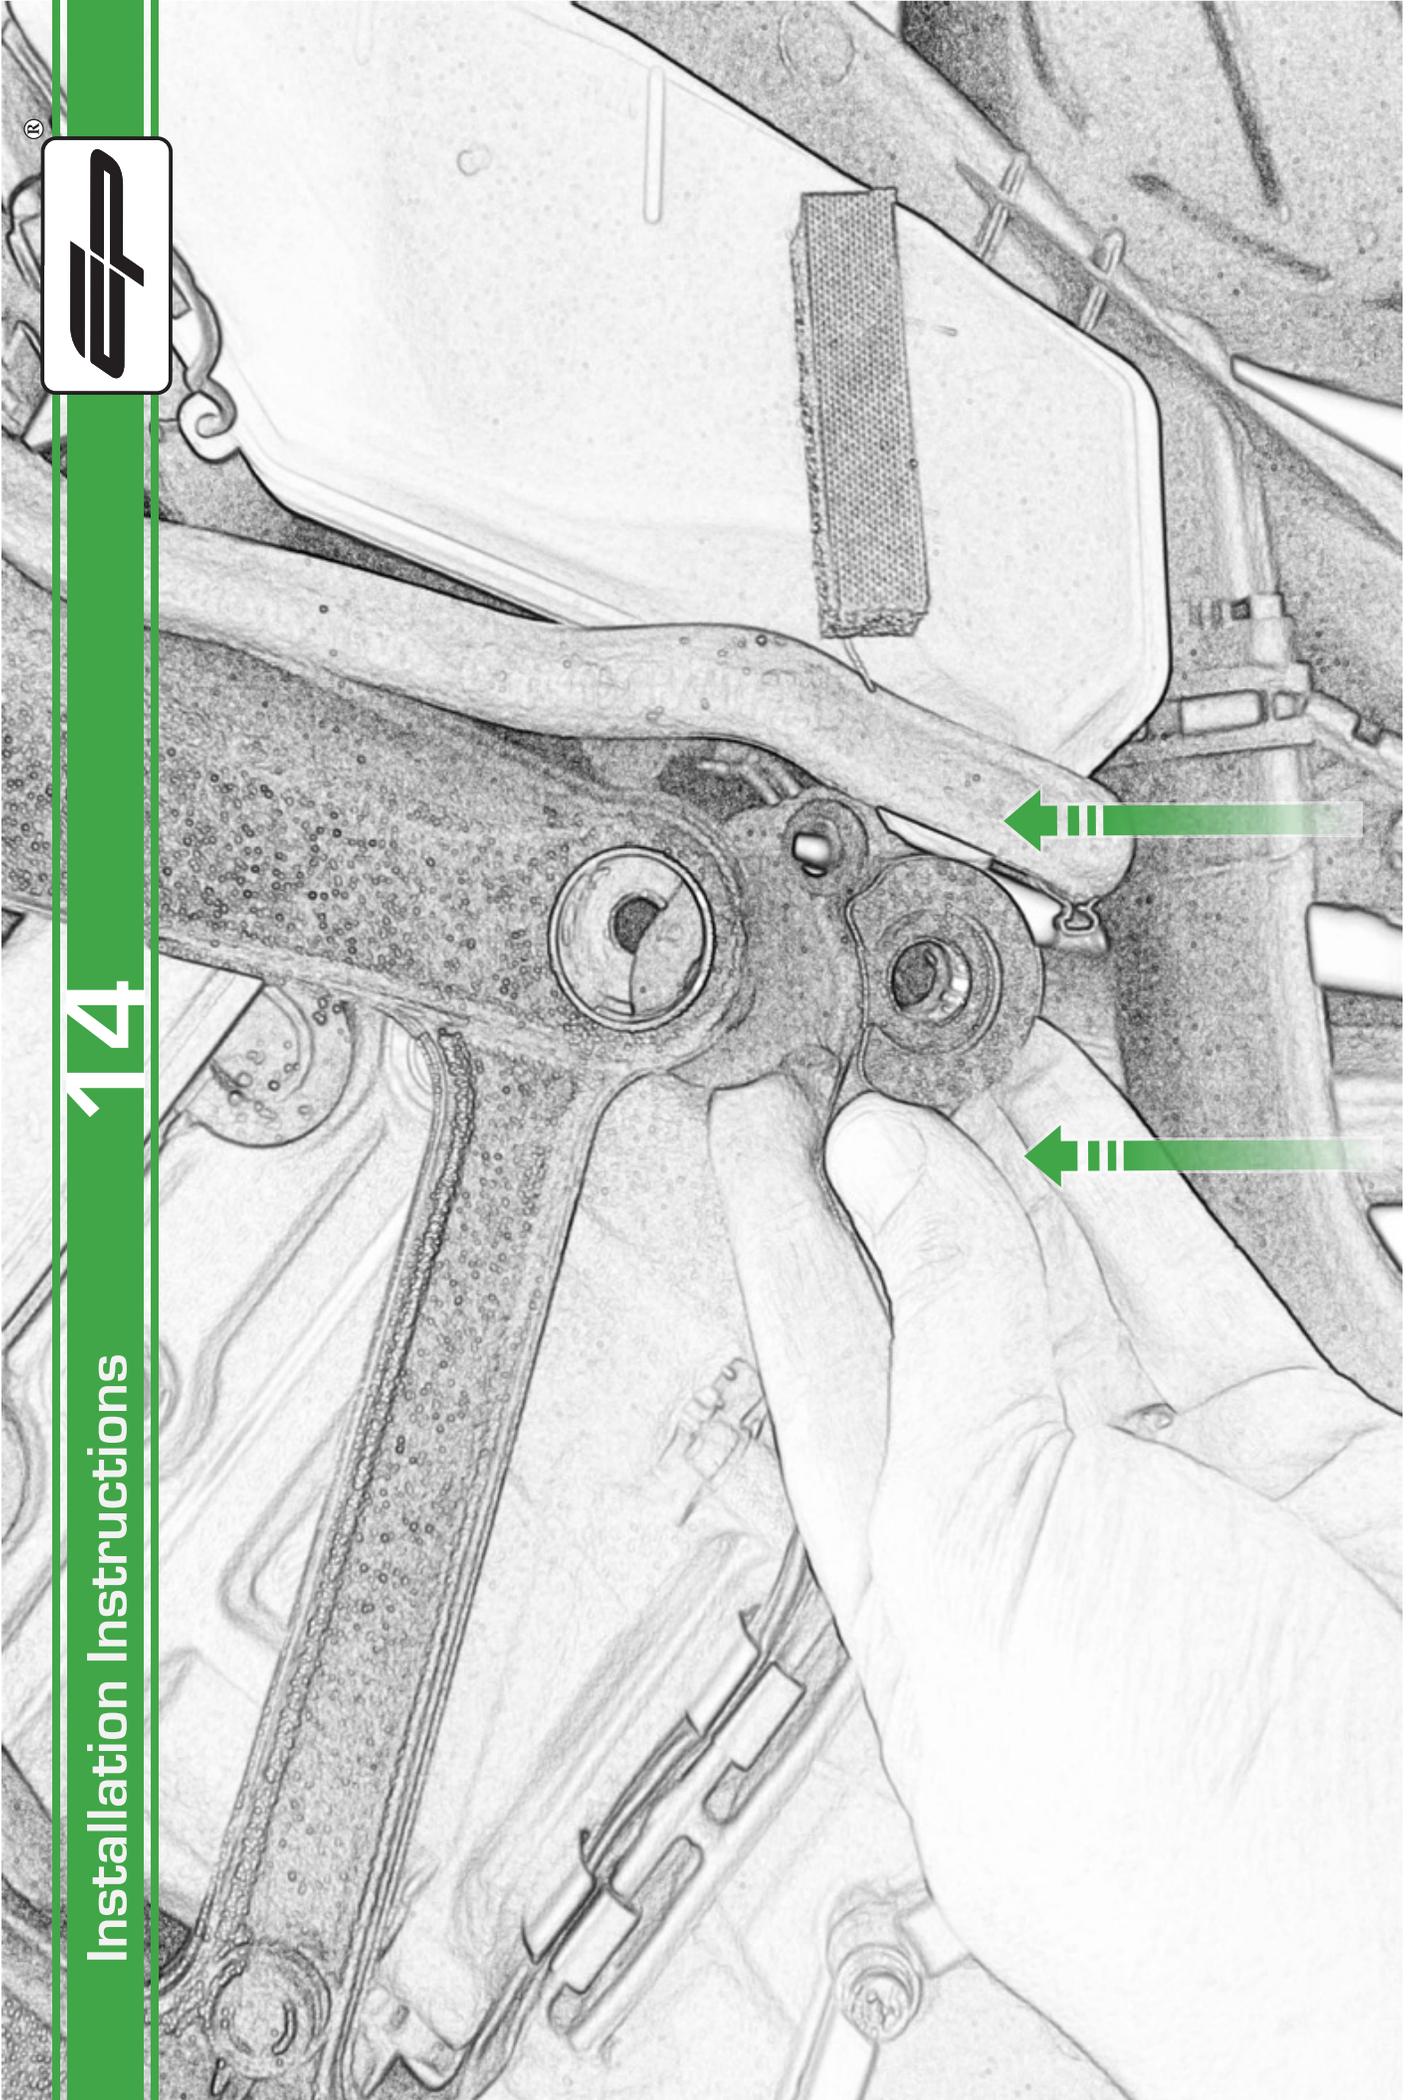





15

Installation Instructions

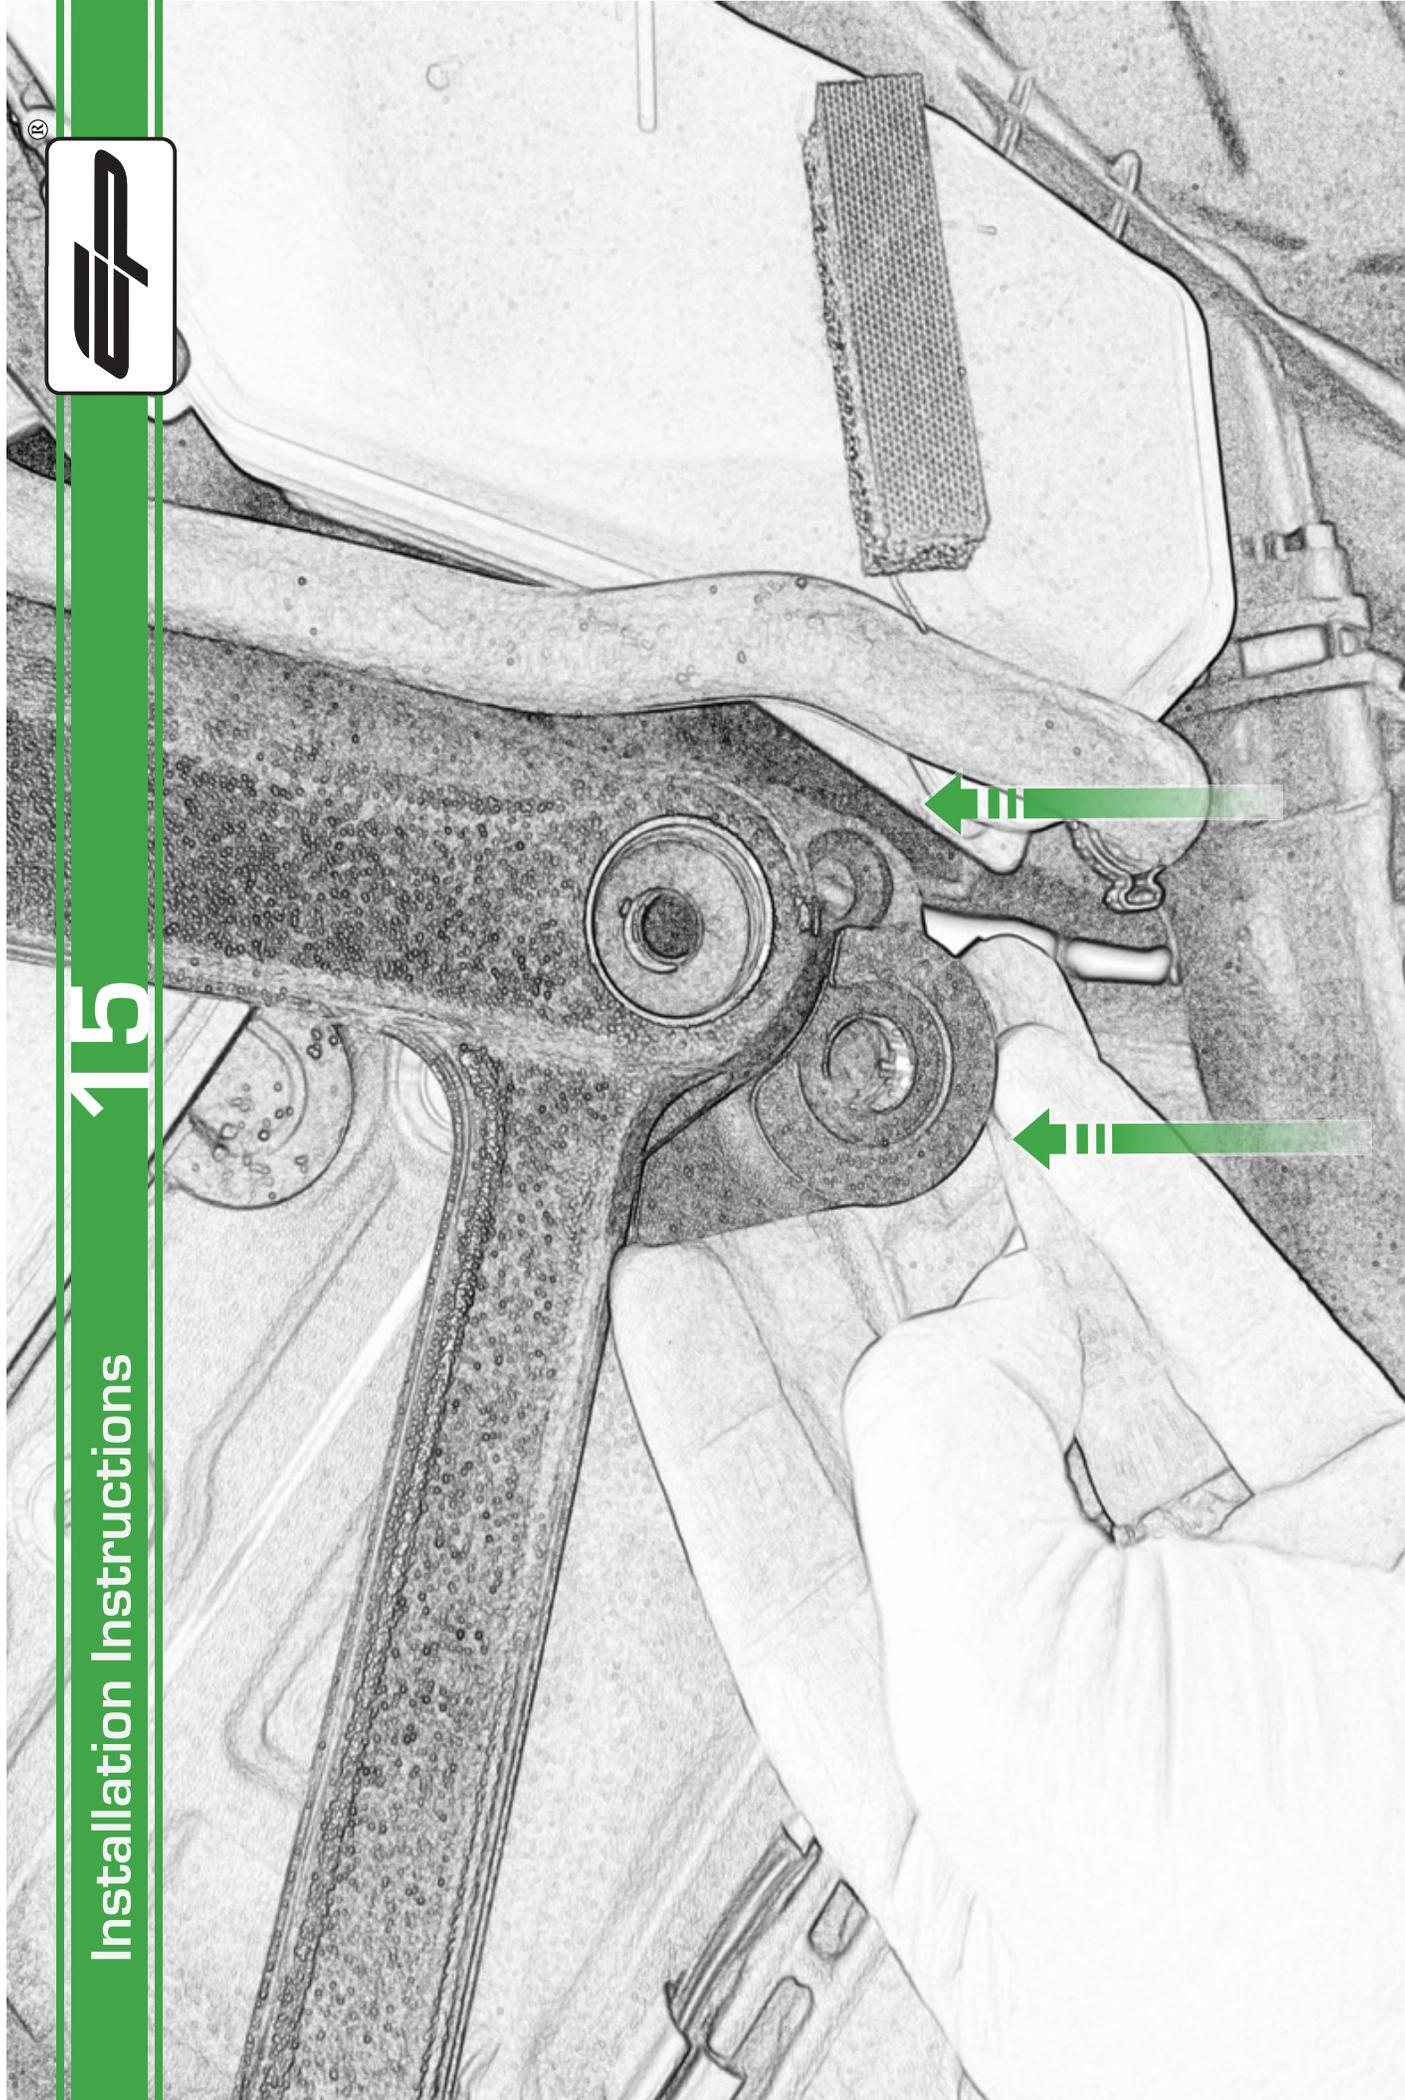

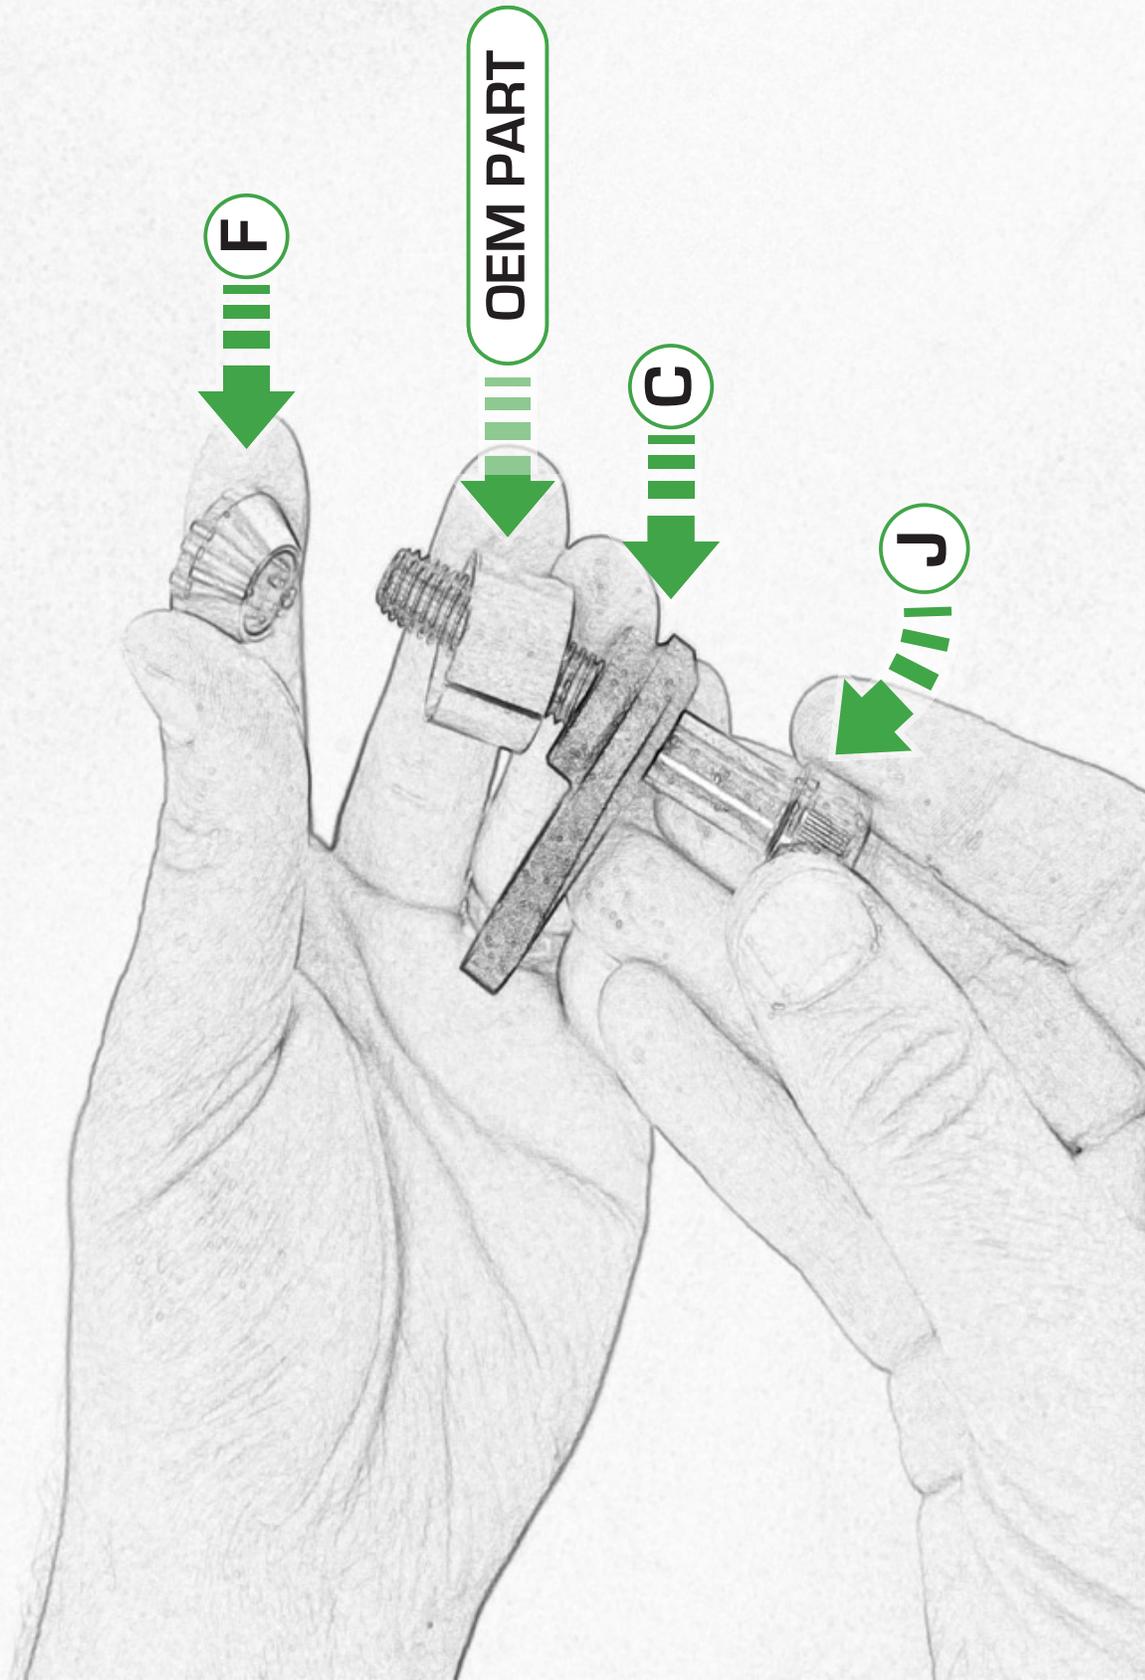




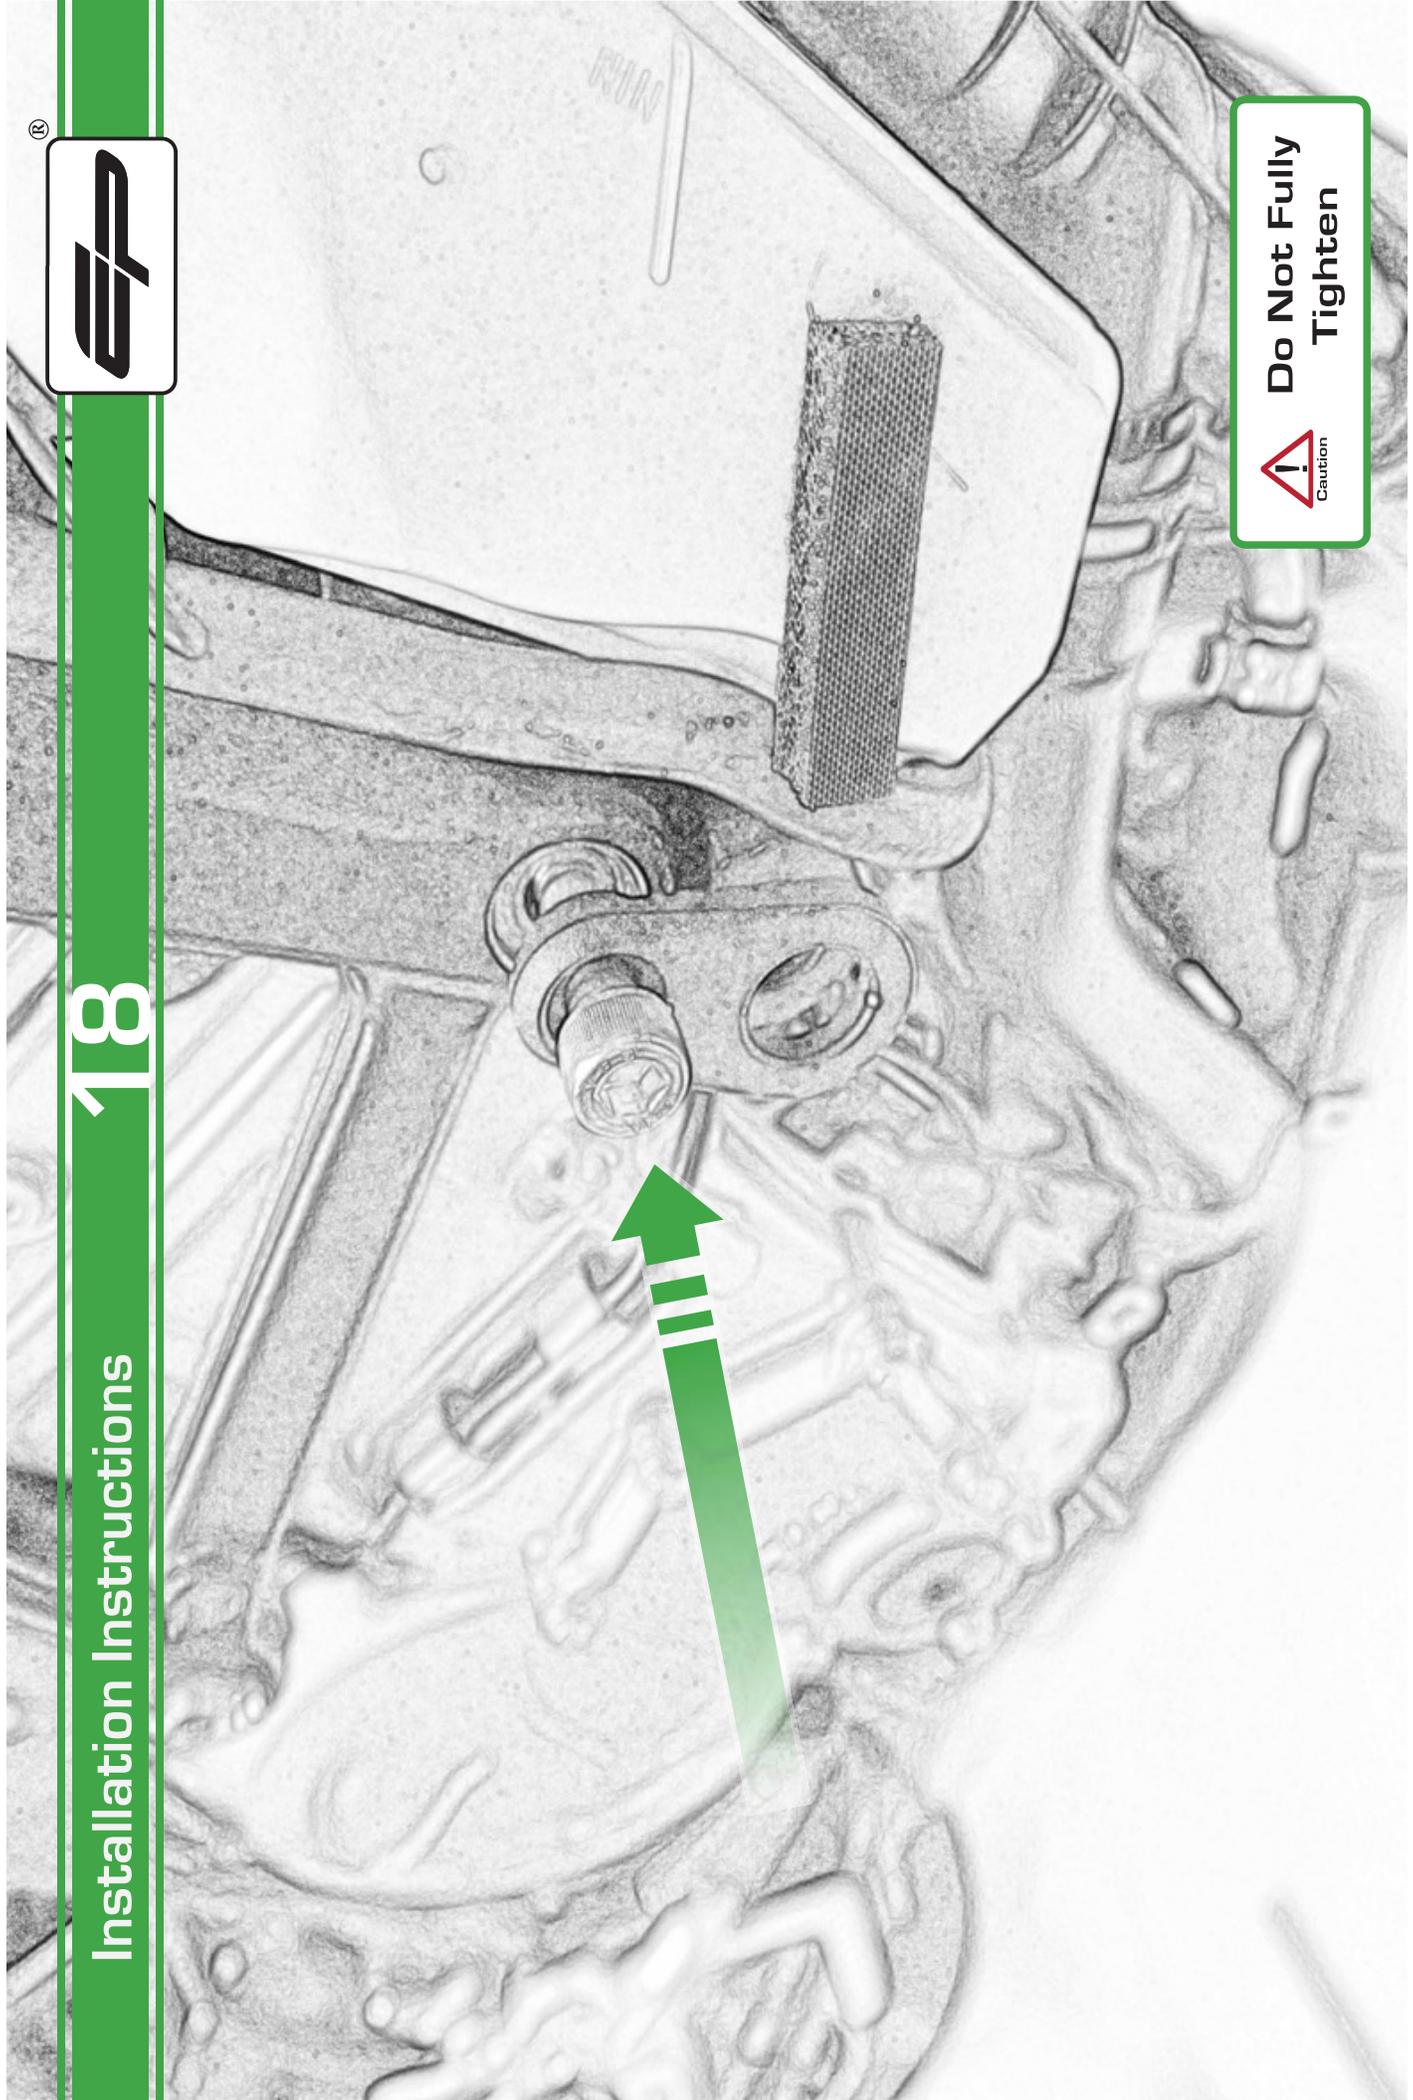

Do Not Fully Tighten




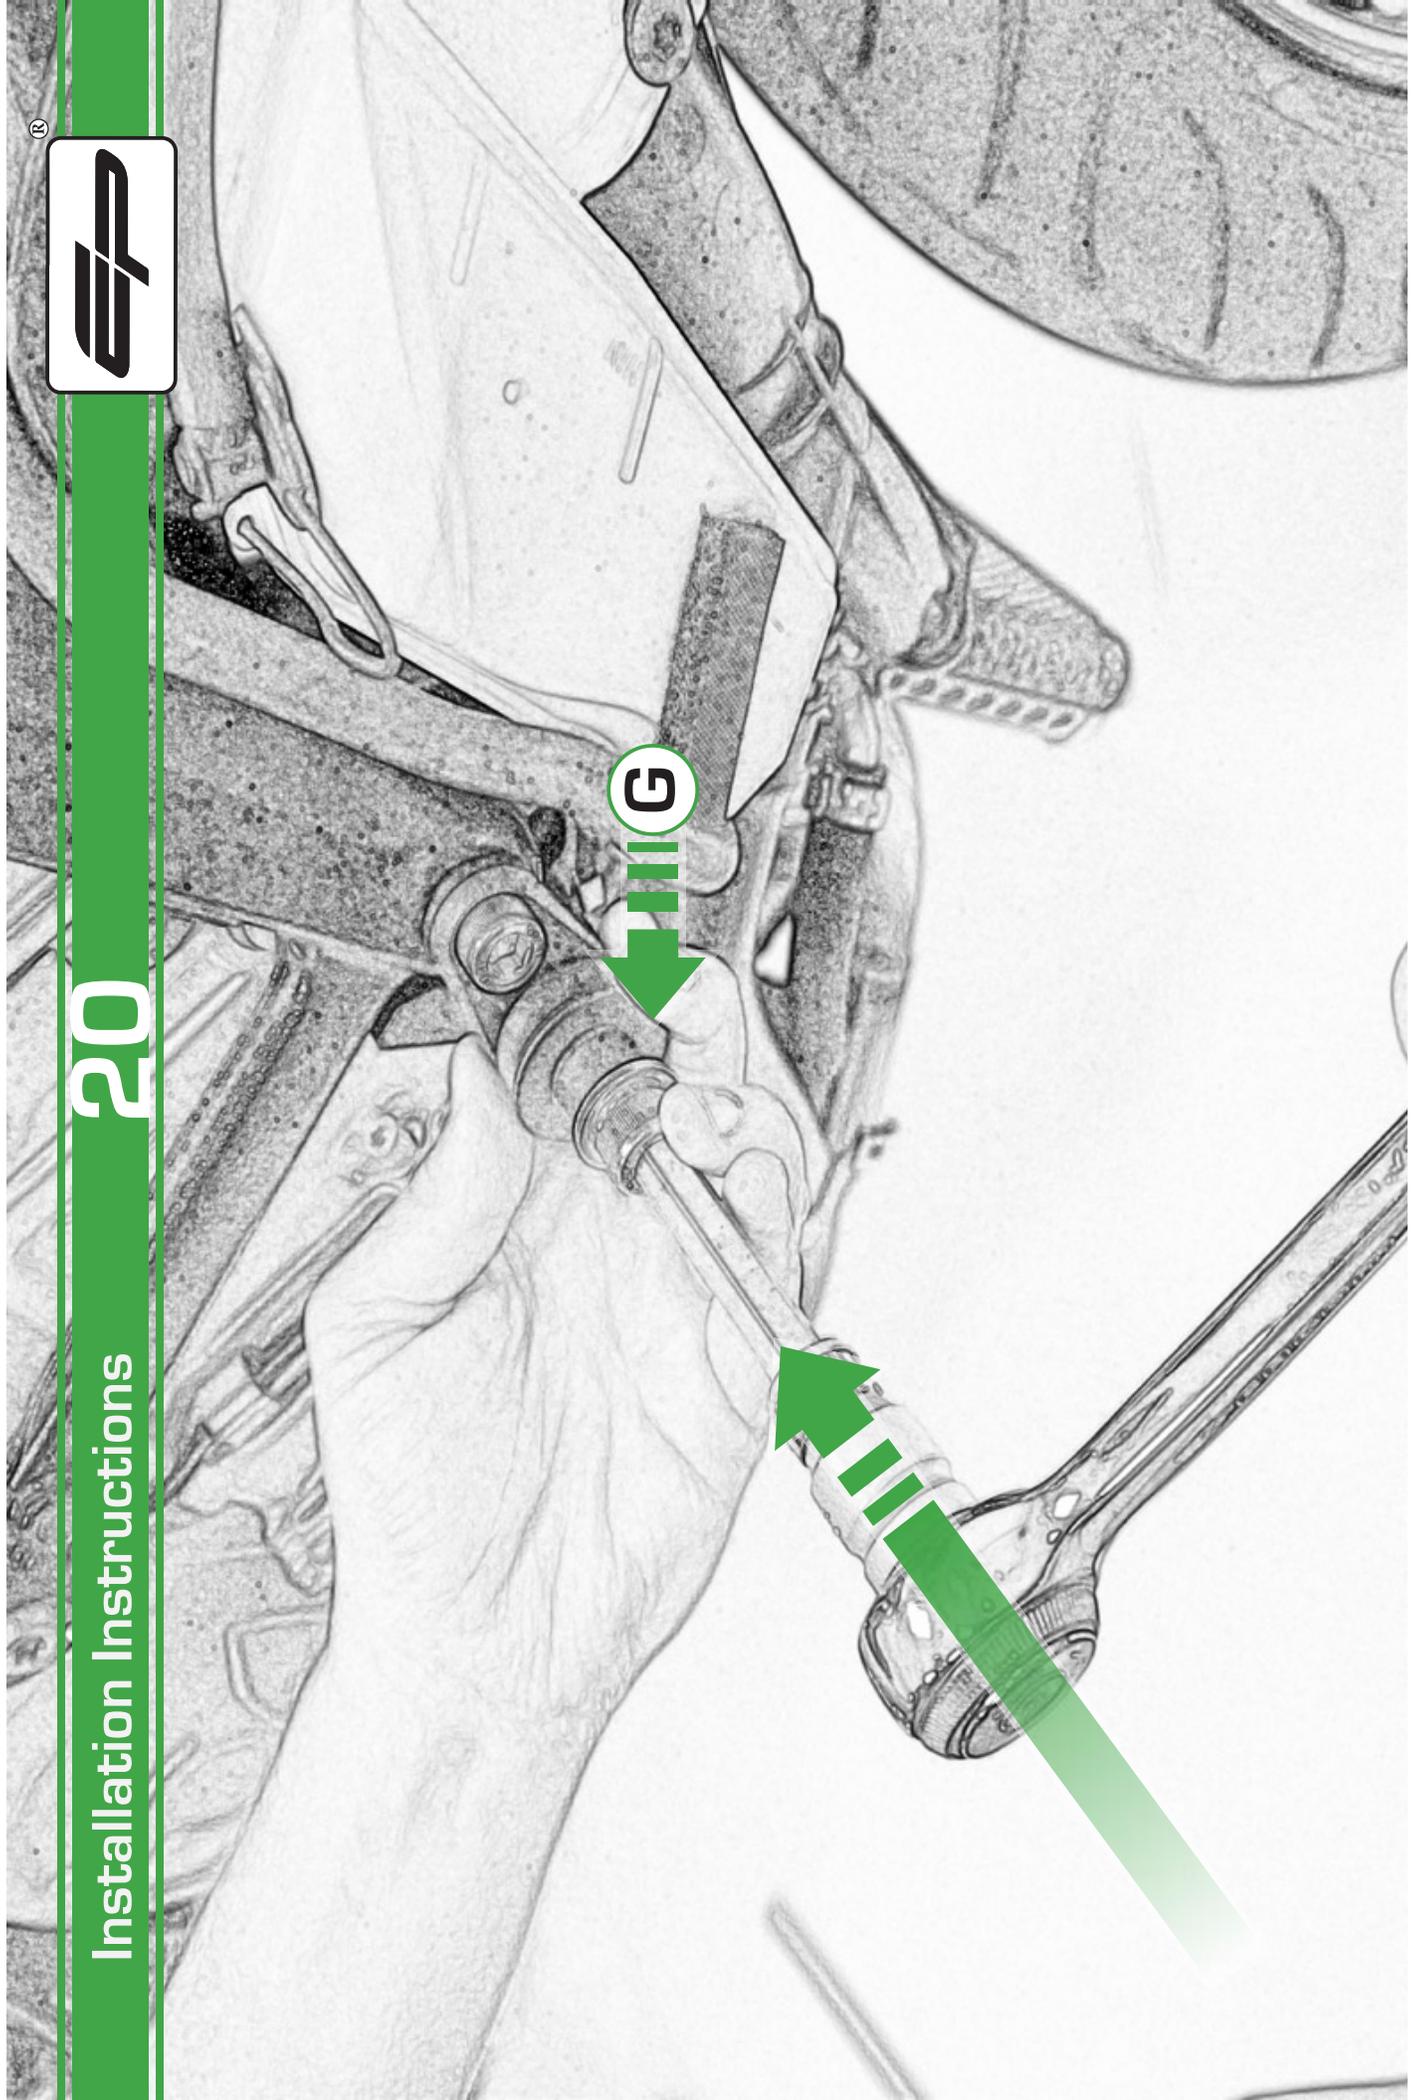



Fully
Tighten




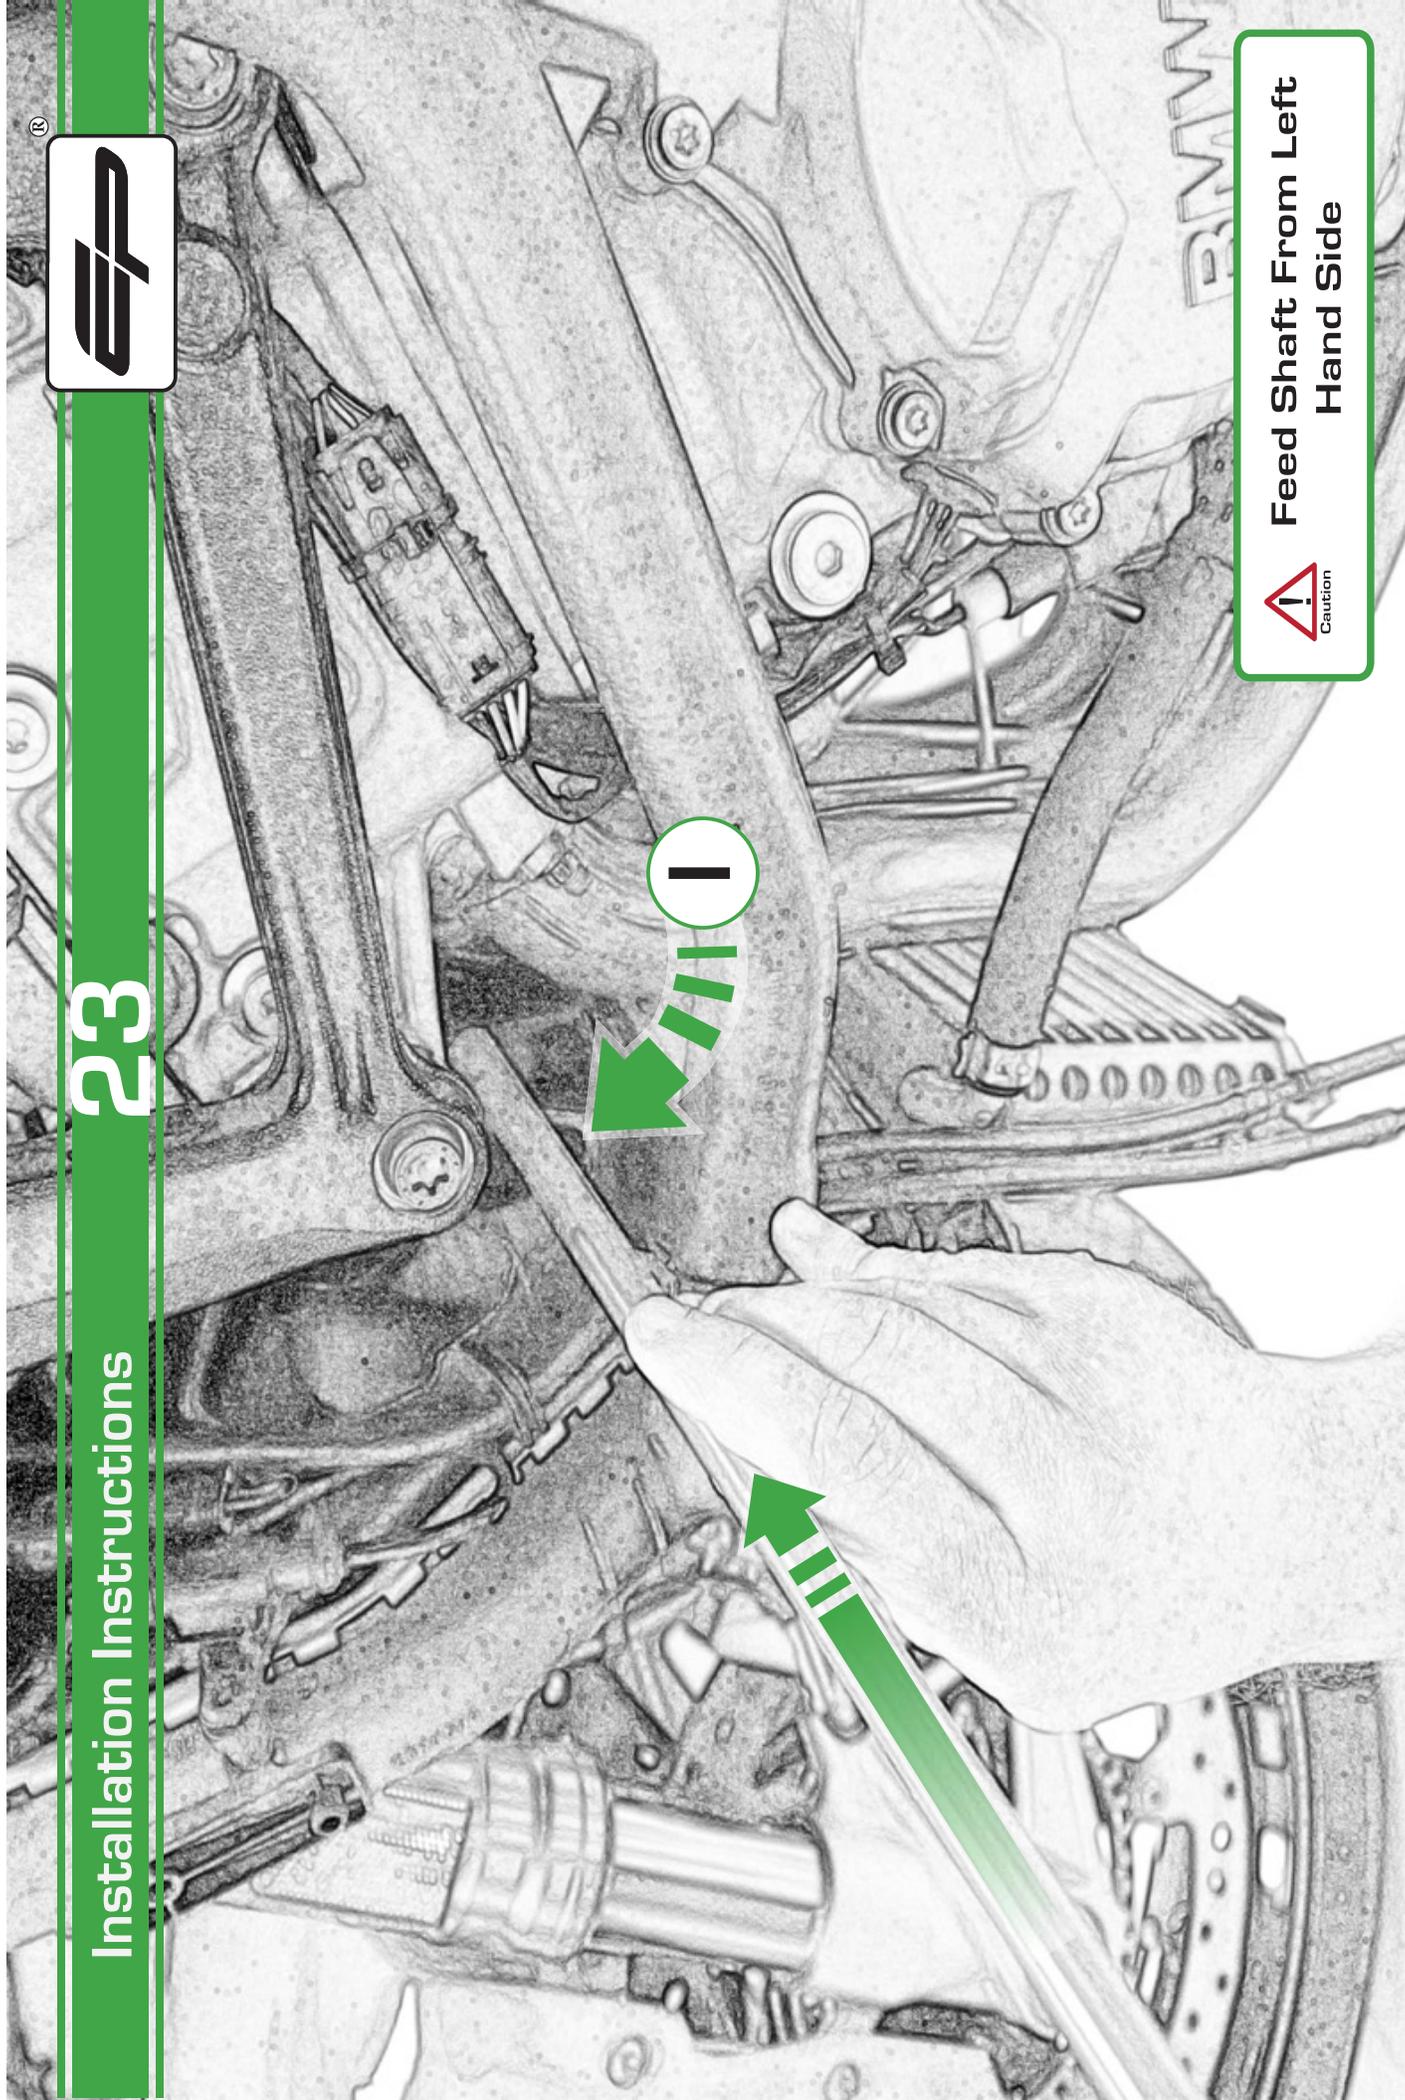


Caution

Feed Shaft From Left
Hand Side

®

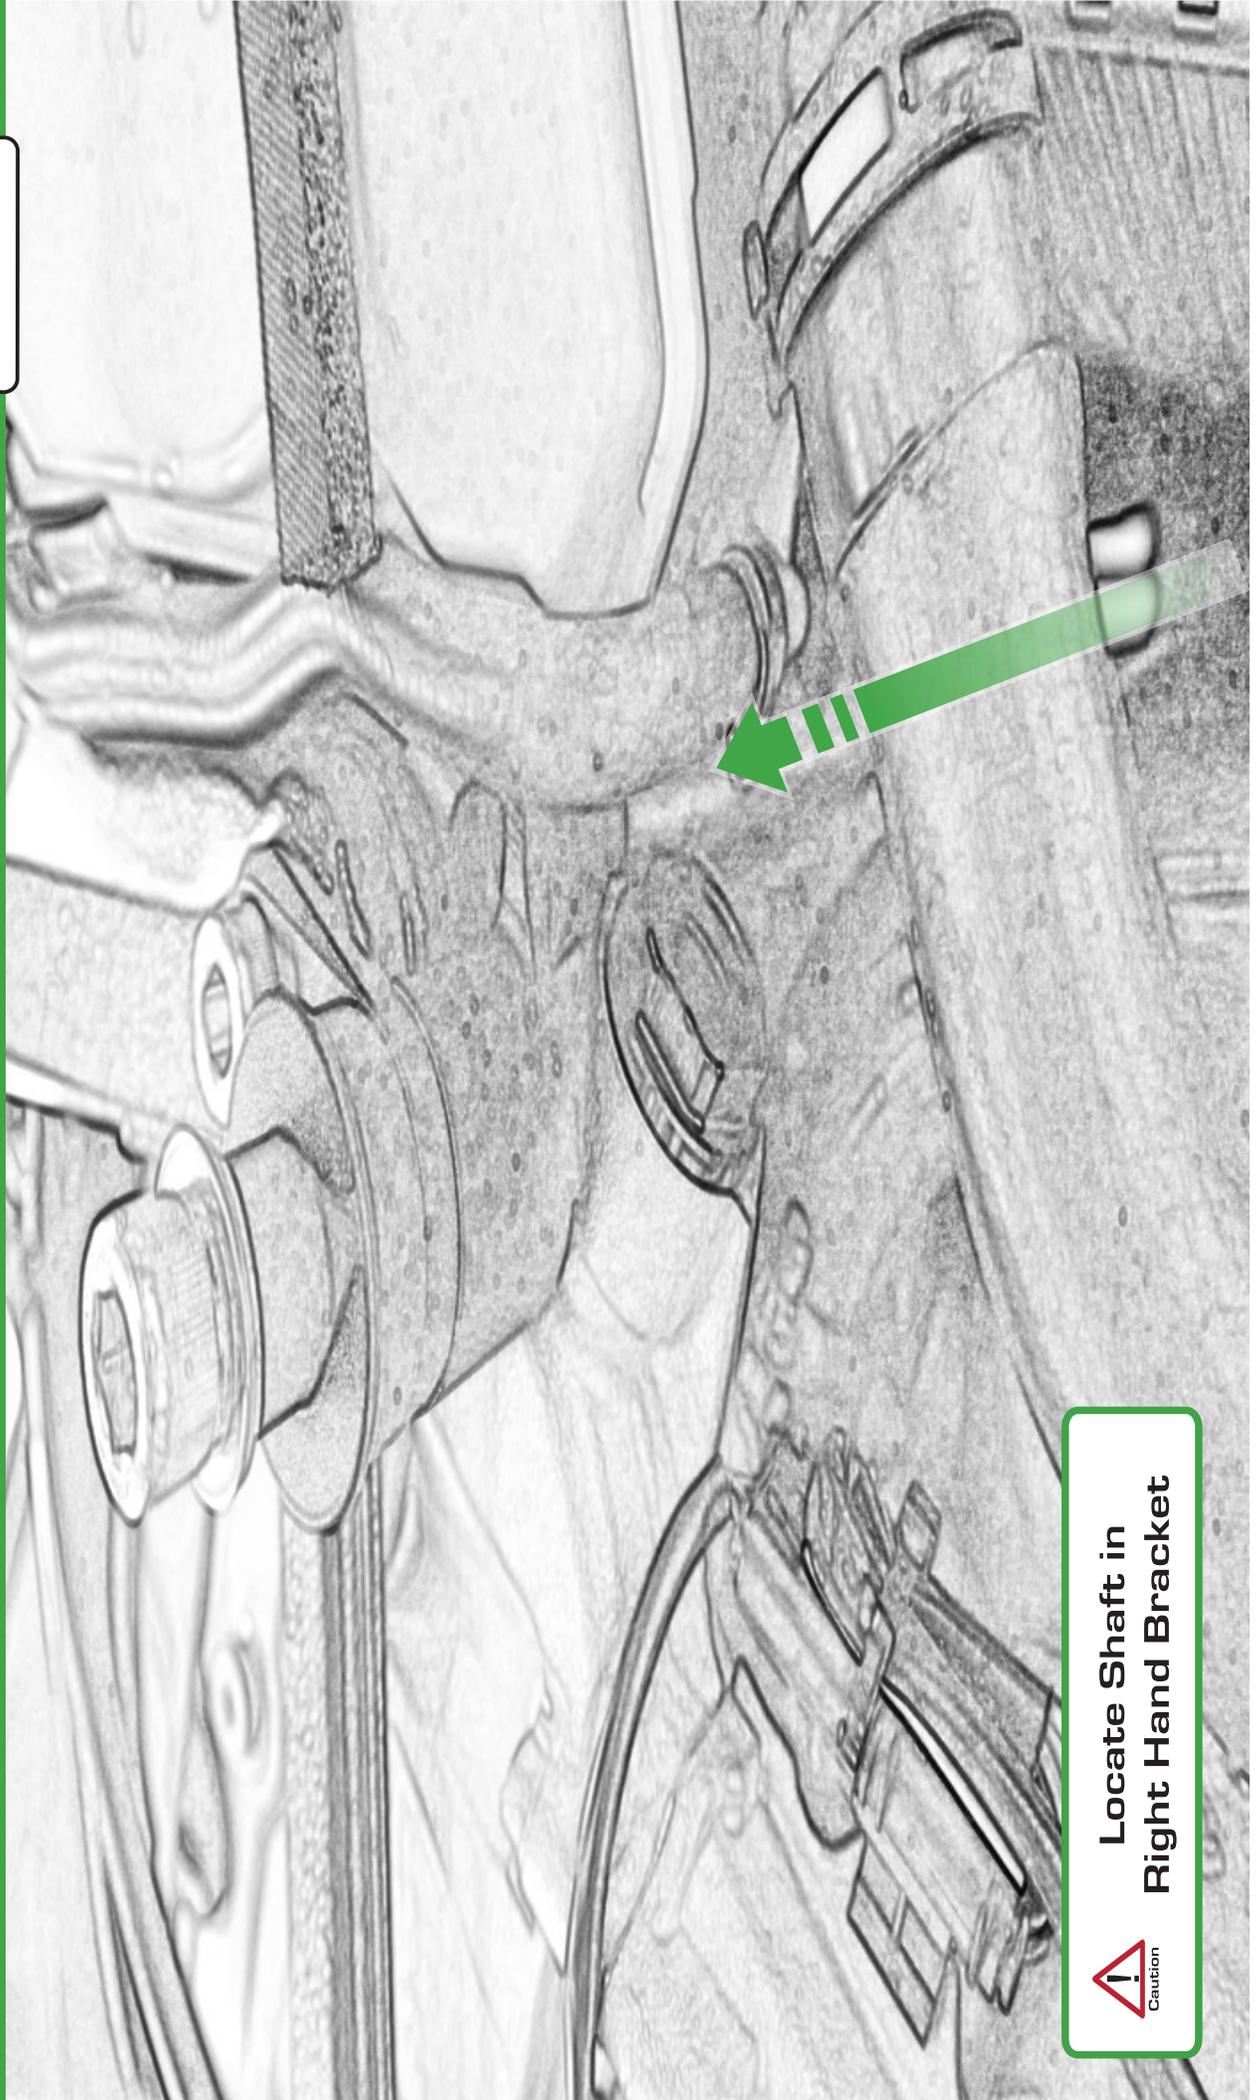

Locate Shaft in
Right Hand Bracket

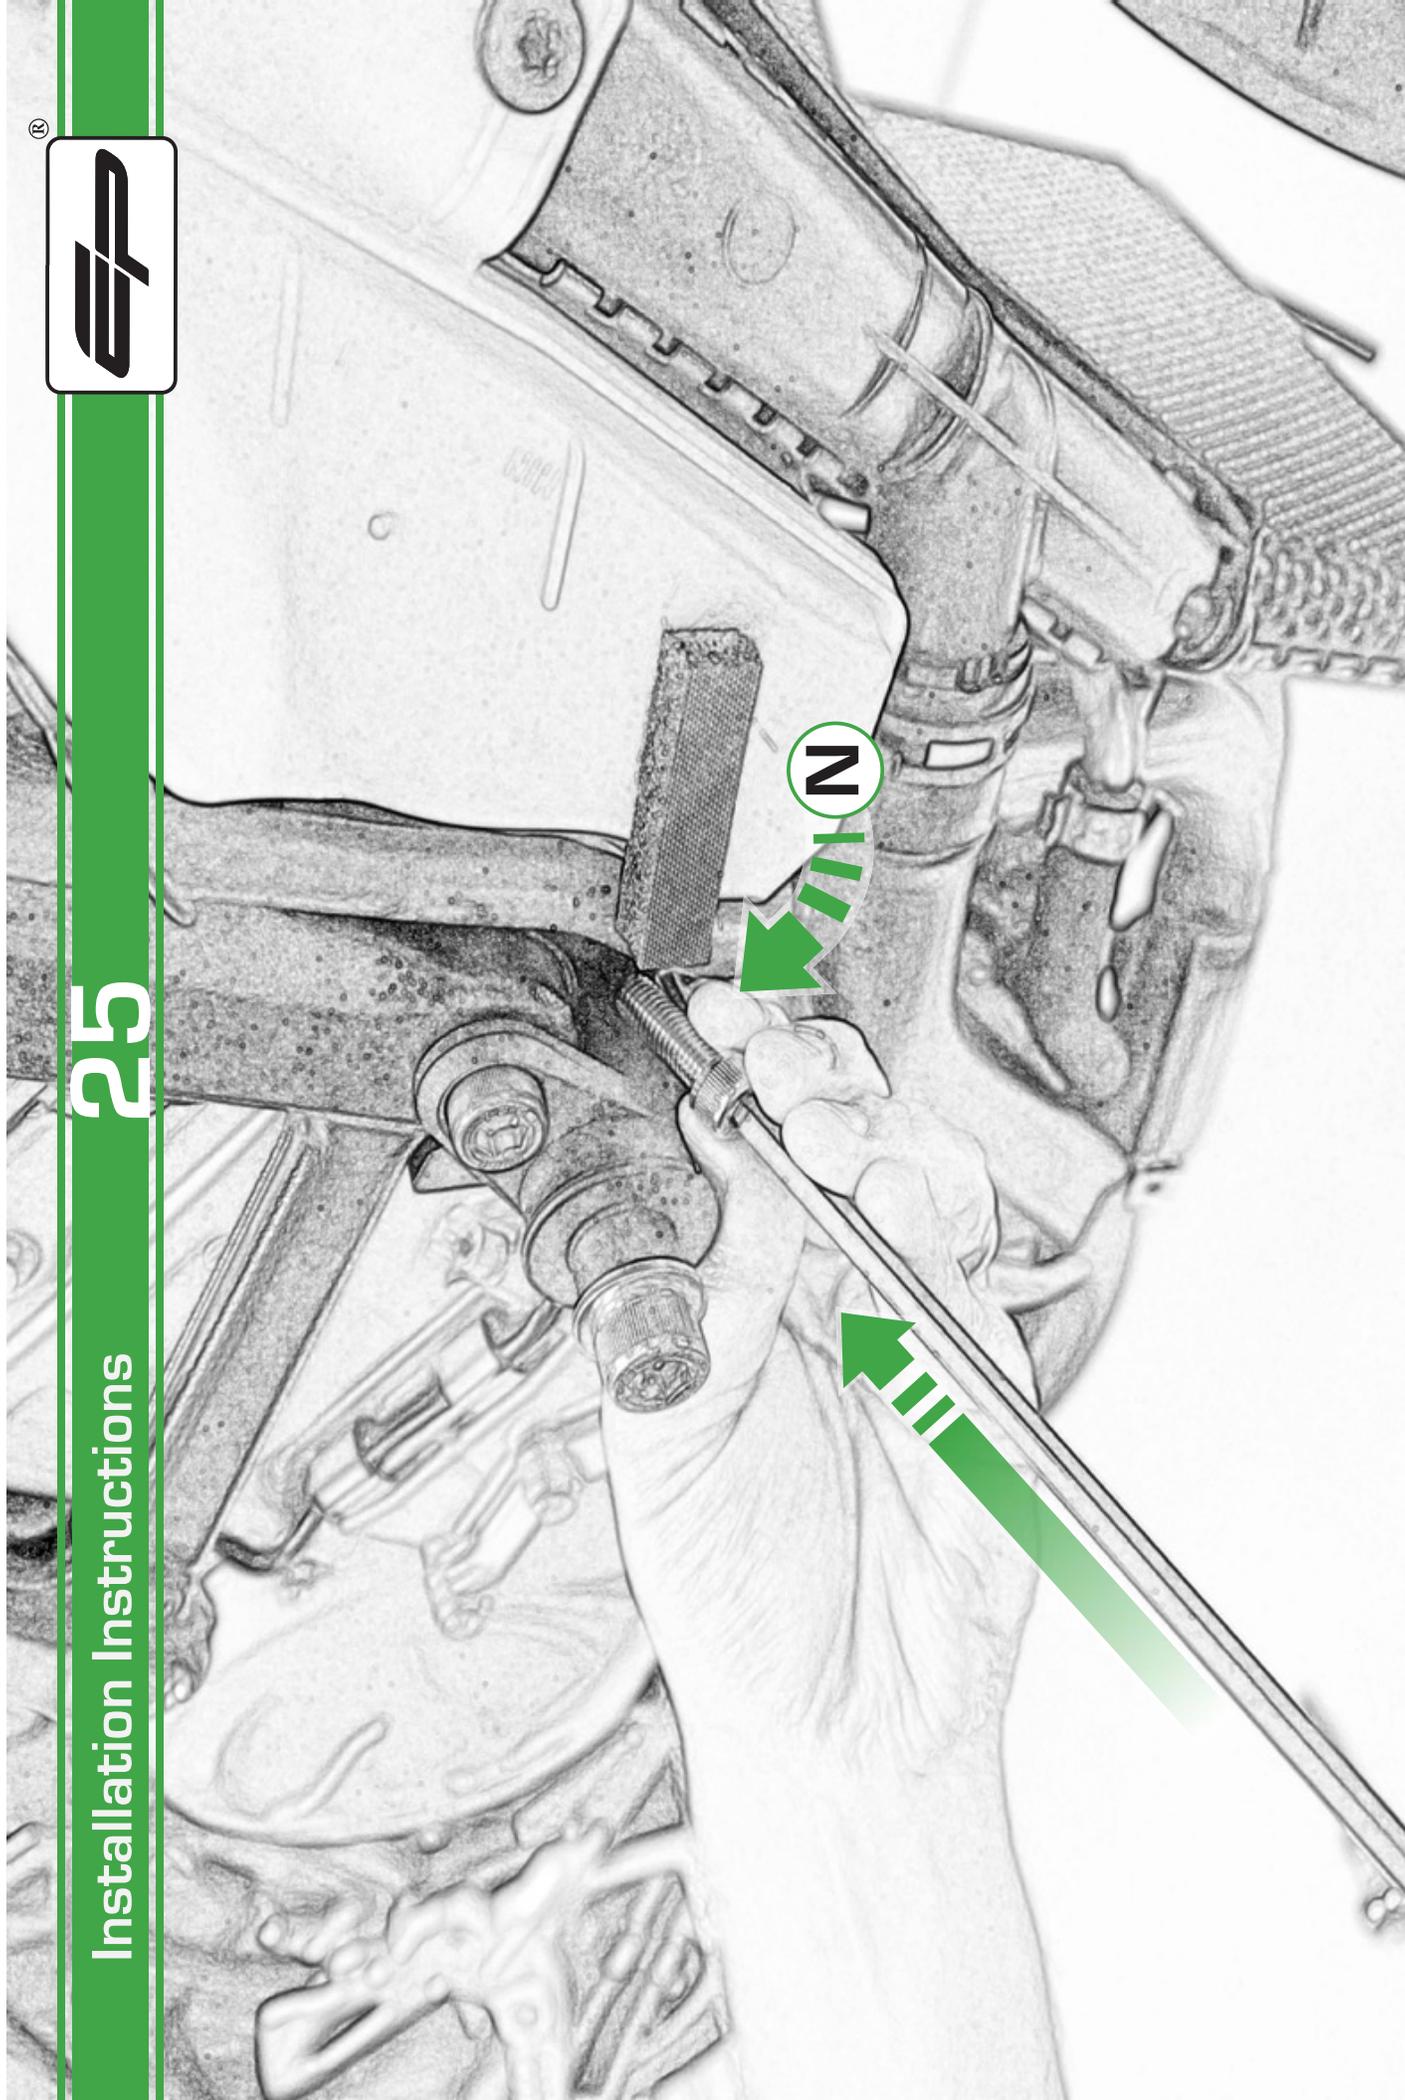

®




26

Installation Instructions




®



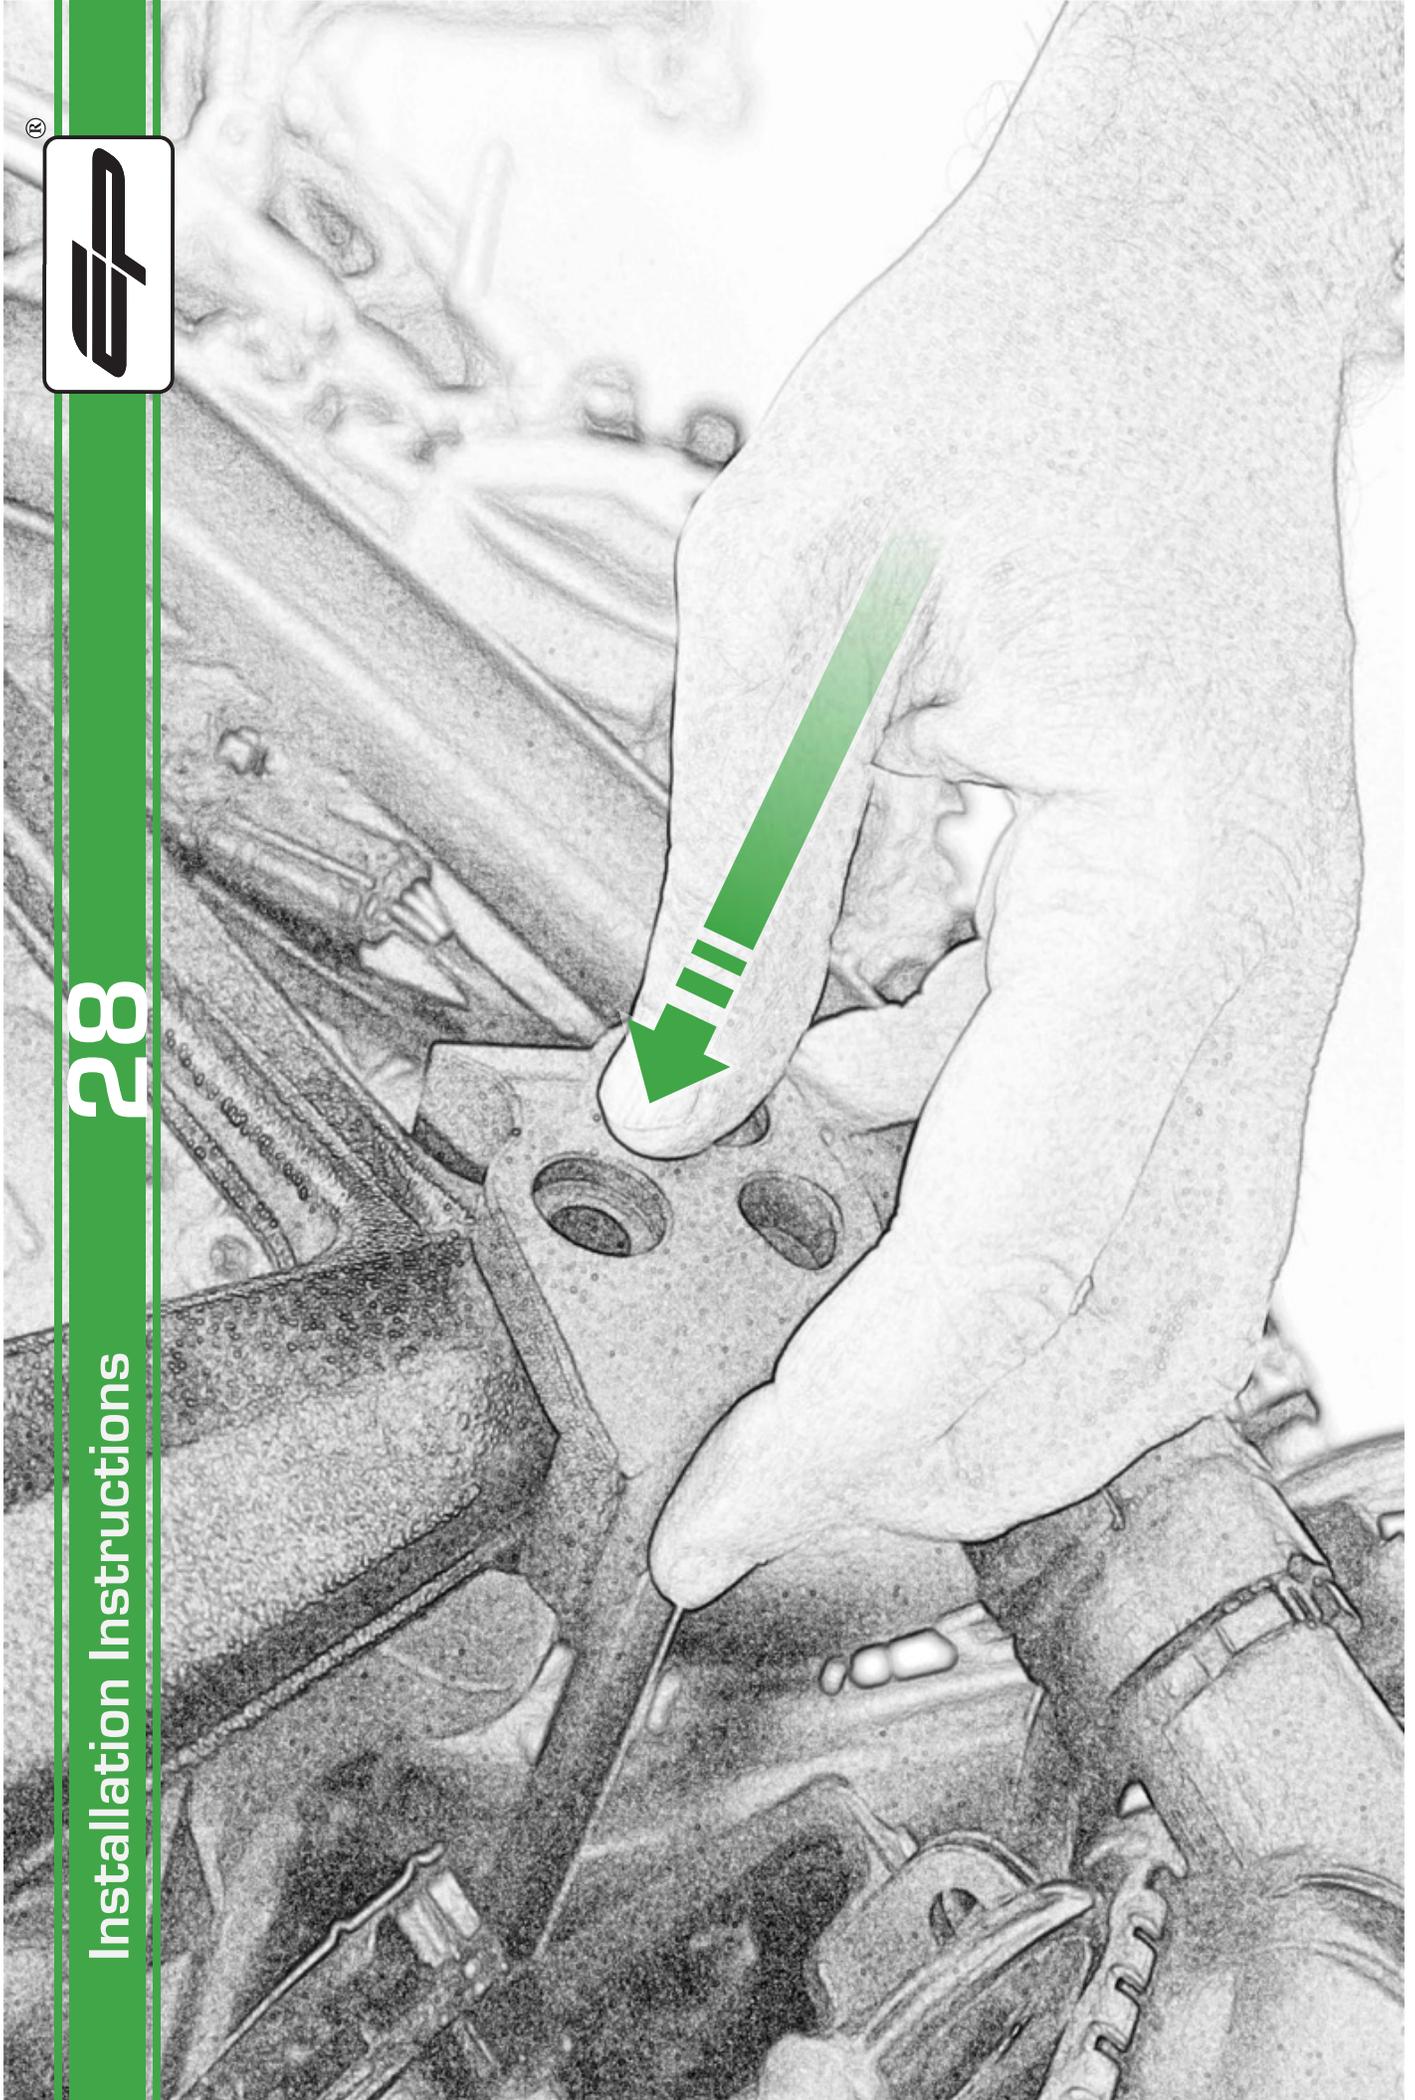


®

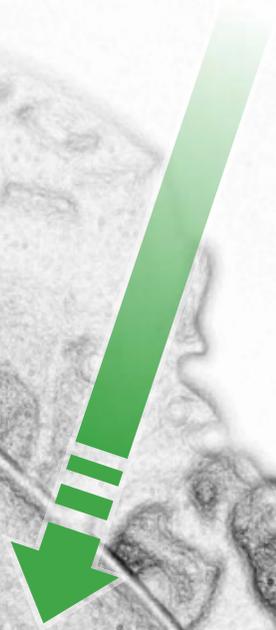

®



J

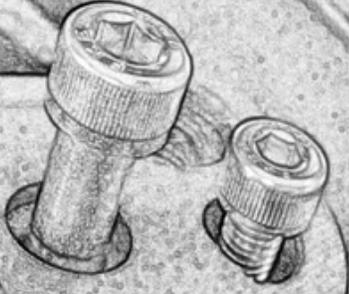


®



31

Installation Instructions

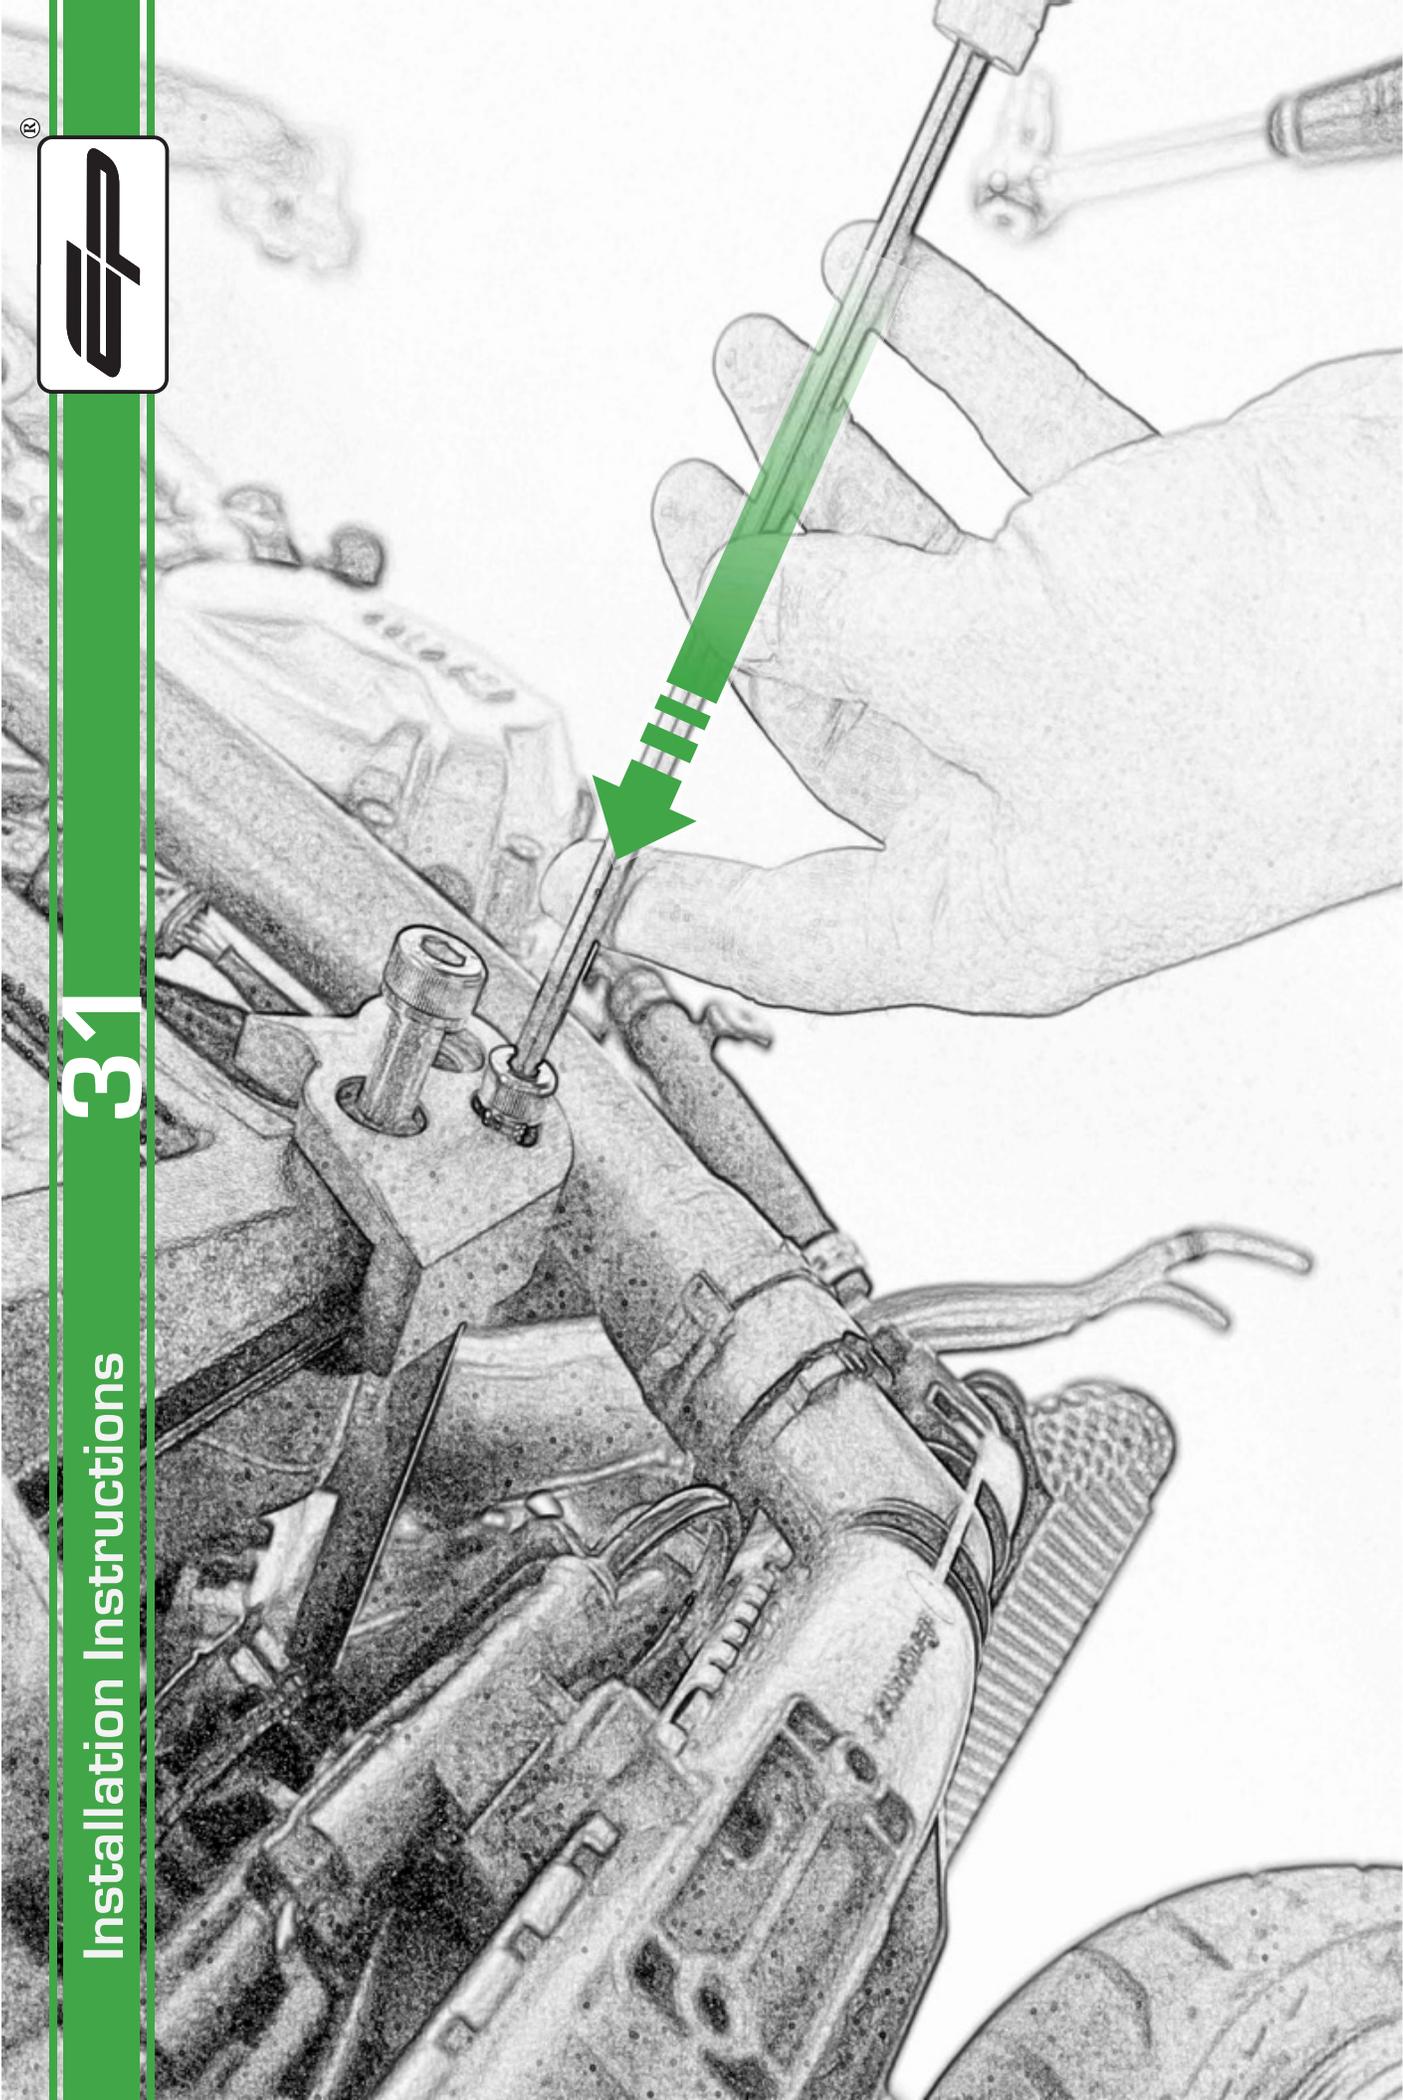


®




32


Installation Instructions

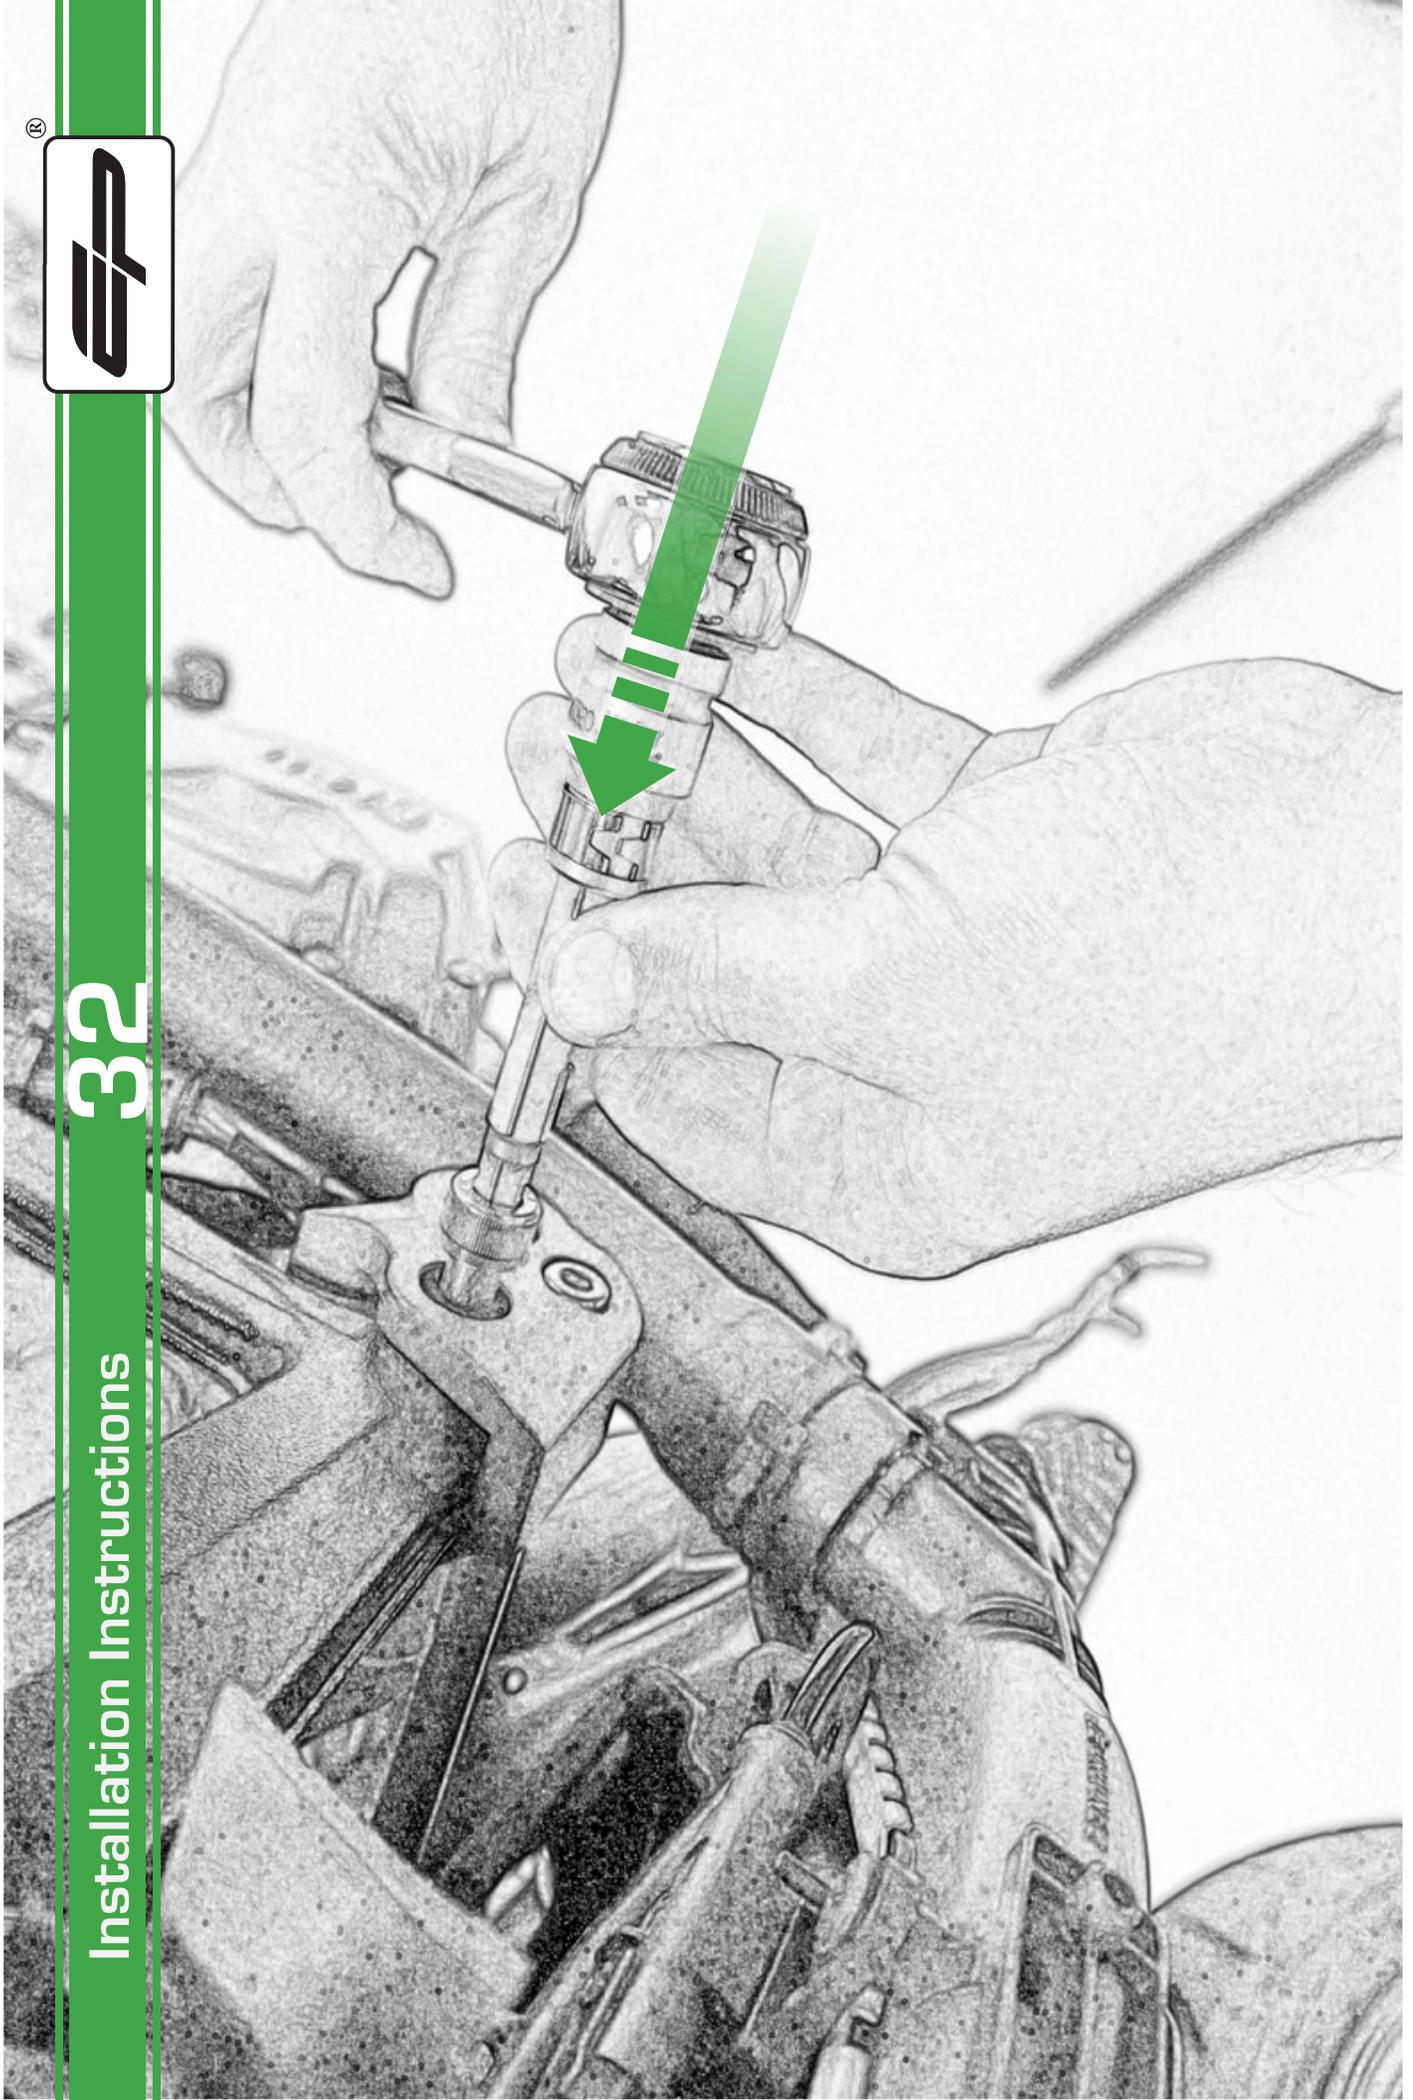





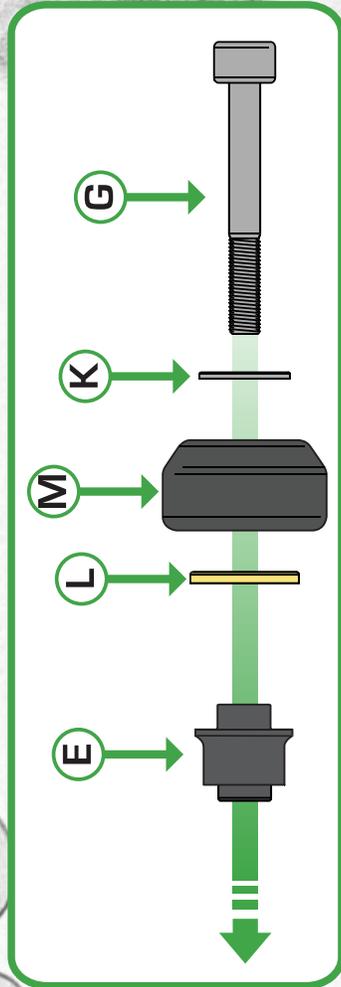




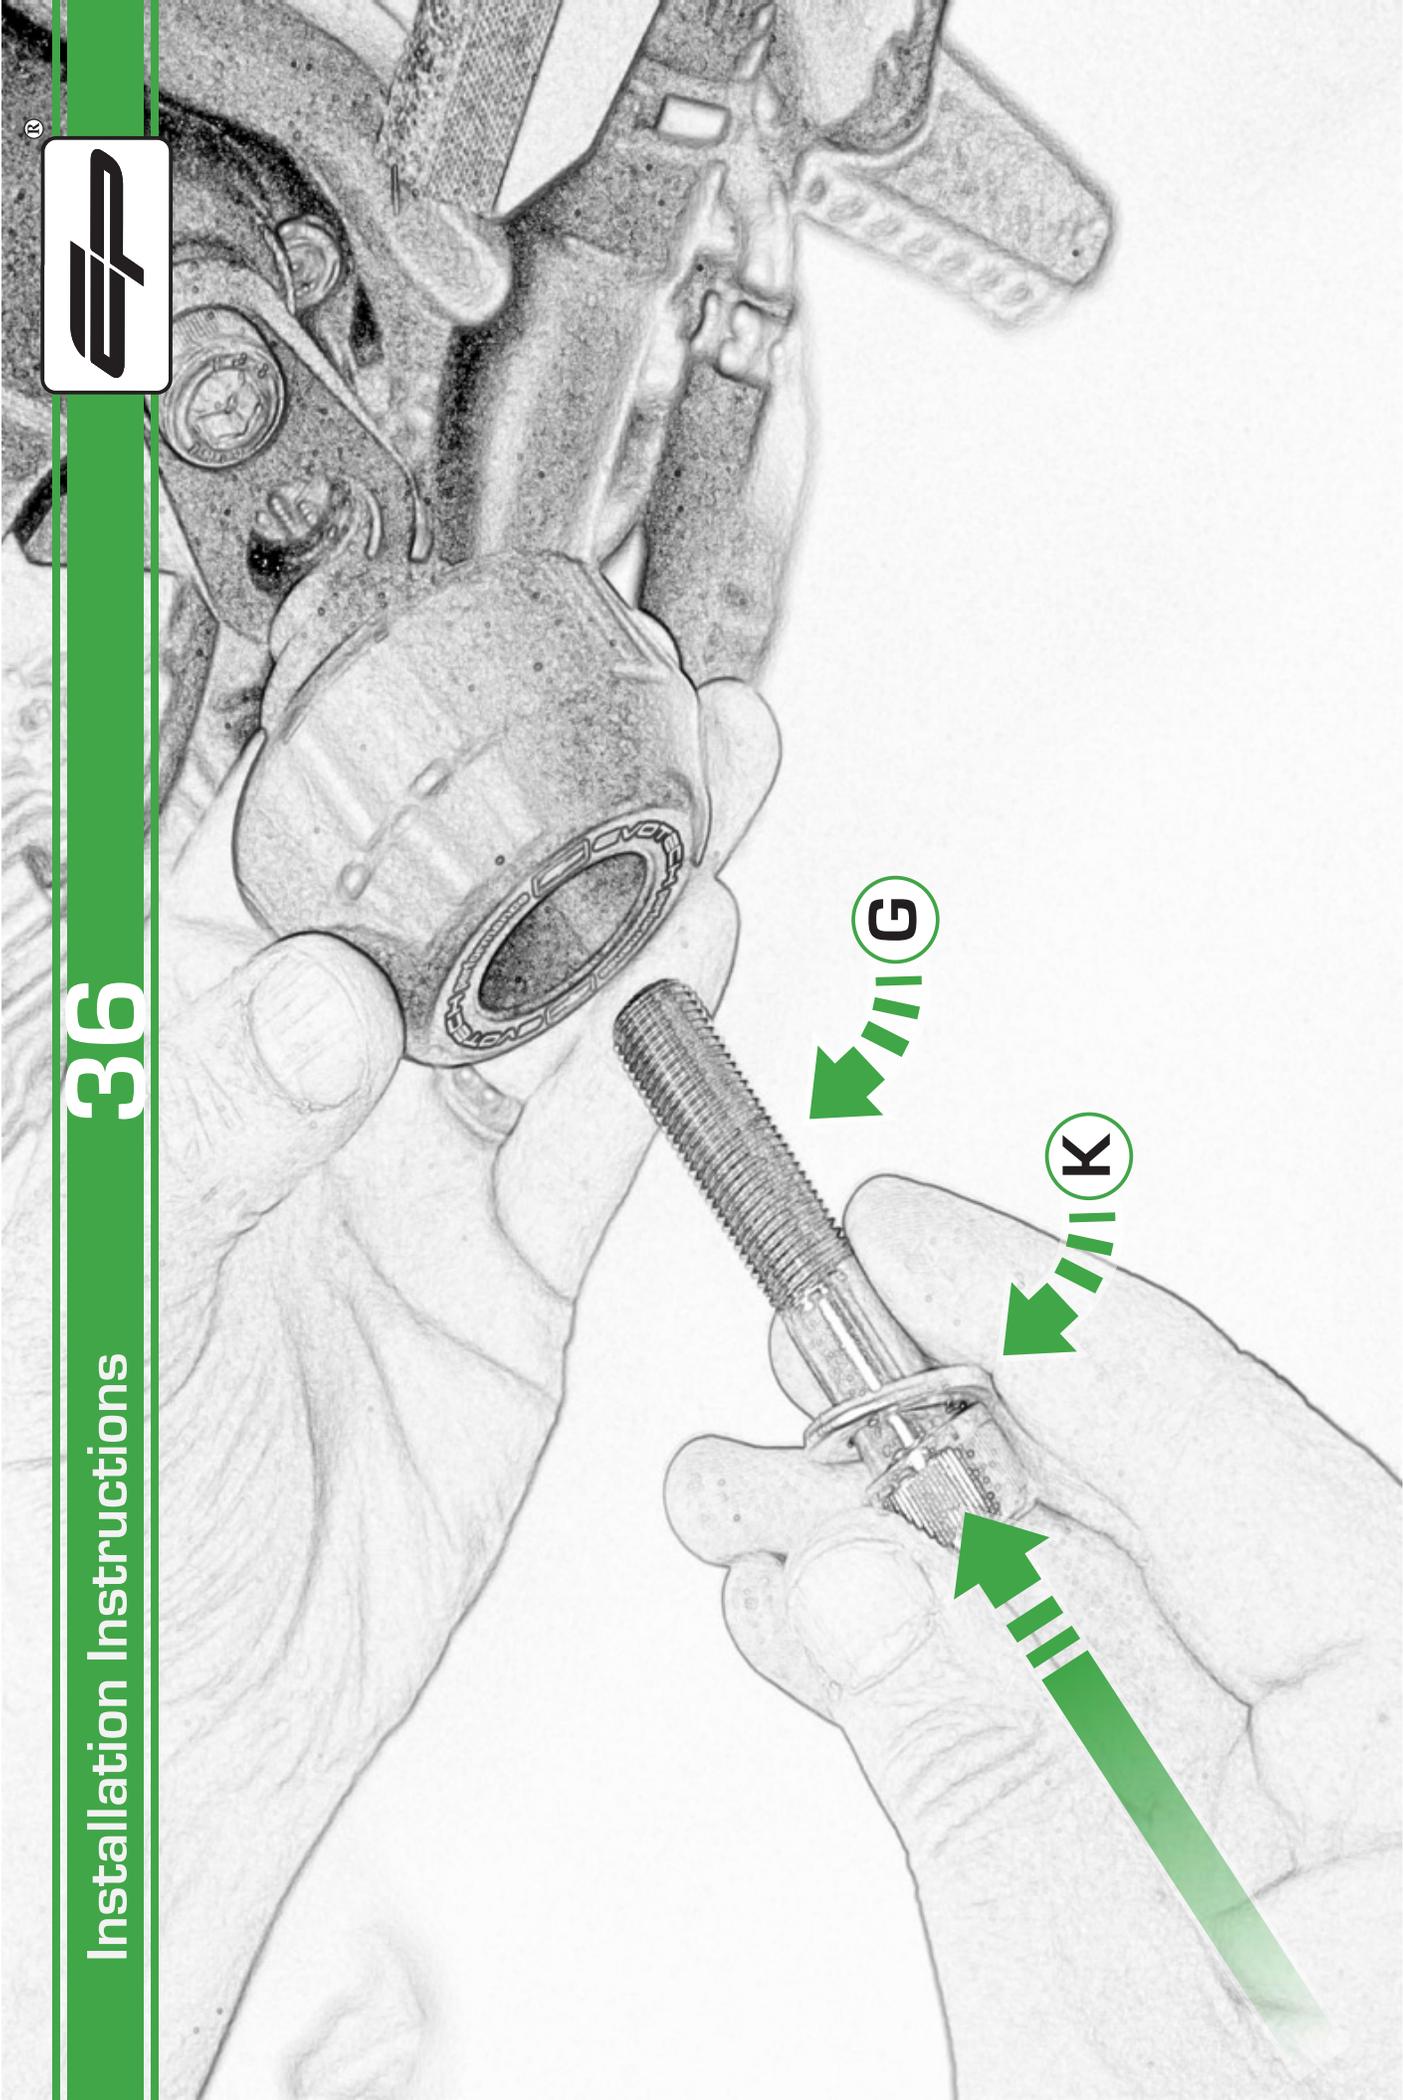

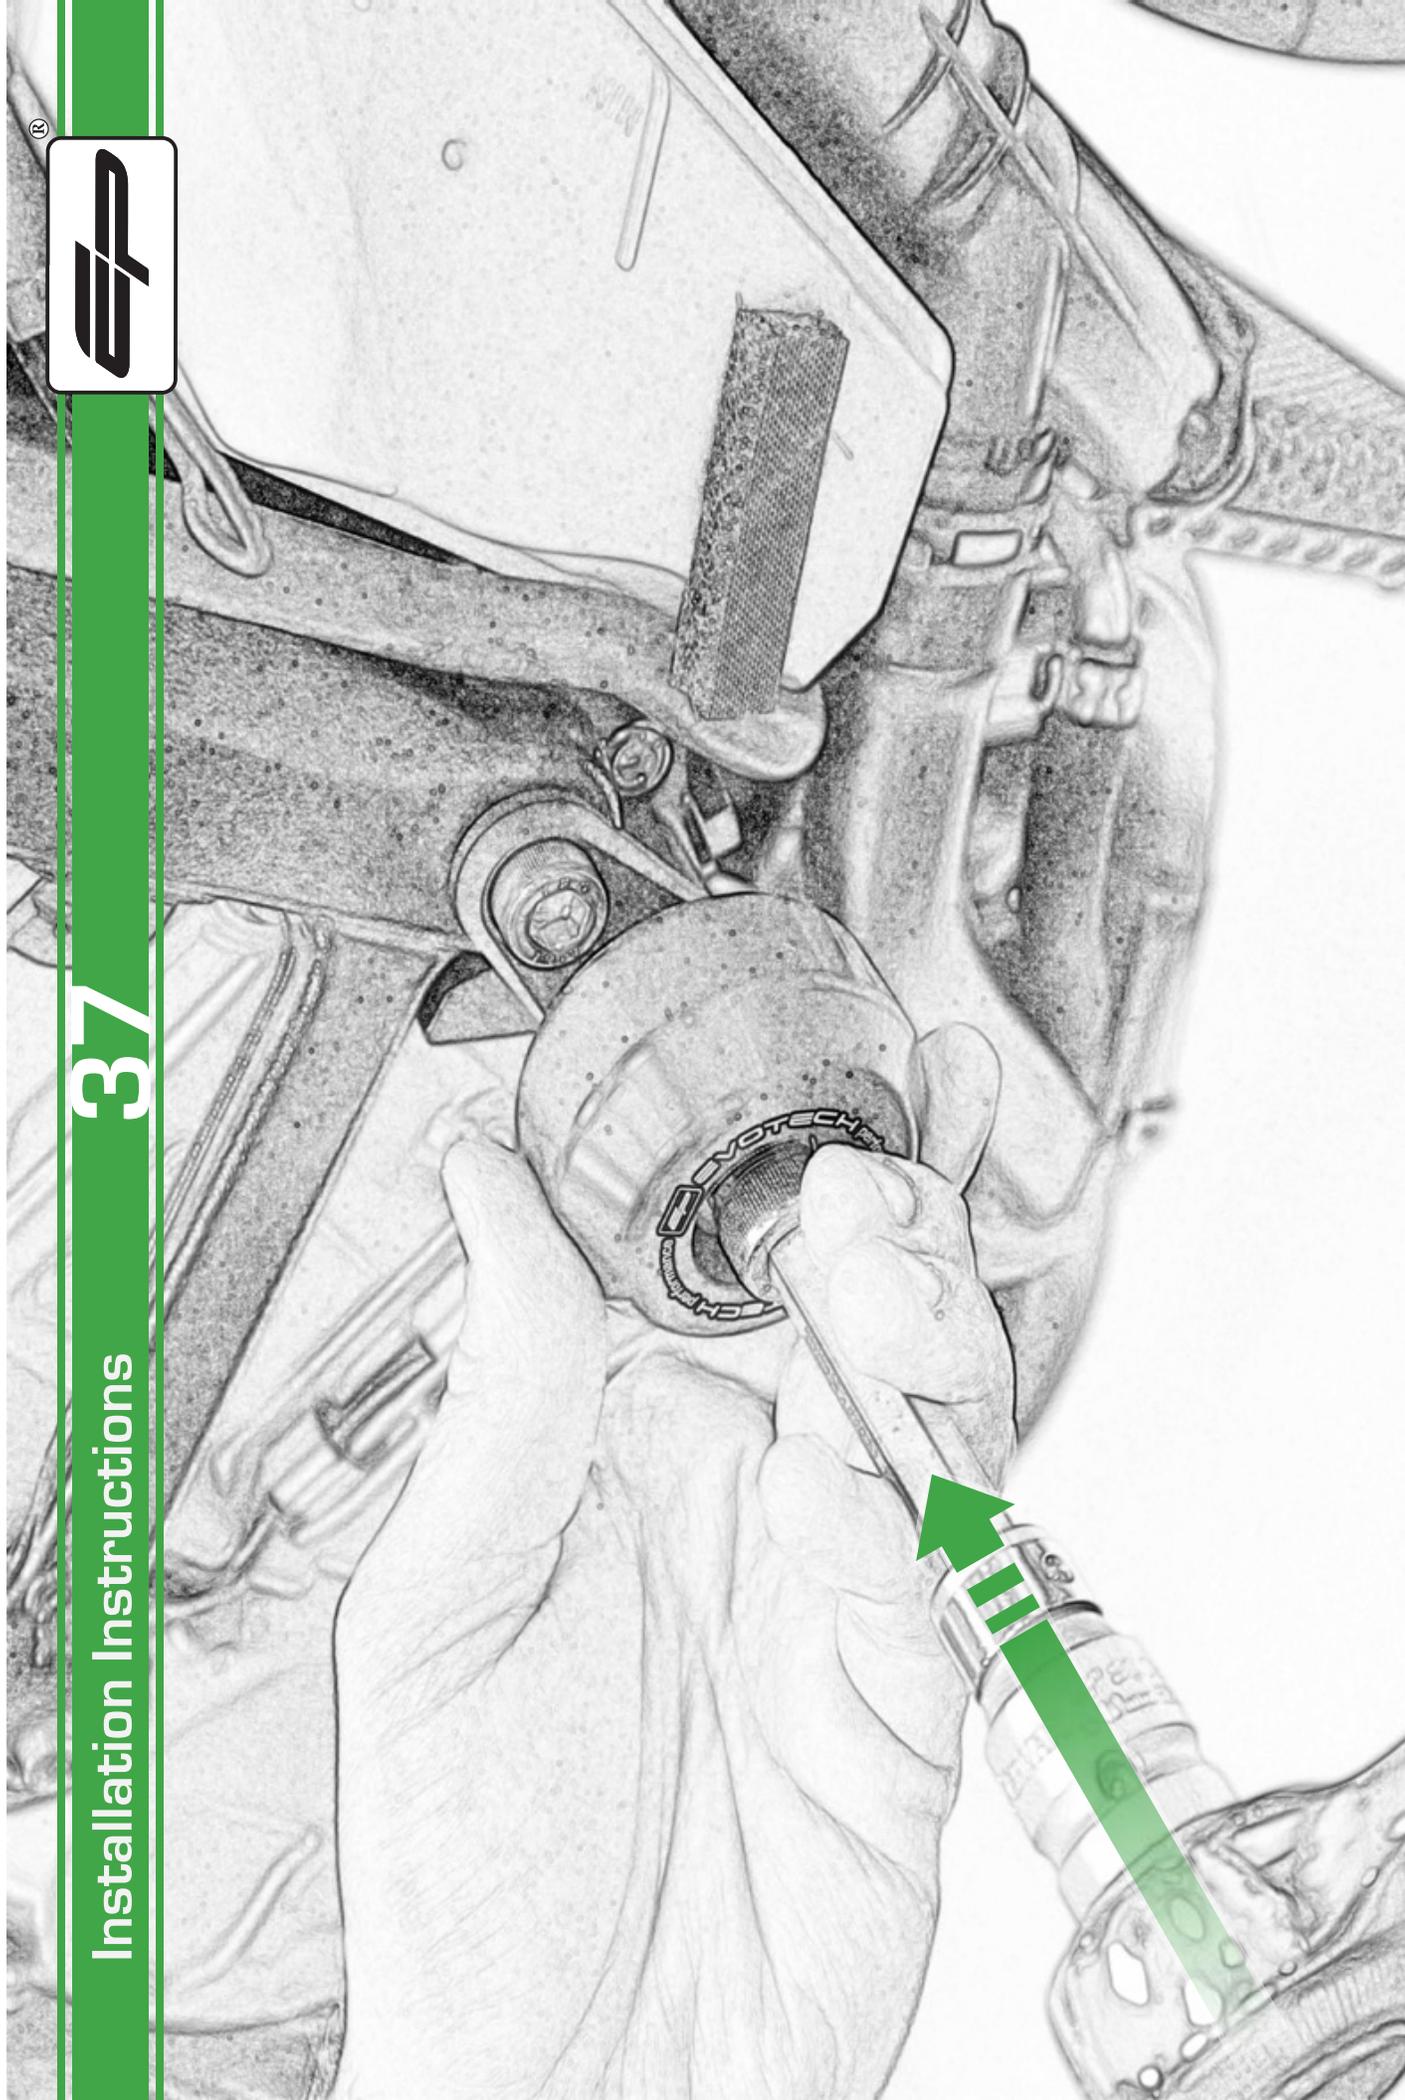

®

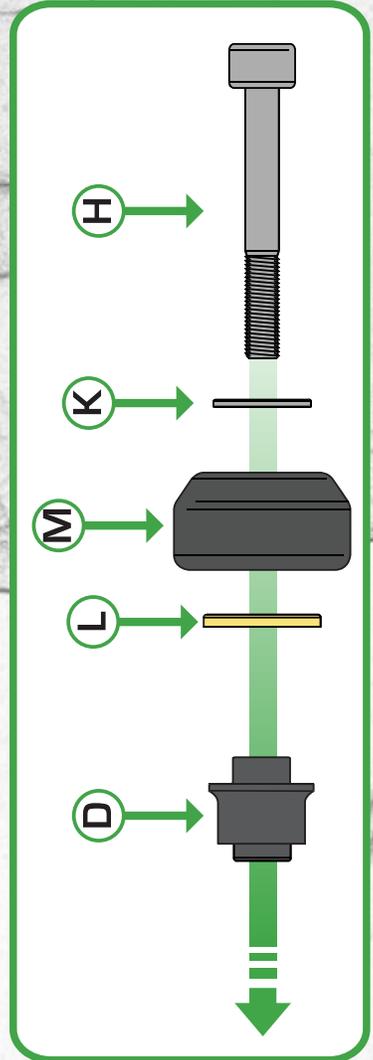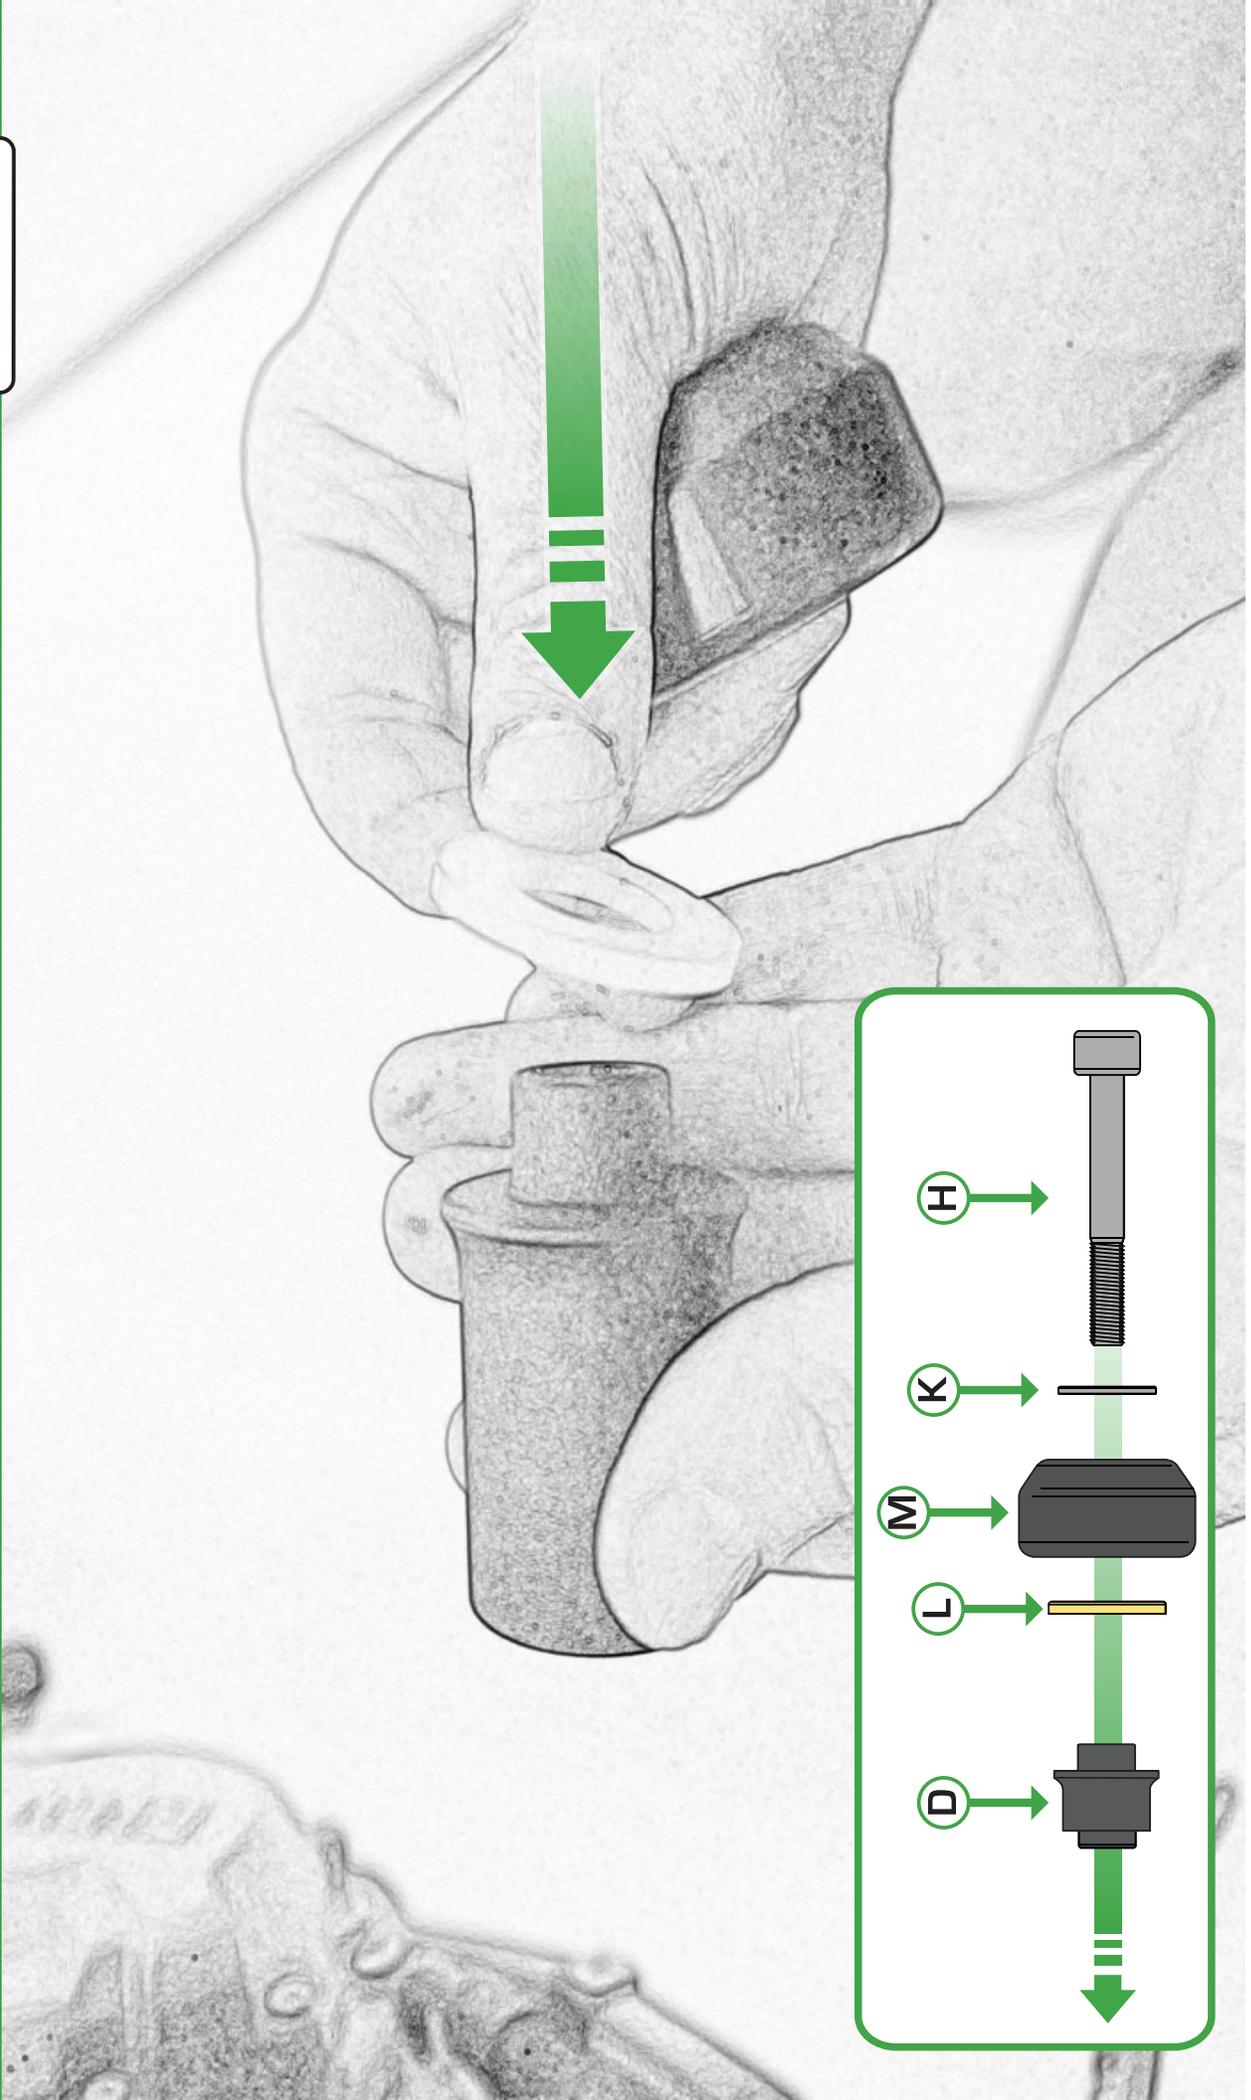



 **Fully Tighten**
Caution



Reverse Stages

9 - 1




Installation Instructions

ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced

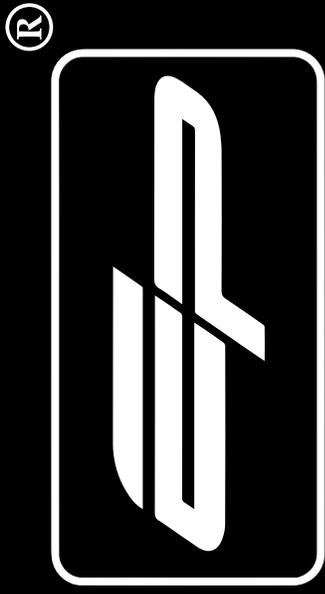

EVOTECH[®]

P E R F O R M A N C E

www.evotech-performance.com