



BROCKWELL INCORPORATED




COLUMNSDIRECT.COM

4728 SCARBOROUGH PLACE ▪ STONE MOUNTAIN, GEORGIA 30087 ▪ PHONE: 980-282-8383 ▪ E-MAIL: sales@columnsdirect.com

TERMINATING TRACERY CEILING UNITS W/ CROWN MOLDINGS ADDED

For use with: #4692 | #057-4692 | #100TRA | #101TRA

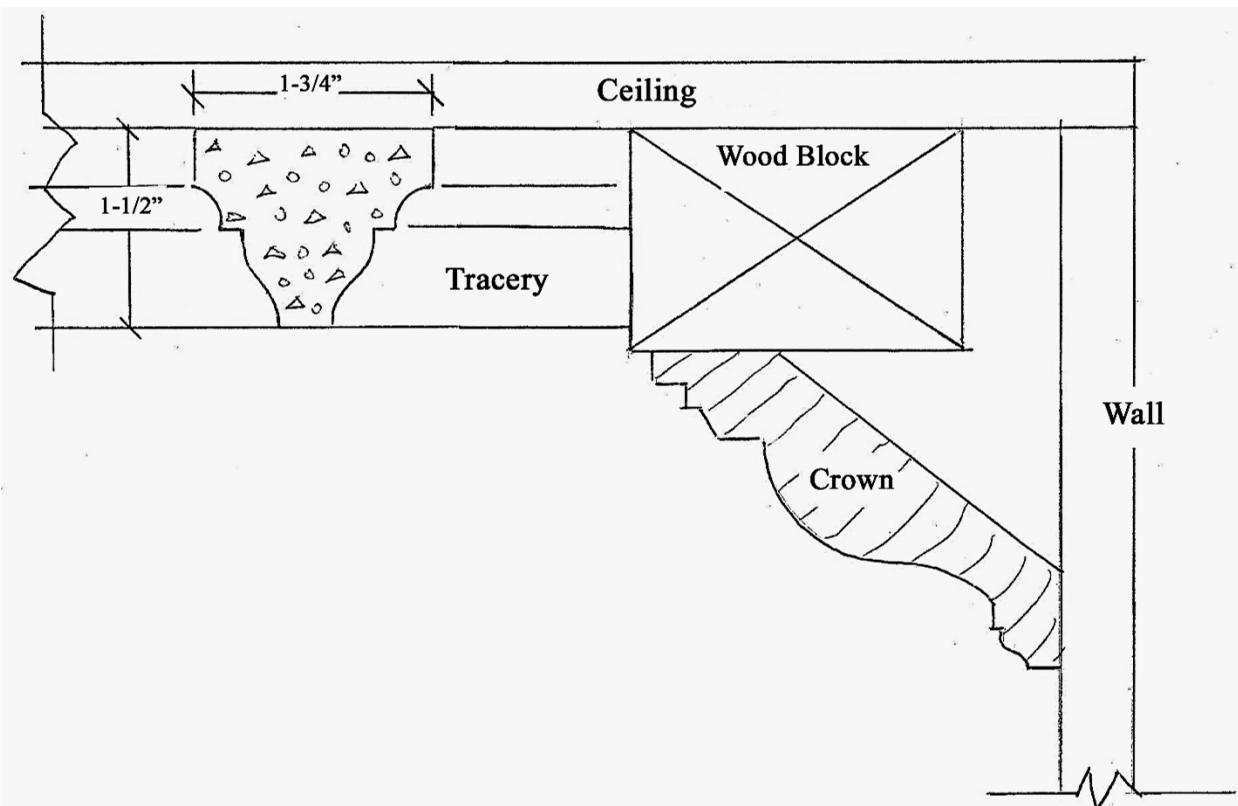

This sketch illustrates how a wooden block can be placed on the ceiling to serve as a soffit to receive the tracery units as well as the upper part of the crown molding. The result will be a very finished look. We recommend a block that's 1-5/8" x 1-5/8" for these tracery patterns.

For our Old English and Italian coffered ceiling panels, a block of the appropriate depth would be used as a soffit. Of course, this works only in rooms that don't have crown moldings already in them.

1.

COLUMNSDIRECT.COM

BROCKWELL INCORPORATED

