
TURBRO

Installation of Stove Legs

Installation Tips

A few customers have mentioned it's hard to assemble the legs on the TS20 Stove heater. The stove legs and the bottom of the unit body are made of sturdy metal. We recommend using an electric drill which can help you finish the installation easier. If that's not available, a 6-8" long screwdriver can be used.

NOTE: This installation is only suitable for TURBRO Suburbs TS20 electric fireplace stove heater

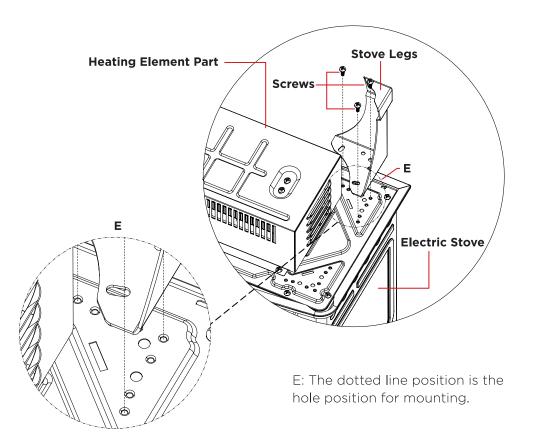


Installation Steps

Step 1: Align the leg with the holes on the bottom of the electric stove.

Step 2: Install the screw into the F holes first (shown in the below picture), then install other screws. The F holes is located on the nearly sides of the unit, not to be confused with the central hole in the corner or the the holes on the sides of the heater.


NOTE: This step is very important. If the screws in other holes are installed first, it may lead to a mismatch of the other holes.

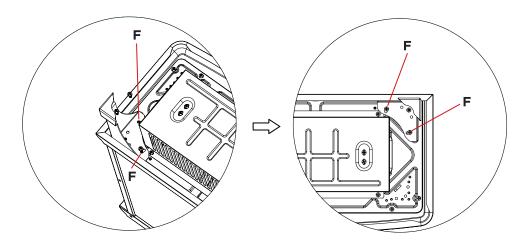

Below is a QR code, you can scan with your smart phone to watch the installation video.



If you find any part missing or have any question about installation, please kindly contact us.





(323) 438-3334