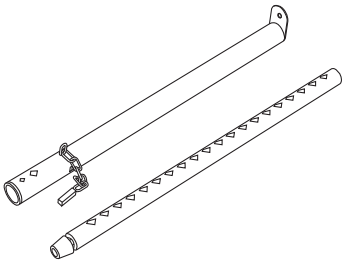
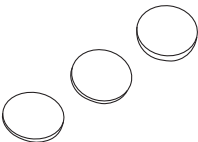
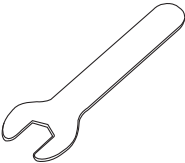


Window Security Bar Installation Guide

Part List

No.	Item	Part Name	ACBPS-380	ACBPS-760
A		Security Lock Bar (Main Unit)	14 inch * 1	30 inch * 1
B		Adhesive Strip	2	3
C		Mini Wrench	1	1

Installation Steps

① Adjust the length of the security lock bar (A). Simply extend the rod to your window length, lock the stainless-steel peg into place.

(When adjusting the bar length in a single hung window, the adhesive strips (B) could help you to stick the bar in the window so that you could adjust the bar length easier.)



② Place the security lock bar (A) in-between the sliding window and the window frame.



③ Use the included mini wrench (C) to adjust the screw on the end of the security lock bar (A) for a good fit and tight it.



**If you find any part missing or have any question about installation,
please kindly contact us at support@turbro.com**



© Katmai Technology Limited
www.turbro.com