# Installation Instructions for Intelligent Toilet

## Precautions for installation of intelligent toilet products

- 1. Before the product is installed, please do not connect power and water to the product.
- 2. The water inlet pressure range is 0.15— 0.75MPa, please use within this pressure range.
- 3. The inlet water temperature is 4—— 35  $^{\circ}$ C, please use it within this temperature range.
- 4. Please do not hit the ceramics. The broken ceramics will cause human injury, water leakage and furniture damage.
- 5. Please put the leakage proof power plug and connecting wire, and do not use the loose and unstable socket which Cause fire or electric shock.
- 6. Do not damage the leakage proof power plug and connecting wire, and do not use the loose and unstable socket It can cause fire or electric shock.
- 7. Don't use any other water sources other than running water, which may cause skin inflammation and other problems.

#### Installation steps of intelligent toilet products

Installation tools and auxiliary materials: 24 fixed wrenches, glass glue guns, glass glue, raw material belt ,tape measure,brushes,etc.

### 1. Installation of special valve:

Mark the center line of the drainage outlet on the ground, the size of the toilet, and install the special angle valve for water inlet at a proper position on the wall (attached figure)






## 2. Installation toilet bowl


- 1. Make the seat fix with the ceramic bowl.
- 2. When lifting the ceramic bowl, please turn over the seat and ring first. Because the one-piece toilet is heavy, suggest at least two people to help to do it.(Attached figure)




3.Dismantle the flange ring and gently press it against the water hole of the toilet bowl to make it stick. (Attached figure).

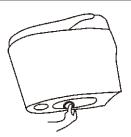

4.Lift the toilet bowl to make the flange ring center the water hole and place flat.(Attachhed figure).

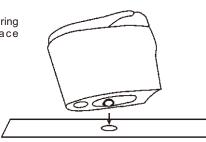

5.Apply waterproof glass glue, dealing evenly between the ground and the toilet bowl outline. It must be tightly sealed and cannot be used within 24 hours. It must wait until the glue completely cured.

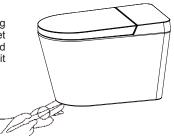

6.Install the water supply hose, and the hose must be tightly tightened with the angle valve. (Attached figure).

