



Installation Instructions
CHR012 CHR013 CHR022 CHR023
Contractor Headache Rack

**We know you don't want to read this,
but you probably should.**




Read all instructions thoroughly before beginning installation.

Step

1. Using 1/2" hardware provided, attach the brackets to the headache rack.
2. Place the headache rack on the truck bed with the American Built logo facing the bed. Make sure the headache rack is evenly spaced between each side. Leave plenty of room between the headache rack and the back window.
3. Use clamps to secure the headache rack in place.
4. Look under the edge of the bed to find the best place for the hardware to attach. Ideally, you want a space in the middle of an easily accessible area to have room to secure the hardware. If possible, put one hole close to the headache rack and one at the far end of the bracket.
5. Mark the placement for two holes per bracket.
6. Drill holes through the headache rack brackets and through the bed of the truck. The holes will need to be 3/8"-7/16".
7. Attach the headache rack to the bed of the truck using the 3/8" hardware provided.

8. If attaching lights, use the tube on the driver side of the headache rack to run the wires.

Hardware Provided:

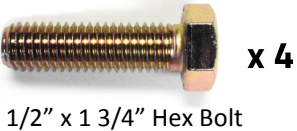

1/2" x 1 3/4" Hex Bolt



1/2" Washer



1/2" Hex Nut



1/2" Lock Washer



3/8" x 1 1/4" Hex Bolt



3/8" Washer



3/8" Hex Nut



3/8" Lock Washer