

# URBAN CRUZER

## USER MANUAL ATTACHMENT 1: How to setup the wire harness on your bike.

1




Identify the wire harness. Notice it is attached with the clamp in the bottom position.

2



Snap off the clamp attachment from the harness.

3

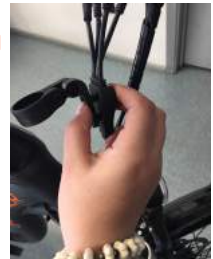

Flip over and snap on the clamp to wire harness. The clamp should now be in the top position.

4



Unscrew the clamp using your multi-tool.

5



Open the clamp.

6




Wrap the clamp around the handlebar stem.

7



Screw tightly the clamp into the handlebar stem .

8

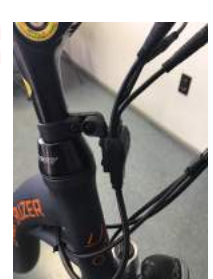

Check your wire harness is attached correctly, just as the image above.

**Congratulations, you have successfully completed this step!**

If you have any questions, feel free to contact us at [contact@greenlightcycle.com](mailto:contact@greenlightcycle.com) or 1-855-476-7933