




CARALARGA

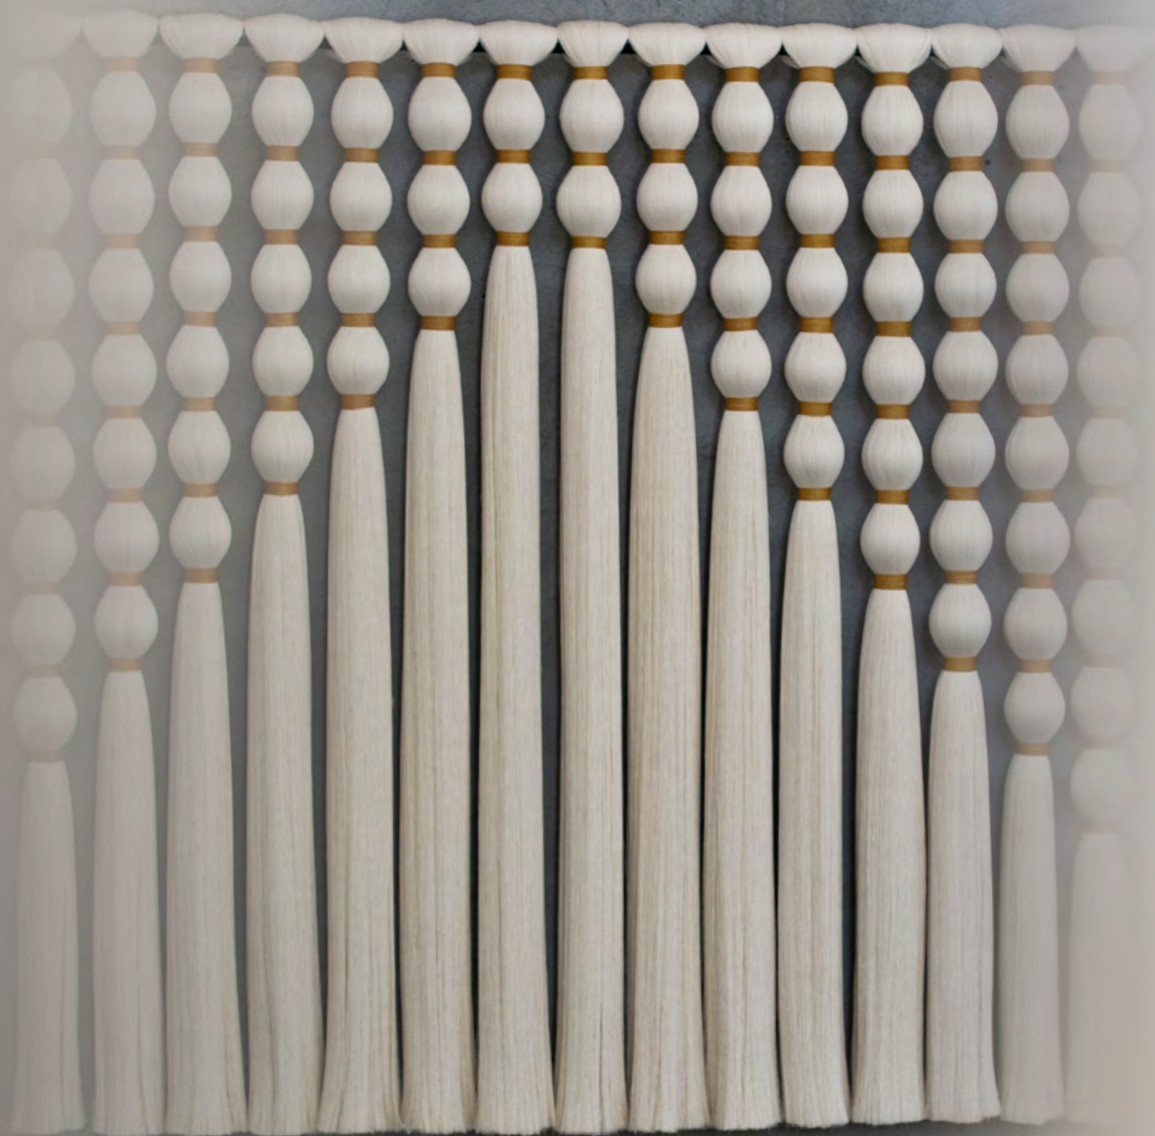

INSTALLATION MANUAL LARGE FORMAT



General Information

PIECE: CARALARGA LARGE FORMAT

MATERIALS: raw cotton thread, colored cotton yarn, paper maché spheres, black iron hardware.

WHAT DO YOU NEED TO INSTALL?

- Drill
- Screwdriver
- Pencil
- Measuring tape
- Leveler
- Hammer

ATTENTION!

Take into account the type of wall and its load capacity when installing the piece. For drywall walls, it is advisable to consult with a specialist. Caralarga exclusively provides Drywall Bases for installation on the studs of these walls.


Keep your hands clean when handling your Large Format piece.

INSTALLATION VIDEO




Components


CARALARGA
LARGE FORMAT

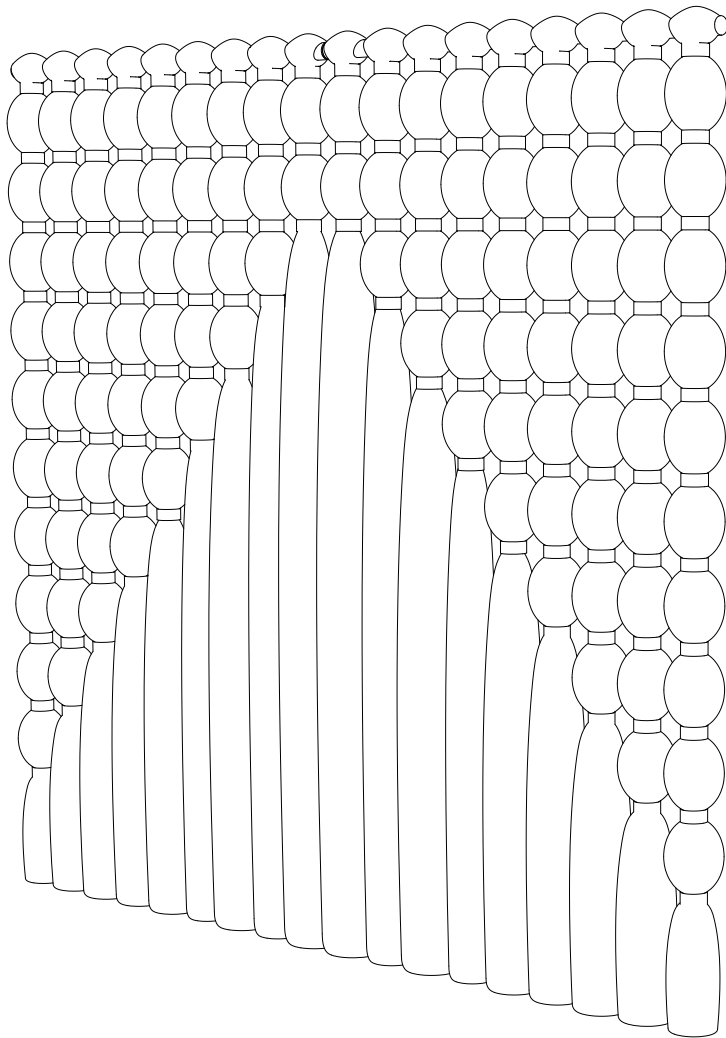

WALL
BRACKETS

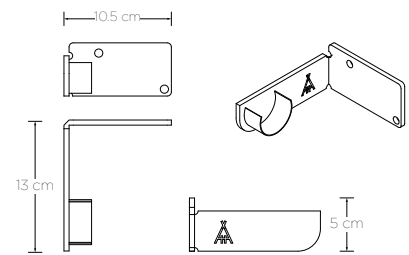

CERTIFICATE OF
AUTHENTICITY

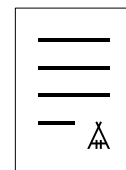

WALL
PLUG




SCREW



IF REQUIRED


CENTRAL
SUPPORT




COUPLE



DRYWALL BASE

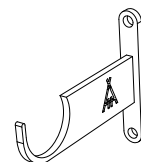

Installation Instructions

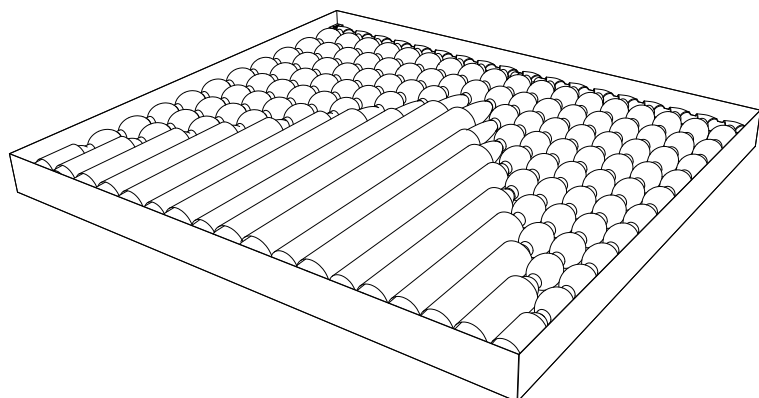


Picture 1


2

Each **Caralarga Large Format** piece is secured to the box by two wooden bases.

Remove the marked screws with a screwdriver and unpack the lateral wall brackets, screws and wall plugs included inside the box.

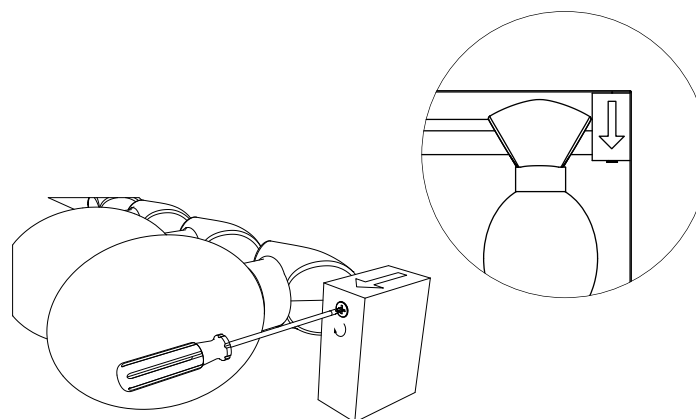

Picture 2

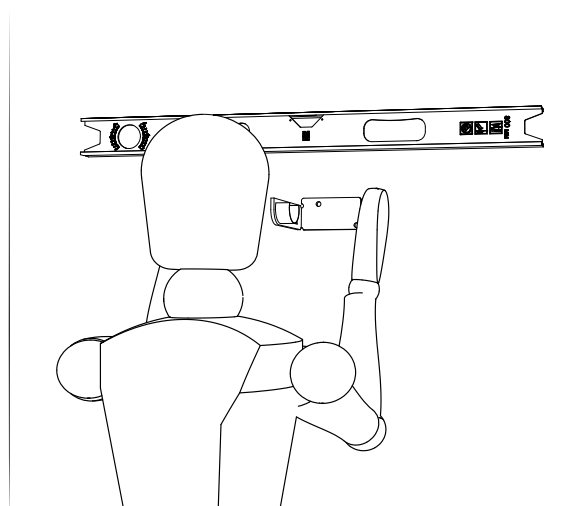



Picture 3

3

Once your wall is clear, measure from the floor to the desired height and draw a mark. *Caralarga recommends a minimum distance of 10 cm from the floor to the bottom of the cotton strands.

Once marked, use the lateral **wall brackets**, a leveler and a pencil to mark the corners and screw the holes.

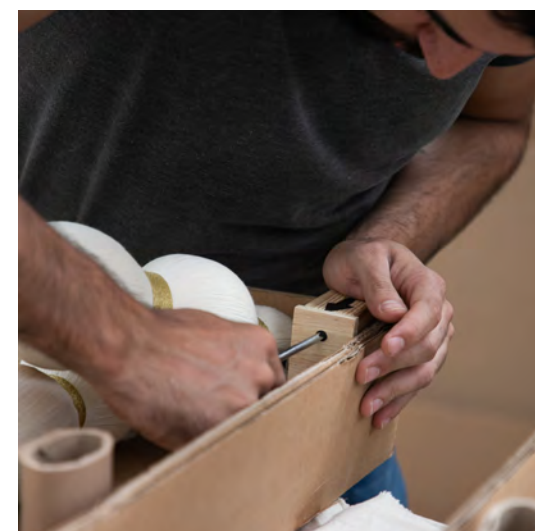

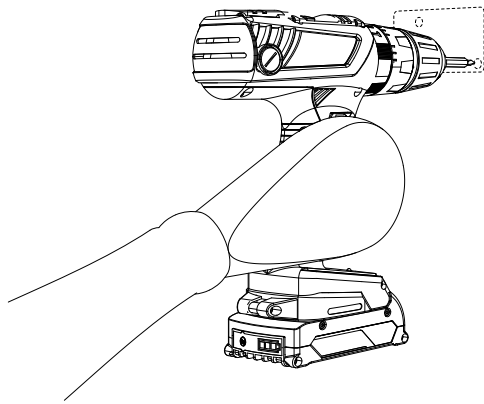

Picture 4


4

Hold the drill steady and drill the pre-marked holes to the depth of the wall plugs.





5

Proceed to insert the wall plugs into the holes. Use a hammer if necessary.

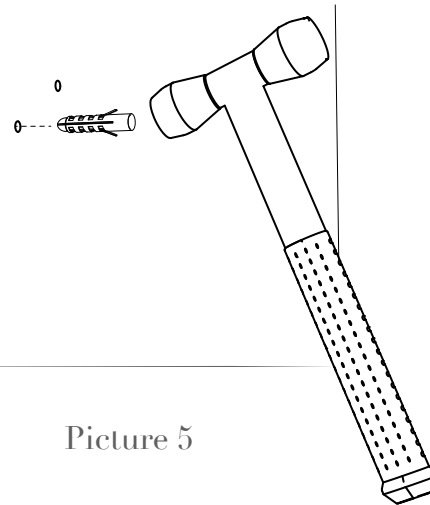

Picture 5

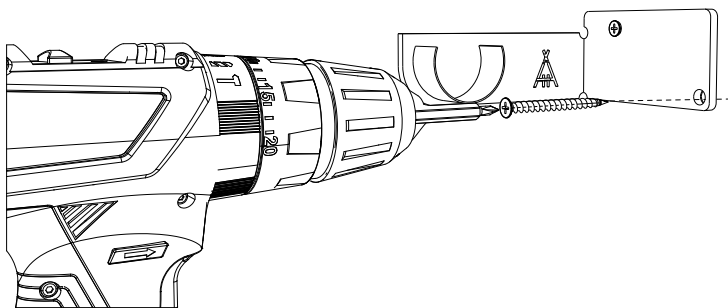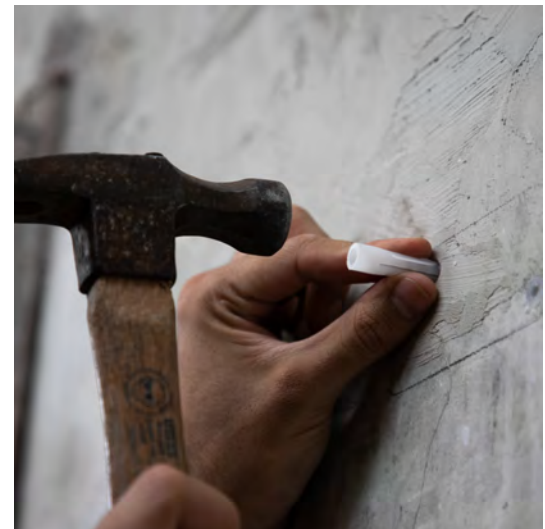

Picture 6

6


Overlap the **wall brackets** using the drill, drive in both screws to hold the first bracket.




**IF YOUR PIECE COMES IN TWO
OR MORE BOXES, GO TO STEP 12**

7

Measure the width of your **Caralarga Large Format** to install the second bracket. **Repeat steps 3-6**, making sure both brackets are at the same height.

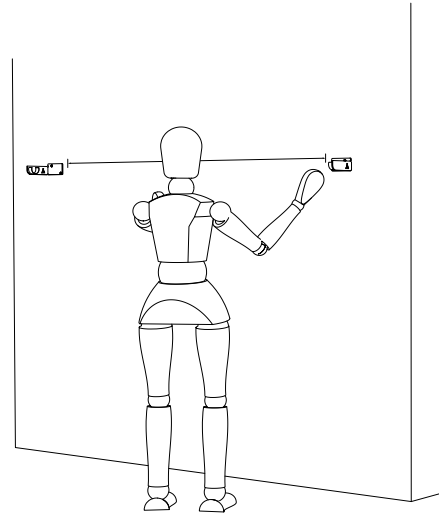

Picture 7

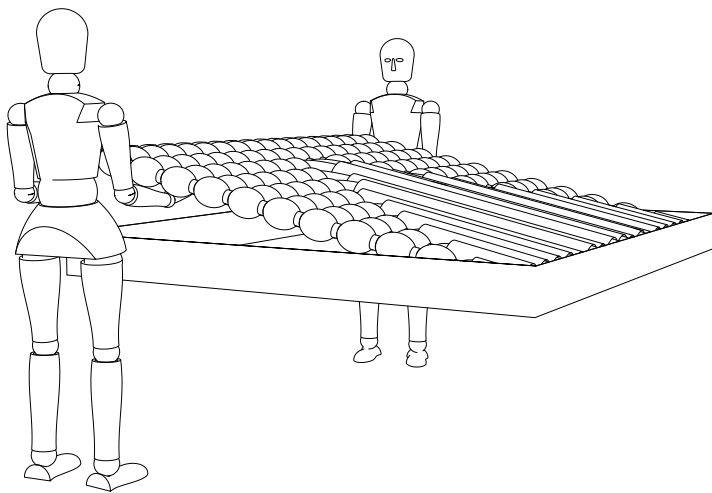

Picture 8


8

With the help of one or more people, carefully remove your **Caralarga Large Format** out of the box.




9

Transfer your **Caralarga Large Format** piece, rest the ends of the rod on the **wall brackets** and evenly arrange the strands along the length of the rod.

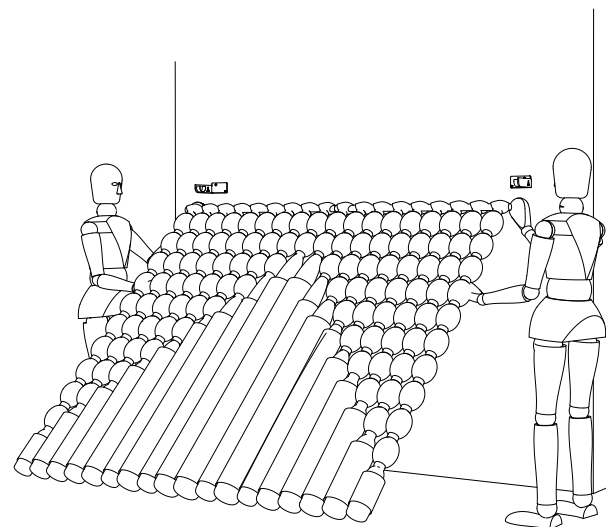

Picture 9



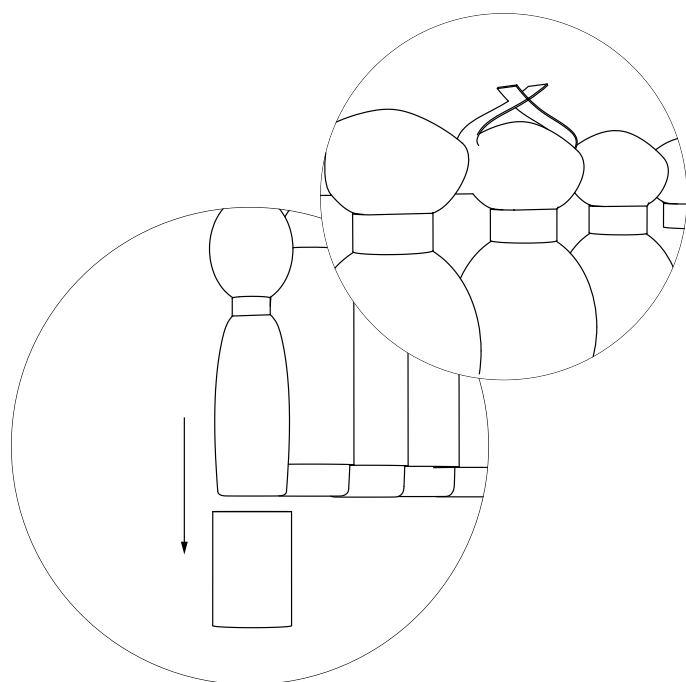


10

Remove the craft paper tubes from the raw cotton strands one by one. If necessary remove the cloth strings on the top of the piece

Picture 10


11


With a wide-bristle brush, brush the loose cotton strands to give them shape and remove any creases.

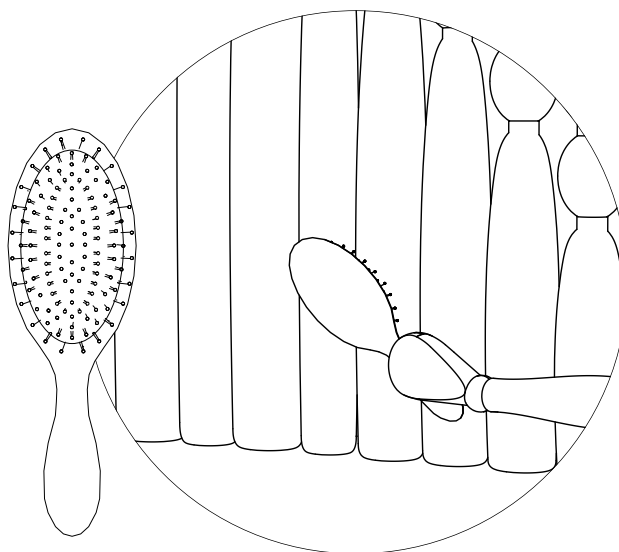

Picture 11

And your Caralarga Large Format is ready!

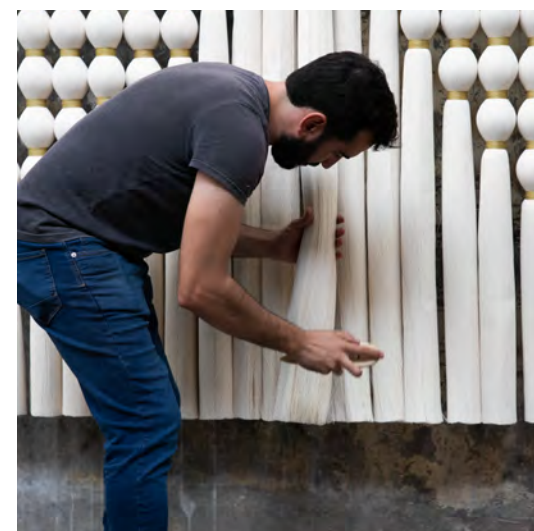


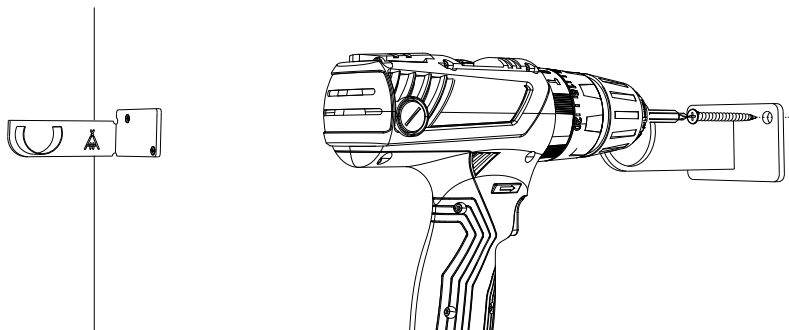

Picture 12


12

To install the central support, measure the width of your **Caralarga Large Format**, mark the center and position the **central support**, making sure it is at the same height as the **wall brackets**. Repeat step (4-6) for installation.

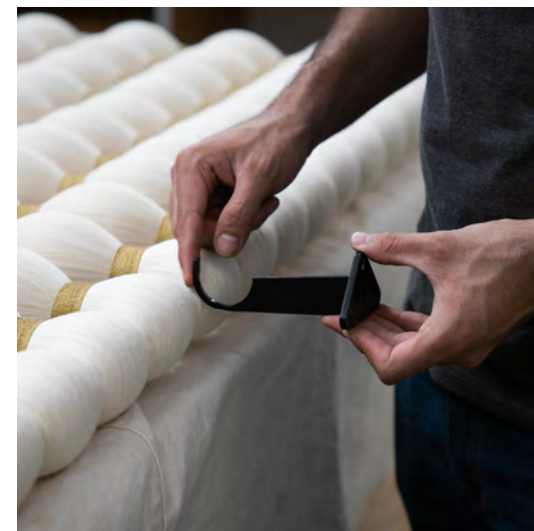


13

Carefully remove both pieces of your **Caralarga Large Format** out of the boxes and place them on a clean surface.

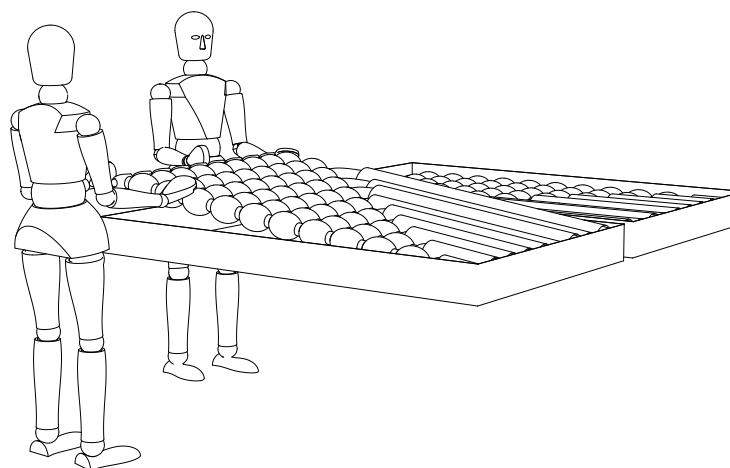

Picture 13

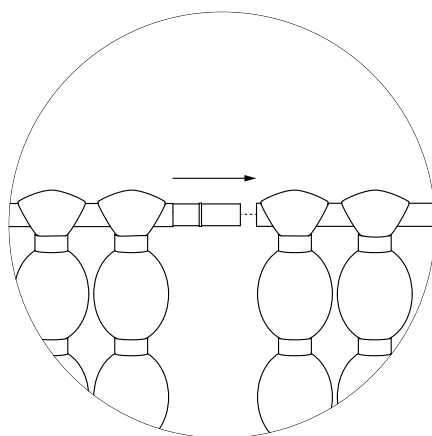

Picture 14

14

To join the pieces, use the metal couple in the order indicated on the box.



CONTINUE WITH STEP 9



Care Recommendations

The Caralarga pieces are made with natural materials and fiber which requires special care maintenance.

Remove the piece from its box within a maximum period of 5 days upon reception.

Install the piece out of direct sunlight and keep away from humidity.

Brush the cotton threads with a wide tooth comb or brush at least every six months.

To clean the piece or remove dust, use a clean and dry cloth.

Carefully vacuum the piece every four months to remove any dust that may accumulate.