



Components

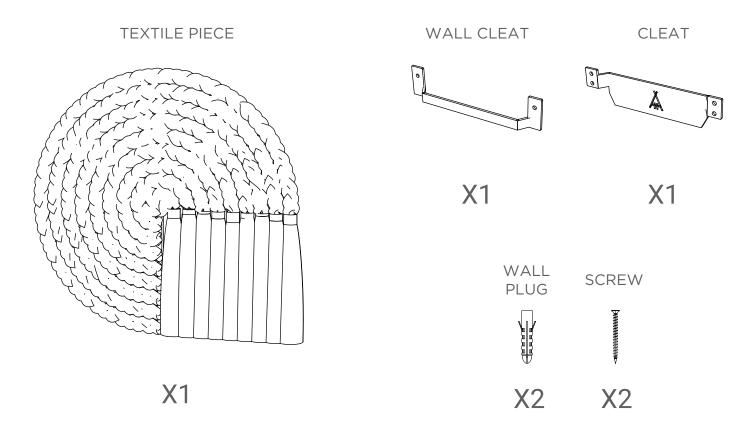


Installation Instructions

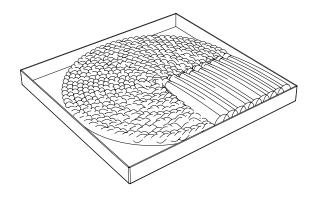

Picture 1

2


Once the wall where you will install your piece is clear, measure the location of your piece and make a mark. Once marked, use the **Wall Cleat**, a level, and a pencil to mark the corners and screw holes.

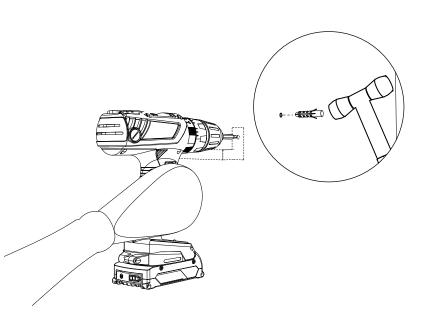

Picture III

1

Upon receiving the box, it is important to check that it is placed face up. Remove the piece and place it on a clean surface.

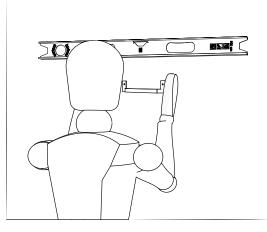

Picture II

3

Hold the drill firmly and drill the holes previously marked with the depth of the anchors.


Proceed to insert the anchors into the holes. Use a hammer if necessary

4

Overlap the **Wall Cleat** using the drill, drive in the screw to hold the bracket.



Picture iv

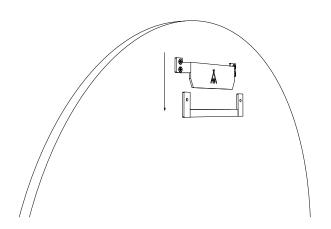

Picture v


5

Once the **Wall Cleat** is installed, load the piece (if necessary, with the help of one or more people) and connect the **Wall Cleat** to the **Cleat**.

6

Using a wide-bristle brush, brush the cotton to add volume and remove any potential imperfections in the thread.

And your Caralarga is ready!

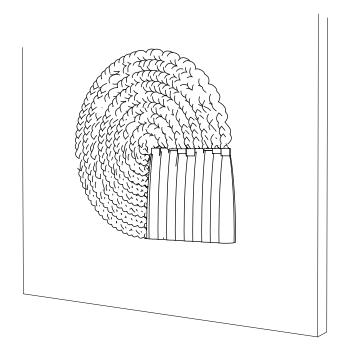

Picture vi



Care Recomendatios

The Caralarga pieces are made with natural materials and fiber which requires special care maintenance.

Remove the piece from its box within a maximum period of 5 days upon reception.

Install the piece out of direct sunlight and keep away from humidity.

Brush the cotton threads with a wide tooth comb or brush at least every six months.

To clean the piece or remove dust, use a clean and dry cloth.

Carefully vacuum the piece every four months to remove any dust that may accumulate.

