




The following manual can be used for the installation of the Wall Accents mentioned below:

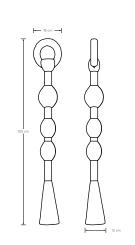


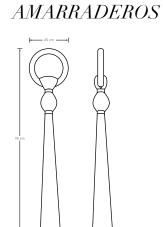


SATURNO

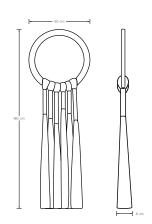





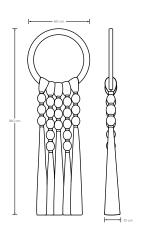



BRUJAS











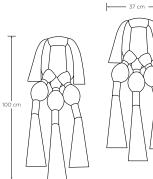

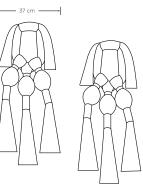


Components

TEXTILE PIECE



X1

WALL BRACKET




X1





X1 X1

Instalation Instructions

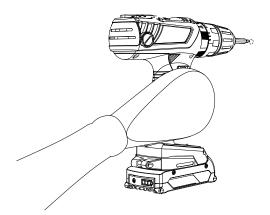

Picture 1

2

Proceed to insert the wall plugs into the holes. Use a hammer if necessary.



Picture III


4

Place the **Textile Piece** over the **Wall** bracket.

And your Caralarga Wall Accent is ready!

1


Once your wall is clear, measure from the floor to the desired height, with the help of a drill. Drill the pre-marked hole to the depth of the wall plug.

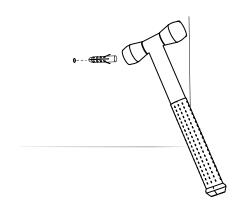

Picture 11

3

Overlap the **Wall bracket** using the drill, drive in the screw to hold the bracket.

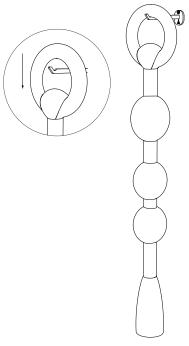

Picture iv



Care Recomendatios

The Caralarga pieces are made with natural materials and fiber which requires special care maintenance.

Remove the piece from its box within a maximum period of 5 days upon reception.

Install the piece out of direct sunlight and keep away from humidity.

Brush the cotton threads with a wide tooth comb or brush at least every six months.

To clean the piece or remove dust, use a clean and dry cloth.

Carefully vacuum the piece every four months to remove any dust that may accumulate.

