




**Specialized
ECU Repair**
European Car Computer Specialists

(954) 652-1496
www.ECUDOCTORS.com
941 NE 48TH ST.
OAKLAND PARK, FL 33334


**If your battery is dead and went flat, use this
Emergency Trunk & Frunk (Front Trunk) Release Procedure for
PORSCHE 911/996 & BOXSTER/986**

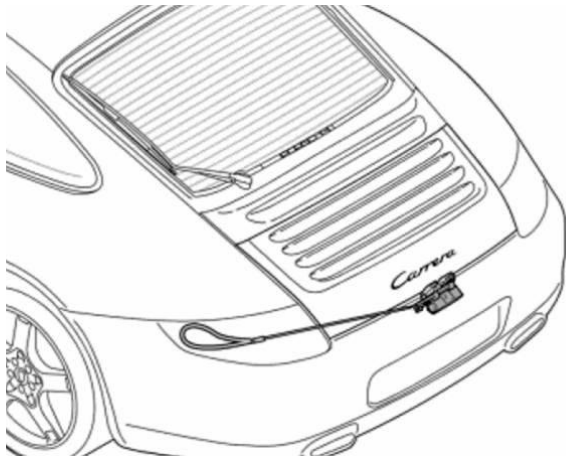

Rear Trunk release

Driver's Side:

- https://youtu.be/0_ZwmDOgri8
- <https://youtu.be/lnZ4i9eT06k>

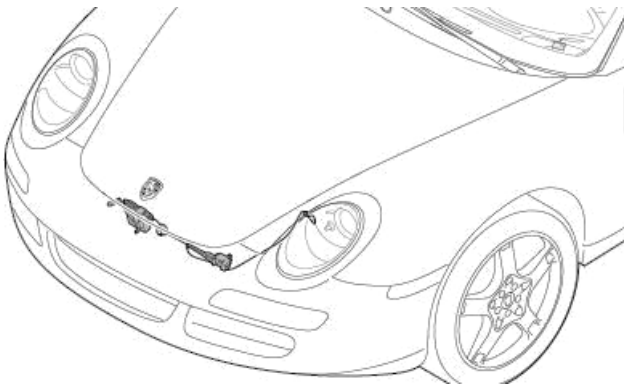

**Front hood / frunk release
(could be on either the driver or passenger side)**

Passenger Side:

- <https://youtu.be/4q9ltJLTg9o>
- <https://youtu.be/9o3X7DaHrxw>

Driver's Side:

- <https://youtu.be/CRjO1xJ-5DY>

This this what the cable that you are going to be pulling looks like.

