



soundskins®

1998-2013 Harley Davidson Road Glide Fairing Kit Installation Instructions

Preparation


Remove your outer fairing. Protect the fairing paint by either covering your work surface with a soft cloth or taping the paint with a high quality tape.

Then, prep the surface of your fairing. Thoroughly clean and degrease the inside to ensure the adhesive material sticks correctly.

Last, use a sharp razor to cut the kit pieces out of the main sheet.




Installation

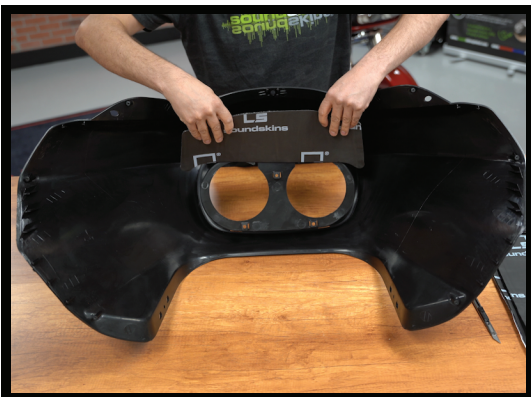

1. Start with panel 1. This piece will go in the top center of the fairing above the headlights.



2. Panels 2 will run along the top sides of the fairing above the fairing line, and panels 3 will run below pieces 2 under the fairing line.

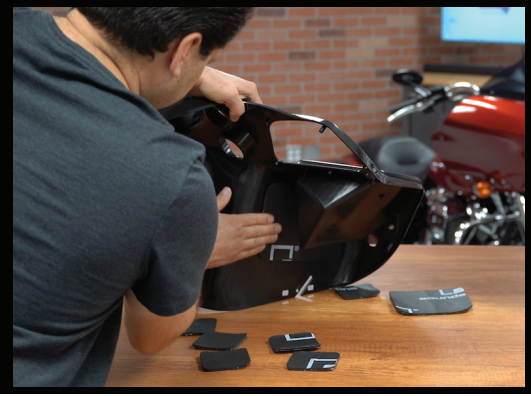

3. Panels 4 will go on the inner fairing behind the gloveboxes. Panel 5 pieces are optional and don't have specified locations. Use these squares wherever you can find room for them.

You're ready to hit the road!



Soundskins USA
13452 Alondra Blvd, Cerritos, Ca 90703
Phone: 562.689.5151
Email: usa@soundskinsglobal.com
www.SoundSkinsGlobal.com