



soundskins®


1998-2013 Harley Davidson Street Glide / Electra Glide Fairing Kit Installation Instructions

Preparation


Remove your outer fairing. Protect the fairing paint by either covering your work surface with a soft cloth or taping the paint with a high quality tape.

Then, prep the surface of your fairing. Thoroughly clean and degrease the inside to ensure the adhesive material sticks correctly.


Last, use a sharp razor to cut the kit pieces out of the main sheet.

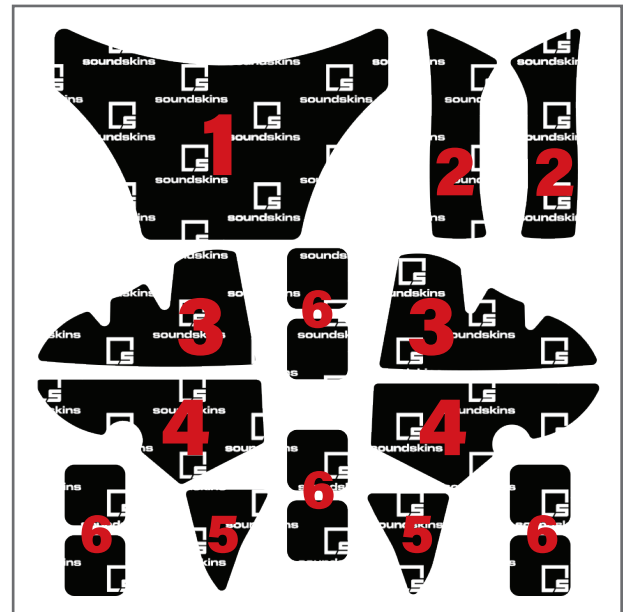

Installation

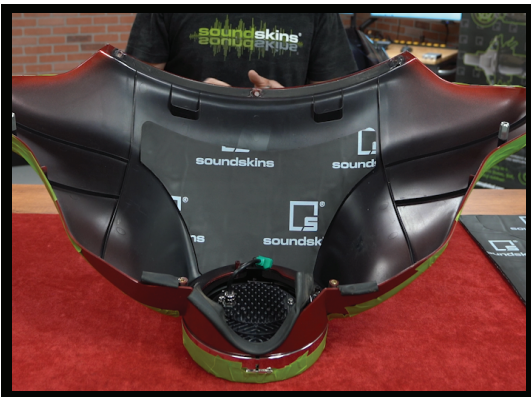


1. Start with piece 1 and place it in the center of the fairing kit above the headlight.

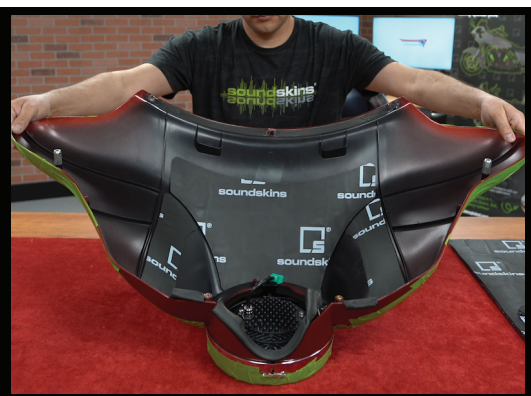

2. Pieces 2 will go underneath each wing of piece 1.



3. Piece 3 and 4 will go on the upper left and right sides of the fairing. Place piece 3 on the top and piece 4 on the bottom.

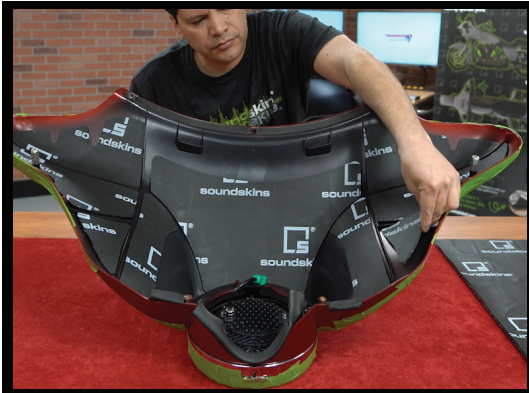

4. Pieces 6 do not have dedicated locations, so you can use them wherever you see space for them in your fairing or anywhere else in your bike.

You're ready to hit the road!



Soundskins USA
13452 Alondra Blvd, Cerritos, Ca 90703
Phone: 562.689.5151
Email: usa@soundskinglobal.com
www.SoundSkinsGlobal.com