


2014+ Harley Davidson Saddlebag Kit Installation Instructions

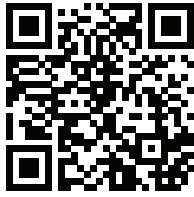

Scan this code to watch the installation instructional video!

Fit

This kit fits both standard factory bags, extended bags, as well as aftermarket stretched bags. The kit can be used alone, but it is intended to be covered by a custom bag liner. Bag liners are common and readily available from many sources. Multi sectioned liners should be used so that the thickness of the sound deadener can be accounted for. Pre-molded bag liners may have fitting issues and may need to be modified.

Preparation


If you have speakers or amplifiers mounted inside your bags, you will need to account for them when installing this kit.

Thoroughly clean and degrease the inside of both bags. SoundSkins material has a self adhesive backing that will permanently bond to the bag once in place, so be careful when you position the material, as it may be difficult to get it back off once in place. The material can be repositioned if it is not pressed in place.

Sheet 1

Sheet 2

Sheet 3

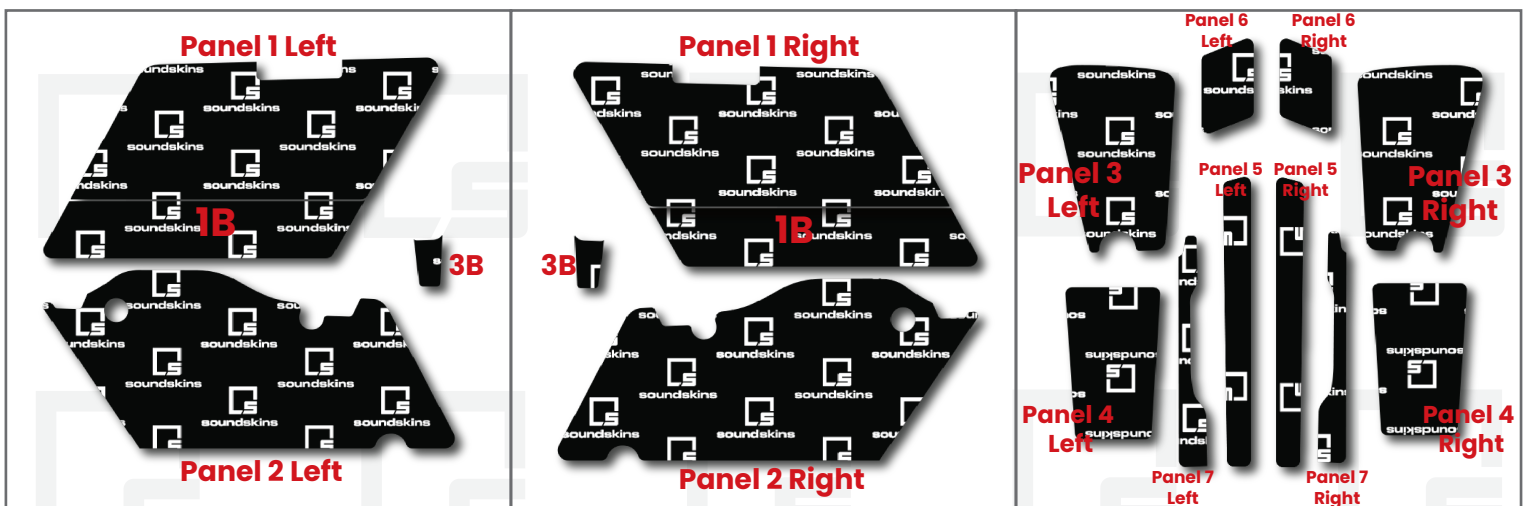

Installation

Step 1

Remove the backing from Panel #2. This panel will cover the inside wall of the bag that faces the wheel of the bike. Position panel #2 so the hole for the front bag mounting point lines up.

Be aware of the shock hump inside the bag and line up the rear bag mounting point with the provision in the panel. Once the panel is positioned, firmly press the entire panel in place.

Step 2

Remove the backing from panel 1B. This panel will cover the lower part of the inside wall of the bag that faces out, away from the bike (the hinge side of the bag). Remove the backing from panel #1 and place the panel above 1B. Panel 1 may overlap 1B depending on your bag type.

Position this panel so that the notch on the top of the panel clears the hinge mounting area of the bag and so that the front and rear of the panel is evenly positioned in the bag. The panel should come right up to the underside of the lip/rim of the bag. Be sure that the SoundSkins material does not overhang the top of the bag so it won't interfere with the lid gasket.

Step 3

Remove the backing from Panel #3 and position the panel on the front wall of the bag. Be aware of the panels position relative to panels #1 and #2. Position it evenly between the two. Panel 3B is only used on aftermarket stretched bags and is not used on factory extended bags or standard bags

Step 4

Remove the backing from panel #4 and position the panel on the rear wall of the bag. Pay attention to the position of this panel relative to panels #1 and #2.

Step 5

Remove the backing and position panel #5 at the bottom of the bag nearest the outside wall of the bag

Step 6

Remove the backing from panel #6 and place it at the bottom/rear of the bag on aftermarket stretched bags only. This part is not used on factory standard or extended bags.

Step 7

Remove the backing of panel #7 and place it at the bottom of the bag nearest the wheel side of the bag.



SoundSkins Global USA
(877)211-5597
usa@SoundSkinsGlobal.com
www.SoundSkinsGlobal.com

f i y t @soundskinsglobal

©2023 SoundSkins Global, All Rights Reserved