



# soundskins®

## Jeep Door Kit Instructions

### Tools needed for installation:


- Panel/trim tool
- Roller
- Screw driver
- Rubber wedge
- Microfiber cloth
- Acetone or cleaning solution
- Razor blade



1. Start by locating the fastening hardware on the door panel, take the appropriate screw driver and remove.



2. Once all the screws are removed you can take off the door panel gently watching that you don't break any of the clips or mounting hardware. Pull the panel away slowly and unplug any electrical connections.

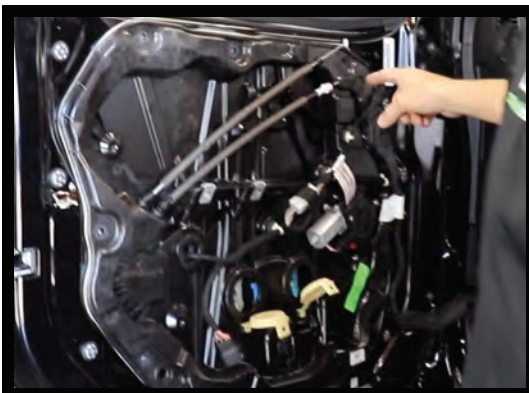


3. You will find an insert that needs to be removed, with mounting screws and cables that control door handle and locking mechanism. Slowly pull the insert away and pull through the cables to give yourself some slack.



4. Next you need to prop the window up by either a rubber wedge or simply put a screw driver through the bottom hole as illustrated.



5. Now you are ready to prep the metal surface using a microfiber cloth, Acetone (use a breathing mask), and wipe away any moisture, oil, debris or etc. Then let air dry for an appropriate time. The point is to get the surface clean to ensure material glue contact.

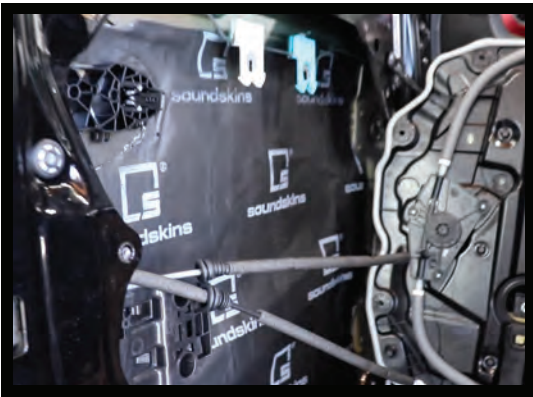

6. When the surface is dry and clean, locate the piece of the kit with the label on the back that coincides with the door you are working on. Make sure it lines up correctly before pulling the white cover paper off. After you confirm the right piece, pull off the backing paper and start placing the material at the top, working your way down with a roller. Make sure that the material is rolled down completely and no air is trapped. Use a razor blade point or household needle to release any air. Repeat these steps for all door panels.

**YOU'RE NOW READY TO HIT THE ROAD!**

**Soundskins USA**  
13452 Alondra Blvd, Cerritos, Ca 90703  
Phone: 877.211.5597  
Email: [team@soundskinsglobal.com](mailto:team@soundskinsglobal.com)  
[www.SoundSkinsGlobal.com](http://www.SoundSkinsGlobal.com)