



soundskins®


1998-2013 Harley Davidson Saddlebag Speaker Lid Kit Installation Instructions

Preparation

You must prep the surface of your saddlebag speaker lids. Thoroughly clean and degrease the inside of both lids to ensure the adhesive material sticks correctly.

Next, you will want to protect the lid paint. You can either cover your work surface with a soft cloth or tape your lids with a high quality tape.

Last, use a sharp razor to cut the kit pieces out of the main sheet.

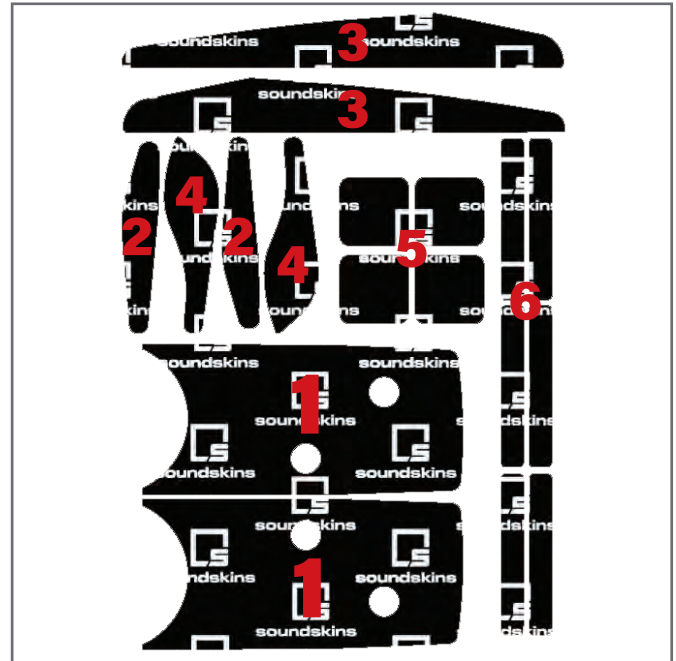

Installation



1. Start with piece 1. Mock up the holes on the piece to the fasteners on the top side of the lid. Center the piece over the fasteners, peel off the white backing paper, and apply.



2. Piece 2 will go along the lid edge that faces the wheel. The angle of the piece will mimic the angle of the side of the lid, mock it up before applying to ensure you have the piece in the proper area. Peel off the backing and apply the piece.



3. Next, remove the speaker with a screwdriver so you can apply the rest of the pieces.



4. Piece 3, the longest side piece, goes along the lid edge that faces away from the bike (the hinge side). Mock up where the piece will go to ensure it is on the correct side, peel off the white backing paper, and apply.



5. Piece 4 will go along the speaker on the lid edge facing the wheel. Mock up the piece before applying, then peel the backing paper off and apply.



6. Reinstall your speaker and replace your lid onto the saddlebag, and you are good to go. Pieces 5 and 6 are bonus pieces that you can use to sound deaden any other part of your vehicle that you wish.

You're ready to hit the road!

Soundskins USA

13452 Alondra Blvd, Cerritos, Ca 90703

Phone: 562.689.5151

Email: usa@soundskinsglobal.com

www.SoundSkinsGlobal.com