

Tools needed for installation:

- T15 and T20 torx bit
- Panel/trim tool
- Allen wrench
- Deep well 10 mm socket
- Acetone or cleaning solution
- Shop vacuum
- Microfiber cloth
- Roller


Scan this code to watch
the full instructional video!



Kit Layout

Driver Side Front Floor
Passenger Side Front Floor
Rear Floor


**1D & 2D are optional pieces for 2023 and newer models*

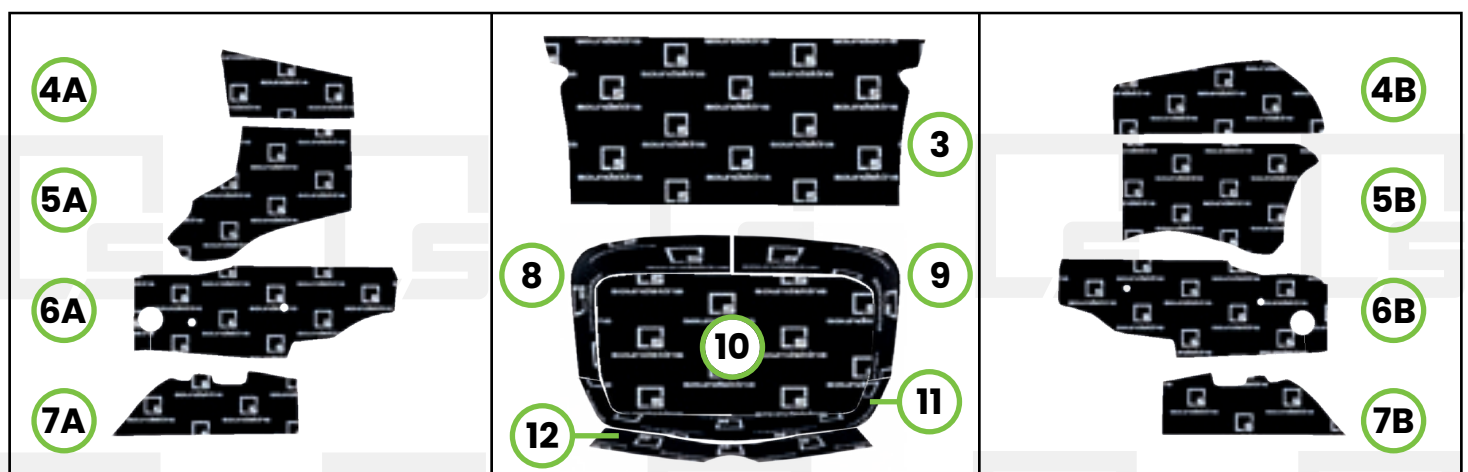**Driver Side Fender &
Wheel Well**
**Trunk Floor, Tub, &
Lower Hatch Panel**
**Passenger Side Fender &
Wheel Well**


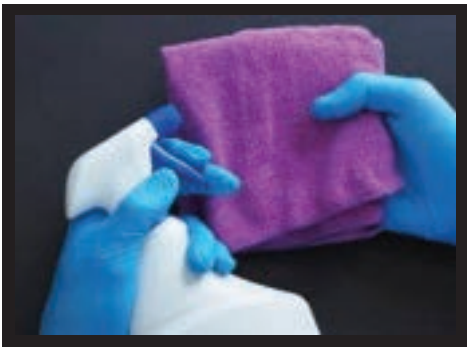
Trunk Area Installation



1. Fold the back seats all the way forward. Remove the trunk well and side carpeting - no tools are required. Fold the foam in the upper trunk carpeting forward and hold it in place with a weighted object.



2. Next, pop out and unplug the side panels with a panel tool. You'll need a T15, a T20, and a deep well 10mm socket to remove the subwoofer and amplifier in the passenger side fender well (if applicable).




3. Before starting to install the kit, it's essential to ensure the surfaces of installation are clean. Use a microfiber cloth and acetone or another suitable cleaning solution to wipe down the surfaces. As needed, use a shop vacuum to clear any dirt or debris, and allow the surfaces to dry completely.



4. You can now begin installing the pieces. Start with the trunk tub (pieces 8-11). Mock up the pieces before removing the backing paper to ensure proper fitment. Tear off a couple inches of the backing paper on one side, and then tack the piece into place, removing the backing paper as you go until the entire piece is installed.



5. Next, install piece 12, which goes on the trunk lower hatch panel, right under the trunk door opening. Repeat the same installation process for this piece.

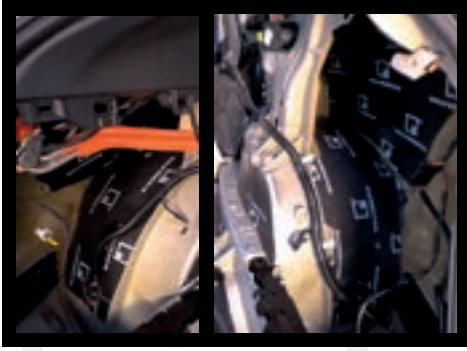

6. Move on to the pieces for the fender wells (pieces 4-5) and wheel wells (pieces 6-7). Before peeling off the backing, ensure that the pieces are aligned along the edges to ensure proper fitment. Piece 4A should extend up behind the corner next to the charging port and module.



7. The last part of the trunk section is the upper trunk floor (piece 3), which is installed at the topmost floor section behind the rear seats. Repeat the same process to install this piece.




8. The trunk section is complete. Double check that none of the holes are blocked for the mounting hardware and all the material has solid contact with no air bubbles. Reverse the disassembly process and ensure everything fits back into place, then move on to the cabin floor section.

Cabin Floor Installation



9. Now, move on to the cabin floor section. Remove the door seals and the A and B pillar panels using a T20 and T25 torx bit. Then remove the rear floor carpeting by taking off all the plugs and the plastic piece on the lower center console on the rear that reveals a carpet keeper clip to be removed (shown in the photo to the left).

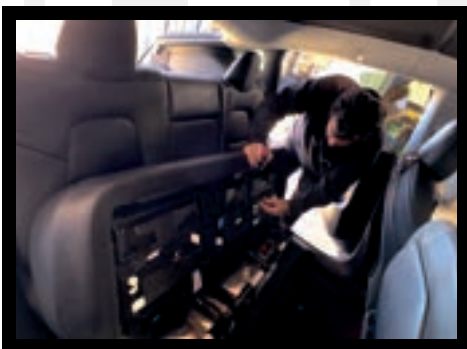

10. Then, unscrew the bolts under the rear seats with an Allen wrench and remove the backseat bench. Slide the front seats backward and remove the front two bolts, then slide the seats forward to remove the rear two bolts.




11. In the front, remove the lower dashboard trim on the driver and passenger side. The driver side has two T25 torx bits and keeper clips, and the passenger side only has keeper clips. Then, remove the footwell duct on the passenger side, and unclip the footwell duct on the driver side (it is difficult and unnecessary to remove the piece entirely on this side).



12. Next, tilt the seat rails up to remove the carpet clips on the front and back and to remove the carpeting. In the front driver section, you will need to make a small 1" relief cut in the lower right section, otherwise you would need to remove the entire center console to remove this carpet piece (example photo shown on the left).



14. Now, install the rear floor pieces (1C-2C). There is one piece on each side, and they should align perfectly with the body lines in the middle. Make sure to carefully align and secure each section as you progress.

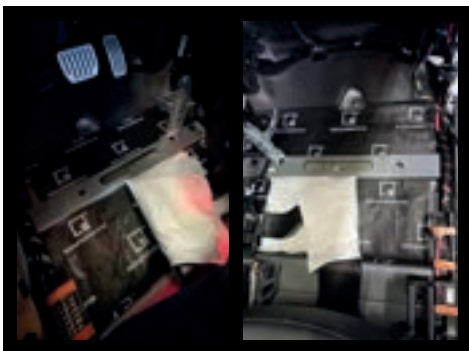

15. Move on to the front floor section. Pieces 1A and 1B go at the topmost floor sections, while 2A and 2B will be placed underneath the plastic vent pieces. For the driver side, prop the duct piece up or have help holding it up during the kit piece installation. For 2023 and newer models, we have optional add-on pieces, 1D (driver side) and 2D (passenger side). These pieces will be placed on the bar between the A & B pieces.



16. After all the pieces are installed, double check that none of the holes are blocked for the mounting hardware and all the material has solid contact with no air bubbles. Then, reverse the disassembly process - replace footwell ducts, carpets, center console panels, pillars, door seals, bolts, seats, plugs, etc., and enjoy your quiet new ride!