



soundskins®

Jeep JL Trunk Kit Instructions

Tools needed for installation:

- Socket tool set & extension
- Panel/trim tool
- Roller
- Clip removal tool
- Screw driver
- Microfiber cloth
- Acetone or cleaning solution
- Shop vacuum
- Razor blade

Scan this code to watch the full instructional video!



1. Start by unclipping the side panels on your wheel wells. Begin from the top of the side panels. If you have a factory subwoofer, remove the torque bolt at the front to unplug the subwoofer.

Then, remove the main floor piece by sliding it back and up, and remove the side carpet pieces by removing the 6 clips that cover the tops of the torque bolts.



2. Next, unclip the flap/panel that sits on the back of the backseat. It will be tight, so use a clip removal tool or the back side of a hammer to wedge the clips out. Once this panel is off, it will reveal the 3 bolts holding down the backseats of the Jeep.




3. To remove the backseats, you will need an 18mm socket to remove the bolts. Take out the 2 bolts in the back and the bolts in front of the backseats. When all bolts are out, remove the smaller seat first, then the larger seat. Be sure you also remove the seatbelt bolts. Then, remove the carpet under the backseat area.



4. Now that your car's metal surface is exposed in the correct area, prep the metal surface for application. Use a shop vacuum if necessary, then use a microfiber cloth and Acetone (use a breathing mask). Wipe away any moisture, oil, debris, etc. Then let it air dry for an appropriate amount of time. The point is to get the surface clean to ensure material glue contact.



5. Start installing the kit by mocking up the wheel well pieces. There is a difference between the left and right wheel wells, and you will have to unscrew some plugs on both wheel well sides. Make sure it lines up correctly before you pull the backing paper off and start rolling the material down using a roller. Make sure the material is applied evenly without any air bubbles. Use a razor blade point or household needle to release any air pockets.

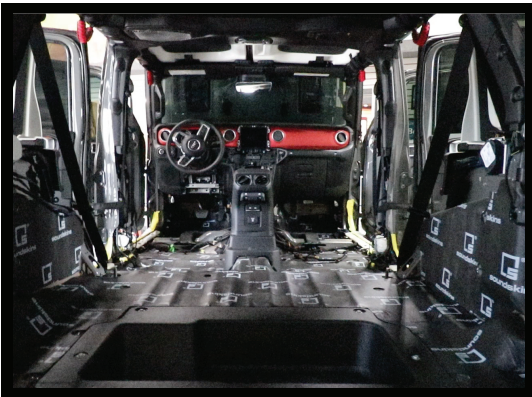

6. Repeat these steps for all pieces, moving on to the main trunk floor piece, then the smaller floor pieces. After all pieces are installed, double check that no holes are blocked for the mounting hardware and all the material has solid contact. Last, replace the carpet, seats, and panels and tighten all the bolts securely.

YOU'RE NOW READY TO HIT THE ROAD!

Soundskins USA
13452 Alondra Blvd, Cerritos, Ca 90703
Phone: 877.211.5597
Email: team@soundskinsglobal.com
www.SoundSkinsGlobal.com