



soundskins

SPRINTER

2019+

13 PIECE CUSTOM CUT PRO KIT

SKU: SSK-MBSPR4DR

Recommended Installation Instructions

A. Prepping the Surface

After removing interior door panels, you are ready to clean the metal areas that will be insulated. If the metal has "new" look without imperfections, then take a microfiber cloth and wipe away any dust and debris. If the metal is showing signs of age like rust, we recommend using Acetone with a breathing mask to wipe off debris and loose particles. A shop vacuum might be needed to remove loose debris on the floorboard.


B. Installing Panels

Now that you have a clean surface, you are ready to start applying the sheets. We recommend using a roller to release air pockets that might be lingering from trapped air. You want to make sure that you have rolled those out to the edge and all the material has a good seal to the metal surface. Make sure all pieces are installed and inspected before reinstalling the interior.

INSTALLATION VIDEO



SCAN CODE FOR "HOW TO" VIDEO!

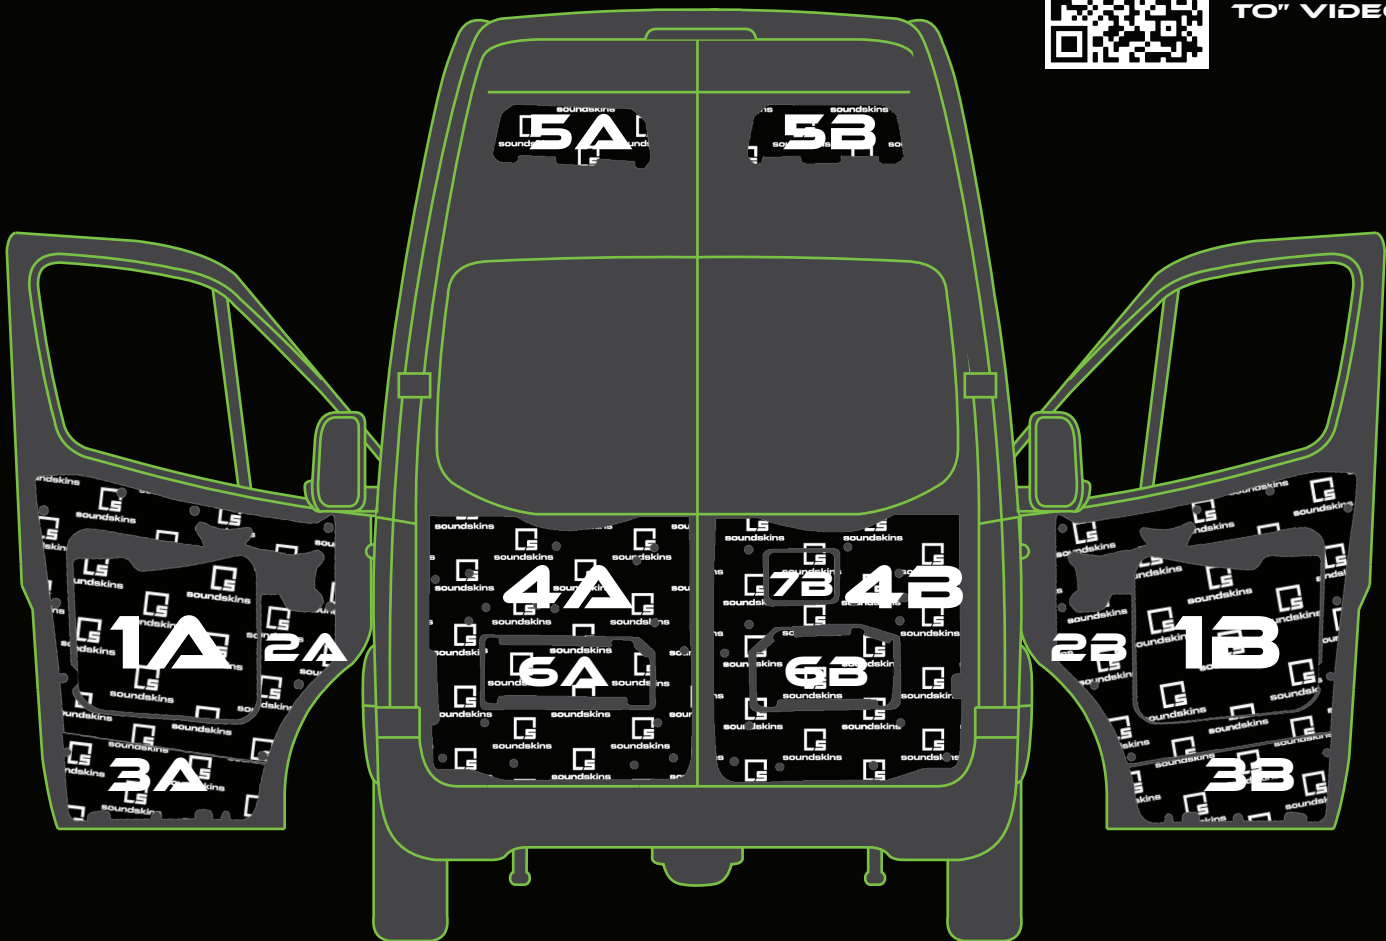

- 1) Front Door Insert
- 2) Front Door Panel
- 3) Front Door Lower Panel
- 4) Rear Door Panel
- 5) Rear Door Upper Insert
- 6) Rear Door Lower Insert
- 7) Passenger Rear Door Handle Insert