



soundskins



BRONCO

2021+

14 PIECE CUSTOM CUT PRO KIT

INSTALLATION VIDEO



SCAN CODE FOR "HOW TO" VIDEO!


Recommended Installation Instructions

A. Prepping the Surface

After removing interior door panels, you are ready to clean the metal areas that will be insulated. If the metal has a "new" look without imperfections, then take a microfiber cloth and wipe away any dust and debris. If the metal is showing signs of age like rust, we recommend using Acetone with a breathing mask to wipe off debris and loose particles. A shop vacuum might be needed to remove loose debris on the floorboard.

B. Installing Panels

Now that you have a clean surface, you are ready to start applying the sheets. We recommend using a roller to release air pockets that might be lingering from trapped air. You want to make sure that you have rolled those out to the edge and all the material has a good seal to the metal surface. Make sure all pieces are installed and inspected before reinstalling the interior.

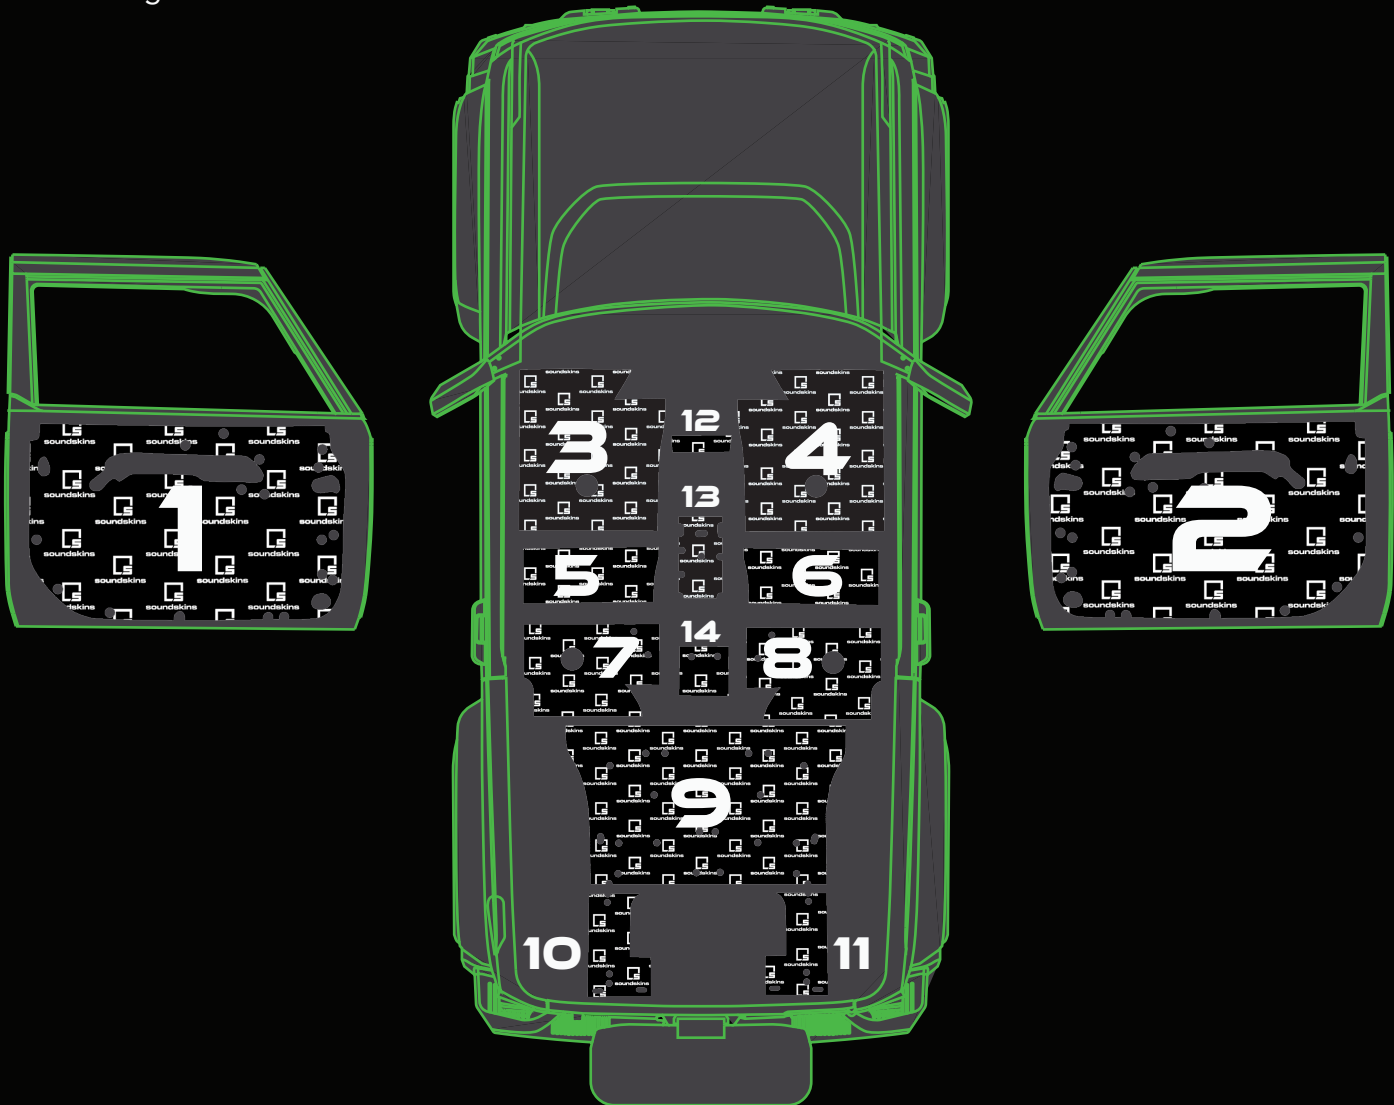

- 1) Driver Door Panel
- 2) Passenger Door Panel
- 3) Driver Front Floor
- 4) Passenger Front Floor
- 5) Driver Middle Floor
- 6) Passenger Middle Floor
- 7) Driver Lower Floor
- 8) Passenger Lower Floor
- 9) Rear Floor Panel
- 10) Driver Cargo Piece
- 11) Passenger Cargo Piece
- 12) Center Console Upper
- 13) Center Console Middle
- 14) Center Console Lower