

# soundskins CAMARO 2010-2015

9 Piece Custom Cut PRO KIT



Recommended Installation Instructions

**INSTALLATION VIDEO**


Scan code for "how to" video!

## A. Prepping the Surface

After removing interior door panels & carpet, you are ready to clean the metal areas that will be insulated. If the metal has "new" look without imperfections, then take a microfiber cloth and wipe away any dust and debris. If the metal is showing signs of age like rust, then we recommend using Acetone with a breathing mask to wipe off debris and loose particles. A shop vacuum might be needed to remove loose debris on the floorboard.

## B. Installing Panels


Now that you have a clean surface, you are ready to start applying the sheets. We recommend using a roller to release air pockets that might be lingering from trapped air. You want to make sure that you have rolled those out to the edge and all the material has a good seal to the metal surface. Make sure all pieces are installed and inspected before reinstalling the interior.

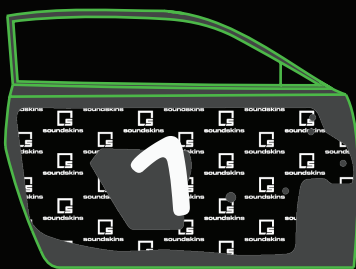

Driver Side Door Pc



Driver Side Door Panel Insert

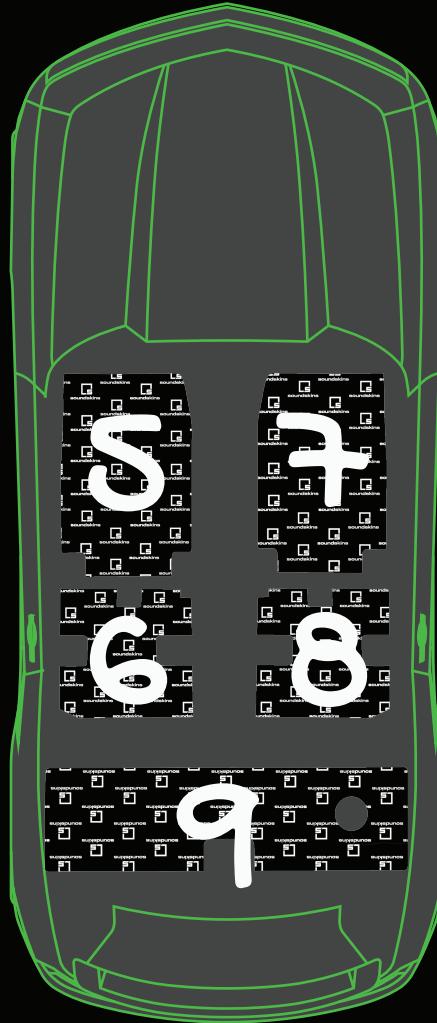

5 Pc Floor Board Coverage



Passenger Side Door Pc



Passenger Side Door Panel Insert

- 1) Driver Door Main Piece    2) Driver Door Panel Insert    3) Passenger Door Main Piece
- 4) Passenger Door Panel Insert    5) Driver Front Floor Panel    6) Driver Middle Floor Panel
- 7) Passenger Front Floor Panel    8) Passenger Middle Floor Panel    9) Rear Floor Panel