

oundskins

INSTALLATION VIDEO

15 PIECE CUSTOM CUT PRO KIT

Recommended Installation Instructions


A. Prepping the Surface


After removing interior door panels you are ready to clean the metal areas that will be insulated. If the metal has "new" look without imperfections then take a microfiber cloth and wipe away any dust and debris. If the metal is showing signs of age like rust then we recommend using Acetone with a breathing mask to wipe off debris and loose particles. A shop vacuum might be needed to remove loose debris on the floorboard.


B. Installing Panels


Now that you have a clean surface you are ready to start applying the sheets. We recommend a roller to release air pockets that might be lingering from trapped air. You want to make sure that you have rolled those out to the edge and all the material has a good seal to the metal surface. Make sure all pieces are installed and inspected




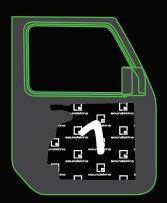

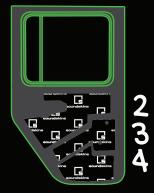

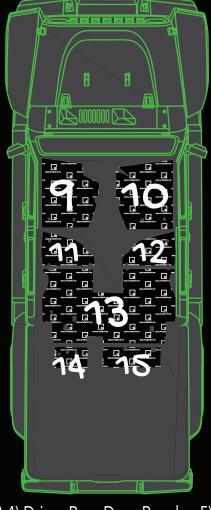

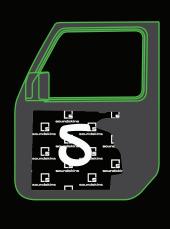

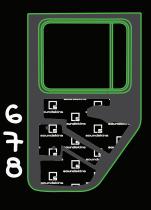

- 1) Driver Front Door Panel
- 2,3,4) Driver Rear Door Panel
- 5) Passenger Front Door Panel

- 6,7,8) Passenger Rear Door Panel
- 9) Driver Floor Front Panel
- 10) Passenger Front Floor Panel

- 11) Driver Middle Floor Panel 12) Passenger Middle Floor Panel
 - 13) Rear Floor Panel

- 14) Driver Backseat Piece 15) Passenger Backseat Piece