



**soundskins**

**389 / 386 / 388**

SKU: SSK-PB389FLR

**9 PIECE CUSTOM CUT PRO KIT**



**Recommended Installation Instructions**

**A. Prepping the Surface**

After removing interior door panels you are ready to clean the metal areas that will be insulated. If the metal has "new" look without imperfections then take a microfiber cloth and wipe away any dust and debris. If the metal is showing signs of age like rust then we recommend using Acetone with a breathing mask to wipe off debris and loose particles. A shop vacuum might be needed to remove loose debris on the floorboard.

**B. Installing Panels**

Now that you have a clean surface you are ready to start applying the sheets. We recommend a roller to release air pockets that might be lingering from trapped air. You want to make sure that you have rolled those out to the edge and all the material has a good seal to the metal surface. Make sure all pieces are installed and inspected before reinstalling the interior.

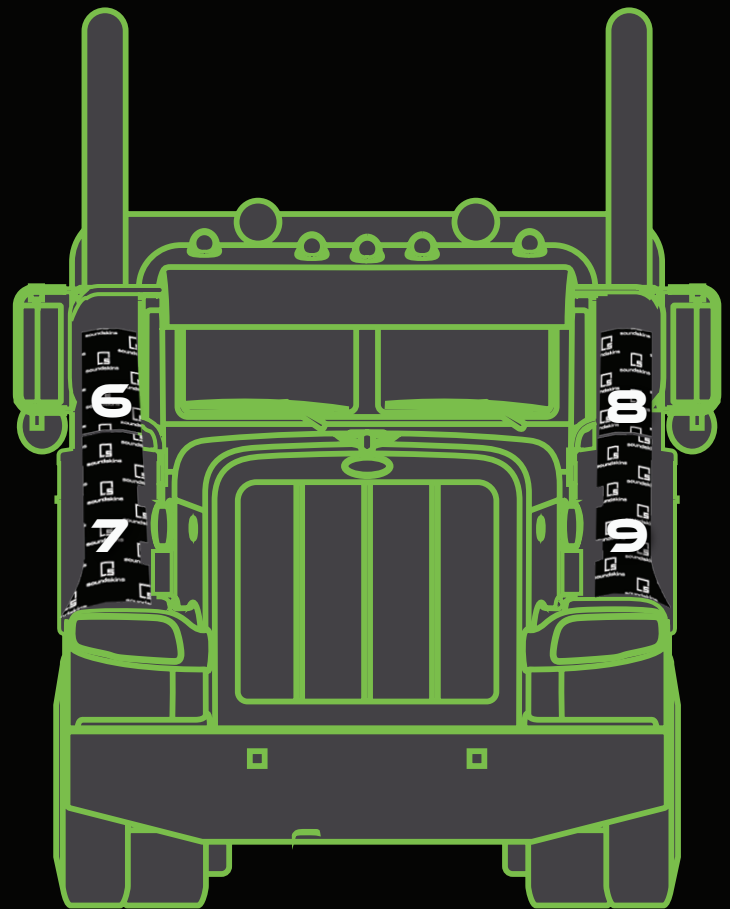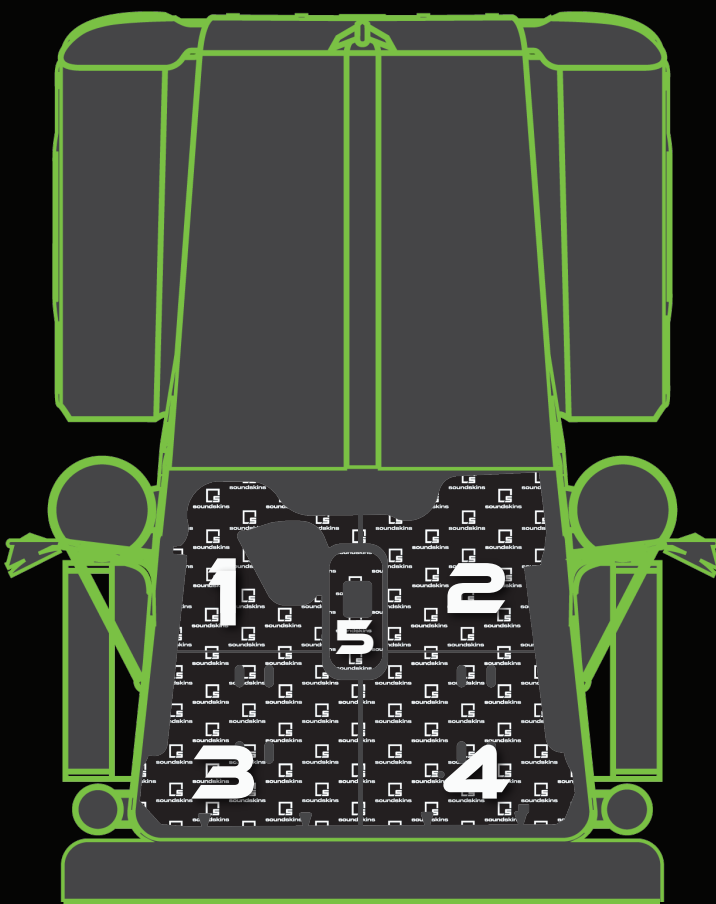

- 1) Driver Upper Floor Pc    2) Passenger Upper Floor Pc    3) Driver Lower Floor Pc
- 4) Passenger Lower Floor Pc    5) Shifter Panel Pc    6) Passenger Upper Cab Corner Pc
- 7) Passenger Lower Cab Corner Pc    8) Driver Upper Cab Corner Pc    9) Driver Lower Cab Corner Pc