



# soundskins

## MODEL Y

### 2021+

SKU: SSK-TESLAY

### 22 PIECE CUSTOM CUT PRO KIT

#### Recommended Installation Instructions

##### A. Prepping the Surface

After removing interior door panels, you are ready to clean the metal areas that will be insulated. If the metal has a "new" look without imperfections, then take a microfiber cloth and wipe away any dust and debris. If the metal is showing signs of age like rust, we recommend using Acetone with a breathing mask to wipe off debris and loose particles. A shop vacuum might be needed to remove loose debris on the floorboard.


##### B. Installing Panels

Now that you have a clean surface, you are ready to start applying the sheets. We recommend using a roller to release air pockets that might be lingering from trapped air. You want to make sure that you have rolled those out to the edge and all the material has a good seal to the metal surface. Make sure all pieces are installed and inspected before reinstalling the interior.

#### INSTALLATION VIDEO



SCAN CODE FOR "HOW TO" VIDEO!

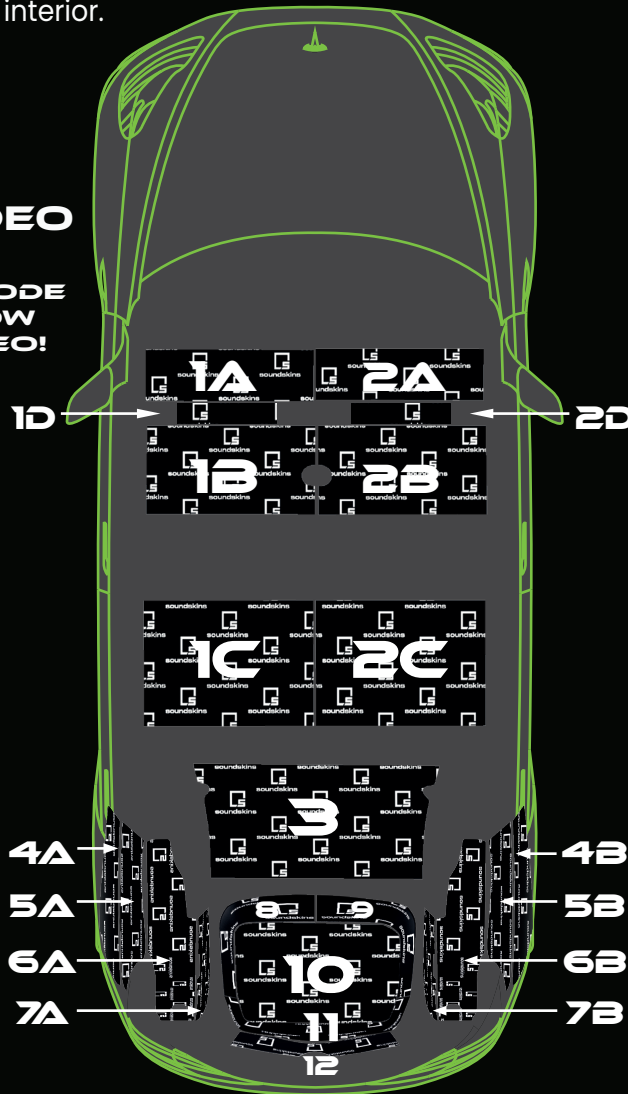

- 1a) Driver Front Floor Top Piece    1b) Driver Front Floor Bottom Piece    1c) Driver Rear Floor Piece
- 1d) Optional 2023+ Driver Front Floor Middle Piece    2a) Passenger Front Floor Top Piece    2b) Passenger Front Floor Bottom Piece
- 2c) Passenger Rear Floor Piece    2d) Optional 2023+ Passenger Front Floor Middle Piece    3) Trunk Top Floor Piece
- 4a) Driver Top Fender Well Piece    4b) Passenger Top Fender Well Piece    5a) Driver Lower Fender Well Piece
- 5b) Passenger Lower Fender Well Piece    6a) Driver Wheel Well Top Piece    6b) Passenger Wheel Well Top Piece
- 7a) Driver Wheel Well Side Piece    7b) Passenger Wheel Well Side Piece    8) Driver Trunk Tub Top Wall Piece
- 9) Passenger Trunk Tub Top Wall Piece    10) Trunk Tub Floor Piece    11) Trunk Lower Wall Piece    12) Trunk Lower Hatch Panel