



soundskins

WRANGLER

2018+

13 Piece Custom Cut PRO KIT



Recommended Installation Instructions


INSTALLATION VIDEO
Scan code for "how to" video!

A. Prepping the Surface

After removing interior door panels & carpet you are ready to clean the metal areas that will be insulated. If the metal has "new" look without imperfections then take the microfiber cloth provided and wipe away any dust and debris. If the metal is showing signs of age like rust then we recommend using Acetone with a breathing mask to wipe off debris and loose particles. A shop vacuum might be needed to remove loose debris on the floorboard.

B. Installing Panels

Now that you have a clean surface you are ready to start applying the sheets. We have provided a roller to release air pockets that might be lingering from trapped air. You want to make sure that you have rolled those out to the edge and all the material has a good seal to the metal surface. Make sure all pieces are installed and inspected before reinstalling the interior.

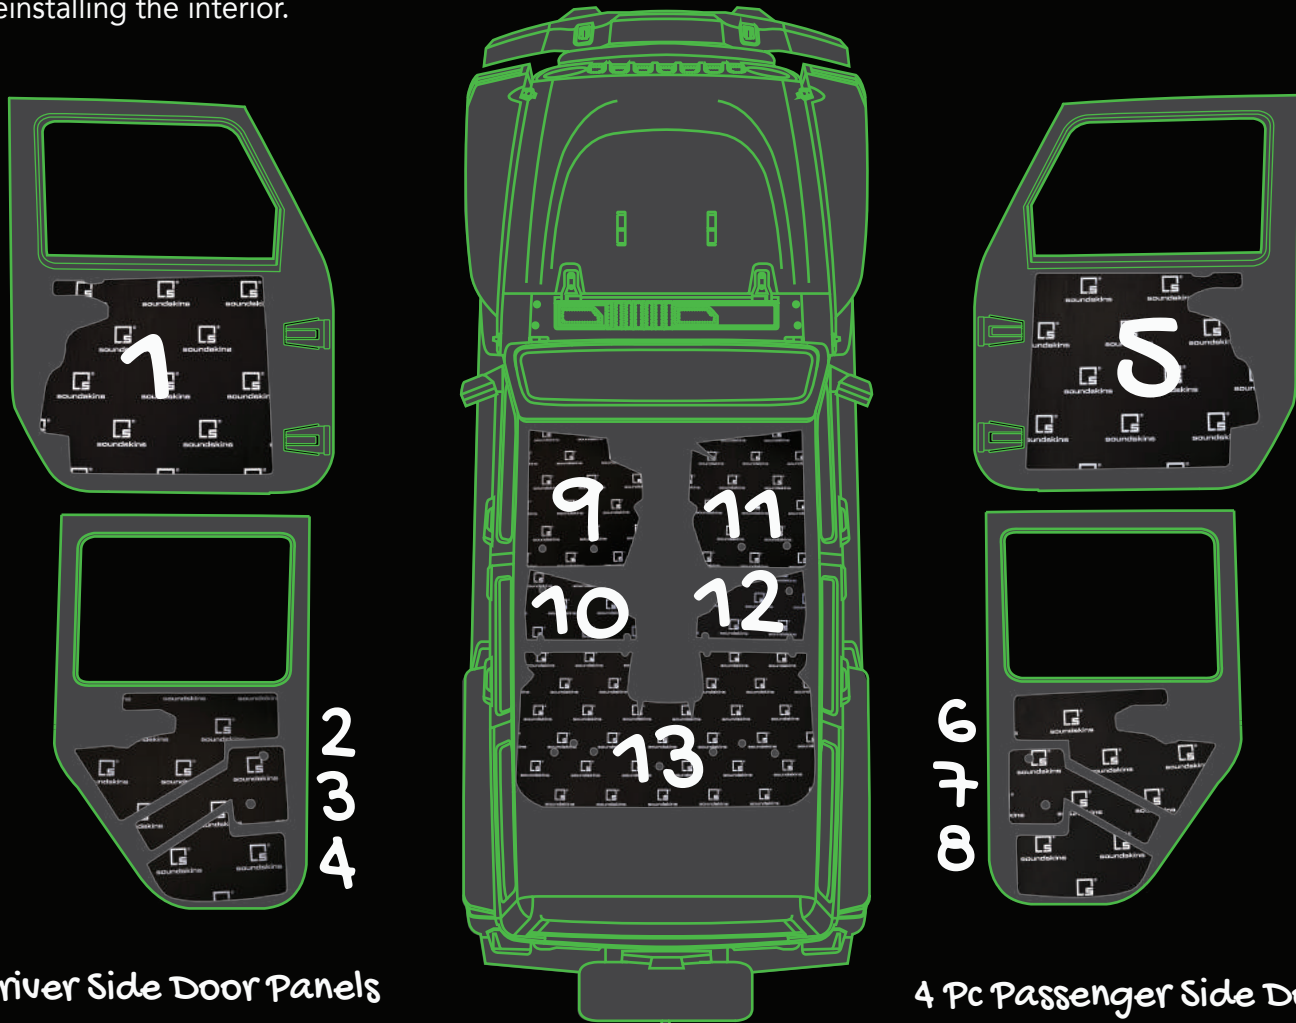

4 Pc Driver Side Door Panels

4 Pc Passenger Side Door Panels

5 Pc Floor Board Coverage

- 1) Driver Front Door Panel 2,3,4) Driver Rear Door Panel 5) Passenger Front Door Panel
- 6,7,8) Passenger Rear Door Panel 9) Driver Front Floor Panel 10) Driver Middle Floor Panel
- 11) Passenger Front Floor Panel 12) Passenger Middle Floor Panel 13) Rear Floor Panel