### **Just** mobile<sup>™</sup>

# AluDisc<sup>™</sup> Magnetic Series

#### Instruction Sheet

#### Notes:


- Each device (phone/tablet) will require its own metal ring/pad.
- 2. iPhone in a MagSafe case will still require its own metal ring.
- Phone case with a thickness of 2.5mm or less will perform the best. The thinner the case, the stronger the magnetic adhesion.
  - P.S. Phone case material, glossiness, and thickness will affect magnetic adhesion.
- For tablets, install the metal pad on the outside of the case. If installed on the inside, the magnetic attraction will be weaker.
- 5. When using Apple MagSafe Charger, be sure to use the shielding patch (available at: just-mobile.com).



Scan the QR code to view the installation video

40203043020


# Metal Ring For phone

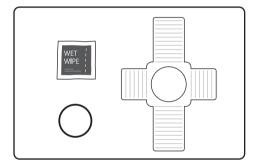

1 Clean the surface with the wet wipe.




2 Align the template on the back of the phone so that the ruler numbers match on opposite edges.

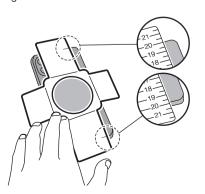


3 Remove the liner to reveal the adhesive.



4 Place the metal ring within the template circle. Press evenly and wait for 24 hours before use.

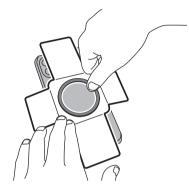

4 Put on a protective case. Install complete.

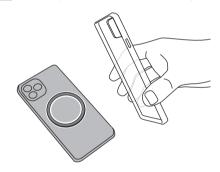

## Metal Pad

For tablet




- 1 Clean the surface with the alcohol wipe.
- 2 Remove the liner to reveal the adhesive.
- 3 Place the metal pad at the center of the back of the tablet. Press evenly and wait for 24 hours before use.
- 4 Install complete.




For tablets, affix the metal pad on the outside of the case. If installed on the inside, the magnetic attraction will be weaker.


## AluDisc™ Pro/Max

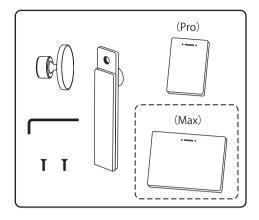


1 Screw in to assemble the base with the post.

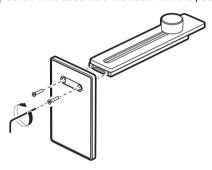

2 Screw on the rotating head.

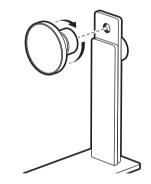


3 Adjust the height.

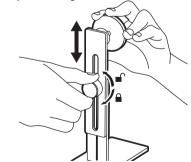

4 Snap on the phone/tablet.




### AluDisc™ Go

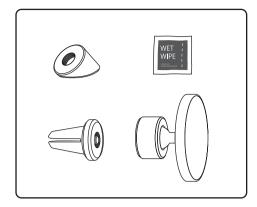


#### Installing the dashboard base


1 Identify desired mounting position on dashboard.

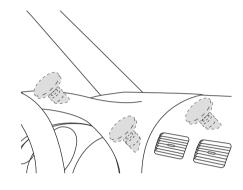


2 Clean the surface with the wet wipe.

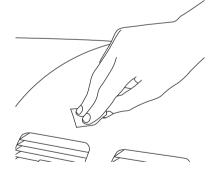

3 Remove the liner to reveal the adhesive.

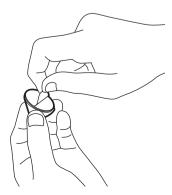


4 Press base FIRMLY for 5 seconds and wait 24 hours before use.

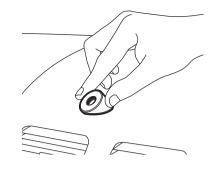


5 Screw on the rotating head.




6 Snap on the device.



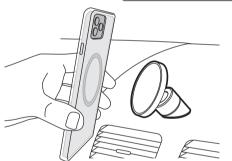


#### Installing the vent insert


Screw on the rotating head, and insert into vent.

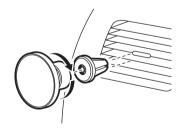


2 Snap on the device.

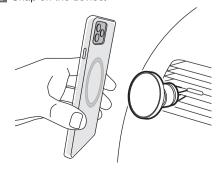

### AluDisc™ mini

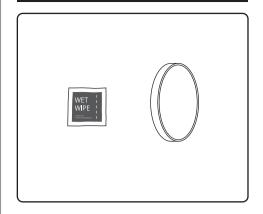


1 Clean the surface with the wet wipe.

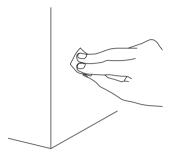

2 Remove the liner to reveal the adhesive.



3 Press base FIRMLY for 5 seconds and wait 24 hours before use.

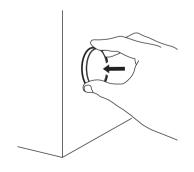

4 Snap on the device.

