

THE PURE COMPANY

PORTABLE AIR PURIFIER

DESIGNER WRAP


QUICKSTART GUIDE

1. Clean the outside surface of the purifier with a soft, slightly damp cloth. Let the surface dry completely.
2. Remove the wrap from the backing paper.


Note: Don't pull or stretch the wrap too much, as it could cause your wrap to not fit.

3. Start by lining the wrap up against the edge of the power inlet.
4. Align wrap with the top and bottom edges of the purifier and slowly adhere the wrap as you go around the purifier.
5. When applying the wrap to the curve of the purifier, you may gently stretch it to assure a proper fit.
6. Oops! Did you not line it up right? Don't worry -- you can carefully peel it off and try again.


Hint: Gently use your fingers to push out air bubbles as you go along.

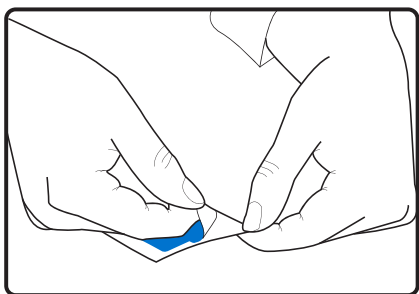


STEP 2

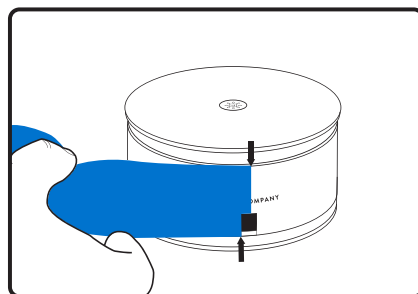

STEP 3

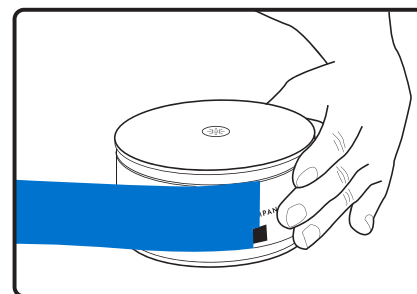

STEP 4

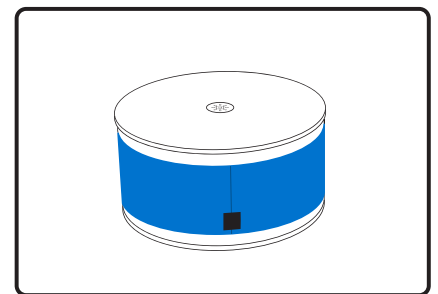

STEP 5