



SOLDIER RELOADED ASSEMBLY INSTRUCTIONS

EVA HARDSHELL LID ASSEMBLY

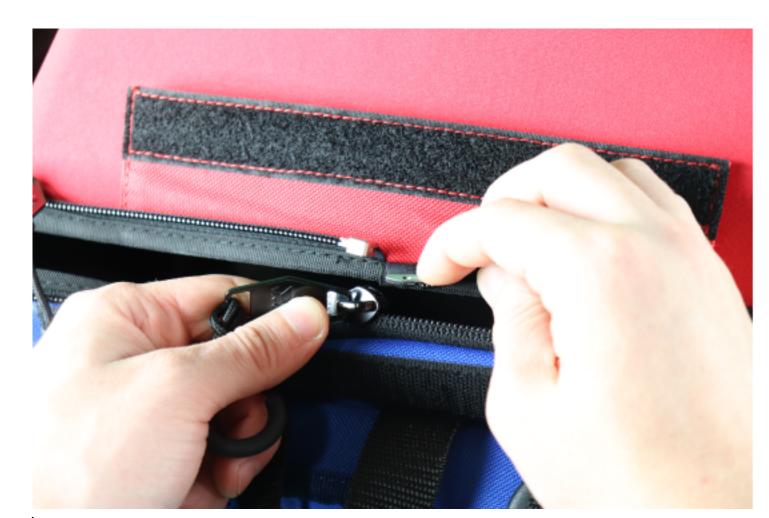


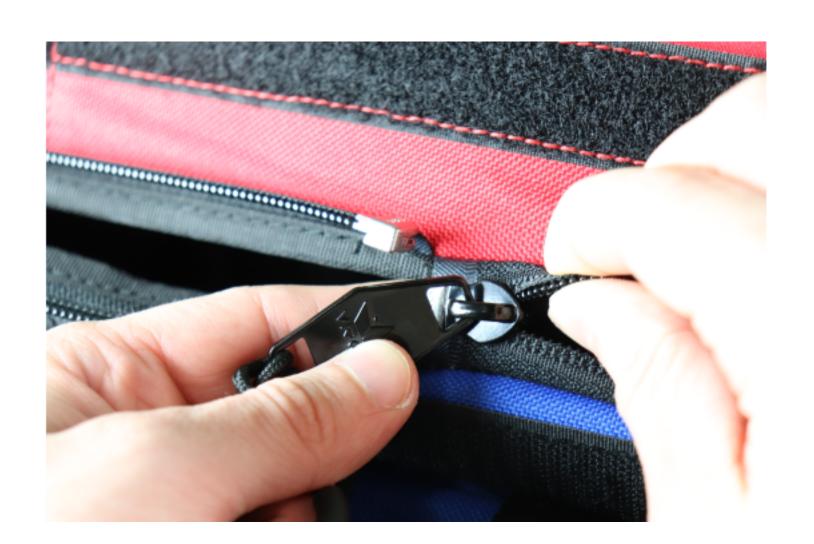






Step 1: Align the zipper pull on base to zipper insert pin on Hardshell lid as shown. Once insert pin is securely attached to Zipper Slider, use the zipper pull to close the zipper as shown.

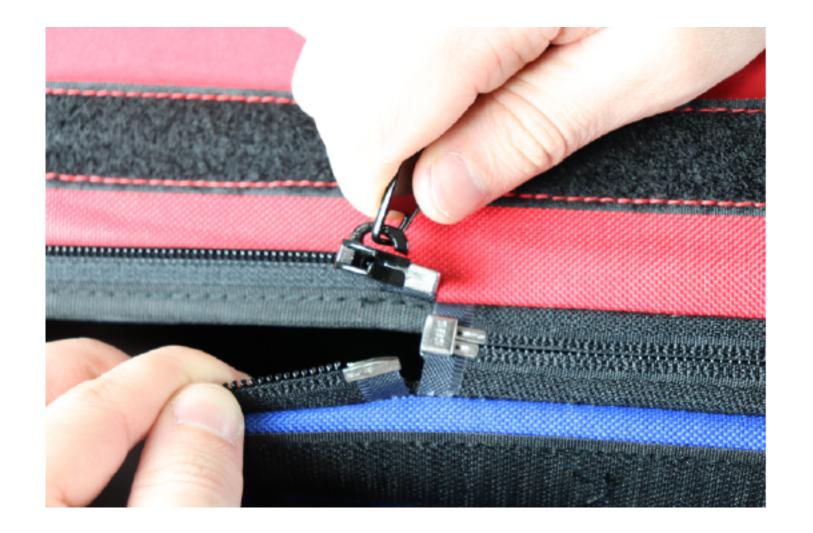

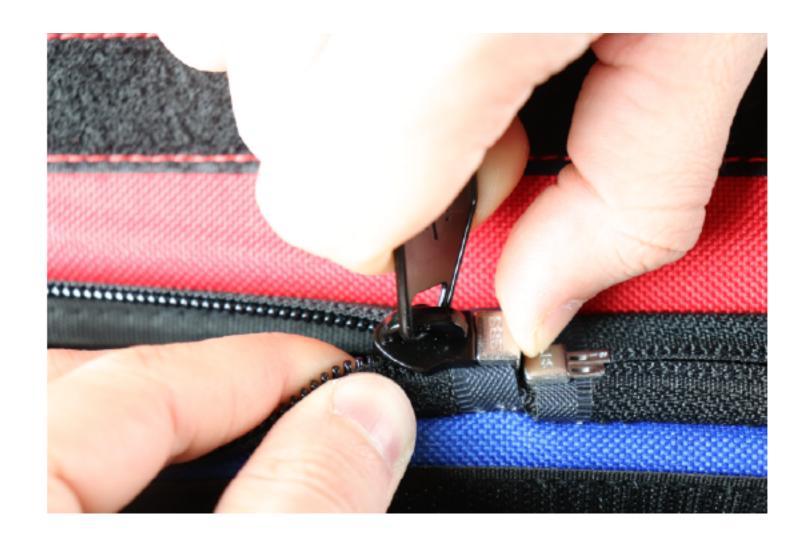



2

Step 2: Similar to Step 1 for the other side. Align the zipper pull on Hardshell Lid to zipper insert pin on base as shown. Once insert pin is securely attached to zipper slider, use the zipper pull to close the zipper as shown.





3

Step 3: Close Zipper Flap as shown.



























SOLDIER RELOADED ASSEMBLY INSTRUCTIONS


TOP POCKET ASSEMBLY


FLAG OPTIONS ARE INSTALLED SAME WAY

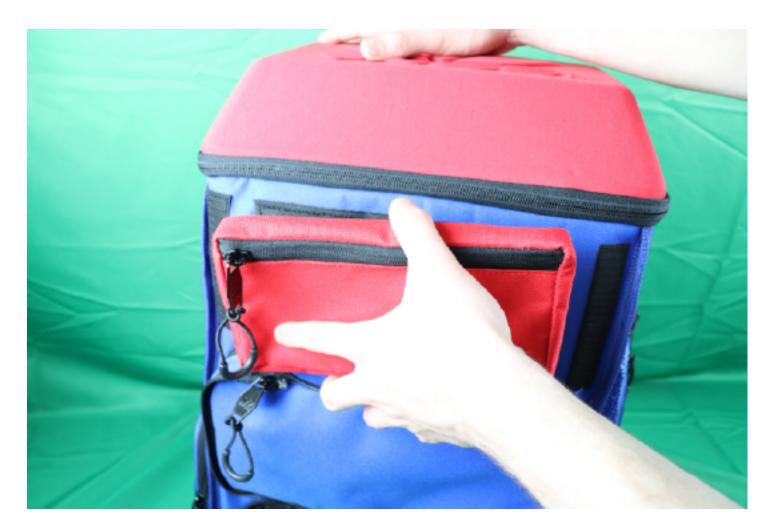


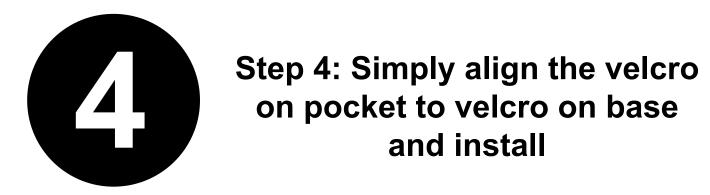

CENTER FLAP ASSEMBLY

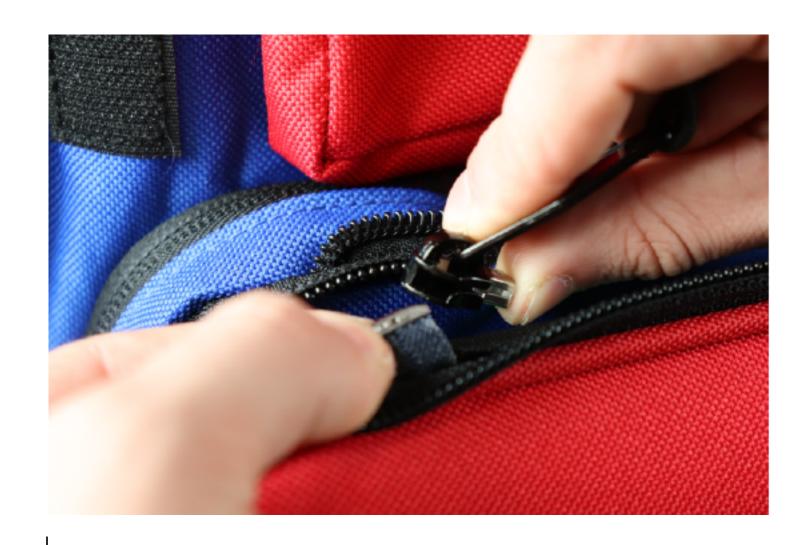

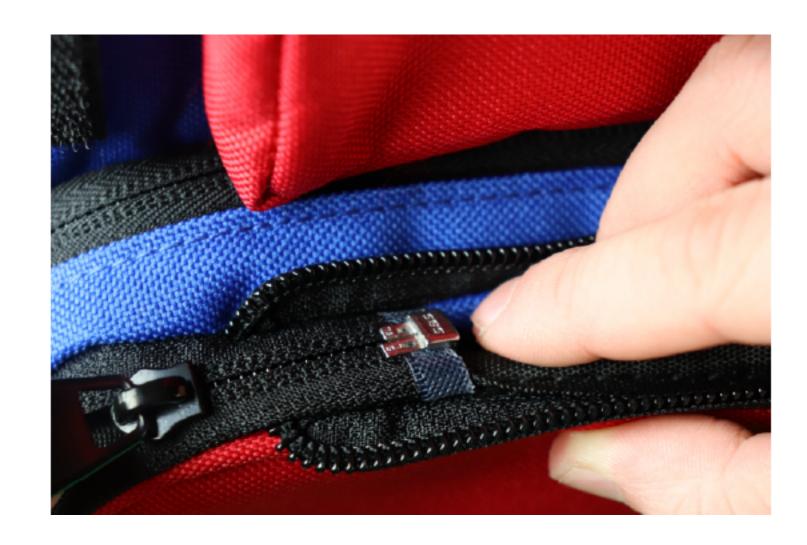

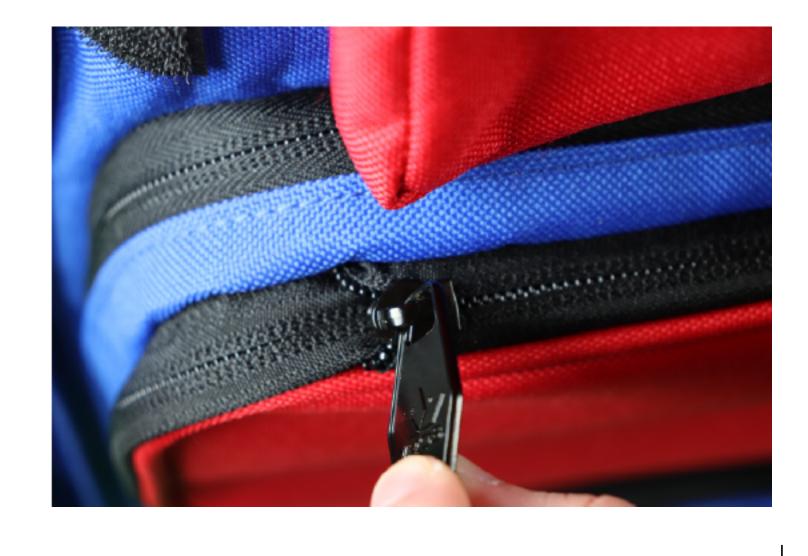



Step 5: Align the zipper insert pin on Flap to zipper pull on base as shown. Once insert pin is securely attached to Zipper Slider, use the zipper pull to close the zipper as shown.



























SOLDIER RELOADED ASSEMBLY INSTRUCTIONS


SHOE COMPARTMENT BOTTOM FLAP ASSEMBLY



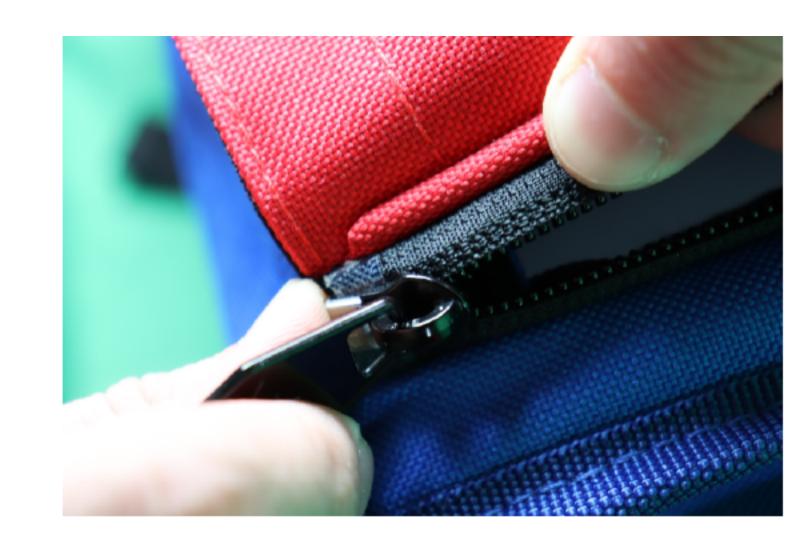

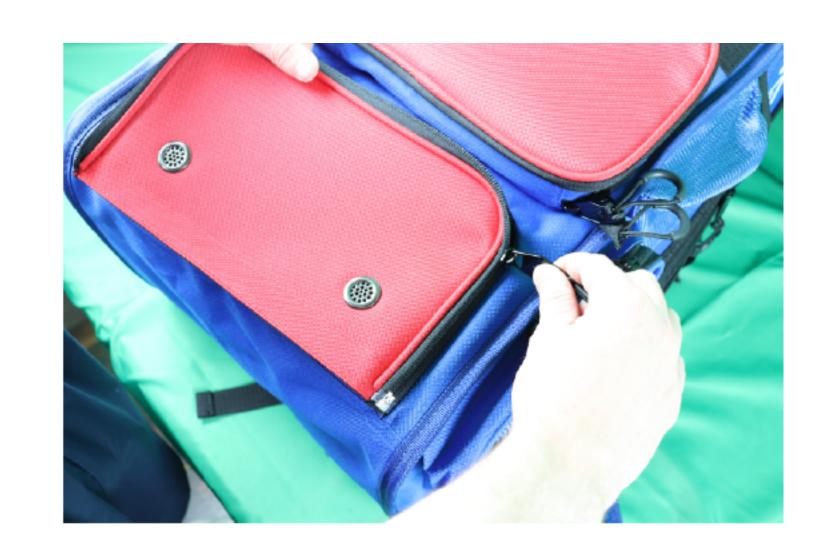



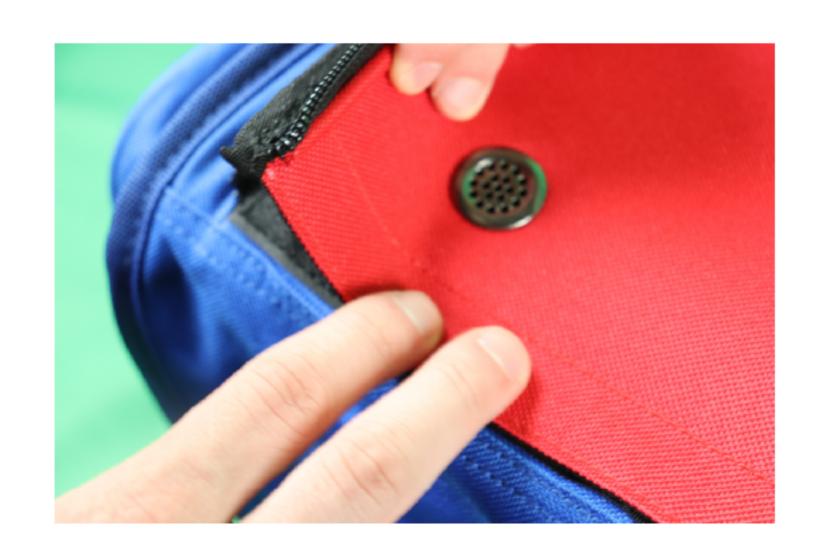





Align the zipper insert pin on flap to zipper pull on base as shown. Once insert pin is securely attached to zipper slider, use the zipperpull to close the zipper 1/4 of the way. Attach the velcro at bottom of flap as shown. Use the zipper pull to close the rest of the way.





















