

Vibrant LED Backlit Banner TDD-LED-VBB5

Installation of the display is done first by assembling the frame, then attaching the two graphic prints.

Installation of the frame

Warning! Important.

1. Be careful and gentle with the frame parts. Frame parts have built-in LED lights and circuit boards. Do not throw or drop on hard surfaces. Do not use in wet environments.
2. Carefully pack and pad before shipping.
3. Not for outdoor use.
4. Clear at least a 6' x 6' area. The frame is assembled horizontally then hoisted up. The print is installed after the frame is hoisted into its normal vertical position.
5. Use only the tools and screws provided. Extras of the two types of screws have been provided.



Find the tools and parts.

When tightening screws, do not force.

Screws should be gently lightly snug, not forcefully tight.

You can use a battery-operated screwdriver and the included hex bit to make installation fast and easy.

Use only this hex bit or driver when installing.

Do not use a philips or flat blade screwdriver, and do not use another sized hex bit.

Find the bars marked A.

Gently and slowly insert. Then gently connect the red power jumper between the bars. Use a **Long Screw** to secure.

Short Screws are used on the sides. Long screws will be used on the corners.

Continue with B, using a long screw.

The remainder of the setup is similar and straightforward.





Connect C using **2 short screws**.



Connect D using a **long screw**.


Connect the foot also using a **long screw**. Connect the foot so that it is parallel with the bottom edge as shown. Later when hoisting up the display frame, you will turn the feet 90 degrees out.



Connect E and a foot as done previously with D.



Connect F using **short screws**.

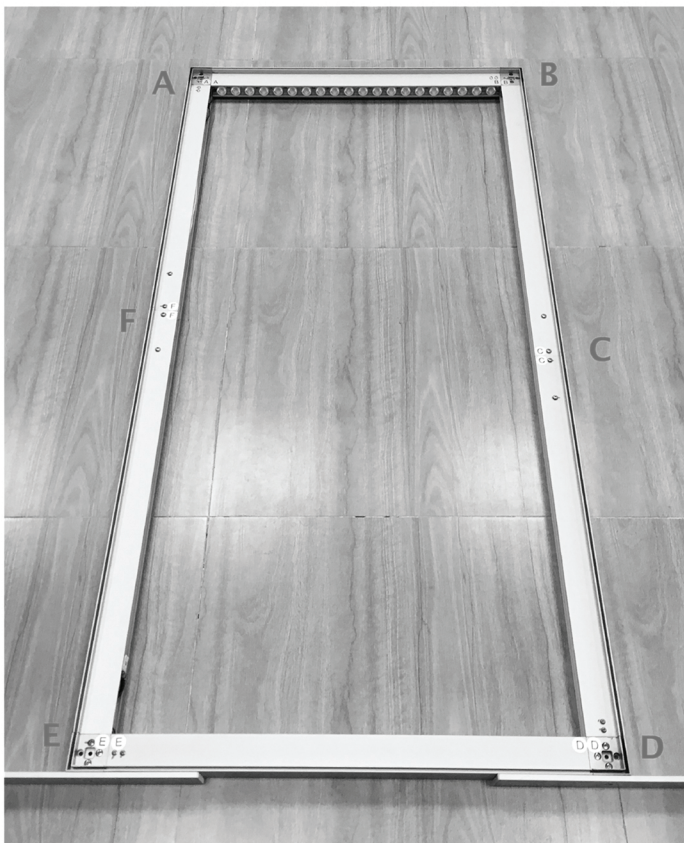

Your frame will look like this.

Attach the power connectors and jumpers between the segments. Plug in the power adapter to see that both top and bottom edges are lit. If a segment is not lit, see if a jumper or connector was not connected.

Unplug the power adapter.

Hoist the frame, turning out the three feet.

The frame assembly is complete.

Installation of the graphic prints

Insert the print's silicone edge into the frame groove. Start with the upper left corner, moving across the top edge first.

Do the same with the backside graphic.

Disassembly

To disassemble, work in reverse-order.