


Installation Explanation

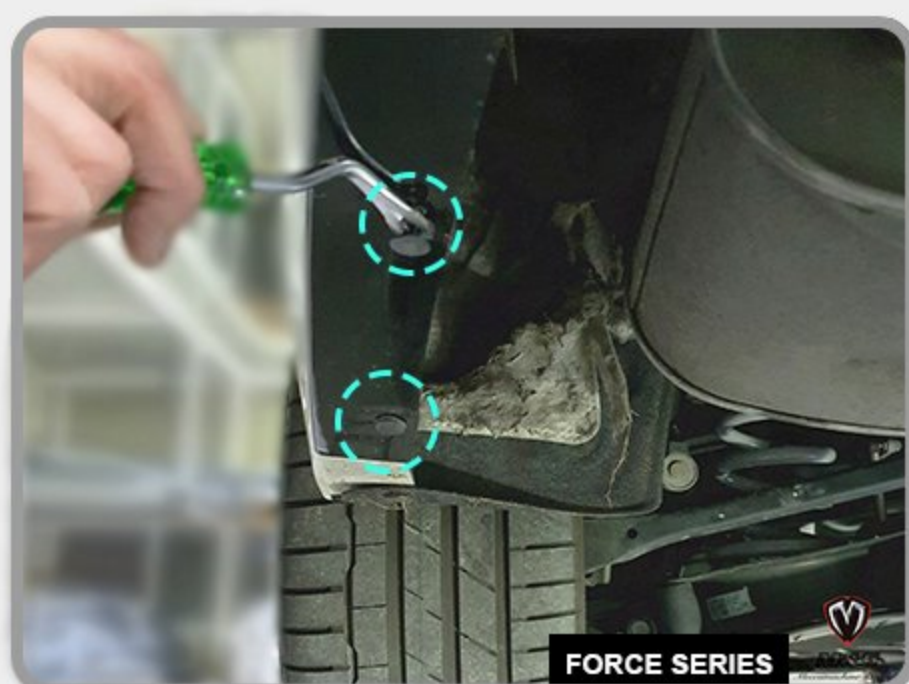

1. Remove the OEM pins from underneath the vehicle as shown.



2. Place both end pieces of the Rear Diffuser as shown.



3. Fix the front part of the pieces with screws as shown.




4. Fix the rear part of the pieces with screws as shown.




5. Align the center piece of the Rear Diffuser from top to bottom as shown.



6. Fix the top of the center piece of the Rear Diffuser with screws as shown.

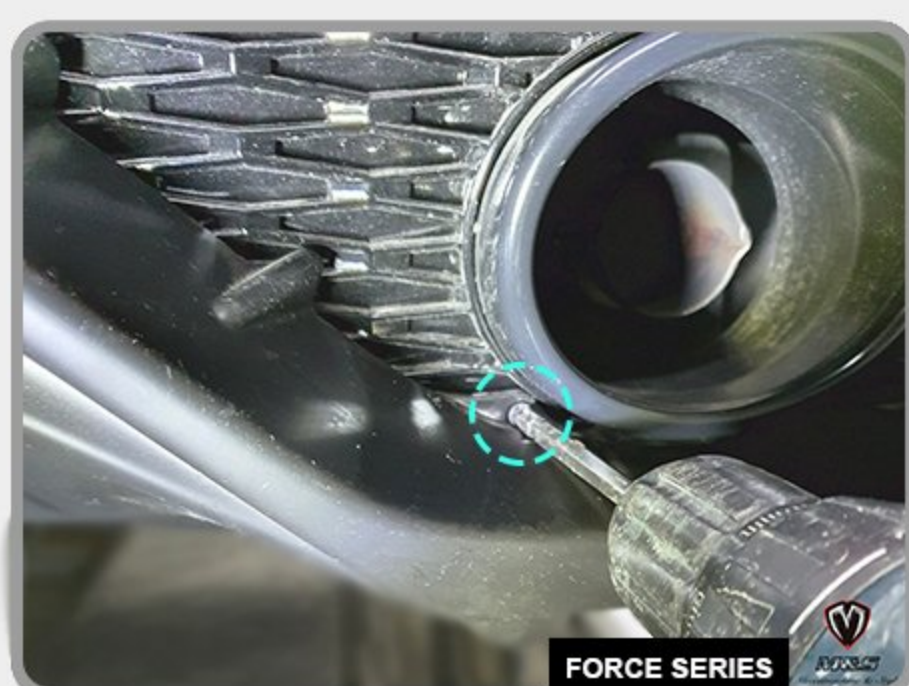

6. Fix the bottom of the center piece of the Rear Diffuser with screws as shown.

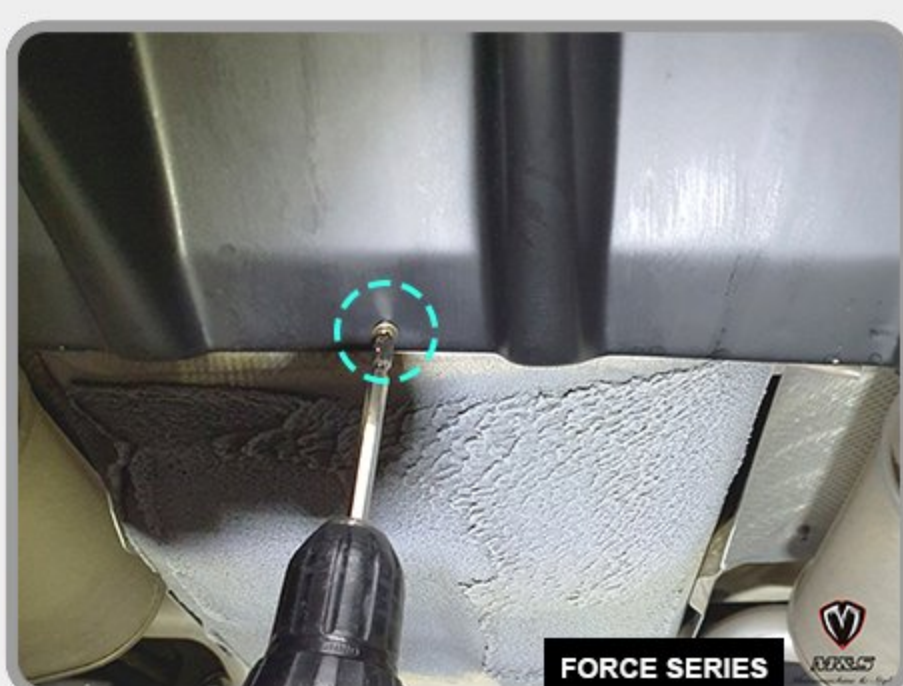

7. Fix the underneath of the center piece of the Rear Diffuser with screws as shown.



8. Fix the position where the both side pieces and the center piece of the Rear Diffuser connect with screws as shown.