




Step1. First you need to screw the little screws on the paddles, until the little screw tip and dial the paddles side flush

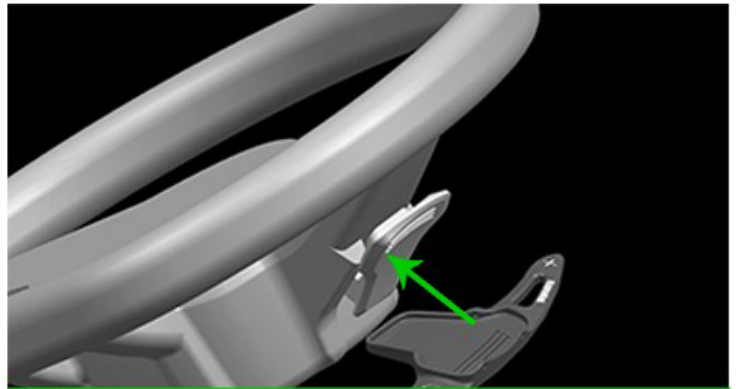

Step2. Put the paddles directly on the OEM paddles back as this image

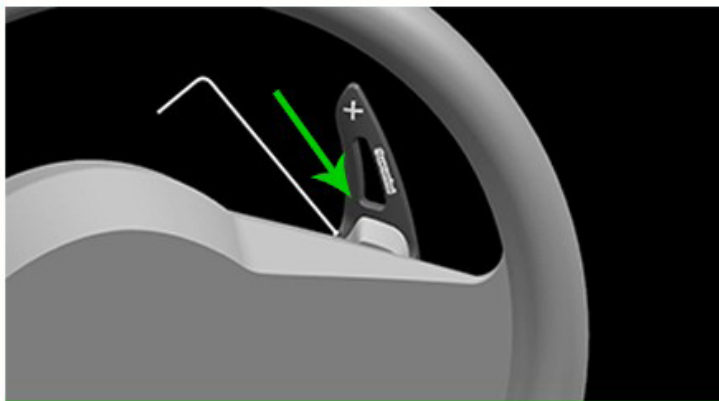

Step3. Screw the little screws with wrench(free supply), tightly against the OEM paddles

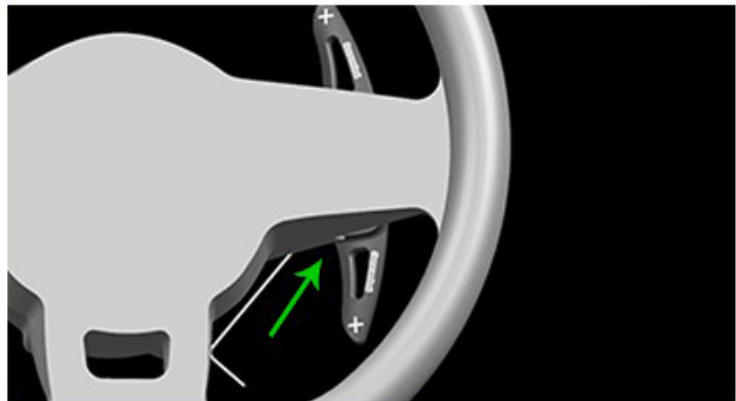

Step4. Repeat the above steps, tighten in turn all screws, the left paddles using the same installation with right paddles



Step5. Finished