



STEP 1:

CLEAN WINDOW AND WIPE DOWN AREA WITH AN ALCOHOL WIPE (D)



STEP 2:

PEEL THE RED BACKING COMPLETELY OFF THE TAPE ON THE SPOILER SECTIONS (A) & (C). PEEL BACK & FOLD OVER 1-2 INCHES OF THE RED TAPE IN SECTION B. SEE FULL IMAGE ABOVE.



STEP 3:

APPLY (E) ADHESIVE PROMOTER TO YOUR WINDSHIELD AREA SPECIFICALLY ON THE AREA USED FOR THE ROOF SPOILER




STEP 4:

APPLY SEMI-FIRM PRESSURE AS YOU PULL OUT THE RED TAPE TO ALLOW THE ROOF SPOILER TO ATTACH EVENLY



STEP 5:

USE A MICROFIBER TOWEL TO APPLY PRESSURE TO THE ROOF SPOILER TO ENSURE THE TAPE PROPERLY ATTACHES TO YOUR WINDOW

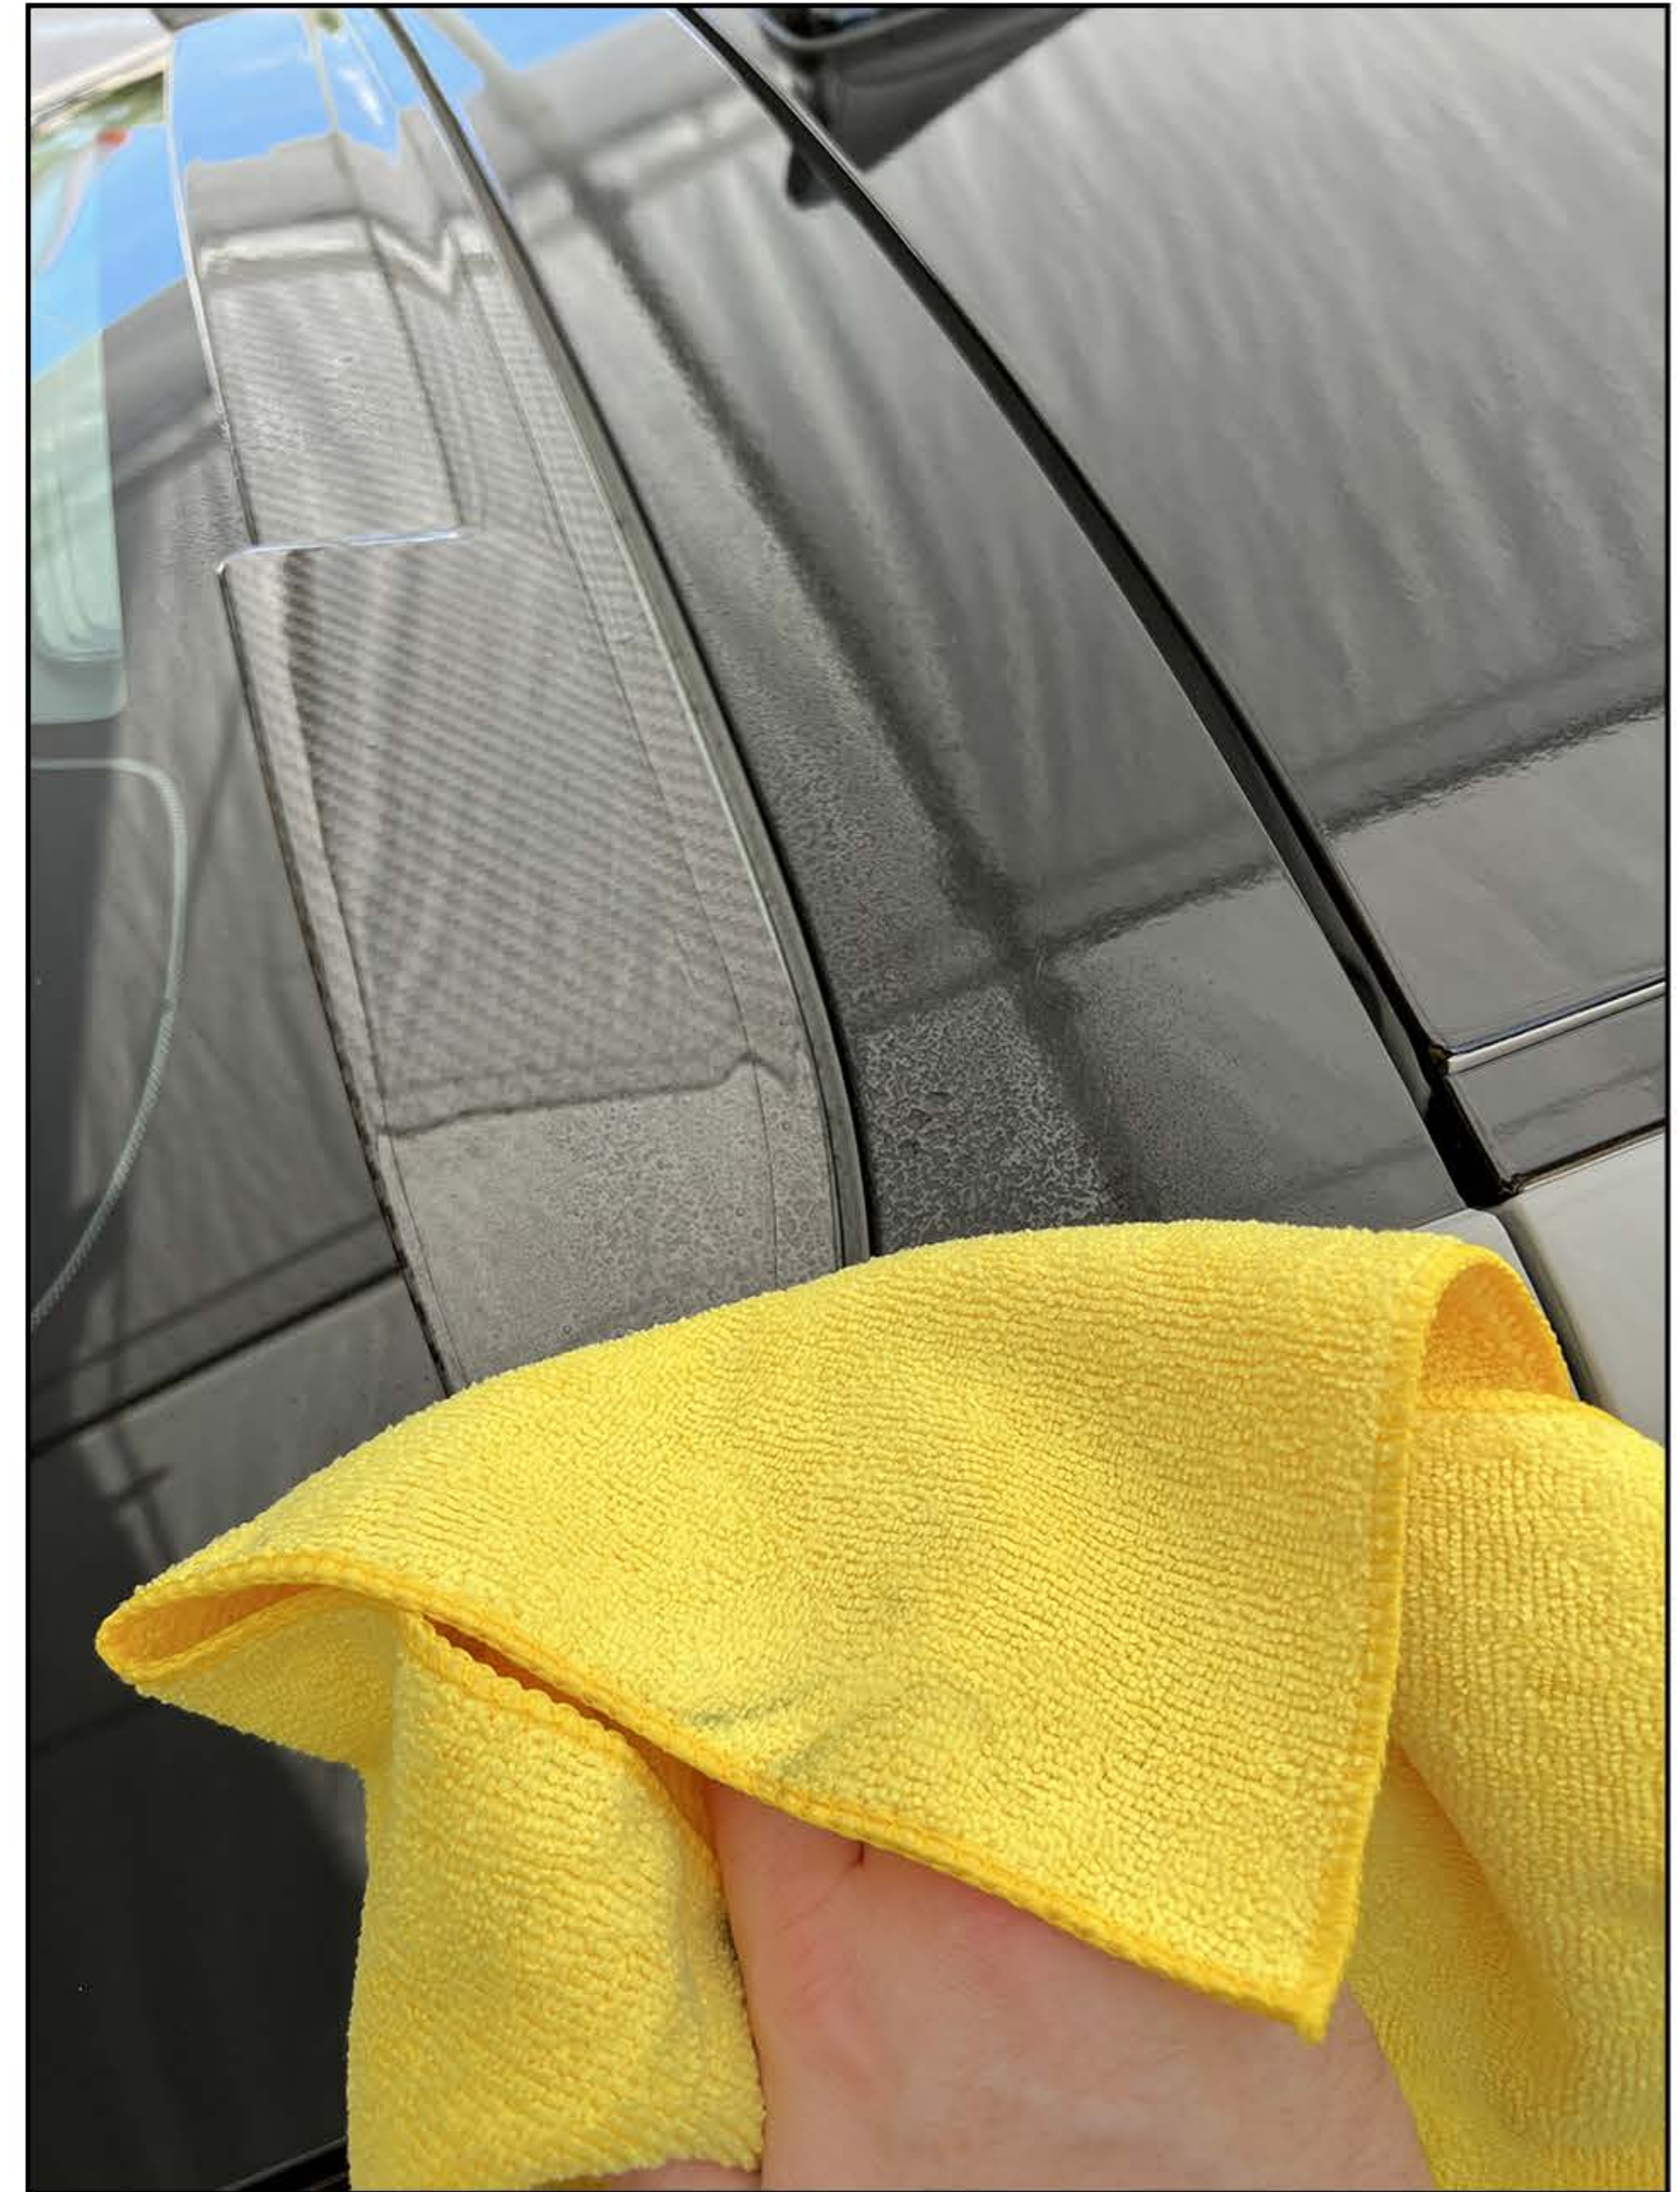

STEP 6:

ENJOY YOUR NEW ROOF SPOILER! PLEASE LET THE ROOF SPOILER CURE TO THE CAR FOR AT LEAST 24 HOURS BEFORE GOING AT HIGHWAY SPEEDS.



IF YOU HAVE ANY QUESTIONS PLEASE SEND US AN EMAIL TO SALES@K8STINGERSTORE.COM

K8STINGERSTORE.COM

[FACEBOOK.COM/K8STINGERSTORE](https://www.facebook.com/K8STINGERSTORE)

[INSTAGRAM.COM/K8STINGERSTORE](https://www.instagram.com/K8STINGERSTORE)

[YOUTUBE.COM/K8STINGERSTORE](https://www.youtube.com/K8STINGERSTORE)

