


CONVOY LED ILLUMINATE BUMPER CARNARD WING INSTALLATION GUIDE

PRODUCT COMPONENTS : MAIN BODY (RH/LD), EXTEND WIRE 2PCS

Install Precautions

01. If the vehicle is applied exterior coating, the product can easily fall off.
02. In cold weather, be sure to warm the attachment surface before attaching the goods
03. After receipt of the goods, please check if there are defectives, especially LED light
04. After installation the goods, please do not car wash for 7 days
05. This goods' reference voltage is 12V and current is 0.53A
06. Carbon edition car can not install this goods
07. Connect the +,- wires to the same color of extension wire using insulating tape as shown right picture

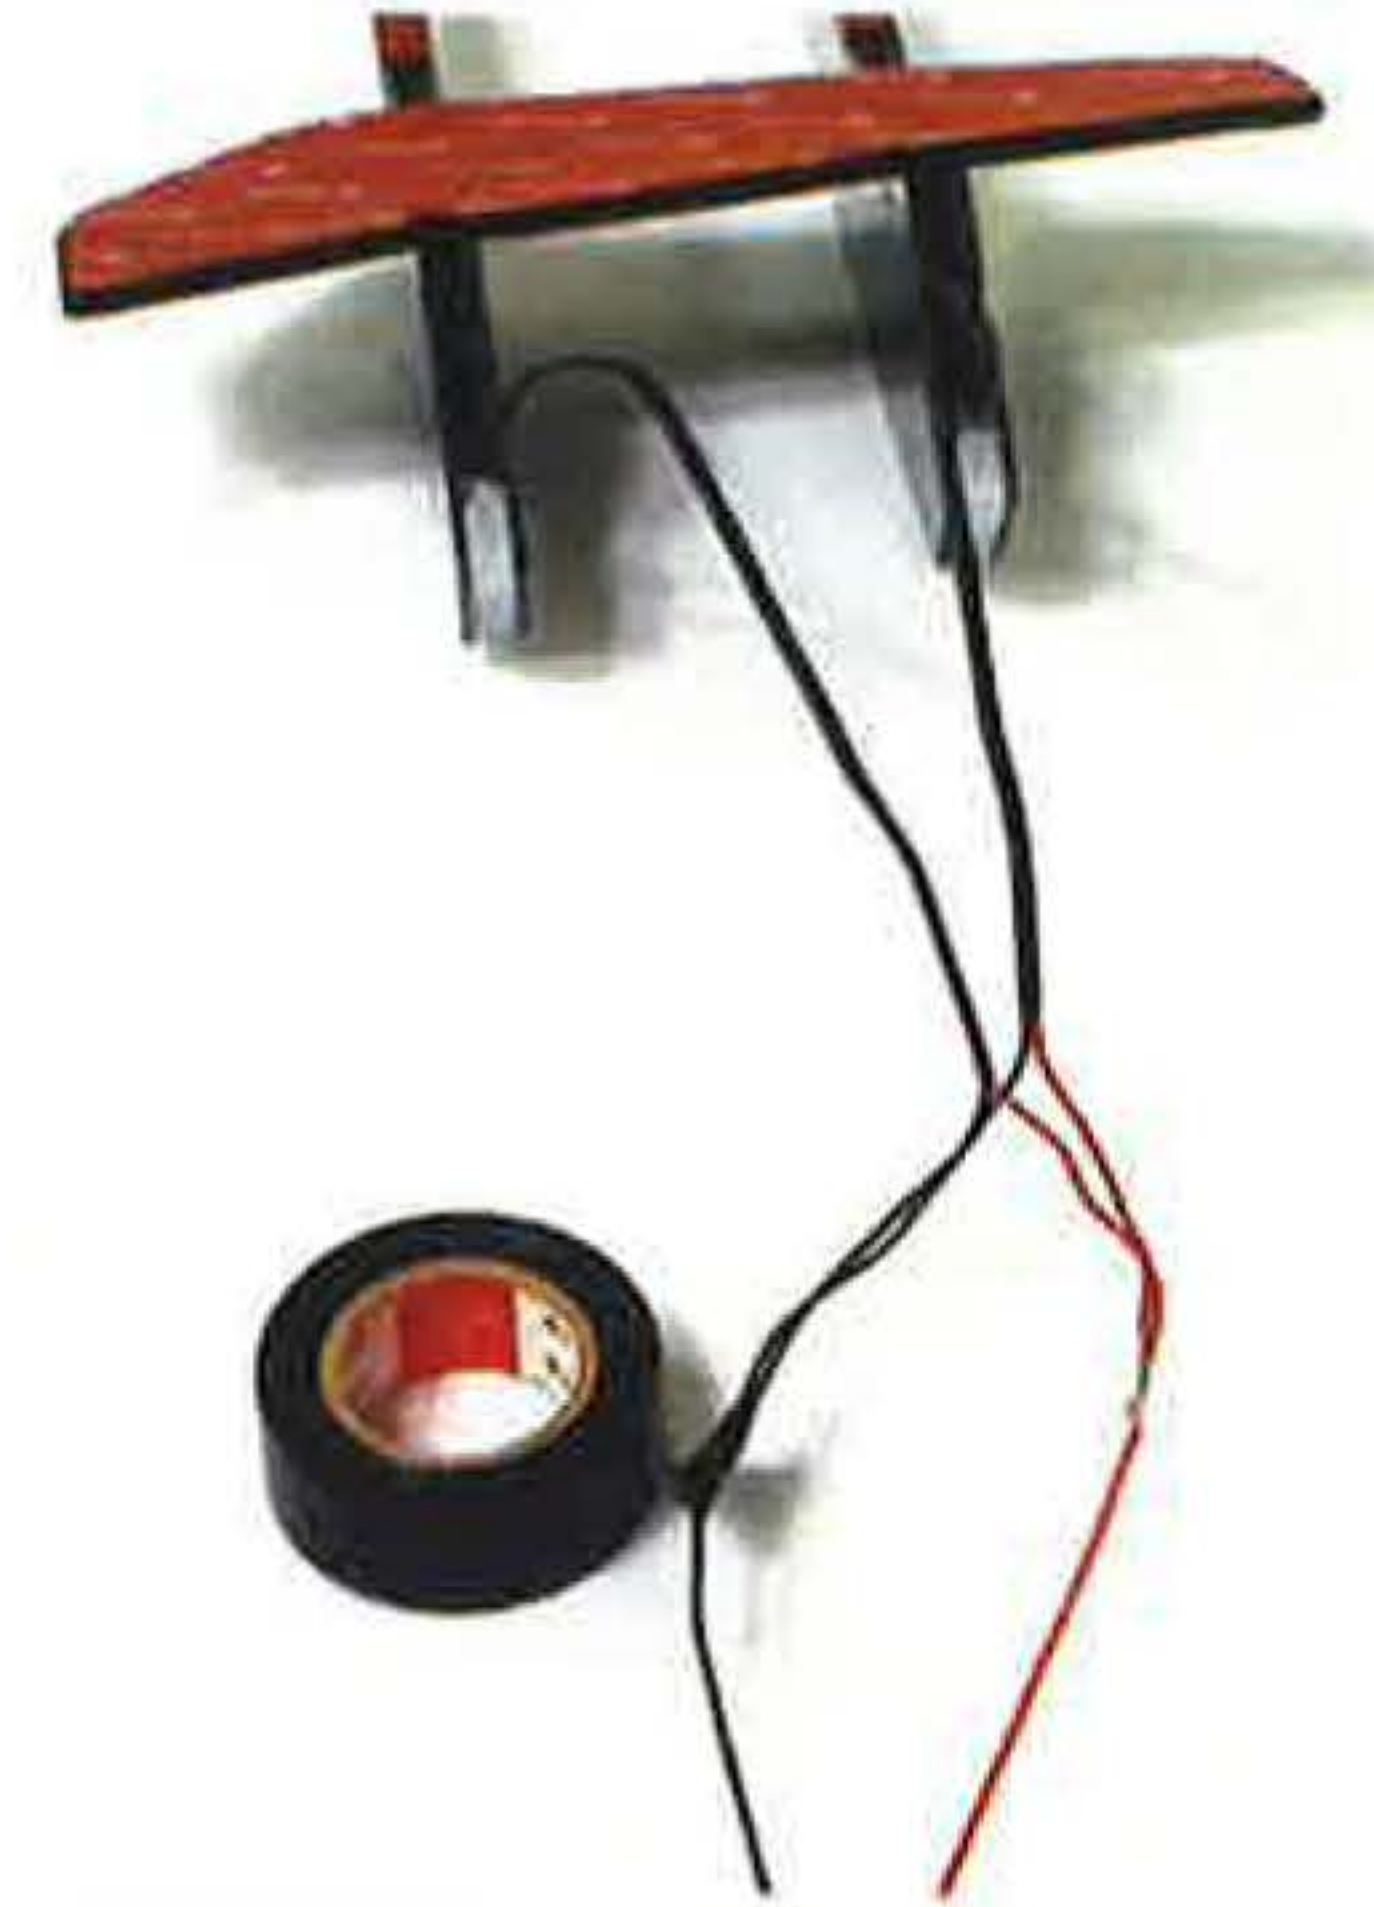

Loosen the bolts on the marked bar and remove the all bars



Please remove the indicated air clearer



Unscrew and remove all screws the marked point



Remove all 1st row wheel house cover holders



The cover should lift up as shown above photo



Please make clear the attachment surface before intallation



Check the goods attachment position to determine which line to fit on



Please remove the double side tape




Please attach from top to fit the line




After attaching to the top, attach slowly by attaching to the bottom



Heat to goods , but not too close

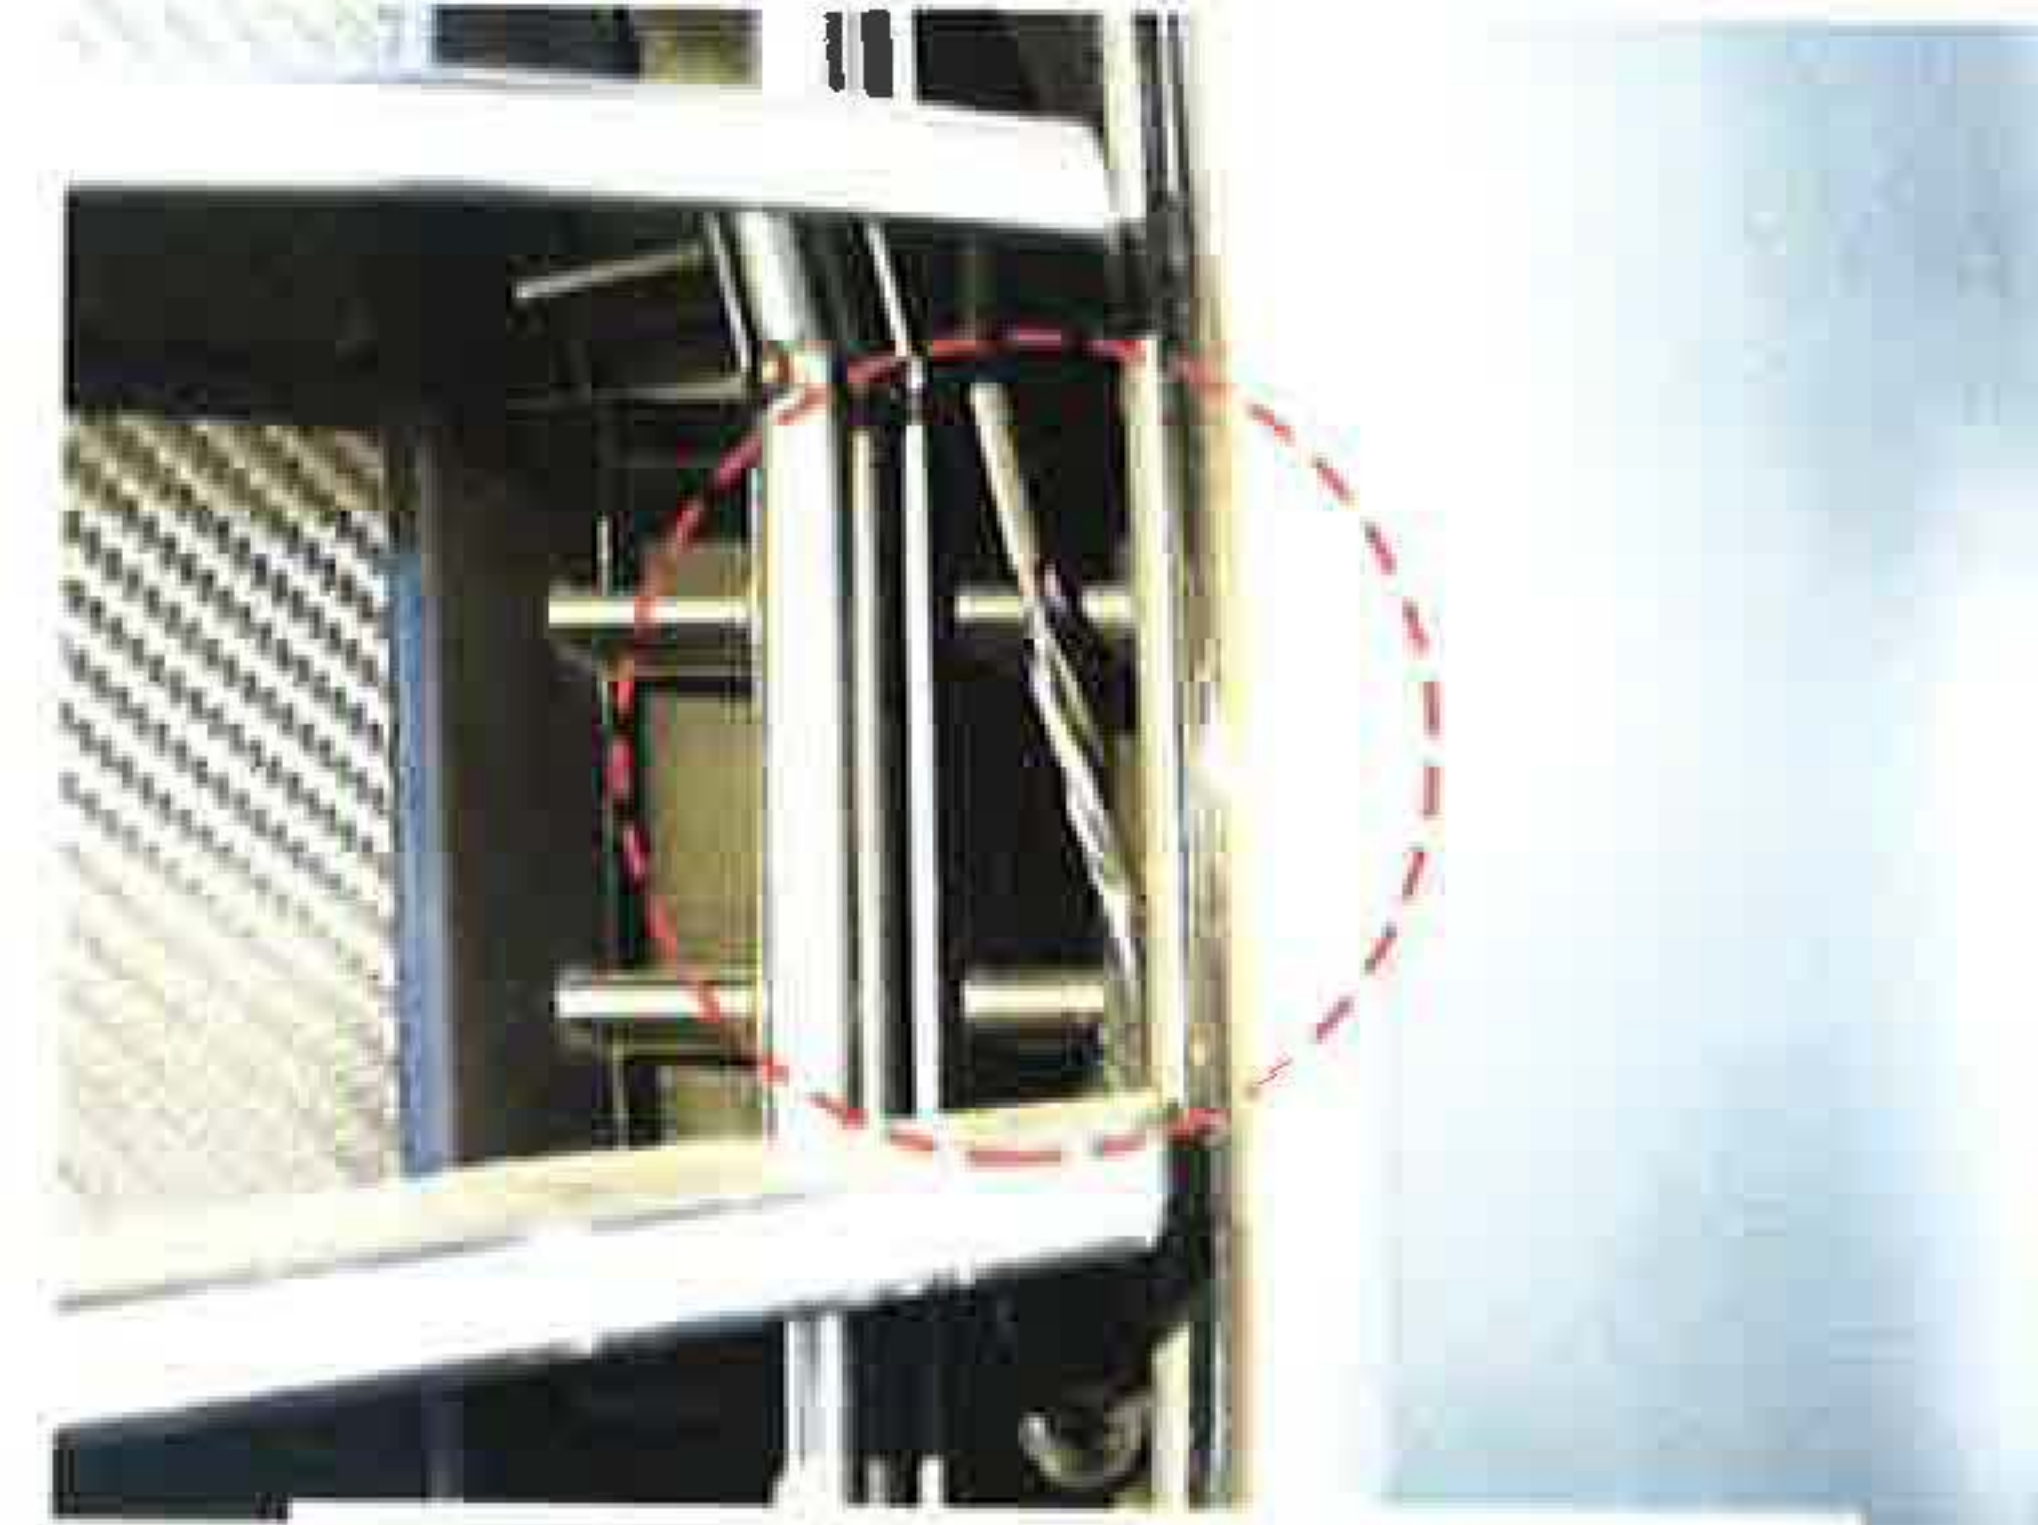

After attaching the goods, insert the wire into the air duct.

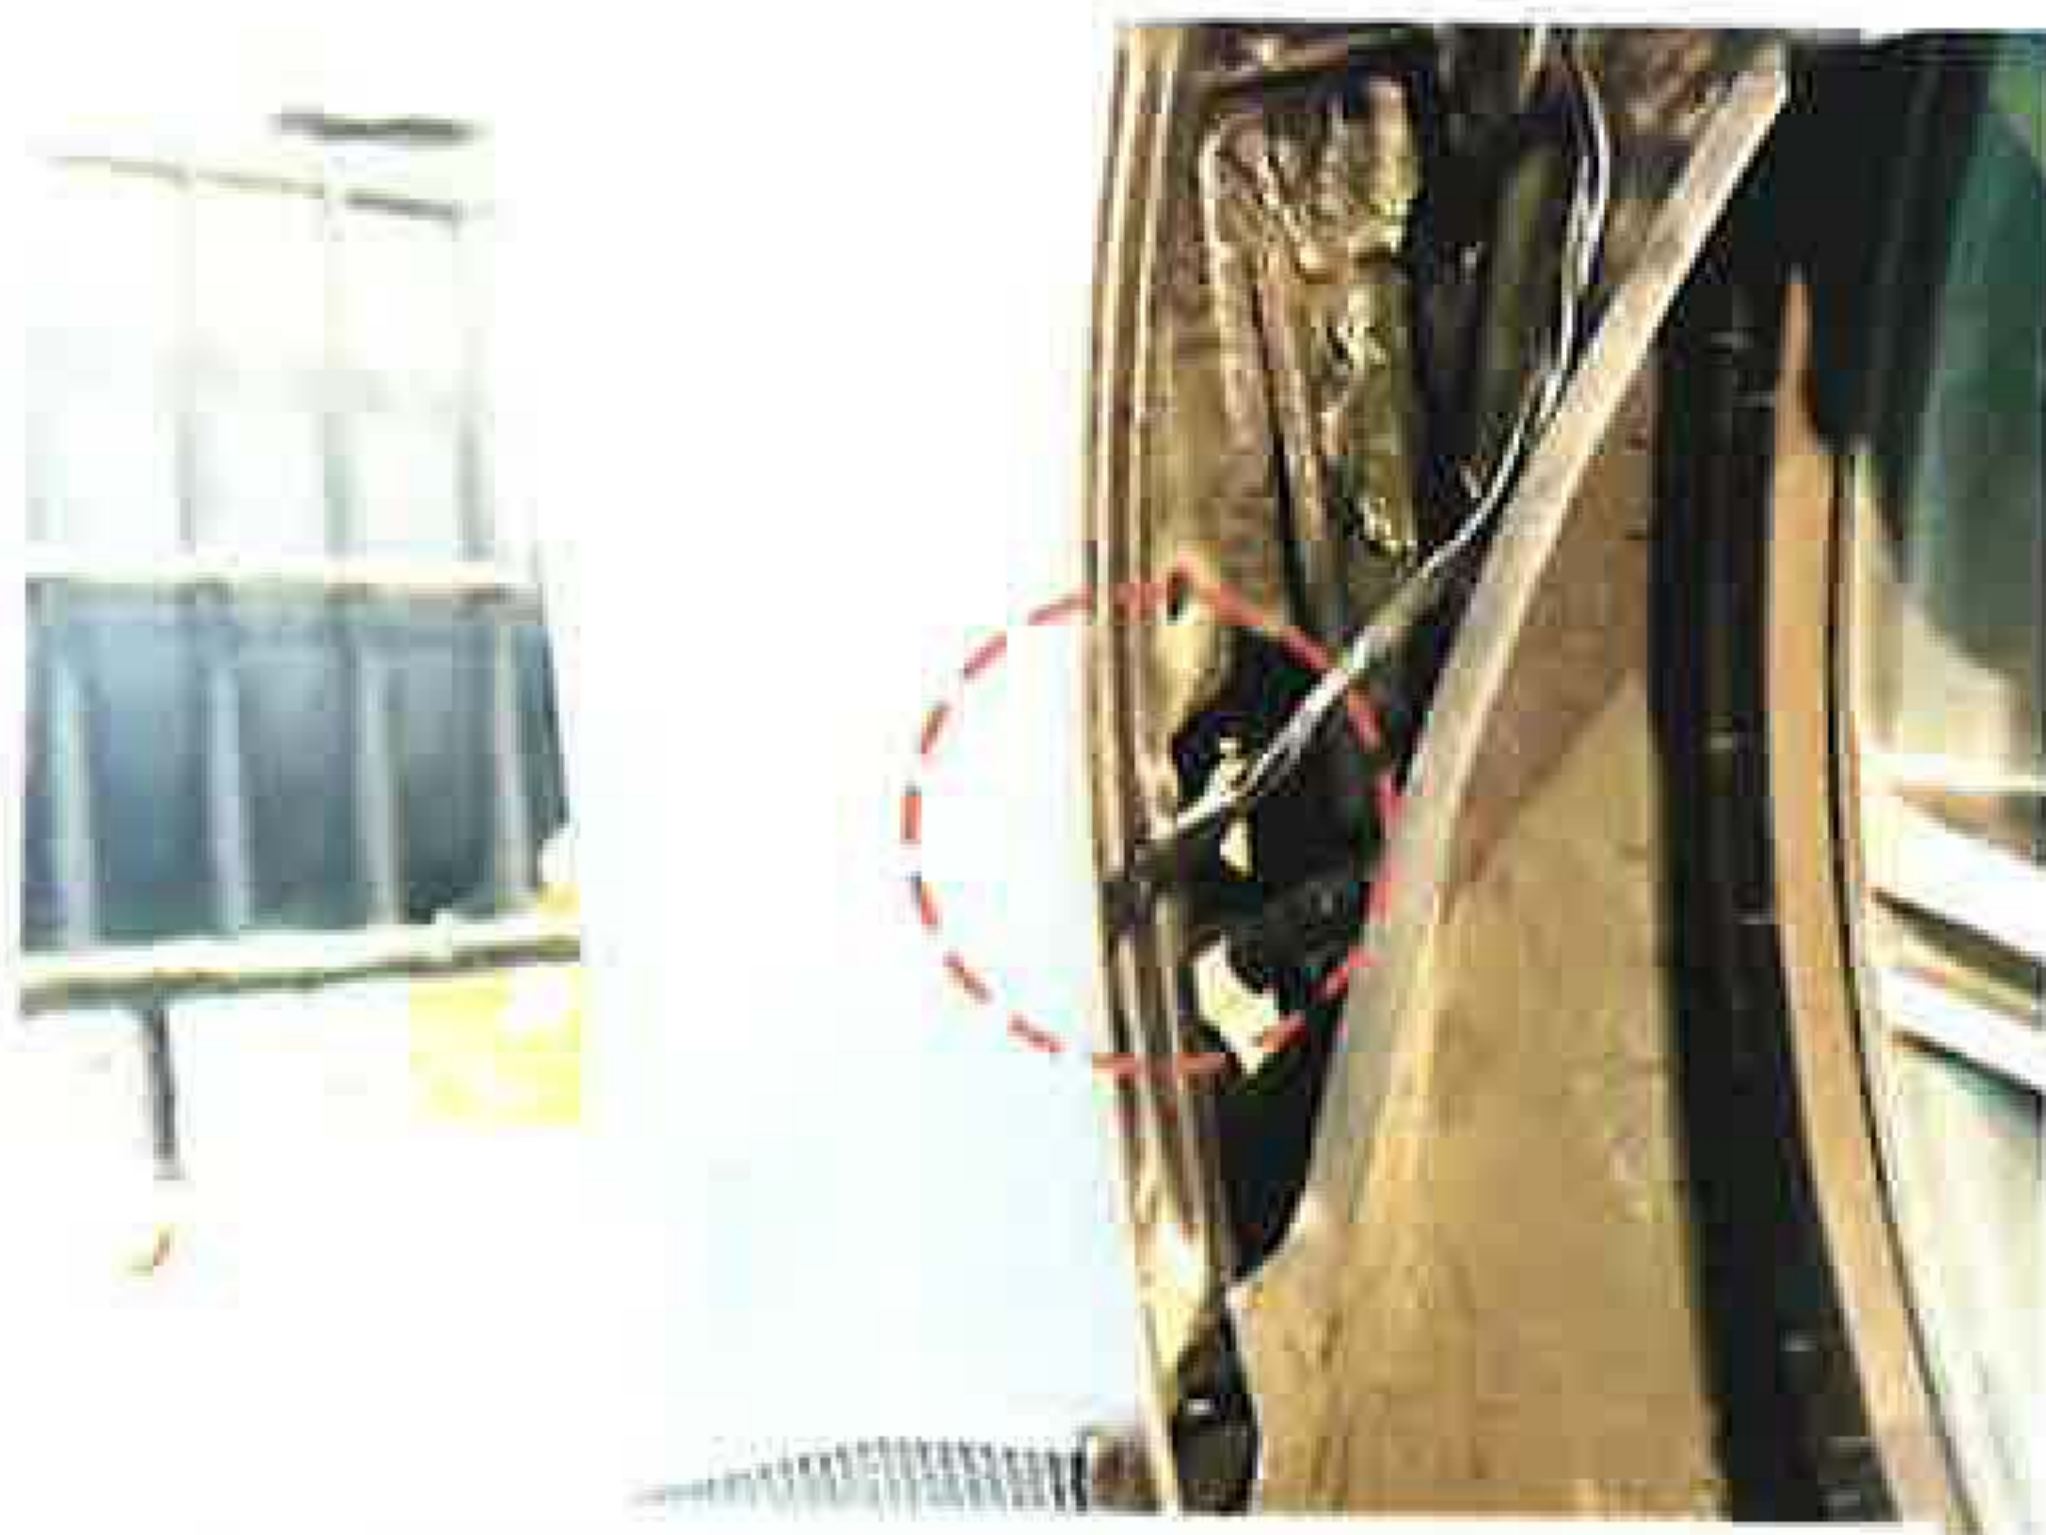

Pull the line out to the marked part and lift it toward the hood



Please carefully remove the light pin



Connect the goods Red wire to the car's Yellow wire



Connect the goods Black wire(-) to the car's Black wire



Reassemble the all separated parts



Finish.