

Kia Stinger

SPREEK frontlip & sideskirt installation




SPREEK carbonfiber frontlip




1. Remove genuine bolt
(you can put it back when frontlip install finish)



2. Expand the hole

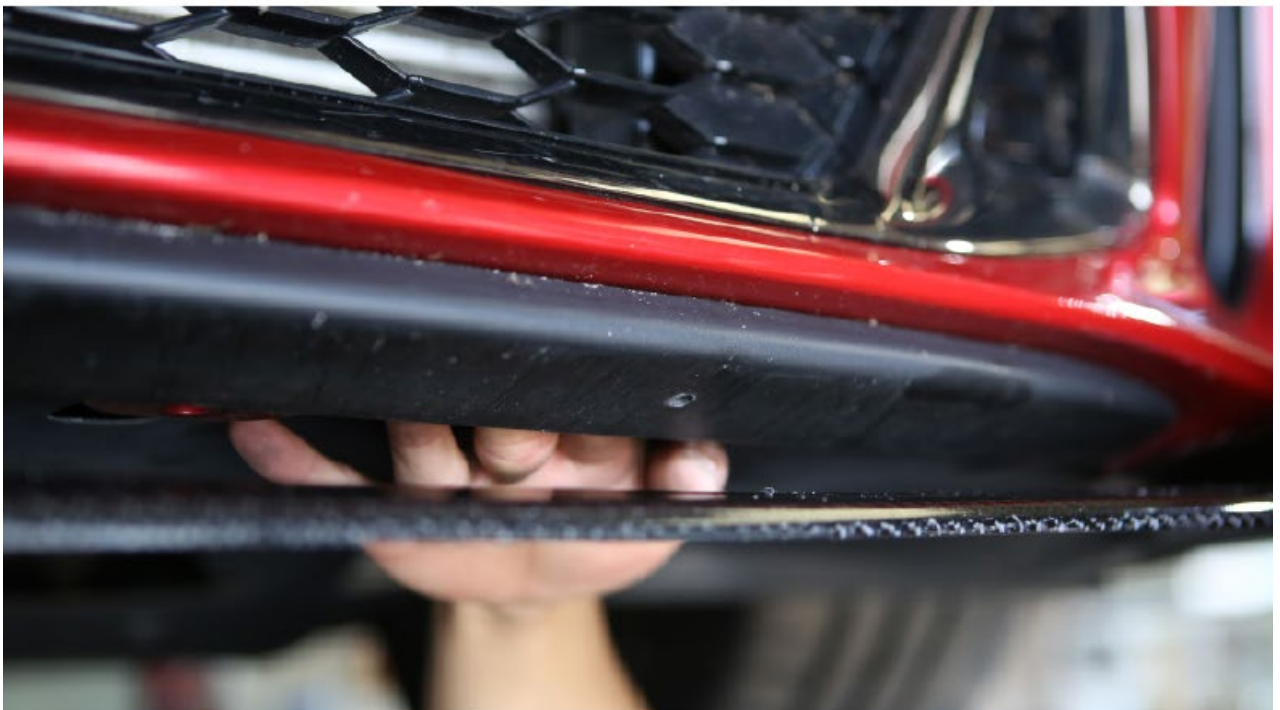

3. The holes should be drilled in this area as well

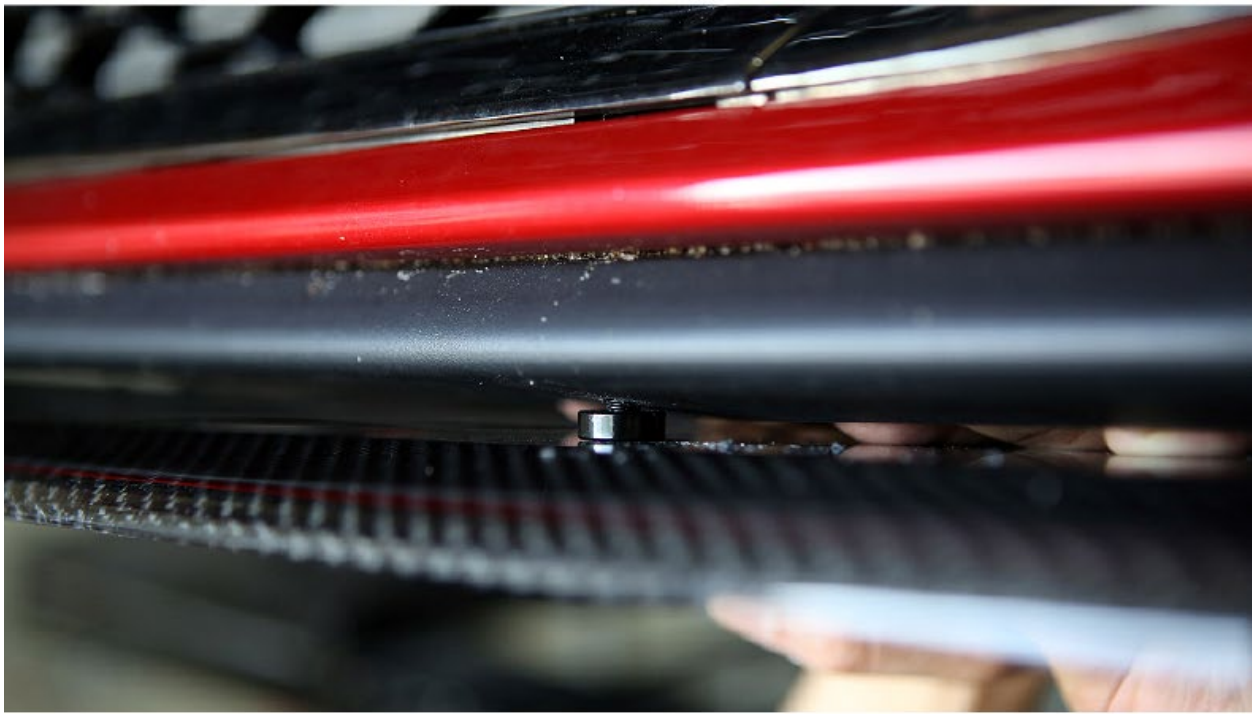

4. Using the enclosed bracket, tie the bolts up and down
* A large washer must be used inside the bumper to secure it securely.
This task should be the same for all three brackets in the center



5. Fix at least 4 (5 or more recommended)
bolts on the left and right.




6. Finish

SPRECK carbonfiber sideskirt install guide



1. Remove genuine bolts from front wheel house cover

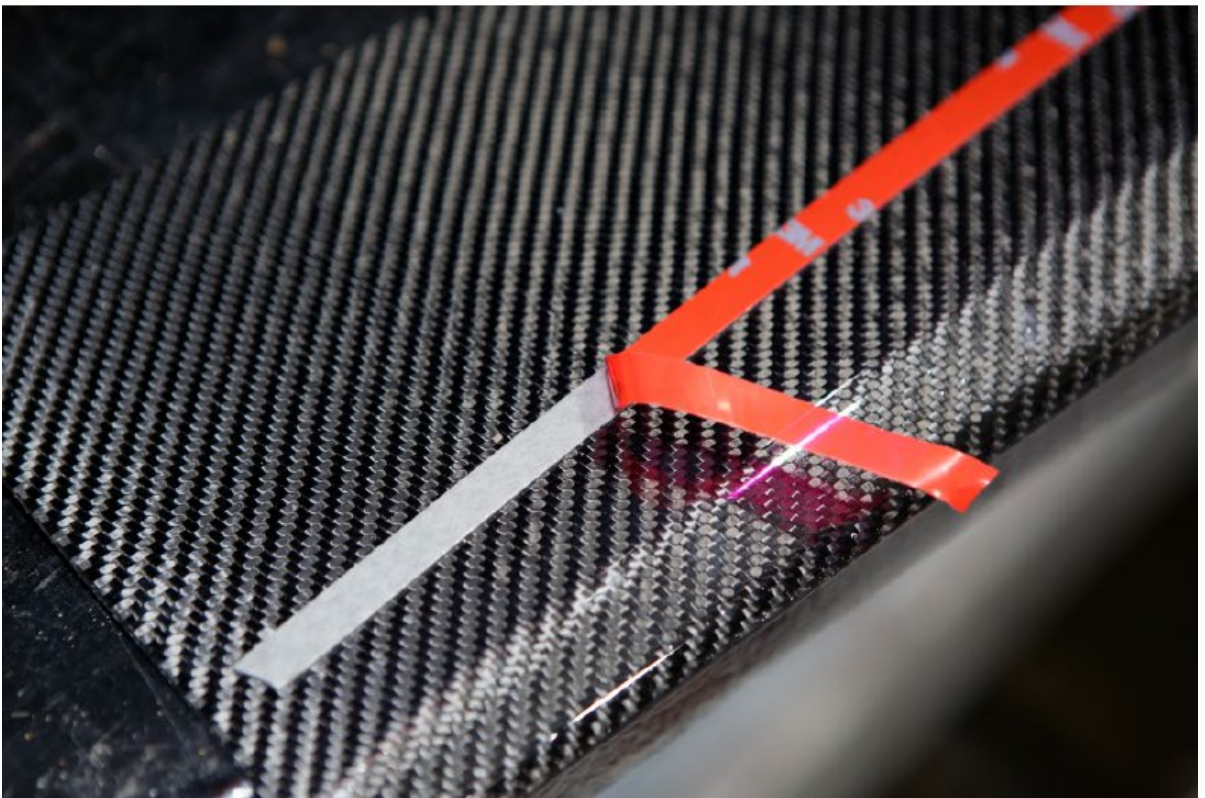

2. We recommend double-sided tape when install the side skirts.



3. Put the side skirt inside the wheel house cover and fix it.



4. Use at least 8 bolts to secure.