

# Dirt Warrior Accessories - CAN AM DEFENDER 2015+ Front Windshield



## Helpful Hints for Installation:

### Tools Needed:

- ✓ Phillips #3 Screwdriver or Screw tip for Screw Gun
- ✓ 7/16" Socket or wrench

- First remove "S" clips from window (if they came attached to window) Diagram on next page: This windshield has (4) S clips depending on model.



PIC 1A

Hold window up and lay in place on cage. It should sit inside grooves on the pro-fit cage. This step usually works best with 2 people



PIC 1C

- With screws, washers, and nuts (supplied & shown in pic) Place S clip in slot of cage as shown in Pic 1C.

Windshield Aluminum Frame Here




PIC 1B

This end fits in the slot on the Pro-fit cage

- Next, position window so that it is high enough for the vents to open but close enough to the hood that you get a tight fit. Then, position side to side to center window on roll cage.

- Once you have the window positioned, begin tightening all screws.
- Now that the window is on, verify that the vent flaps operate correctly.

**Thank YOU for your BUSINESS & Have A DiRtY DAY!!!**

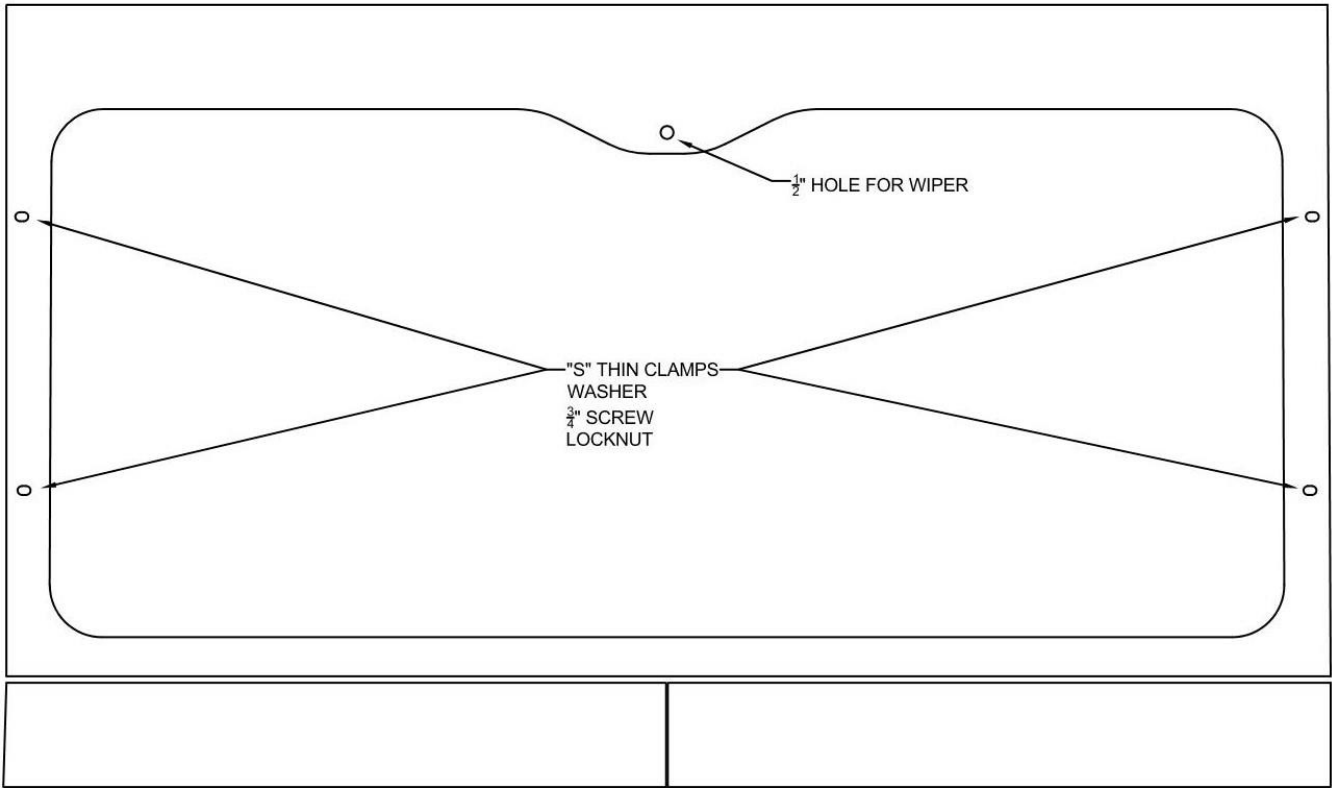

**FWSC-D-2/4  
CANAM DEFENDER**