

# CANAM X3 REAR SEAT CARGO RACK

1. UN-BOLT REAR SEATS AND REMOVE SEATS. (SEE FIG 1) SET ASIDE BOLTS REMOVED FROM SEAT. YOU WILL USE THESE BOLTS AND NUTS TO SECURE CARGO RACKS.



Figure 1

2. NEXT REMOVE TROLLEY'S FROM SEAT AND SEATBELT AND RE-INSTALL TROLLEY TO MACHINE. (SEE FIG 2)

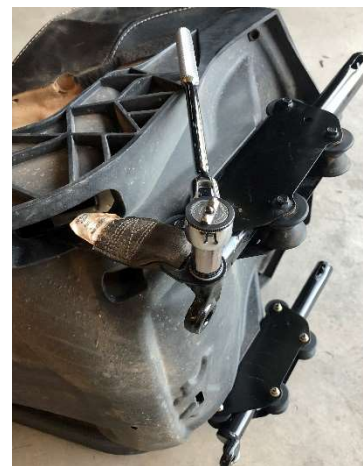


Figure 2



Figure 3

3. PLACE CARGO RACK IN REAR SEAT AREA AND LINE UP BOLT HOLES IN RACK TO BOLT HOLES IN SEAT TROLLEY. NEXT, USING THE BOLTS REMOVED FROM REAR SEATS SECURE THE RACKS TO THE MACHINE (SEE FIG 3)

NOTE: All boxes have been assembled and installed in a machine to ensure accurate fit before shipping. Therefor small scratches may exist around the screw holes where we disassembled the box for shipping. This will not rust; product is made from aluminum. If you have any problems with installation, please contact Shane at 435-922-5100.

