



AMT Motorsport C5/C6 Gas Pedal Extension

Thank you for purchasing the AMT Motorsport Gas Pedal Extension. This is a simple but very effective piece that will make heel/toe downshifts much easier. The install will take about 5 minutes. We guarantee satisfaction with this product so if you install it and don't love it for any reason, send it back for a full refund.



What's in the Box?

1 – 6061-T6 Black Anodized Gas Pedal Extension

4 – No. 14 Self Tapping Plastic Screws

These awesome instructions with Pedal Template

What You'll Need

.216 Diameter Drill Bit (5.5mm, No. 2 Drill, 7/32 all acceptable)

Tape or Something

Phillips Head Screwdriver

Installation

We installed this pedal on our car before we included the handy dandy pedal template. You can cut out the template on the back of this instruction booklet if you'd like to drill the holes in your pedal without the extension in place. We'll be demonstrating the process with the actual pedal extension.




1. Here's the stock C5/C6 Corvette Pedal. Obviously our pedal extension was already installed on this vehicle but you can either A) Pretend you don't see the holes or B) Realize from this picture approximately where you'll be drilling the holes on your gas pedal



2. Affix Tape or Something on the back of the Pedal Extension so it sticks to your gas pedal. Or feel free to wrap it around the outside of the extension and tape to gas pedal. Or this would be the point where you'd cut out the template and stick it right over the gas pedal.




3. Place Pedal Extension (or template) over gas pedal.

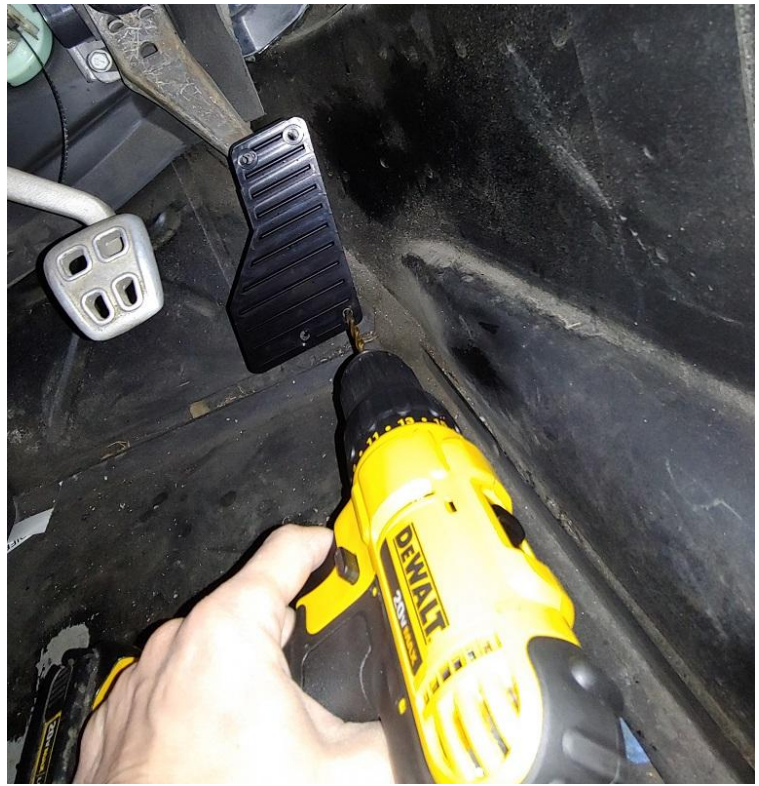

4. With gas pedal in place drill hole thru one hole only



5. Secure pedal extension to gas pedal with provided screws. Proper torque value is Good'n Tite. The coarse threads and nature of the plastic should not allow these from ever coming loose thru normal use.

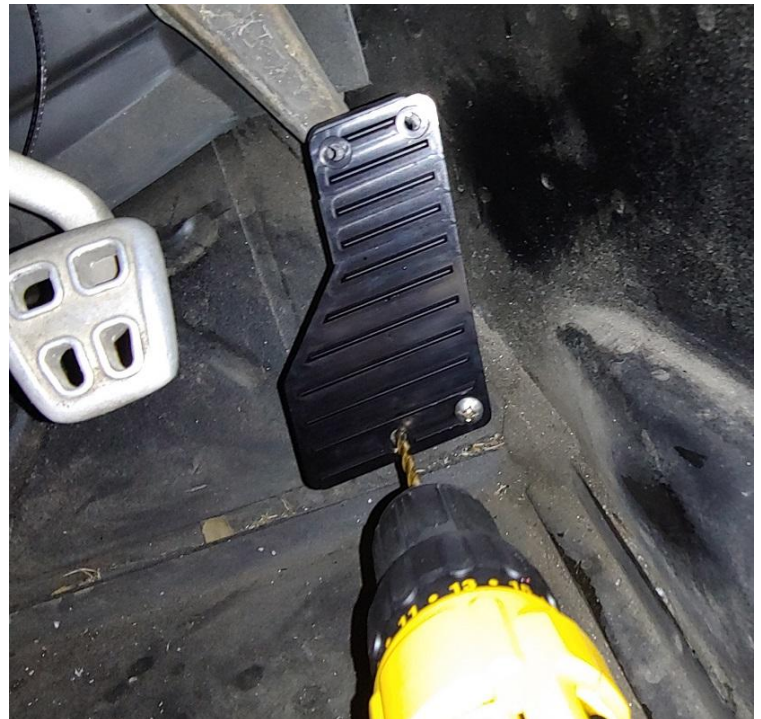

6. Proceed to drill second hole and insert screw. After the second hole is drilled and screw inserted the pedal will no longer be able to twist, so you're safe to drill the last 2 holes without the pedal moving



7. Finished product. 4 holes drilled and screws inserted. Enjoy the new ease of perfectly executed Heel/Toe downshifts!

Thanks for your business! Any questions please call 518-877-8560 or e-mail Mark@amtmotorsport.com - See you at the track!