



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com



KTM 1290 Super Duke R Radiator Guard

Installation Instructions




Kit Contents PRN014794

- (A) 7 x Rubber Bungs
- (B) 2 x Spacer
- (C) 2 x M5 x 16mm

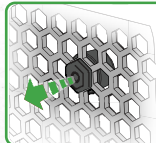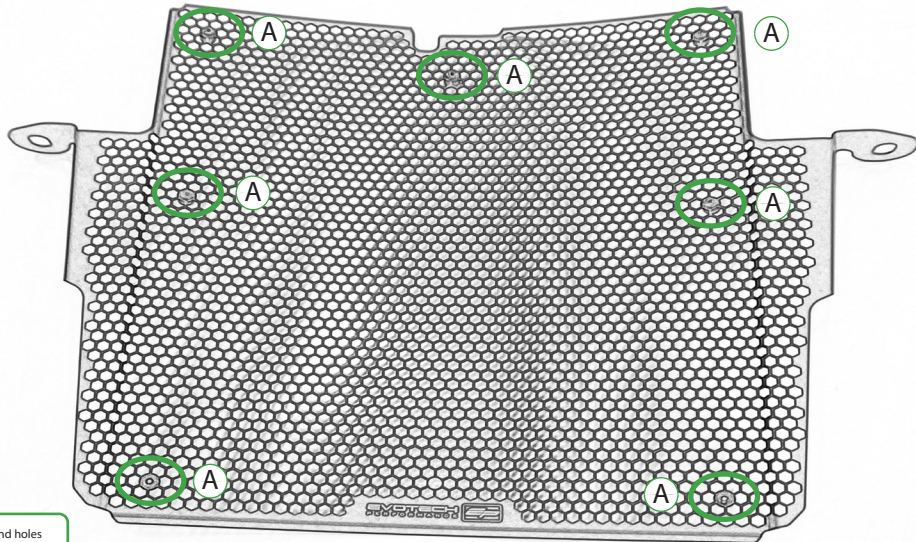



Locate round holes amongst hexagons.


Push Rubber Spacer through from the back of the guard so Hexagonal shape sits on the front face

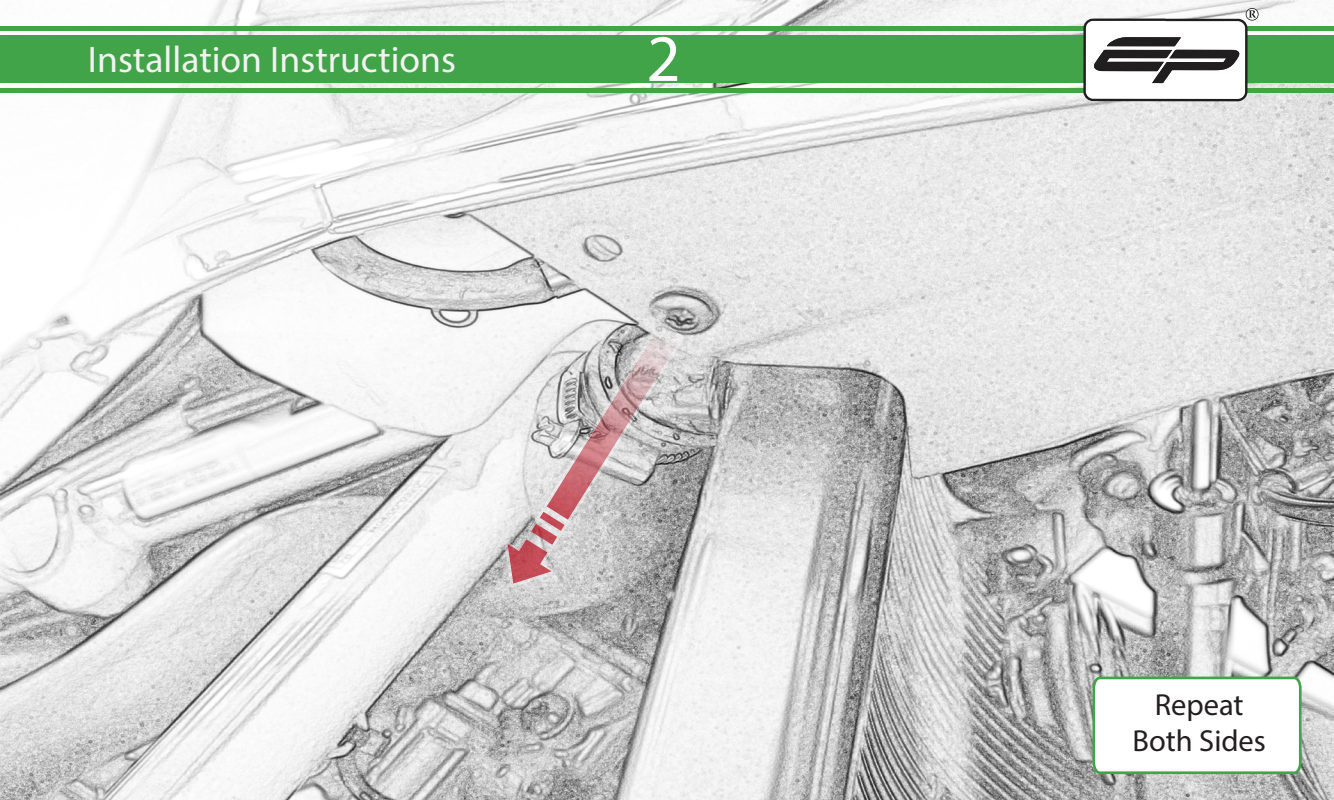

Repeat
Both Sides

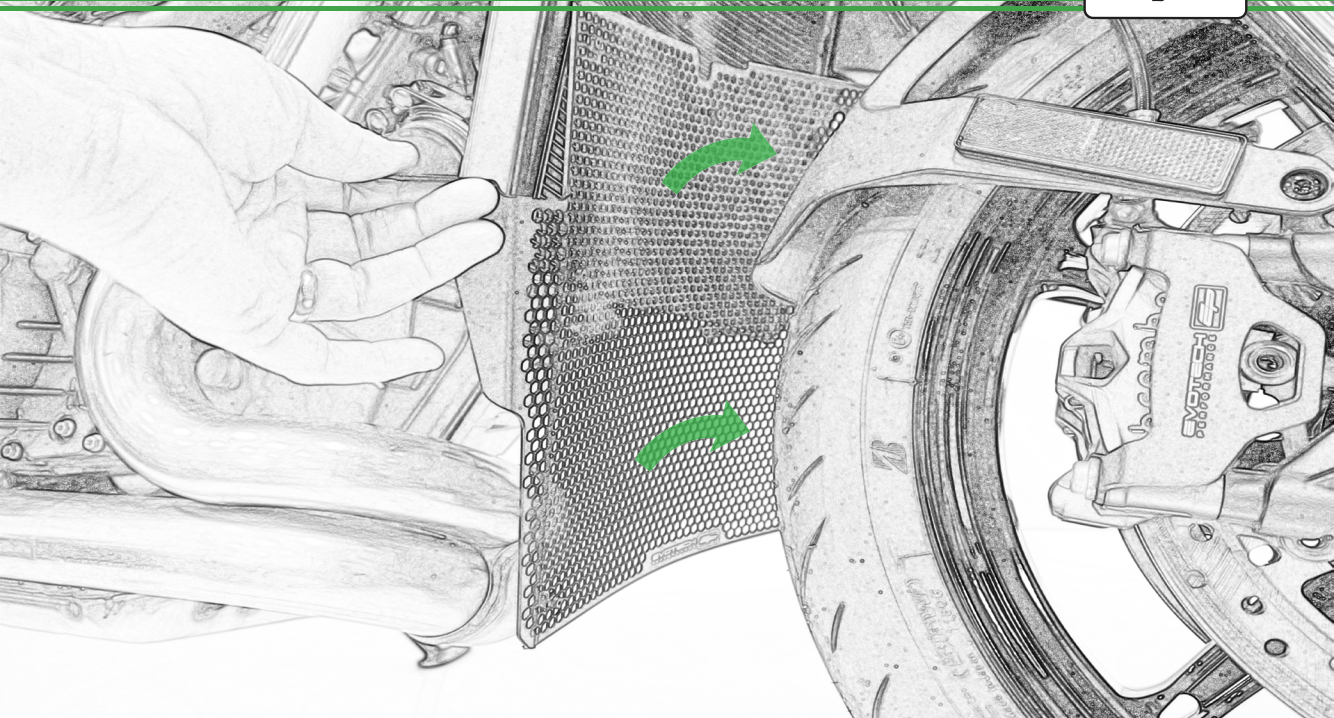

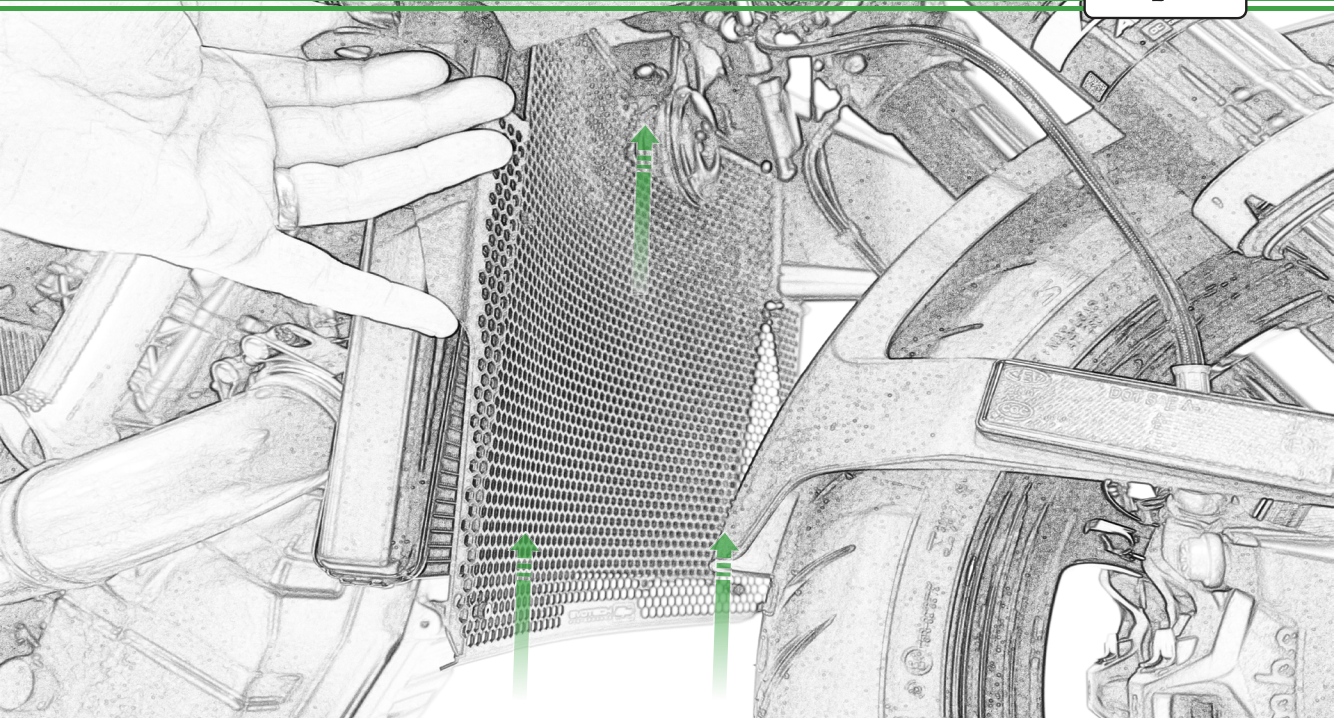

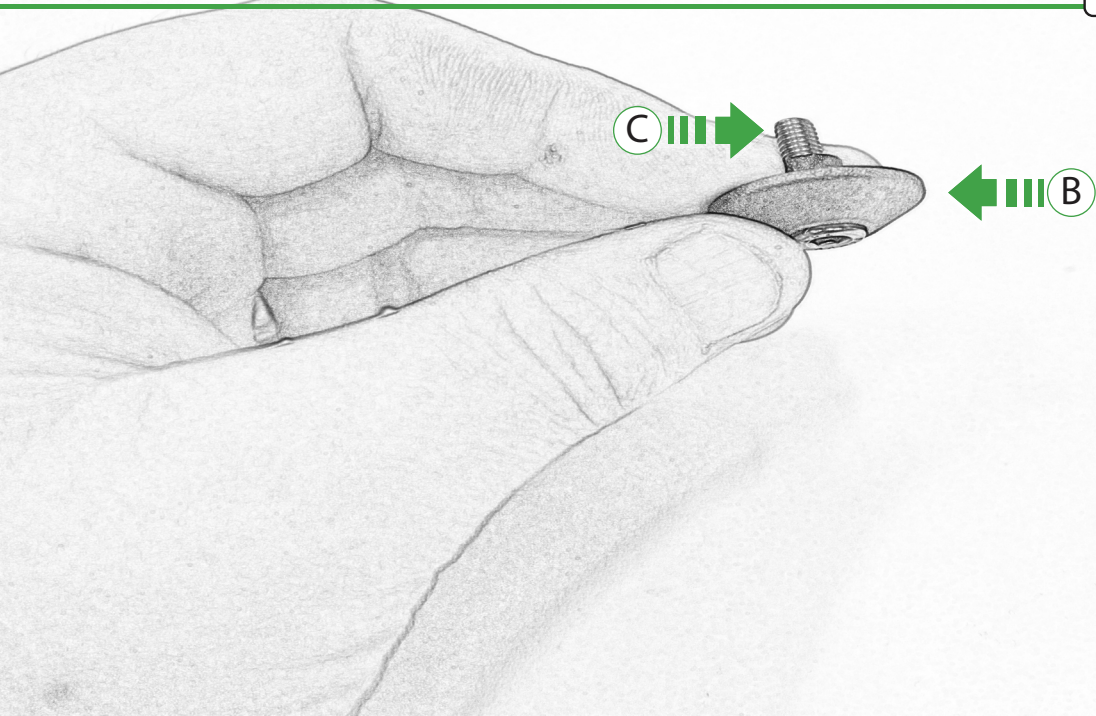




Caution

Do Not Fully
Tighten

Repeat
Both Sides

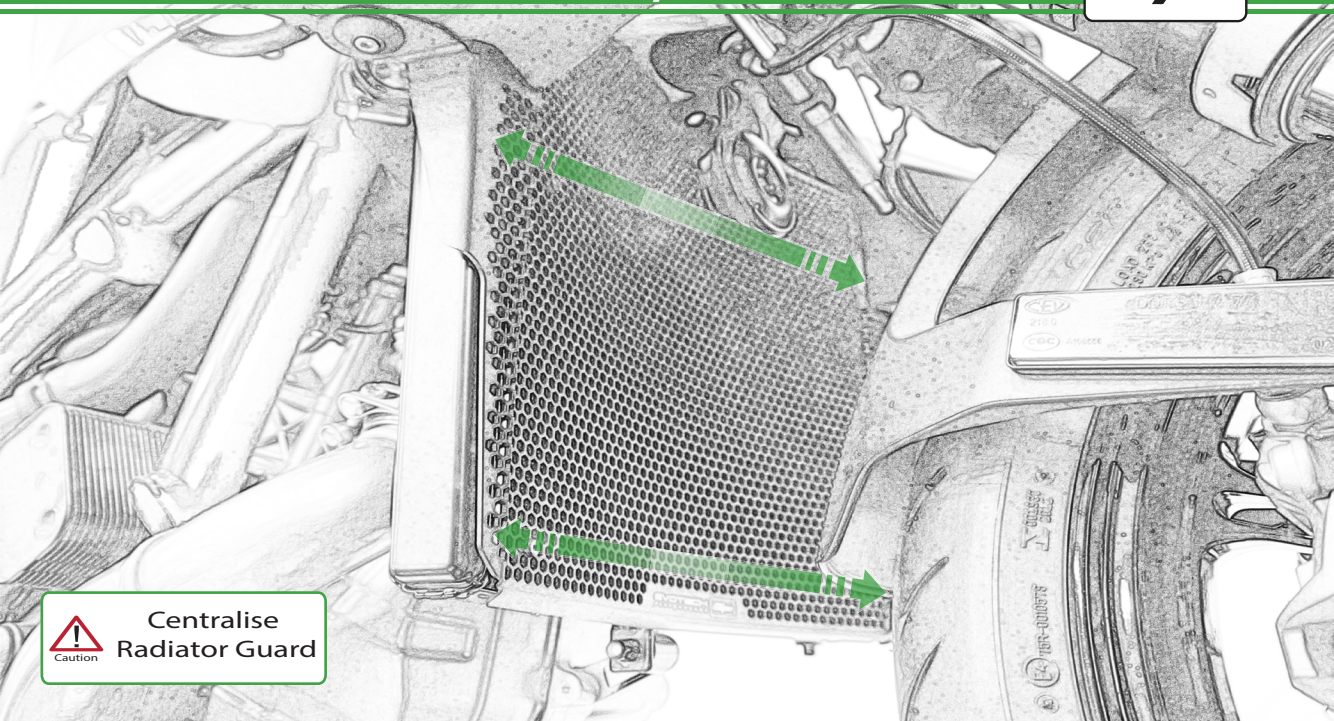

Caution

Centralise
Radiator Guard



Caution

Compress Radiator Guard
Against Radiator
Fully Tighten in Position



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com