

www.evotech-performance.com
Ducati Streetfighter Tail Tidy
Installation Instructions


### **Installation Instructions**




#### Kit Contents PRN014957

- (A) 1 x Reflector Kit
- **B** 1 x Connector Type 10
- © 1 x EP Number Plate Light
- D 1 x M4 x 10 Button Head Bolt
- (E) 2 x M4 Nuts
- F 2 x M5 x 12 Button Head Bolt
- © 2 x M6 x 16 Button Head Bolt
- (H) 2 x M5 x 16 Button Head Bolt
- ① 2 x M5 x 70 Caphead Bolt (Double Stem Version)
- ① 2 x M5 x 40 Caphead Bolt (Single Stem Version)
- **(K)** 2 x Indicator Adaptors
- (L) 4 x Indicator Stems
- M 4 x Indicator Clamps




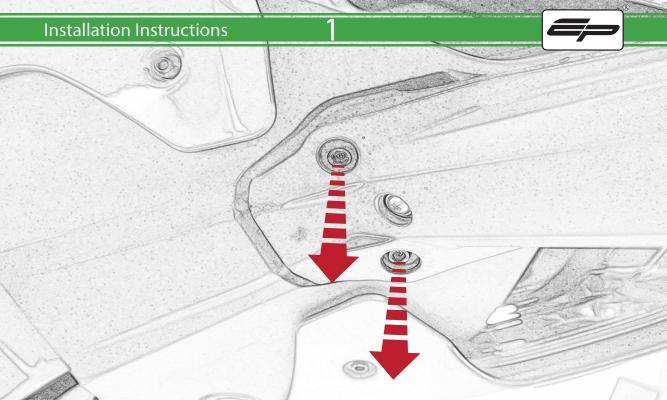

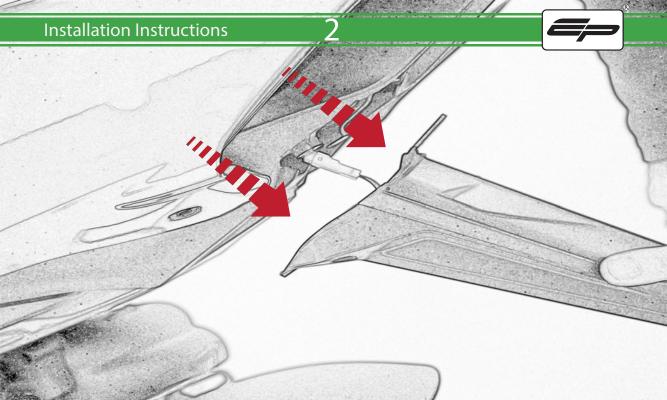






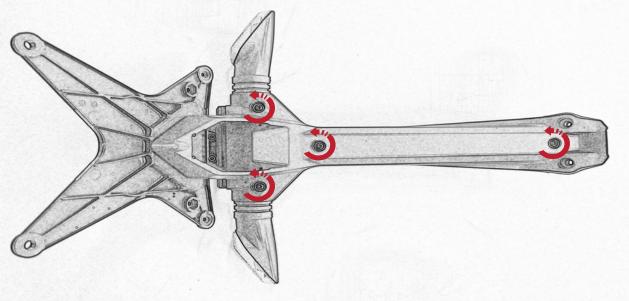





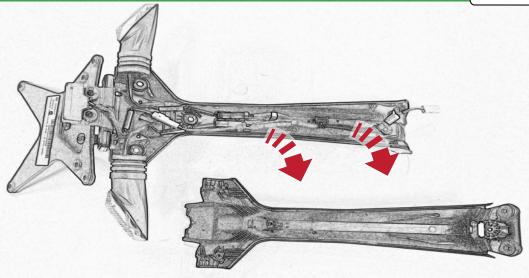






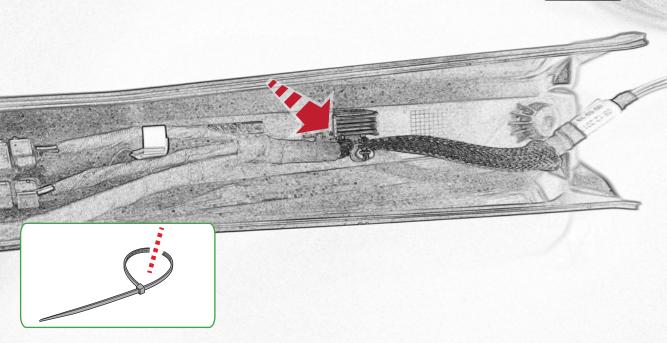


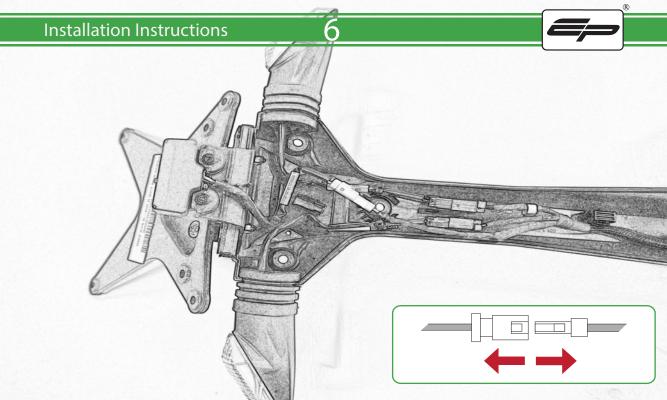

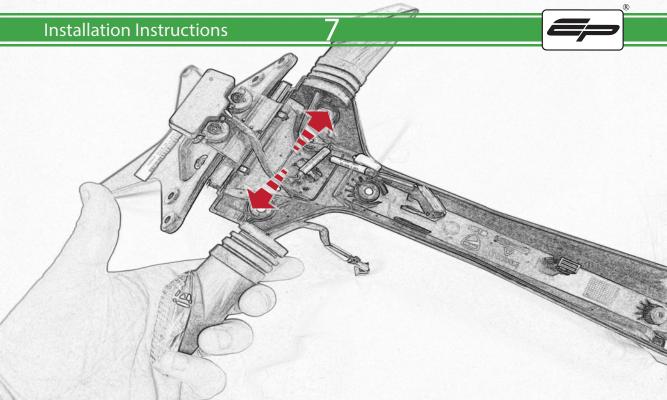






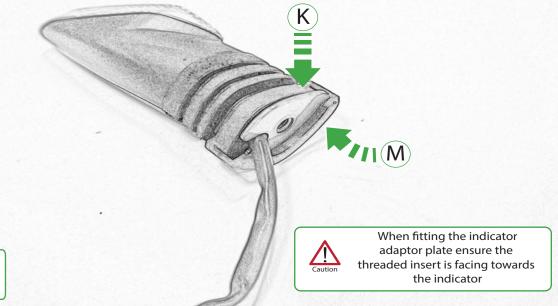

Repeat Both Sides




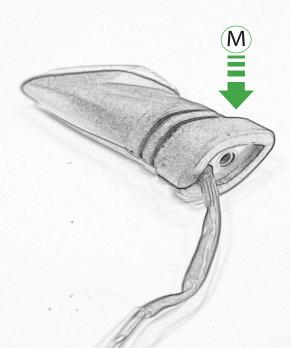

Repeat Both Sides






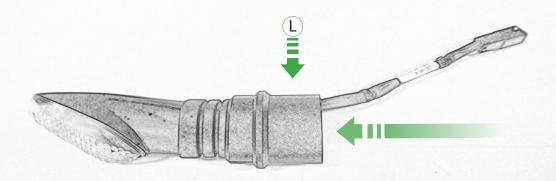

Repeat Both Sides

## <u>11</u>



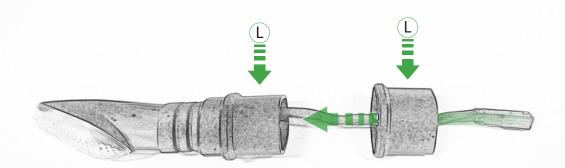


Repeat Both Sides



Second stem only required for large numberplates






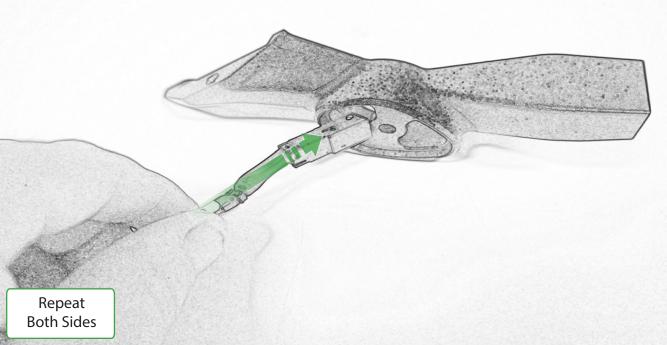






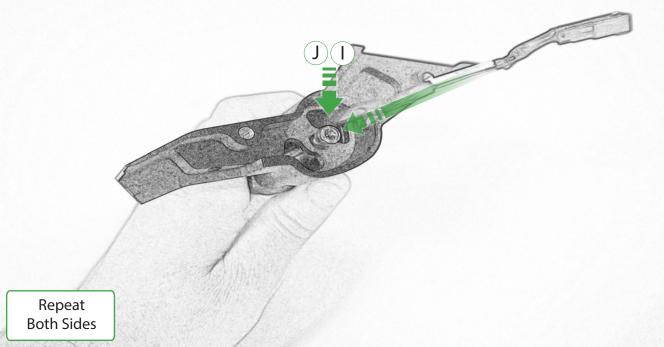







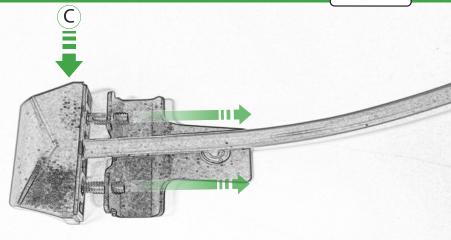



## <u>15</u>




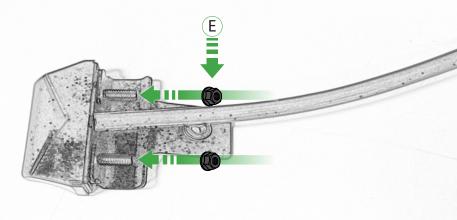


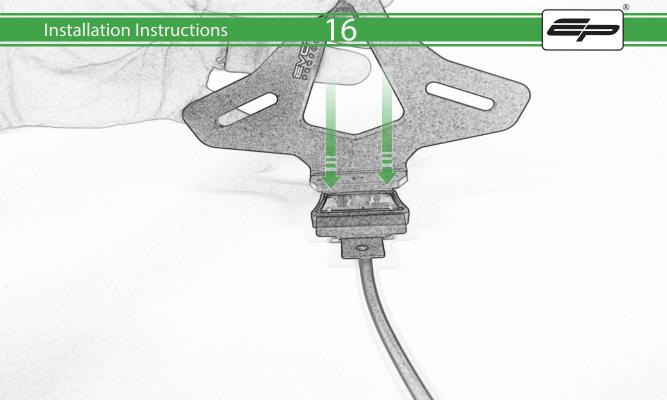


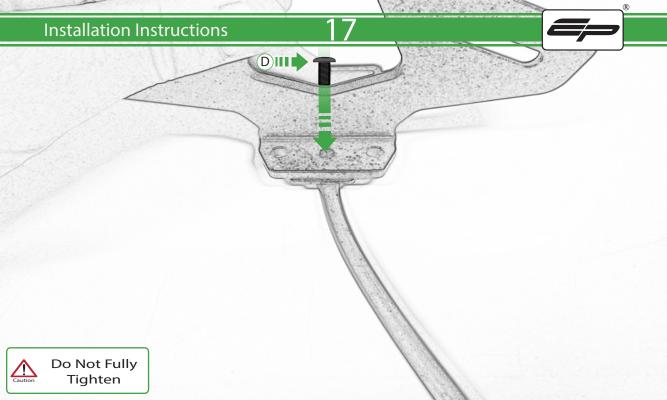


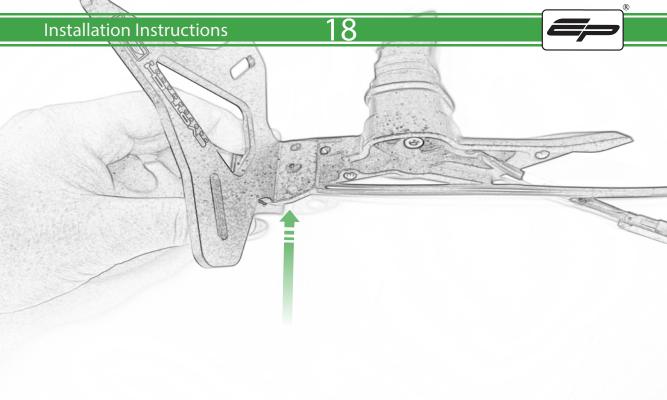


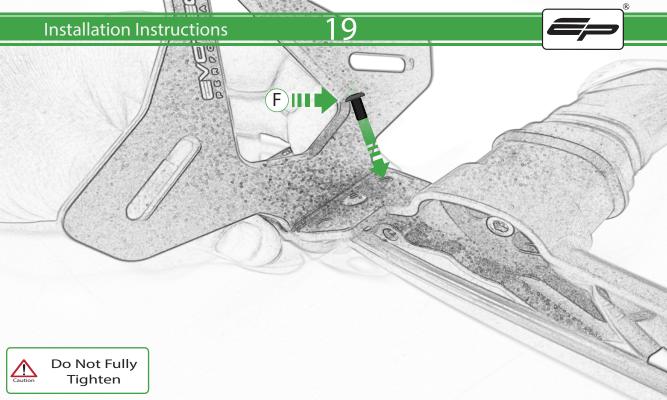


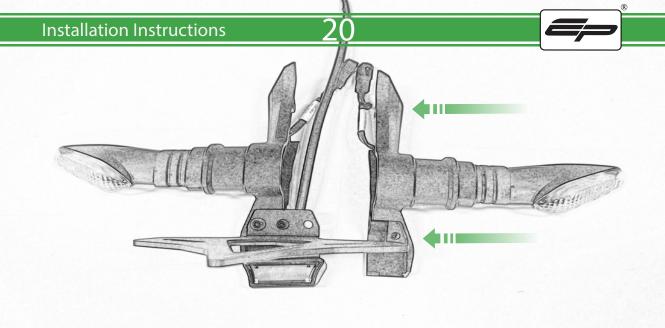


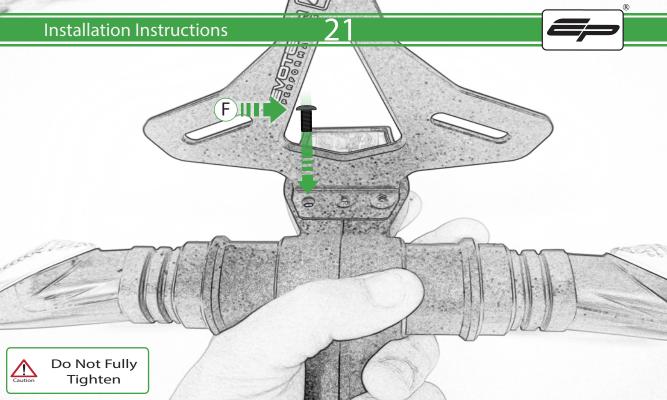


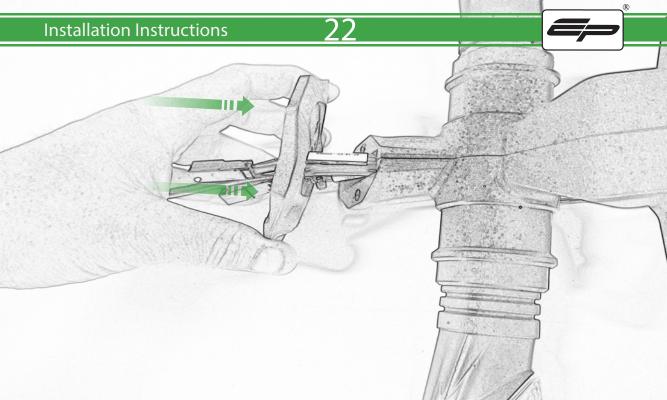


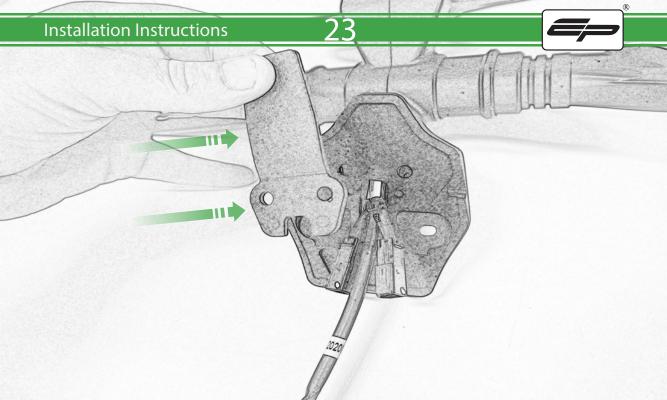


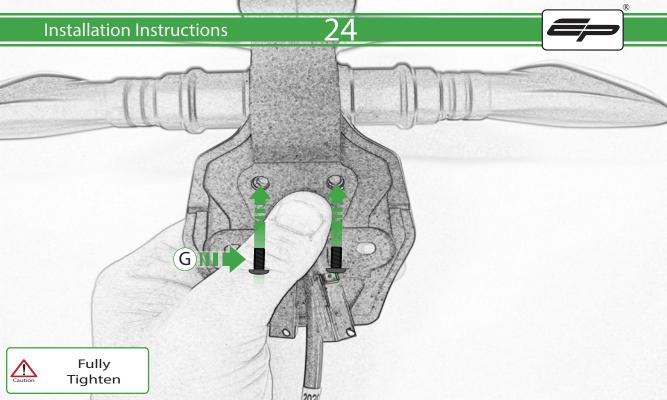


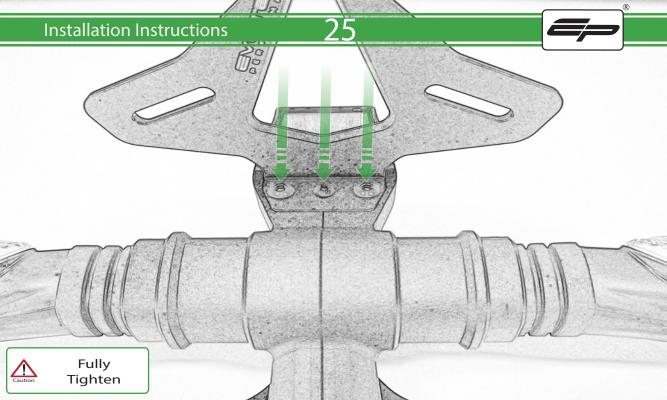


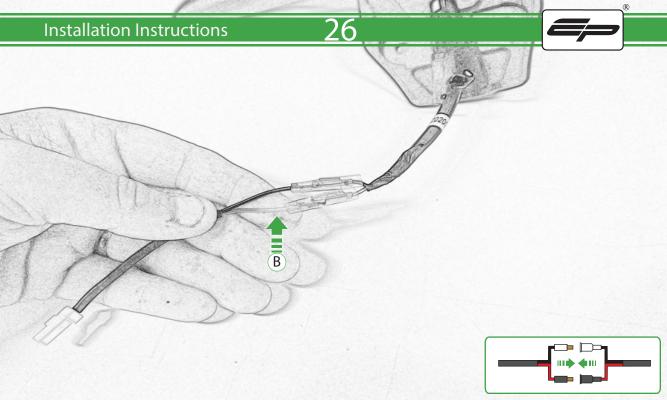


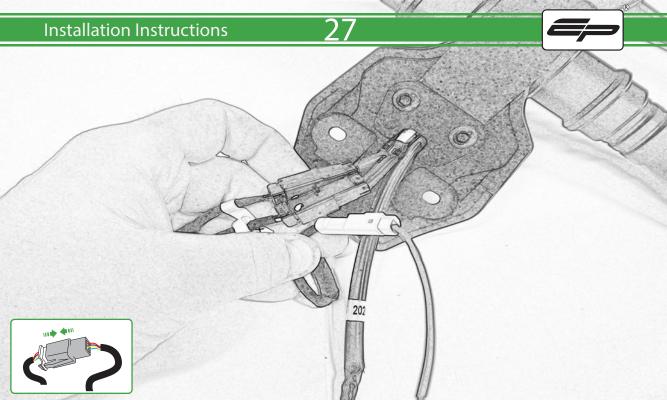

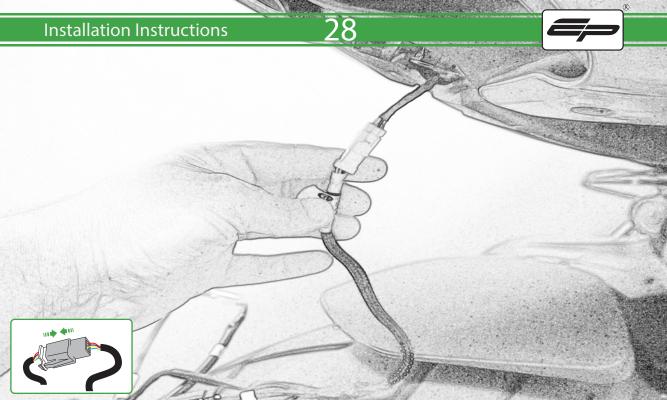

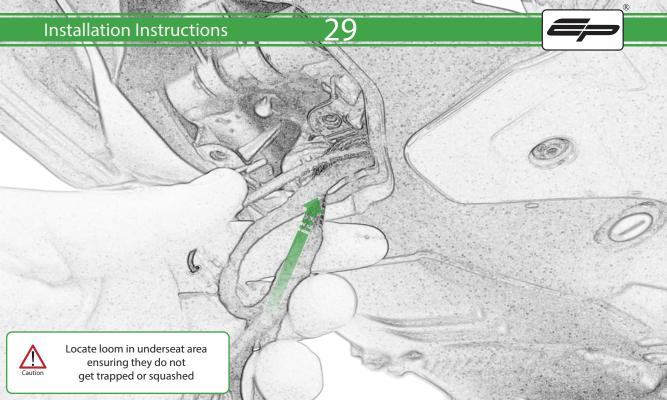


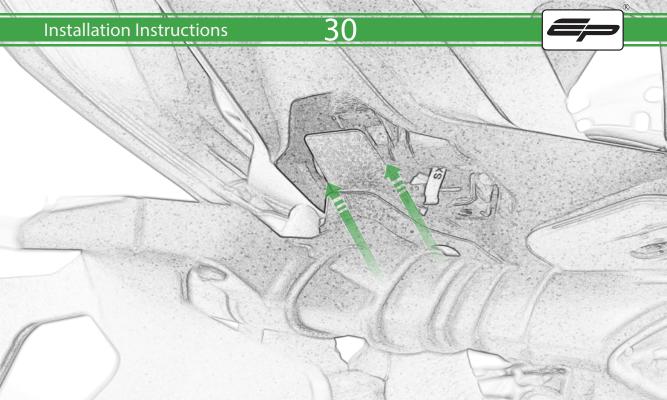

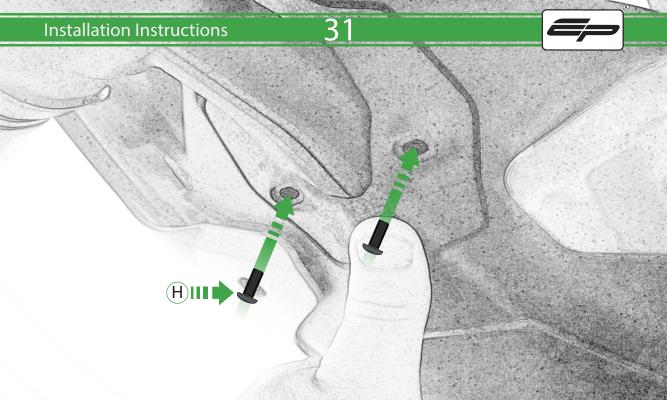

## **Installation Instructions**




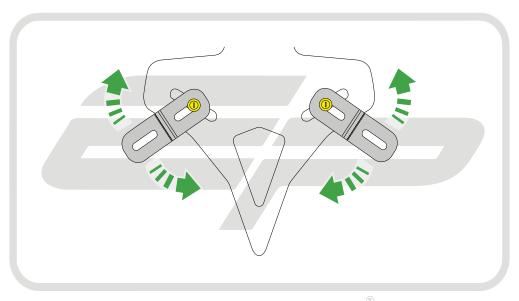



## **Installation Instructions**



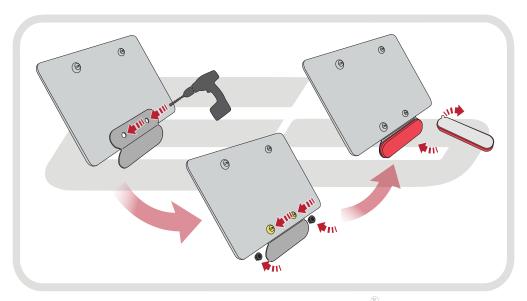







# ESSENTIAL CHECKS 🔨



After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed. Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle. It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.





www.evotech-performance.com