




DEVIANT
RACE PARTS

Cummins Intake Elbow Instructions

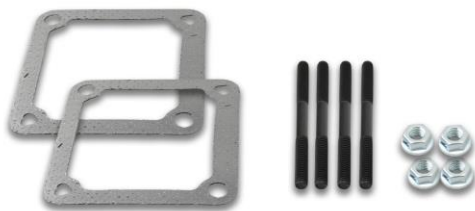

Tools you may need:

- 10mm Socket
- 11mm Socket
- 13mm wrench
- 13mm socket
- 3/8" Ratchet

DEVIANTRACEPARTS.COM


1. Remove dipstick bracket.



2. Remove the T-Bolt clamp on the intercooler pipe



3.Remove the four 10mm bolts holding the factory intake elbow on.

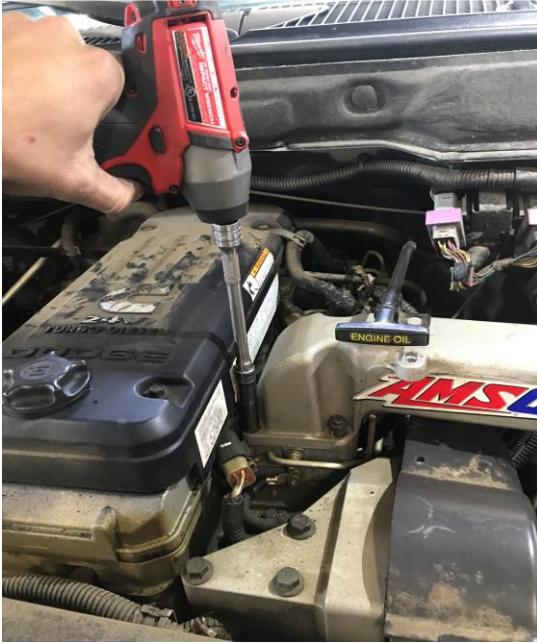

4. Now remove the intake elbow.



5. Install the four provided studs and the two new gaskets.



6. Install the Deviant Race Parts intake elbow and firmly tighten the four 13mm nuts provided.



7. With the factory bolt fasten the dip stick bracket.



8. Reconnect intercooler boot.



Intake Elbow Check List

- (1) Intake Elbow
- (2) Gaskets ○
- (4) Studs ○ (4) Nuts

Packaged By: _____ Date:



DEVIANTRACEPARTS.COM