

Instruction for 31780 installation



Fig.1 Parts list

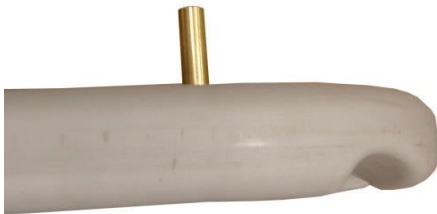


Fig.2 Insert brass bushing from top of the seat.



Fig.3 Push the brass bushing all the way down. If necessary, tap with a hammer using a piece of wood between them.



Fig.4 Insert washer and screw from the bottom.



Fig.5 Place the hand rest on top of the seat and tighten the screws from the bottom.