




APPLICATION DIRECTIONS


APPLICATION



IMPORTANT: The side with the **BLANK** backing goes on your pallet. The side with the printGRIP logo is meant for your apparel.

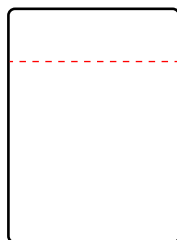

Blank backing
side down

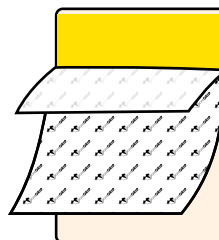

Printed top sheet
side up

- Start with a clean pallet
- Put transfer paper on the pallet. This will help with removal later on.
- Pull up about 2 inches of the blank backing and line up with the back edge of the pallet
- Pull the printed top sheet off and spray printGRIP with water to make it easier to smooth over the pallet.
- Carefully pull off the bottom backing while smoothing the printGRIP sheet down over the pallet.
- Dry your printGRIP pad with a cloth or rag.
- Wrap a strip of tape around the edge of the pallet to protect corners from peeling up while printing.

NEW SHEET PREP (OPTIONAL)

- Once sheet is applied. Spray with water.
- Use scrub pad to prep surface
- Firmly wipe surface until appearance reaches a matte finish
- An increase in tack should be felt
- Repeat if necessary


CLEAN

Clean the printGRIP when you want to renew tackiness.

- Spray with water
- Wipe lint off
- Dry with cloth or rag.
- Tackiness comes back only when dried completely.

REMOVAL

- Peel up the tape and transfer paper.
- Pull sheet off of the pallet.

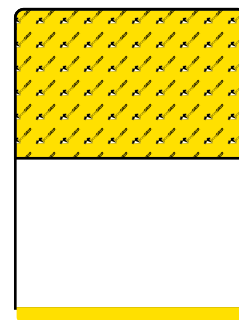

HELPFUL TIPS

- Keep the release paper to block sections of printGRIP that you don't need to be tacky.
- Ghost images or ink transfer on the printGRIP sheet can be cleaned off with press cleaner.

RE-ORDER AT: