




JEEP PROPANE MOUNT JK AT918

2007-2011

INSTALLATION INSTRUCTIONS

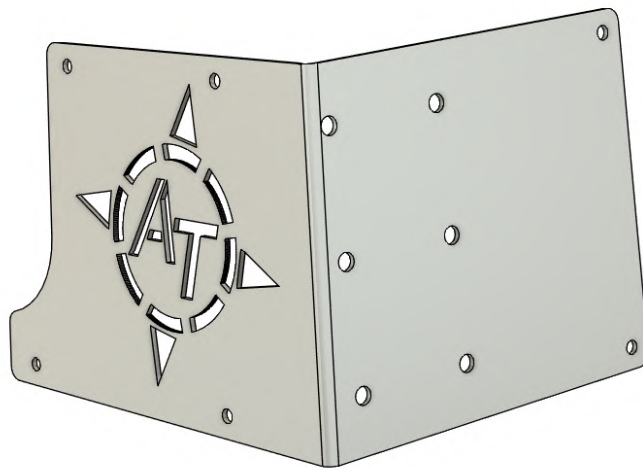

This kit includes:

One propane mount bracket part # JK AT918 with six 1/4-20 rivnuts installed

Two 5/16 Rubber bumpers

Four 1/4-20 Rubber well nuts

Four 1/4-20 x 7/8 Stainless Steel button head bolts

Six 1/4-20 x 5/8 Stainless Steel button head bolts

Ten 1/4" Stainless Steel flat washers

Tools needed:

Tape measure

Drill

1/4" Drill bit

1/2" Drill bit


5/32" Allen wrench

Sharpie

Step 1. Mark first hole by measuring up 1-1/2" from the bottom edge and 1-1/2" from the rear window lip of the hard top.

Mark second hole 8-1/2" from the bottom edge and 1-1/2" from the rear window lip.

Step 2. Drill first and second holes with 1/4" drill bit and then enlarge with 1/2" drill bit.

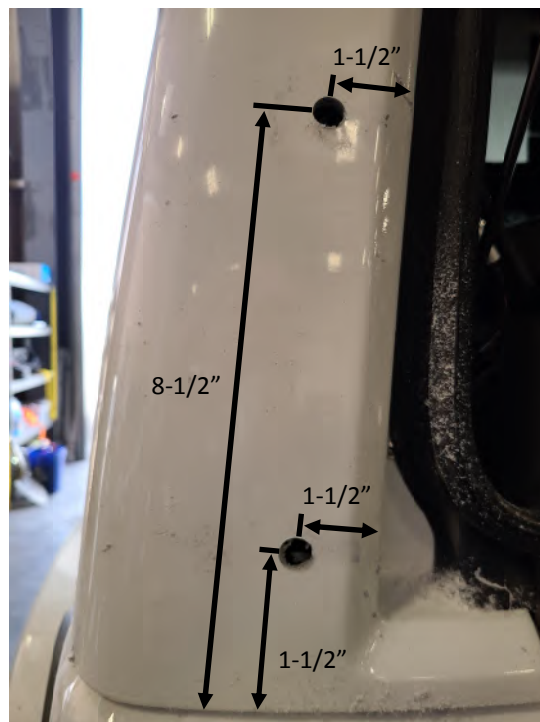

Step 3. Insert rubber well nuts in both holes.



Step 4. Hold the propane mount up to the hard top on top of the first two rubber well nuts to mark the third and fourth holes. Insert bolts into the first two well nuts loosely then tip the mount out 3/16" to mark the third and fourth holes.



Step 5. Drill the third and fourth holes 1/4" and then 1/2" as before. Insert the two remaining well nuts.

Third and fourth holes



Step 6. Install mount with 1/4-20 x 7/8" bolts and Stainless flat washers. Tighten enough to fully expand well nuts.

